


CONTENTS

Bee-Bop Speaker
3.5mm Audio Cable
USB Charging Cable
User Manual

PRODUCT OVERVIEW:

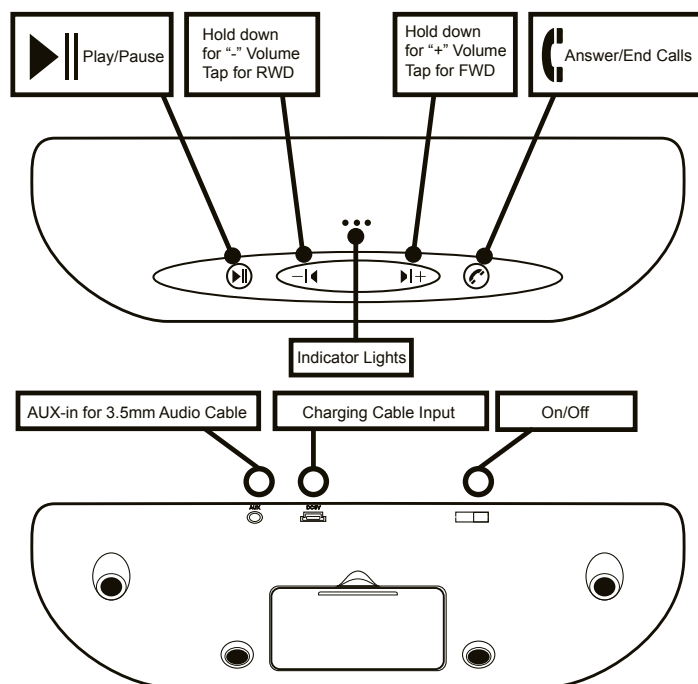

*Please Note Buttons have dual functionality

CHARGING YOUR BEE-BOP SPEAKER

Your Bee-Bop Speaker uses rechargeable battery. Fully charge battery before using. Please turn OFF speaker before charging.

1. Use the USB cable provided to connect to any computer or USB power adapter. When charging, the red indicator light will appear.
2. When fully charged, the red indicator light will turn off. Charging time: Approximately 3hrs. Turn Bee-Bop Speaker off when not in use to save battery life. Battery saver will move into sleep mode when there is no sound input for more than 10 minutes. Switch Bee-Bop Speaker off and then on to restart.

PAIRING DEVICE WITH YOUR BEE-BOP SPEAKER

Before using the Bee-Bop Speaker, please pair it with your smartphone, MP3 player, computer or any Bluetooth-enabled device. Set your Bluetooth to discover the Bee-Bop Speaker by following the instruction manual for your device. With most Bluetooth devices, pairing mode can be activated by using the following steps: SETTINGS > BLUETOOTH > SCAN FOR NEW DEVICE. Click on Bee Bop Speaker when it shows up in the scan. (Please, refer to your devices manual for more exact pairing instructions).

1. Turn the Bee-Bop Speaker ON. Speaker will automatically begin pairing. The blue indicator light will flash quickly, this indicates "In Pairing Mode."
2. When your Bluetooth-enabled device discovers the Bee-Bop Speaker, press "OK" to pair with the Bee-Bop Speaker. Enter code "0000." Once successfully paired, the Bee-Bop Speaker will make a response tone and the blue indicator light will turn off to indicate pairing is successful.

PLAYING MUSIC

After pairing is complete, you can start to play music from your Bluetooth-enabled device. You can use the Bee-Bop Speaker controls to manage your music.

Please Note: You should set your device to it's top volume as the Bee-Bop Speaker can not increase the volume higher than the maximum you set on your device.

1. Long press "+" volume up; Long press "-" volume down.
Volume can also be controlled from your device.
2. Short press "+" for next song; short press "-" for previous.
3. The Bee-Bop Speaker can only pair to one device at a time; to delete the connection, you must do so through your device.

TROUBLESHOOTING

If Bluetooth-enabled device fails to locate the Bee-Bop Speaker, check that the speaker is ON. Insure that your device is within range (within 30 feet/10 meters).

Restart your Bee-Bop Speaker to reactivate Bluetooth pairing mode. Insure that your speaker is not connected or paired to any other Bluetooth device as the Bee-Bop Speaker can only be paired to one device at a time.

HOW TO HANDLE CALLS

After pairing is established, you can answered/end calls from your Bluetooth-enabled smartphone. Long press "☎" to answer call; Long press "☎" to end call. Press and hold "☎" for 2-3 seconds to refuse a call. For best call quality, make sure you are facing the Bee-Bop Speaker and within 3 feet/1 meter.

Please Note: You should set your device on top volume as the Bee-Bop Speaker cannot increase the volume higher than the maximum you set on your device.

HOW TO USE LINE-IN-FUNCTION

If you have a device that is not Bluetooth-enabled and you would still like to use with the Bee-Bop Speaker, you can! The enclosed 3.5mm audio cable can connect to your non-Bluetooth enabled devices.

1. Turn the Bee-Bop Speaker ON and plug the 3.5mm audio cable into the "AUX" port.
2. Plug the other end into your device. Music and volume can be controlled by your device.

TECHNICAL SPECIFICATION

Bluetooth Range:	33 ft (10 m)
Playback Time:	Approx. 4 hrs
Dimension:	1.9" x 8.5" x 2.4" (50 x 217 x 63 mm)
Weight:	8.9 oz, (252 gr.)
Battery :	Li-Ion, 800mAh
Charging:	5 V, 500 mA

WARRANTY

Aduro warrants this product to be free from defects in materials and workmanship for one year. If your Aduro product is found to be defective within that time, Aduro will promptly replace it. This warranty does not cover accidental damage, wear and tear, or consequential or incidental loss. Under no conditions is Aduro liable for loss of, or damage to devices; nor loss of, or damage to, programs, records, or data; nor any consequential or incidental damages, even if Aduro has been informed of their possibility.

© Aduro. All rights reserved. Trademarks and registered trademarks are the property of their respective owners. In style mobile accessories at www.aduroproducts.com

