

USER GUIDE

Keypad Features

DISPLAY

The FA270RF keypad features a 3-digit numeric display for zone identification and pre-designated English-language prompts (for example, **ALARM**, **AWAY**, **STAY**, **CHECK**, etc.) for indicating system status. The numeric display backlights when any key, including any function key located behind the flip-open panel, is pressed. The backlighting is automatically timed out after ten seconds without a key press. *See Figure 1.*

FUNCTION KEYS

The function keys including the Special Function Keys A, B, C, and D (or their local identifications), are **always** backlit for ease of use. *(Check the User's Guide that accompanies the control panel for detailed instructions on the use of these keys.)*

The function keys include keys for panic alarm activation. The panic alarms are activated by pressing key pairs [1] & [*], [3] & [#], or [*] & [#]. How these panic keys function and the type of panic alarms they produce, is determined by the control panel's capability and programming. *(Check with your installer for the availability and type of alarm of these panic keys.)*

SOUNDER

The sounder is a piezo-electric device that pulses for fire alarms and sounds continuously for burglary and audible panic alarms.

KEYPAD LEDS

The keypad contains two LEDs that indicate the status of the system as follows:

LED	Function
Green	Lights when the system is ready to arm (no zone faults are present).
Red	Lights when the system is armed.

SPECIAL FUNCTION KEYS

These are four keys located to the left of the numeric keys (see *Figure 1*). The keys may be programmed by your installer for panic alarms or other special functions such as macros (a frequently used series of key entries). **Function keys must be held down for at least 2 seconds to activate an alarm.** *(Check with your installer for the programmed function of these keys.)*

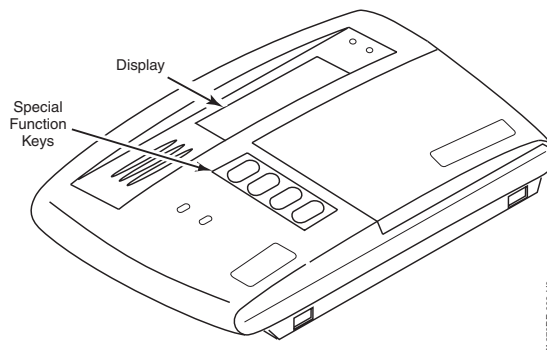


Figure 1: FA270RF Keypad/Transceiver

User Mode

This mode gives you the capability of enabling and disabling individual wireless keys that have been directly programmed into the FA270RF. This is particularly useful if a user loses a wireless key.



This mode may only be accessed if the FA270RF is powered up for at least 1 minute. **Only** wireless keys programmed directly into the FA270RF may be enabled and disabled using this mode.

ENTER THE USER MODE

Press the [1] and [3] keys simultaneously for a few seconds after the unit has been powered for at least 1 minute.

CHANGING THE STATUS OF A TRANSMITTER

On the display, “dE” and “-” flashes alternately. Enter the number of the wireless key transmitter (1-8).

Then “d” and the wireless key number you entered flash alternately with “1” or “0” on the display. A “1” indicates the wireless key is enabled, a “0” indicates it is disabled. Enter [1] to enable or [0] to disable the wireless key. All wireless keys are defaulted to 1 (enabled).

Press the [*] to accept the entry.

Repeat the procedure for all the wireless keys whose status you want to change.

EXITING THE USER MODE

To exit the User mode press [*] when “dE” and “-” flash alternately on the display.



149 Eileen Way, Syosset, NY 11791

www.firstalertprofessional.com

Copyright © 2006 Honeywell International Inc.

