



Thank you for purchasing a **SEX DRIVE** pedal. This is a boost pedal, not an overdrive/distortion pedal. Placement of the pedal, in the chain of effects will make all the difference in how the pedal responds. For a **BOOST** feature, place the SEX DRIVE pedal at the end of your gain boosting effects chain (overdrive, distortion, fuzz). Placing the SEX DRIVE prior to other gain boosting effects will have less of a boosting effect, but will increase the gain of the effect it is driving causing more distortion.

### **COMPRESSION**

The compression feature will allow a slight amount of gain, depending on the setting. This is a subtle compression felt more in the fingers than heard. When switch is in the "hard" position, the **GAIN** control will have less of an effect, but will add the most "grit" to your sound. The "soft" setting will give you slightly less. The "off" position will have the greatest boost response.

### **TONE**

The Tone on the Sex Drive really should be labeled as "Presence". This is not a traditional tone circuit adding or cutting treble. The Tone control is very subtle adding clarity to your sound without altering your overall tone. When the Tone control is turned all the way up you will get a substantial treble increase. If you can just barely tell that the Tone is working, then it is working correctly.

### **LEVEL**

The Level control on the Sex Drive is a Master Volume.

### **GAIN**

The Gain control on the Sex Drive will give you just a bit of "grit" on your tone, but will not get you into "overdrive" mode. Any overdriven sound you get is due to the two hundred percent signal boost the Sex Drive is able to produce. This means you are getting natural tube overdrive from your amps preamp section.

**Input / Output** – The Input jack is located on the right side of the pedal when looking at your pedal's face plate. When you plug a cable into the input jack, the 9Volt battery inside will be activated. If you are not using an external power supply when the pedal is not in use, it is best to unplug cable from the input jack in order to save battery life. The Output jack is located on the left side of the pedal

### **POWER**

The Sex Drive pedal uses a standard 9volt negative tip or center power supply (Boss PSA120 etc.) or 9volt battery. The Sex Drive pulls about 9mA of current. **Use of incorrect power supply will cause damage to pedal and void the warranty. Do not increase voltage.**

### **WARRANTY**

Guaranteed to original purchaser for the period of **Two Years**. Any negligent use of pedal will void the warranty.



512-581-0663 [www.durhamelectronics.com](http://www.durhamelectronics.com)