



Guitar and bass guitar volume pedal AMT "Little Loudmouth" LLM-1

Safety instructions

WARNING! Inside the device there are no parts that are user-serviceable. Repairs to the machine may only be performed by qualified personnel.

WARNING! To avoid failure, the device should not be exposed to rain or moisture inside the device must not be exposed to water or other liquid. Do not place near filled with liquids, such as vases, etc.

Внимательно ознакомьтесь с инструкцией по эксплуатации.

1. **Keep the manual.**
2. **Heed all warnings.**
3. **Follow all instructions.**
4. **To clean the unit, use a dry cloth, first unplug the appliance and unplug it from the power adapter.**
5. **Do not install near any heat sources or expose to direct sunlight.**
6. **Place the power cord so that it can not be stepped on, and avoid its contact with sharp corners, etc. In that case, if the plug or socket adapter is used to disconnect the unit from the network, they must be easily accessible.**
7. **Only use attachments and accessories recommended by manufacturer.**
8. **Unplug the AC adapter (when using the AC adapter) during a thunderstorm.**
9. **When not in use for a long time, remove the battery from the device case.**
10. **All work associated with the repair of the device must be performed by qualified service personnel.**
11. **WARNING! These service instructions are for use by qualified personnel. Do not carry out any repair work not described in the instruction manual. Repairs must be performed by qualified personnel.**

IMPORTANT NOTICE!

Violation following instructions can cause damage to your DEVICE. DAMAGE ARISING will void your warranty

- **When transporting or storing the product in the freezing temperatures, before turning on leave the device at room temperature in its original packaging within 2 hours, no less!**
- **To connect the preamp to other devices, use only the cables intended for such connections.**
- **Do not use other cables, such as acoustic, etc.**

Before you start

To ensure the safe transportation of the device was carefully packed at the factory. However, if the box is damaged inspect the unit immediately for signs of damage.

- **If you see damage do not sent directly to the address of the manufacturer, but notify your dealer and the shipping company, otherwise you will lose the right to compensation.**



Only use attachments and accessories recommended by manufacturer.

Arrangement of contacts in a low-voltage socket of the adapter.

Расположение контактов на низковольтном разъёме сетевого адаптера.



Connecting the AMT LLM-1 to the power adapter:

- **The connection is made only after all the audio connections!**
- **Before connecting the AMT LLM-1 to the power adapter, make sure that the case, connection cable, and plug the AC adapter are not damaged: no cuts, cracks, dents, etc. and are in good condition.**
- **To connect the AMT LLM-1 to the AC adapter, insert the low-voltage connector adapter into the jack on the right panel of the preamp, and then plug the adapter into the wall outlet.**

Disconnecting the preamp from the power adapter:

- **To disconnect the AMT LLM-1 from the AC adapter, disconnect the AC adapter from the power outlet, and then disconnect the low-voltage connector from the socket on the right-hand panel of the AMT LLM-1.**
- **To prevent damage during storage and transport use the original packaging.**
- **Do not let children play with the packaging.**
- **Please dispose of all packaging materials in an environmentally friendly way.**
- **To avoid overheating of the device is provided with sufficient ventilation, do not cover it, and do not place near heating radiators etc.**
- **Operation near powerful radio transmitters and high-frequency sources can lead to a marked deterioration in sound quality. In this case, increase the distance between the sensor and the transmitter and use shielded cables for all connections.**

WARNING!

Please note that high volume can damage your hearing and / or damage to the dynamic head of your speaker system. Before switching on the unit, turn knobs «Volume» to the left (counter clockwise). Always make sure that volume is moderated.

What's in the package:

The package includes following products:

- | | |
|------------------|------|
| 1. Guitar preamp | 1pc. |
| 2. User's manual | 1pc. |
| 3. Cardboard box | 1pc. |
| 4. Warranty Card | 1pc. |

- Active volume pedal is designed for operational control volume guitar, bass guitar and keyboards. The pedal has a high input impedance of 1 MOhm, and low output impedance of 10 kOhm, which allows no loss of signal quality to integrate it into any chain guitar effects. Little Loudmouth - LLM-1 allows you to smoothly change the volume of the instrument signal through a tri-band switch, steps to control the output signal level:
 - +12 to -45 dB
 - +6 to -48 dB
 - 0 to -50 dB (remember, when the input signal is -50dB volume is adjusted not to full silence)

Technical characteristics

- Powered by a stabilized DC power supply 9-12V or 9V battery.
- Low power consumption;
- Compact size: 110 x 62 x 58 mm (fits easily into a guitar case);
- Weight: 0.45 kg without battery.

Attention! AMT LLM-1, as well as any high-end devices, demands for power supply. We strongly recommend the use power supply for this series or battery voltage 6F22 (Krone) 9V, or an adapter that meets the requirements for the quality (recommended AC / DC Adapter SA09DC-9V 1,11 A or AC / DC Adapter SA12DC-12V 1,25 A).

To ensure the safe transportation of the device was carefully packed at the factory. However, if the box is damaged inspect the unit immediately for signs of damage.

- **If you see damage do not sent directly to the address of the manufacturer, but notify your dealer and the shipping company, otherwise you will lose the right to compensation.**