



## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

#### 1. READ ALL INSTRUCTIONS BEFORE USING THE ELECTRIC KETTLE.

- 2. DO NOT touch hot surfaces. Use handles or knobs.
- 3. To protect against electric shock, **DO NOT** immerse this appliance including power base, in water or any other liquid.
- 4. Unplug the power base from the power outlet when not in use, before repositioning and before cleaning. Allow it to cool before putting on or taking off parts, and before cleaning the appliance.
- 5. **DO NOT** operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Take the appliance to the nearest Authorized Oster<sup>®</sup> Service Center for examination, repair or adjustment.
- 6. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- 7. DO NOT use outdoors.
- 8. DO NOT let cord hang over edge of table or counter, or touch hot surfaces.
- 9. **DO NOT** place this appliance on or near a hot gas or electric burner or in a heated oven.
- 10. Ensure that the kettle is properly located on the power base before plugging into the wall or switching on. To disconnect, turn all controls to the off position "O" then remove plug from wall outlet.
- 11. Remove the kettle from power base before filling or pouring. **DO NOT** attempt to remove the kettle from the power base until it is switched off, manually or automatically.
- 12. Use the kettle only with the power base supplied and vice versa.
- 13. DO NOT use appliance for other than intended use.
- 14. Use on a hard, flat level surface only, to avoid interruption of airflow underneath the appliance.
- 15. Extreme caution must be used when handling or moving kettle and pouring from the kettle containing boiling water.
- 16. Scalding may occur if the lid is open during the heating cycle.
- 17. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- 18. Close supervision is necessary when any appliance is used by or near children, or incapacitated individuals.

### SAVE THESE INSTRUCTIONS

## SPECIAL CORD SET INSTRUCTIONS

- 1. A short power supply cord is provided to reduce the hazard resulting from becoming entangled in or tripping over a longer cord.
- 2. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the electrical rating of the electric kettle (see rating label marked on product). The resulting extended cord must be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over accidentally.

### PRECAUTIONS:

**WARNING: TO AVOID SCALDING**, handle this kettle with care as water is heating, boiling, and cooling. The lid must remain closed during use to avoid steam burns. Keep spout away from persons as scalding can result from steam.

- 1. Place the electric kettle well back from the edge of the counter.
- This kettle is intended for boiling WATER ONLY. Do not heat any other liquid or at tempt to cook any food in this appliance.
- 3. NEVER place the kettle NEAR HOT SURFACES.
- 4. Hand wash filter only. NO PARTS ARE DISHWASHER SAFE.
- 5. Do not exceed the "Max" water level mark when filling. Overfilling could cause hot water to boil out of the spout.
- 6. Do not hold the switch on as this may damage the auto shut-off mechanism.
- 7. Carry or move electric kettle by handle only.
- 8. Kettle body may get very hot, be careful when handling.
- 9. Do not immerse the kettle or power base in water or any other liquid.

### FOR HOUSEHOLD USE ONLY.

### **PRODUCT DIAGRAM**



- Lid release button 1.
- 2. 3. Kettle lid
- Spout
- Handle
- 4. 5. 6.
- Stainless steel body Digital display Increase and decrease 7. temperature control buttons
- Function button 8.
- 9. Start/Stop button
- 10. Water window
- Power base
   Cord storage (under power base)

## BEFORE THE FIRST USE

- 1. Wash the inside of the kettle and lid with mild detergent and water. Rinse each thoroughly. Do not immerse the kettle or power base in water or any other liquid. These items are not dishwasher safe.
- 2. Fill the electric kettle with fresh water to the "MAX" water level mark on water window. Boil the water, following the directions below for use of your kettle.
- 3. When the water and unit have cooled, discard the water. Rinse with cold water and repeat.
- 4. Your electric kettle is now ready for use.

## **OPERATING INSTRUCTIONS**

- 1. Position the power base on a flat, heat resistant surface, as close as possible to a power outlet.
- Follow cord routing in power base according to exit patterns. Proper cord routing will
  result in the power base laying flat when kettle is placed in base. DO NOT operate
  kettle if power base is not flat. If power base is not flat, remove kettle from power
  base and repeat cord placement instructions.
- To fill with water, open lid. Fill the electric kettle with water below the "MAX" water level mark. NOTE: Do not exceed the "MAX" water level mark indicated on the electric kettle.

# SELECTING THE FUNCTIONS

The kettle's default function is Boil, however you can select the desired function as follows:

### **BOIL/ HEAT WATER WITH AUTOMATIC SHUT OFF**

This function allows you to boil or heat water and have the unit shut off automatically once the process is completed.

- 1. Plug the electric cord into the appropriate electrical outlet.
- 2. Choose one of the following options depending whether you would like to boil or heat the water:

#### **Boiling Water**

Make sure the kettle icon is showing in the display. If not, press the function button " 🗄 " until the kettle icon is selected. Also, please make sure the temperature displayed is 100° C (see figure 1).



Press the start/stop button " ►/■" to start the boiling process. The water will heat and the electric kettle will switch off automatically once the water boils.

#### **Heating Water**

Make sure the kettle icon is showing in the display. If not, press the function button " 🗉 " until the kettle icon is selected. Press the temperature control buttons "+/-" to increase or decrease the temperature to your desired level. You will be able to choose the heating temperature between 40° C and 100° C in intervals of 5 degrees (see figure 2).



Once the desired temperature has been selected, press the start/stop button " ►/■" to start the heating process. The water will heat and the electric kettle will switch off automatically when the water reaches the selected temperature.

3. If you wish to stop the boiling or heating process at any time, simply press the start/stop button " ►/ ■ " again to stop it.



### **BOIL/ HEAT WATER USING KEEP WARM FUNCTION**

You should use this function if you wish to boil or heat water and then keep it warm for up to 30 minutes.

- 1. Plug the electric cord into the appropriate electrical outlet.
- Choose one of the following options depending whether you would like to boil or heat the water:

#### Boiling Water using keep warm function

Make sure the kettle icon is showing in the display. If not, press the function " $\Xi$ " button until the kettle icon is selected. Also, please make sure the temperature displayed is 100° C (see figure 3).



Press the function button " 🖃 " to select the keep warm icon and then select the desired keep warm temperature, ranging from 40° C to 90° C in intervals of 5 degrees, using the increase and decrease buttons " +/- " (figure 4).



Press the start/stop button "  $\blacktriangleright/\blacksquare$ " to start the boiling process. The water will boil and then electric kettle will automatically keep the water warm at the selected temperature for up to 30 minutes and then shut off.

#### Heating Water Using keep Warm function

Make sure the kettle icon is showing in the display. If not, press the function button " $\boxplus$ " until the kettle icon is selected. Press the increase and decrease "+/-" temperature control buttons to adjust the temperature to your desired level. You will be able to choose the heating temperature between 40° C and 100° C in intervals of 5 degrees (see figure 5).



English - 6

Press the function button " $\boxdot$ " to select the keep warm icon and then select the desired keep warm temperature, ranging from 40° C to 90° C in intervals of 5 degrees, using the increase and decrease buttons "+/-" (see figure 6).



Press the start/stop button"  $\blacktriangleright / \blacksquare$ " to start the heating process. The water will heat up and then electric kettle will automatically keep the water warm at the selected temperature for up to 30 minutes and then shut off.

**NOTE:** If you remove the kettle from the power base, it will reset to its default function, i.e. Boil.

The kettle will not re-boil until the start button is activated again. Wait 25 seconds, allowing kettle to cool down, and then press the start.

**NOTE:** Ensure the lid firmly closed. The electric kettle will not turn off automatically if the lid is left open.

## IF THE KETTLE DOES BOIL DRY

If the kettle is operated in accordance with instructions for use, it is unlikely that the kettle will boil dry. However, in the event that the kettle does boil dry, it is protected by a boil dry, fail-safe device which will switch the kettle off automatically on sensing a boil dry situation and keep it switched off until the kettle is refilled with at least the minimum amount of water. Always allow the kettle to cool for half an hour before reuse if the kettle has boiled dry.

### FILTER INSTRUCTIONS

A mesh filter has been integrated into the kettle to reduce the amount of scale residues entering your beverages or food. The filter is removable for cleaning. To reduce scale build-up, empty out any residual water after boiling.

How often the filter should be cleaned will vary according to where you live and how often you use your kettle. Filter should be cleaned whenever there are noticeable deposits left on the filter and especially if the rate of pouring decreases.

# FILTER REMOVAL/CLEANING/REFITTING

**Important:** The kettle must be switched off, disconnected from the power outlet and allowed to cool down completely prior to removing or refitting the filter. Do not use excessive force, as this might damage the filter or the lid.

- 1. Empty the kettle and lift lid.
- Grip the top part of the filter with index finger and thumb and pull upwards. You may have to hold kettle while removing filter. Caution: Keep fingers clear of mesh. Pressing into mesh may damage filter.

3. To clean the filter, rinse under a tap while brushing it gently with a soft brush.

- 4. To refit filter, once again hold filter with index finger and thumb. Gently push filter back into the kettle until you hear a click. The filter is now reattached. Gently tug on filter to ensure filter is attached properly.
- 5. Rinse out kettle with fresh water and it's ready for use.

### CARE AND CLEANING

- 1. Mineral deposits in tap water may cause scale deposits to form inside the electric kettle after frequent use. To remove this scale build-up, fill the kettle with a solution of 3 cups of white vinegar and 3 cups water. Let sit overnight.
- 2. Empty the vinegar solution from the electric kettle. Remove any stain remaining inside by rubbing with a damp cloth.
- 3. Fill the electric kettle with clean water. Place kettle on power base and bring to a boil, then discard water. Repeat and the electric kettle will be ready to use.
- 4. The electric kettle will not operate again until the on/off switch is pressed downward.
- 5. Always remove kettle from power base and disconnect power base from electrical outlet before cleaning. Do not immerse kettle or power base in water or other liquid.
- 6. The outside of the electric kettle can be wiped with a soft damp cloth.

**NOTE:** Never use any chemical, steel wool, or abrasive cleaners to clean any part of the kettle, including the power base.

### WARRANTY

Sunbeam Products, Inc doing business as Jarden Consumer Solutions, its affiliates and subsidiaries (hereinafter collectively referred to as "SPI") warrant that, for a period of two (2) years from the date of purchase, this product will be free from defects in material and workmanship (the "Warranty"). Please preserve the Warranty Card and Cash Memo duly stamped and signed by the dealer, as this will be required for any claims under this Warranty.

- The rights and benefits under this Warranty are additional to your statutory rights, which are not affected by this Warranty.
- During the period Warranty, SPI at its choice will repair or replace this product or any
  component of the product found to be defective free of cost through (the Dealer from
  whom the product was purchased or through the service center listed in card-business
  people to confirm), provided that:
  - SPI is promptly informed of the defect.
  - The product has not been altered in any way or subjected to misuse or repair by the person other than a person authorized by SPI.
- No rights are given under the Warranty to a person acquiring the product second hand.
- Any repaired or replaced product will be warranted on these terms for the remaining portion of the Warranty in the country where the product was purchased.
- · Liability for consequential loss or damage is neither accepted nor is it implied.
- The following are not covered under SPI's Warranty:
  - a. If product was used in any manner other than the intended use.
  - b. If product has not been used according to the instruction manual/User's Manual, included with the product.
  - c. If defects are caused by improper or reckless use.
  - d. If product was altered or repaired by anyone other than those authorized by the national manufacturer, importer or respective merchant.
  - e. Use of incorrect current or voltage or faulty electric power supply.
  - f. Normal wearing and tearing of parts and accessories resulting from regular use.
  - g. Damages resulting from transportation, accidents, mishandling or negligence on the part of the customer.
  - h. The following part/components:
    - Glass container
    - Light bulb
    - Accessories
  - i. Industrial or commercial use of product.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist.

### AUTHORIZED SERVICE CENTERS

Region	Location	Customer Service Center Address	Area / Towns Covered
WEST	Mumbai	S P Services Shop No. 10, Abdul Sattar Compound Near Railway Station Elphinston Road (West) Mumbai – 400013 Maharashtra, India Phone # (022) 24326726, 24312623	Mumbai, Navi Mumbai & Thane
	Pune	Shree Ganraj Services Shop No. 8, Shri Ganesh Gayatri Complex, 291 Sombar Peth, Pune - 411011 Maharashtra, India Phone # (020) 32949014	Pune, Pimpri & Chinchwad
	Goa	Jolly Enterprises Shop # G-2, 78/A Nuvem Enclave Along NH-17 Highway, Belloy Nuvem Salcete - 403 604 Goa, India Phone # (0832) 2791800	Goa
	Ahmedabad	Shree Sainath Associates Basement - 2, Shaan Building Opp. Town Hall, Behind Sakar- 4 Ellisbridge Ahmedabad – 380006 Gujarat, India Phone # (079) 26581635	Ahmedabad, Vodadara, Nadiad & Anand
	Surat	Smart Care A-5, Taj Chambers, 3rd Floor Opp. Congress Bhavan, Near Silk House Market Sona Faliya, Chowk Bazar Surat - 395003 Gujarat, India Phone # (0261) 6509394	Surat, Bharuch, Navsari, Bardoli, Valsad, Vapi, Silvasa
HINOS	Chennai	G C Services Old No. 12, New No. 37 1st Floor, Sattanna Naicken Street Nehru Timber Market, Choolai Chennai - 600 112 Tamil Nadu, India Phone # (044) 26690084 / 42822868	Chennai
	Hyderabad	Bright Engg Works # 7.4-195/1&2, Geeta nagar Ferozguda, Near BBR Hospital Beside Bharath Lodge, Balanagar Secunderabad – 500011 Andhra Pradesh, India Phone # (040) 23774648 / 23771842	Hyderabad & Secunderabad
	Bangalore	Electrocare Services No. 151/1, Second Main 7th Cross, Chamrajpet, Bangalore – 560018 Karnataka, India Phone # (060) 65993911, 26605762	Bangalore
NORTH	Delhi	S. T. Services M-131, 1st Floor Guru Harkishan Nagar Paschim Vihar New Delhi - 110041 India Phone # (011) 32958438 / 45586987	North, West & South Delhi
	Delhi	Pant Sales and Service A-11, Pandav Nagar Near Mother Dairy Factory Delhi - 110092 India Phone # (011) 22486687	East & Central Delhi, Noida, Faridabad & Ghaziabad
	Gurgaon	Avon Services House No. 902/3, Gali No. 2 Rajeev Nagar (East) Gurgaon – 122001 Haryana, India Phone # 9212406014 / 9810813256	Gurgaon
	Chandigarh	Sai Sales Corporation SCO 68-70, Basement Chamber No. 66 Sector 17-A, Chandigarh Chandigarh, India Phone # (0172) 5078028 / 3064028	Chandigarh, Panchkula, Mohali, Zirakpur & Nayagaon
	Ludhiana	Creations Enterprise D-3, 2nd Floor, Girja Ghar Market, Books Market Chowk, Chaura Bazar Ludhiana - 141 008 Punjab, India Phone # (0161) 2720523 / 2740523	Ludhiana, Jalandhar, Chandigarh & Jammu
EAST	Kolkata	Europa Sales and Service 56 - C /1 Kankulia Road Golpark, Kolkata – 700029 West Bengal, India Phone # (033) 32548558	Kolkata & Suburbs

## egRivZlj{kfimZk

आग के खतरे, बिजली के झटके और ⁄ या चोट लगने से बचने के लिए, बिजली के उपकरणों का इस्तेमाल करते समय, कृप्या निम्नलिखित सहित बुनियादी सुरक्षा संबंधी सावधानियों का हमेषा पालन करें:

- 1. इलेक्ट्रिक कैटल का उपयोग करने से पहले सभी निर्देषों को पढ़ लें।
- 2. गरम सतह वाले भागों को न छुएँ। हैंडल या नॉब का उपयोग करें।
- बिजली के झटके के खतरे से बचने के लिए, पॉवर कोर्ड या मोटर बेस को पानी या किसी अन्य तरल पदार्थ के संपर्क से दूर रखें।
- 4. पॉवर बेस को कहीं ओर रखने या उसकी सफाई करने से पहले पॉवर आउटलेट से उसके प्लग को हटा लें। उपकरण की सफाई करने और उसके पुर्जों को अलग–अलग करने से पहले उसे ठंडा होने दें।
- 5. तार या प्लग क्षतिग्रस्त होने पर या उपकरण खराब हो जाने पर, या किसी भी प्रकार से क्षतिग्रस्त हो जाने पर, किसी भी उपकरण को न चलाएँ। जाँच, मरम्मत, इलेक्ट्रिकल या मैकेनिकल समायोजन के लिए उपकरण को नजदीकी अधिकृत Oster<sup>®</sup> सर्विस सेंटर पर ले जाएँ।
- उत्पादनकर्ता सहायक उपकरणों का इस्तेमाल करने की सलाह नहीं देते और न ही वह उसे बेचते हैं, क्योंकि इससे आग, बिजली का झटका या चोट लगने का खतरा रहता है।
- 7. इस उपकरण को घर से बाहर इस्तेमाल न करें।
- तार को टेबल या काउंटर के किनारे पर लटका हुआ न छोड़ें, या गरम सतह वाले भागों को न छुएँ।
- 9. इस उपकरण को गर्म गैस या इलेक्ट्रिक बर्नर या ओवन के आसपास न रखें।
- 10. पॉवर बेस का प्लग लगाने और उसे चालू करने से पहले सुनिष्चित कर लें कि पॉवर बेस पर कैटल ठीक से रखी गई है। डिस्कनेक्ट करने के लिए सभी नियंत्रणों को "O" स्थिति पर घुमा कर उनका चलना रोकें और फिर दीवार पर लगे इलेक्ट्रिक आउटलेट से प्लग को हटाएँ।
- 11. कैटल को भरने या उससे पानी डालने का कार्य करने से पहले उसे पॉवर बेस से हटा लें। पॉवर बेस का स्विच बंद होने पर ही, आपके द्वारा बंद करने पर या स्वतः ही चलना बंद हो जाने पर, उस पर से कैटल को हटाएँ।
- 12. कैटल को पॉवर बेस या किसी ओर तरीके द्वारा बिजली की आपूर्ति के साथ ही इस्तेमाल करें।
- 13. किसी और उपयोग के लिए उपकरण का प्रयोग न करें।
- 14. उपकरण के नीचे वायु प्रवाह में रुकावट से बचने के लिए, उपकरण को केवल किसी सख्त, समतल सतह पर ही रखकर इस्तेमाल करें।
- 15. कैटल को हैंडल करते या इधर—उधर करते समय, और कैटल से गरम पानी डालते समय अत्यंत सावधानी बरतनी चाहिए।
- 16. गरम करते समय उपकरण की लिड खुली रहने पर, गरम पानी से आप जल भी सकते हैं।
- 17. यह उपकरण संवेदी, अपाहिज, या कम मानसिक क्षमता अथवा अनुभवहीन और कम ज्ञान वाले व्यक्तियों (बच्चों सहित) द्वारा उपयोग किए जाने के लिए नहीं है, बषर्ते कि वह इस उपकरण का इस्तेमाल किसी की देखरेख में कर रहे हों या उनकी सुरक्षा की जिम्मेदारी लेने वाले व्यक्ति द्वारा उन्हें उपकरण के इस्तेमाल करने के निर्देष दिए गए हों। बच्चों का ध्यान रखा जाना चाहिए कि वह इस उपकरण के साथ न खेलें।
- 18. बच्चों के पास में होने पर या बच्चों अथवा असमर्थ व्यक्ति द्वारा उपकरण को इस्तेमाल करने पर बहुत ही देखरेख की जरूरत पड़ती है।

### इन निर्देषों को ध्यान मे रखें

### विषेश कॉर्ड सेट निर्देष

- लंबी तार के उलझने या उसमें अटक कर गिरने जैसे जोखिम से बचने के लिए एक छोटी पॉवर कॉर्ड दी गई है।
- 2. लंबी कॉर्ड की आवष्यकता पड़ने पर एक अनुमोदित एक्स्टेंषन कॉर्ड का उपयोग किया जा सकता है। एक्स्टेंषन कॉर्ड की इलेक्ट्रिकल रेटिंग, इलेक्ट्रिक कैटल की इलेक्ट्रिकल रेटिंग के बराबर होनी चाहिए (उत्पाद पर अंकित रेटिंग लेबल देखें)। उपयोग अनुसार बढ़ाई गई कॉर्ड को इस तरह से व्यवस्थित करें, जिससे यह काउंटर पर या टेबल से लटकती हुई न दिखाई दे नहीं तो बच्चे इसे खींच सकते हैं या गलती से उसमें अटकने से गिर सकते हैं।

#### सावधानियाँः

चेतावनीः गरम पानी से जलने से बचने के लिए, पानी गरम करते समय, उबालते समय और ठंडा करते समय कैटल को सावधानी से हैंडल करें। भाप से जलने से बचने के लिए इसका इस्तेमाल करते समय लिड अच्छी तरह से लगी होनी चाहिए। इसके स्पाउट से लोगों को दूर रखना चाहिए नहीं तो इसकी भाप से त्वचा जल सकती हैं।

- 1. इलेक्ट्रिक कैटल को काउंटर के किनारे से उपयुक्त दूरी पर रखें।
- यह कैटल सिर्फ पानी गरम करने के लिए है। इस उपकरण में कोई और तरल पदार्थ गरम न करें या खाना पकाने का प्रयास न करें।
- 3. कैटल को कभी भी गरम सतह के आस-पास न रखें।
- 4. फिल्टर को केवल हाथ से धोएँ। इसका कोई भी पुर्जा डिषवॉषर सुरक्षित नहीं है।
- पानी भरते समय "MAX" जल स्तर चिह्न को पार न करें। अधिक पानी भरने से, गरम करते समय खौलता हुआ पानी स्पाउट से बाहर आ सकता है।
- स्विच को ऑन करते समय उसे दबाकर न रखें, नहीं तो इसकी स्वतः ही चलना बंद हो जाने की प्रक्रिया प्रभावित हो सकती है।
- 7. इलेक्ट्रिक कैटल को हैंडल से पकड़ कर ही उपयोग करें।
- 8. कैटल की बॉडी बहुत अधिक गरम हो सकती है, अतः उपयोग करते समय सावधानी बरतें।
- 9. कैटल या पॉवर बेस को पानी अथवा किसी अन्य तरल में न डालें।

#### केवल घर में उपयोग के लिए।

### उत्पाद का चित्र



- 1. लिड रीलीज बटन
- 2. कैटल लिड
- 3. स्पाउट
- 4. हैंडल
- 5. स्टेनलैस स्टील बॉडी
- 6. डिजीटल डिस्प्ले

- 7. तापमान घटाने और बढ़ाने के लिए कंट्रोल बटन
- 8. फंक्षन बटन
- 9. स्टार्ट / स्टॉप बटन
- 10. वॉटर विंडो
- 11. पॉवर बेस
- 12. कॉर्ड स्टोरेज (पॉवर बेस के नीचे)

### पहली बार इस्तेमाल करने से पहले

- कैटल और उसकी लिड को अंदर से किसी सौम्य साबुन से साफ करें। उन्हें अच्छी तरह से धोएँ। कैटल या पॉवर बेस को पानी अथवा किसी अन्य तरल में न डालें। ये आइटम डिषवॉषर सुरक्षित नहीं हैं।
- कैटल को वाटर विंडो में दिखाए गए "MAX" जल स्तर तक ताजे पानी से भर लें। अपनी कैटल का इस्तेमाल करने के लिए नीचे दिए गए निर्देषों का अनुसरण करते हुए पानी उबालें।
- 3. जब पानी और यूनिट ठंडे हो जाएँ तब पानी को निकाल दें. ठंडे पानी से धोएँ और फिर से करें।
- 4. आपकी इलेक्ट्रिक कैटल इस्तेमाल के लिए तैयार है।

# lipkyu funik

- पॉवर बेस को जितना हो सके उतना किसी पॉवर आउटलेट के पास एक समतल, ताप-रोधक सतह पर रखें।
- 2. पॉवर बेस में कॉर्ड रूटिंग इस तरह से करें कि तार आसानी से बाहर निकल जाए। उपयुक्त कॉर्ड रूटिंग, कैटल को बेस पर रखते समय, पॉवर बेस को समतल रखेगी। यदि पॉवर बेस समतल नहीं है, तो कैटल को न चलाएँ। यदि पॉवर बेस समतल नहीं है, तो पॉवर बेस से कैटल हटाएँ और कॉर्ड लगाने के निर्देष दोहराएँ।
- पानी भरने के लिए लिड खोलें। कैटल को "MAX" जल स्तर चिह्न के नीचे तक भरें। नोटः इलेक्ट्रिक कैटल पर दिखाए गए "MAX" जल स्तर चिह्न से ऊपर पानी न भरें।

# QD la dkp; u djuk

कैटल का मूल कार्य पानी उबालना है, हालांकि आप निम्नानुसार वांछित फंक्षन का चयन कर सकते हैं: ऑटोमैटिक षट ऑफ के साथ पानी उबालें/गरम करें

यह फंक्षन आपको पानी उबालने या गरम करने देता है और प्रक्रिया पूरी होने पर यूनिट स्वतः चलना बंद कर देती है।

- 1. इलेक्ट्रिक कॉर्ड को एक उपयुक्त इलेक्ट्रिक आउटलेट में लगाएँ।
- आप पानी उबालना चाहते हैं या गरम करना चाहते हैं, इस आधार पर निम्न में से कोई एक विकल्प चुनें:

#### पानी उबालना

सुनिष्चित करें कि डिस्प्ले में कैटल आइकन दिखाई दे रहा है। यदि नहीं तो कैटल आइकन के चयनित होने तक "☷" फंक्षन दबाकर रखें। साथ ही यह भी सुनिष्चित कर लें कि प्रदर्षित तापमान 100° से. है। (चित्र 1 देखें).



चित्र 1

उबालने की प्रक्रिया प्रारंभ करने के लिए स्टार्ट∕स्टॉप बटन "►/■" दबाएँ। पानी गरम हो जाएगा और उबाल आने पर इलेक्ट्रिक कैटल स्वतः ही चलना बंद कर देगी।

#### पानी गरम करना

सुनिष्चित करें कि डिस्प्ले में कैटल आइकन दिखाई दे रहा है। यदि नहीं तो कैटल आइकन के चयनित होने तक "☷" फंक्षन दबाकर रखें। तापमान को इच्छानुसार घटाने या बढ़ाने के लिए "+/-" तापमान नियंत्रक बटन दबाएँ। आप 5 डिग्री के अंतराल पर 40° से. से 100° से. तक तापमान का चयन करने में समर्थ हैं। (चित्र 2 देखें).



चित्र 2

वांछित तापमान का चयन करने के बाद, गरम करने की प्रक्रिया प्रारंभ करने के लिए स्टार्ट ⁄ स्टॉप बटन "▶/■" दबाएँ। पानी गरम हो जाएगा और पानी के चयनित तापमान पर पहुँचते ही इलेक्ट्रिक कैटल स्वतः ही चलना बंद कर देगी।

 आप जब चाहें तब इस उबालने या गरम करने की प्रक्रिया को रोक सकते हैं, इसे रोकने के लिए बस एक बार फिर स्टार्ट / स्टॉप "▶/■" बटन को दबाएँ।

#### कीप वॉर्म फंक्षन का उपयोग करते हुए पानी उबालें / गरम करें

यदि आप पानी उबालना या गरम करना चाहते हैं, और चाहते हैं कि गरम होने या उबलने के बाद यह 30 मिनट तक गरम रहे तो आपको इस फक्षन का उपयोग करना चाहिए।

- 1. इलेक्ट्रिक कॉर्ड को एक उपयुक्त इलेक्ट्रिक आउटलेट में लगाएँ।
- 2 आप पानी उबालना चाहते हैं या गरम करना चाहते हैं, इस आधार पर निम्न में से कोई एक विकल्प चुनें:

#### कीप वॉर्म फंक्षन का उपयोग करते हुए पानी उबालना

सुनिष्चित करें कि डिस्प्ले में कैटल आइकन दिखाई दे रहा है। यदि नहीं, तो कैटल आइकन के चयनित होने तक "☷" फंक्षन दबाकर रखें। साथ ही यह भी सुनिष्चित कर लें कि प्रदर्षित तापमान 100° से. है। (चित्र 3 देखें).



चित्र 3

कीप वॉर्म आइकन का चयन करने के लिए "[॑]" फंक्षन बटन दबाएँ और फिर तापमान को घटाने या बढ़ाने के लिए "+⁄−" तापमान नियंत्रक बटनों का उपयोग करते हुए 5 डिग्री के अंतराल पर 40° से. से 90° से. के बीच, वांछित तापमान का चयन करें। (चित्र 4).



चित्र 4

उबालने की प्रक्रिया प्रारंभ करने के लिए स्टार्ट ⁄ स्टॉप बटन "►/■" दबाएँ। पानी उबल जाएगा और फिर इलेक्ट्रिक कैटल स्वचालित रूप से पानी को 30 मिनट तक चयनित तापमान पर रखेगा और फिर स्वतः ही चलना बंद हो जाएगा।



चित्र 5

#### कीप वॉर्म फंक्षन का उपयोग करते हुए पानी गरम करना

सुनिष्चित करें कि डिस्प्ले में कैटल आइकन दिखाई दे रहा है। यदि नहीं तो कैटल आइकन के चयनित होने तक "☷" फंक्षन दबाकर रखें। तापमान को वांछित स्तर पर समायोजित करने के लिए घटाएँ और बढ़ाएँ "+/-" तापमान नियंत्रक बटन दबाएँ। आप 5 डिग्री के अंतराल पर 40° से. से 100° से. तक तापमान का चयन करने में समर्थ हैं। (चित्र 5 देखें). कीप वॉर्म आइकन का चयन करने के लिए ": ") फंक्षन बटन दबाएँ और फिर तापमान को घटाने या बढ़ाने के लिए "+/-" तापमान नियंत्रक बटनों का उपयोग करते हुए 5 डिग्री के अंतराल पर 40° से. से 90° से. के बीच, वांछित तापमान का चयन करें। (चित्र 6 देखें).



चित्र 6

गरम करने की प्रक्रिया प्रारंभ करने के लिए स्टार्ट ⁄ स्टॉप बटन "▶/■" दबाएँ। पानी गरम हो जाएगा और फिर इलेक्ट्रिक कैटल स्वचालित रूप से पानी को 30 मिनट तक चयनित तापमान पर रखेगा और फिर स्वतः ही चलना बंद हो जाएगा।

नोटः यदि आप पॉवर बेस से कैटल को हटा देते हैं तो यह अपने मूल फंक्षन पर रीसेट हो जाएगा, अर्थात् उबालें.

कैटल तब तक पुनः उबालने की क्रिया नहीं करेगा जब तक स्टार्ट बटन को दोबारा सक्रिय न किया जाए। 25 सेकंड तक प्रतीक्षा करें, कैटल को ठंडा होने दें, और तब स्टार्ट दबाएँ।

नोटः सुनिष्चित कर लें कि लिड से अच्छी तरह से बंद कर दिया गया है। यदि लिड खुली रह गयी तो इलेक्ट्रिक कैटल स्वतः चलना बंद नहीं करेगी।

### यदि उबालने पर कैटल सूख जाता है

यदि इस्तेमाल के लिए कैटल का संचालन निर्देषों के अनुरूप किया गया है, तो यह संभव नहीं है कि कैटल जले। हालांकि, पानी सूखने से कैटल जलने की स्थिति में, इसे बॉयल–ड्राइ सुरक्षित डिवाइस द्व ारा संरक्षित किया जाता है, जिससे पानी सूख जाने से जलने का पता लगते ही कैटल स्वतः ही चलना बंद कर देगी और तब तक इसे स्विच ऑफ रखेगी जब तक कैटल पानी की न्यूनतम मात्रा तक फिर से नहीं भर नहीं जाती। यदि पानी सूख जाने से कैटल जलने लगती है तो इसका फिर से इस्तेमाल करने के लिए कैटल को हमेषा कम से कम आधा घंटे के लिए ठंडा होने के लिए छोड़ दें।

### फिल्टर के लिए निर्देष

आपके पेय या भोजन में पानी से जमने वाली परतों से प्राप्त अवषिश्ट की मात्रा को कम करने के लिए कैटल में एक जाली वाला फिल्टर लगाया गया है। फिल्टर को साफ करने के लिए निकाला जा सकता है। परत जमने से रोकने के लिए उबालने के बाद बचे हुए पानी को निकाल कर कैटल को खाली रखें।

फिल्टर को कितने समय में साफ करना चाहिए, यह आपके निवास स्थान और कैटल का इस्तेमाल आप अक्सर कितनी बार करते हैं, इस पर निर्मर करता है। जब भी फिल्टर पर कुछ जमा हुआ दिखाई दे, फिल्टर को साफ कर लेना चाहिए खासतौर पर तब जब कैटल से पानी डालने में समय लग रहा हो।

### फिल्टर निकालना/सफाई करना/पुनः लगाना

महत्वपूर्णः कैटल का स्विच बंद होना चाहिए, पॉवर आउटलेट से अलग किया हुआ होना चाहिए और फिल्टर को निकालने से पहले पूरी तरह से ठंडा किया हुआ होना चाहिए। अत्याधिक बल का प्रयोग न करें, क्योंकि इससे फिल्टर या लिड नश्ट हो सकते हैं।

- 1. कैटल खाली करें और उसकी लिड उठाएँ।
- फिल्टर के ऊपरी भाग को तर्जनी उँगली और अंगुठे से पकड़ें और ऊपर की ओर खींचें। फिल्टर निकालते समय आपको कैटल को पकड़ना पड़ सकता है।

सावधानीः उँगली को जाली से दूर रखें। दवाब पड़ने से जाली खराब हो सकती है।

- फिल्टर को साफ करने के लिए, किसी नरम ब्रष से इसे धीरे–धीरे साफ करते हुए नल के नीचे धोएँ।
- 4. फिल्टर को फिर से लगाने के लिए, एक बार फिर फिल्टर को तर्जनी उँगली और अंगुठे से पकड़ें। फिल्टर को कैटल के अंदर धीरे से धक्का देते हुए इस तरह लगाएँ कि आपको क्लिक की आवाज सुनाई दे। फिल्टर फिर से लग गया है। फिल्टर ठीक से लग गया है, यह सुनिष्चित करने के लिए उसे हल्का सा खींच कर देखें।
- 5. कैटल को सादे पानी से धोएँ और लीजिए यह इस्तेमाल करने के लिए तैयार है।

### देखभाल और स्वच्छता

- नल के पानी में मिलने वाले खनिज, इलेक्ट्रिक कैटल का अक्सर इस्तेमाल करने के बाद उसके अंदर पानी से जमने वाली परतों का कारण हो सकते हैं। इन परतों को हटाने के लिए, कैटल को 3 कप सफेद सिरका और 3 कप पानी के घोल से भर दें। उसे रात भर उसी में रहने दें।
- इलेक्ट्रिक कैटल से सिरके के घोल को निकालकर उसे खाली कर लें। यदि अंदर कोई धब्बा रह गया है तो उसे गीले कपडे से रगडकर साफ कर दें।
- 3. इलेक्ट्रिक कैटल में साफ पानी भरें। कैटल को पॉवर बेस पर रखें और एक उबाल आने दें, फिर उस पानी को फेंक दें। फिर से यही करें और इलेक्ट्रिक कैटल इस्तेमाल करने के लिए तैयार हो जाएगी।
- इलेक्ट्रिक कैटल तब तक दोबारा नहीं चलेगी जब तक उसके ऑन/ऑफ स्विच को नीचे की ओर दबाया नहीं जाता।
- 5. सफाई करने से पहले, हमेषा पॉवर बेस से कैटल को हटाएँ और इलेक्ट्रिक आउटलेट से पॉवर बेस को अलग करें। कैटल या पॉवर बेस को पानी अथवा किसी अन्य तरल में न डालें।
- 6. इलेक्ट्रिक कैटल के बाहरी हिस्से को गीले मुलायम कपड़े से पोंछा जा सकता है।

नोटः पॉवर बेस सहित कैटल के किसी भी भाग को साफ करने के लिए, कभी भी किसी रसायनिक पदार्थ तार के झाँवे या कठोर क्लीनर का उपयोग न करें।

वारंटी

Sunbeam Products Inc. Jarden Consumer Solution के रूप में व्यवसाय कर रही है, इसके सहयोगी व सहायक संगठन (बाद में सामूहिक रूप से SPI के रूप में संदर्भित) आष्वासन देते हैं कि खरीद की दिनांक से (2) दो वर्श तक यह उत्पाद सामग्री या कारीगरी संबंधित किसी भी दोश से मुक्त रहेगा ("वारंटी")। कृप्या डीलर द्वारा साइन किए गए व स्टैम्प लगे हुए वारंटी कार्ड और कैष मेमो को यथावत् संमाल कर रखें, क्योंकि इस वारंटी के अंतर्गत किसी भी दावे के लिए इसकी आवष्यकता पडेगी।

- वारंटी के अंतर्गत अधिकार व हित आपके कानूनी अधिकारों के अलावा आपको मिलने वाले अधि ाकार हैं, आपके कानूनी अधिकार इस वारंटी से प्रभावित नहीं होते।
- अवधि वारंटी के दौरान, अपनी पसंद पर SPI खराब पाए गए उत्पाद के किसी भी भाग या उत्पाद को निःषुल्क सुधारेगा या बदलेगा (या तो उस डीलर के माध्यम से जिससे उत्पाद खरीदा गया था या लोगों की पुष्टिट करने के लिए कार्ड बिजनेस में सूचीबद्ध सेवा केंद्र के माध्यम से), बषर्ते किः
  - SPI को खराबी की तत्काल ही खबर की गई हो।
  - SPI उत्पाद को किसी भी तरह से बदला न गया हो या उसका दुरुपयोग न किया गया हो या SPI द्वारा अधिकृत व्यक्ति के अलावा किसी अन्य व्यक्ति ने इसे ठीक न किया हो।
- सेकेंड हैंड उत्पाद लेने वाले किसी भी व्यक्ति को इस वारंटी के अंतर्गत कोई अधिकार प्रदान नहीं किए जाते।
- 4. कोई भी ठीक किए गए या बदले गए उत्पाद पर वारंटी, जिस देष में उस उत्पाद को खरीदा गया है उस देष में वारंटी की षेश अवधि के लिए, इन्हीं षर्तों पर मिलेगी।
- 5 .परिणामी हानि या क्षति के लिए दायित्व न तो स्वीकार किया जाता है और न ही यह अंतर्निहित है।
- 6. SPI की वारंटी में निम्नलिखित षामिल नहीं है:
  - क. यदि उत्पाद को अभीश्ट उपयोग के अलावा किसी अन्य तरीके से इस्तेमाल किया गया है।
  - ख. यदि उत्पाद को उसके साथ आई निर्देष पुस्तिका / उपयोगकर्ता पुस्तिका के अनुसार उपयोग नहीं किया गया है।
  - ग. यदि दोश अनुचित या लापरवाही से उपयोग करने के कारण हैं।
  - ध. यदि उत्पाद नेषनल उत्पादनकर्ता आयातक या संबंधित व्यापारी द्वारा अधिकृत लोगों के अलावा अन्य किसी के द्वारा ठीक किया गया है।
  - च. गलत विद्युत या वोल्टेज अथवा दोशपूर्ण बिजली की आपूर्ति का उपयोग।
  - छ. नियमित इस्तेमाल से पुर्जों और सहायक उपकरणों में हुई मामूली तोड़–फोड़।
  - ज. ग्राहक की ओर से परिवहन, दुर्घटनाओं, उत्पाद से छेड़छाड़ या उसकी लापरवाही से होने वाली क्षतियाँ।
  - झ. निम्नलिखित पुर्जे / घटकः
    - गिलास कंटेनर
    - लाइट बल्ब
    - सहायक उपकरण
  - ट. उत्पाद का औद्योगिक या वाणिज्यिक उपयोग।

अपषिश्ट विद्युत उत्पादों को घर के कचरे के साथ नहीं निपटाया जाना चाहिए। जहाँ सुविधाएँ मौजूद हैं, कृप्या रीसायकल करें।



क्षेत्र	षहर	सर्विस सेंटर के नाम	कवर किए गए इलाके
पाच्चिम	मुंबई	मेसर्स एस. पी. सर्विसेस षॉप नं. 10. अब्दुल षटर कम्पाउंड, फिटवाला रोड, सतगुरू दर्षन बिल्डिंग के पीछ, रेलवे स्टेषन के पास, एलफिंस्टन रोड पच्चिम मुबई–400013 महाराष्ट्र, भारत फोन नं. : 022–24326726/24312623	मुंबई, ठाणे और नयी मुंबई
	पुणे	नेसर्स श्री गणराज सर्विसेस घोंप नं. 8, श्री. गणेष गायत्री कॉम्प्लेक्स, 291, सोमवार पेठ, पुणे—411011 महाराष्ट्रा, मारत फोन नं. : 020–32949014	पुणे, पिंपरी और विंचवाड
	गोवा	जीली एन्टरग्राइजेस जी—2ए 78 / ए. नुवेम एक्कलेब, एन एच — 17 हाईवे के साथ, बीलीय नुवेम सालसेट-403604 गोवा, मारत फोन मं.: 0832–2791800	गोवा
	अहमदाबाद	मेसर्स श्री साईनाथ एसोसिएट्स बेसमेंट-2, सान बिल्डिंग के विपरीत, टाउन हाल के पीछे, सकर-4 एलिसब्रिज अहमदाबाद-30006 गुजरात, मारत फोन मॉ. : 079–26581635	अहमदाबाद, वोडादरा, नादिआद और आनंद
	सूरत	स्मार्ट केयर ए5, ताज चैम्बर, तीसरा तल कांग्रेस भवन के पीछे, सिल्क हाउस मार्केट सोना फोलिया चौंक बाजार के पास सूरत-395003 गुजरात, भारत फोन मं. : 0261-6503394	सूरत, भारूच, नवसारी, बारदोली, वलसाद, वापी और सिल्यासा
दक्षिण	चेन्नई	मेसर्स जीसी सर्विसेज पुपनी संख्या, 12, नई संख्या 37 पहली मंजिल, सन्ताना नायक मार्ग नेहरू टिम्बर मार्केट चोलर्ड, चेन्नई-600012 तमिलनाडू, मारत फोन मं.: 044-26690084 / 42822868	चेन्नई
	हैदराबाद	ब्राइट इंजी. वर्क्स 7.4.195/1 और 2. गीता नगर, किरोजगुड, बीबीआर अस्पताल के पास भारत लॉज के पास, बालानगर, सिंकन्दराबाद–500011 आंध्र प्रदेष, भारत फोन मं.: 040–23774648/23771842	हैदराबाद और सिकन्दराबाद
	बंगलुरू	मेसर्स इलेक्ट्रोकेयर सर्विसेज नं. 151 / 1. सेकन्ड मेन 7 वां क्रोंस. चामराजपेठ, बंगलुरू–560018 कर्नाटका, भारत फोन नं. : 080–26605762 / 65993911	बंगलुरू
व्यसर	दिल्ली	मेसर्स एस. टी. सर्विस पॉइंट म–131, पहली मंजील, गुरू हरकुश्ण नगर, पष्चिम विद्यार नई दिल्ली–110041 भारत फोन नं. : 011–45586987/32958438	उत्तर, पष्चिम और दक्षिण, दिल्ली
	दिल्ली	मेसर्स पंत सेल एण्ड सर्विसेज़ ए–11, पांडव नगर, मदर डेरी फैक्ट्री के पास दिल्ली–110092 मारत फोन नं. : 011–22486687	फरिदाबाद, नोएडा, गाजियाबाद, पूर्व और केन्द्रीय दिल्ली
	गुड़गॉव	एवोन सर्विसेस मकान नं. 902/3, गली नं. 2 राजीव नगर वेस्ट गुडगॉव–122001 हरियाणा, भारत फोन नं. : 9212406014/9810813256	गुड़गॉव
	चंडीगढ़	मेसर्स साई सेल्स कोर्पोरेषन एस सी ओ 68–70, बेसमेंट चैम्बर नं: 66 सेक्टर 17–ए, चंडीगढ़ चंडीगढ, मारत फोन न. : 0172–5078028 / 3064028	चंडीगढ़, पंचकुला, मोहाली, जिराकपुर और नयागॉव
	लुधियाना	मेसर्स क्रीएषंस एंटरपाड्जेस डी-3, दुसरी मजिल, गिरीजा घर मार्केट, बुक्स मार्केट चौक चौरा बाजार दुवियानी-141008 फोन न. : 0161–2720523/2740523	लुधियाना, जलंधर, चंडीगढ़ और जम्मू
पूर्व	कोलकाता	मेसर्स यूरोपा सेल एण्ड सर्विसेंस 56 सी∕1 कनकुलिया रोड गोल पार्क, कोलकाता–700029 पष्टिम बंगाल, भारत फोन नं. : 033–32548558	कोलकाता और सुबर्ब



WARRANTY CARD

© 2012 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved. Manufactured by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions, 2381 Executive Center Drive, Boca Raton, Florida 33431 U.S.A. Distributed by Jarden Consumer Solutions of India Private Limited, Unit B-204, Universal Business Park, Off Saki Vihar Road, Chandivali Farm Road, Andheri (E) Mumbai 400 072, India.

#### 1-800-102-6300

© 2012 सनबीम प्रोडक्ट्स, इक जॉर्डन कंज़्युमर सल्युशन के रूप में व्यापार करते हैं। सर्वाधिकार सुरक्षित। सनबीम प्रोडक्ट्स इक द्वारा निर्मित जो जॉर्डन कंज्युमर सल्युशन के रूप में व्यापार करते हैं, 2381 एक्जिक्यूटिव सेंटर ड्राइव, बोका रेटन, फ्लोरिडा 33431, यूएसए

जॉर्डन कंज्युमर सल्युशन ऑफ इंडिया प्रा. लि., यूनिट बी–204, यूनिवर्सल बिजनेस पार्क, साकी विहार रोड के सामने, चांदीवली फार्म रोड, अंधेरी (ई) मुम्बई 400072, भारत द्वारा वितरित

1-800-102-6300

Model No. : ਸੱਤਰ ਜ.	
Date of Purchase : खरीदन की तारीख	
Dealer's Stamp : डीलर की मुहर	