

# USER MANUAL





### SAFETY

Read these simple guidelines. Not following them may be dangerous or illegal.



### DO NOT RISK

Do not switch the telephone on when mobile phone use is prohibited or if it may cause interference or danger.



### ROAD SAFETY

Do not use the phone while driving a car.



### RESTRICTED AREAS

Turn off the phone in aeroplane, as it may interfere with other devices on the plane. Your phone can interfere with medical equipment in hospitals and health care facilities. It should apply to all kinds of prohibitions, regulations and warnings provided by medical personnel.



### SAFETY ON GAS STATION

Switch off your mobile phone while refuelling at a gas station. Do not use it close to chemicals.



### QUALIFIED SERVICE

Only qualified personnel may install software or repair this product. Repairs by unqualified phone service or by an unauthorized service centre may damage your phone and cause a loss of your warranty.



### BATTERY AND ACCESORIES

Always try to store the battery in temperatures between 15 and 25 degrees Celsius (59° and 77° F). Extreme temperatures decrease battery's capacity and vitality.

Avoid contact with liquids and metal objects. Such contact can lead to total or partial damage of the battery.

Do not destroy, damage or dispose battery in a fire - this could be dangerous and cause a fire.

Worn out or damaged battery should be stored in a special container. Do not open the battery.



Use the battery only for its intended purpose.

Overcharging can damage the battery. Therefore, it should not be charged for more than 3 days. Unplug unused charger from the power supply. Use only original myPhone accessories that are available with your phone.

In case of charger`s wire damage - it should not be to fixed. The charger must be replaced.



#### WI-FI (WLAN)

This device uses non-harmonized frequency of wireless communication and is intended for use in all European countries. In the European Union the WLAN can be used indoors without any restriction. In France, the WLAN must not be used outdoors.



#### WATERPROOF

This device is not waterproof. Protect it from moisture.



#### CHILDREN

Your phone is not a toy. Keep your device and its accessories out of reach of children.



#### INTERFERANCE

All wireless devices may cause interference which can affect the quality of work of any other equipment.



## Tech specification:

- **RAM Memory: 1GB DDR2**
- **Hexa Core ARM Cortex - A7 1.5GHz – processor**
- **5,5” capacitive touch screen with 1280 x 720 px resolution**
- **8GB internal memory**
- **2400mAh battery**
- **Frontal camera resolution: 2.0 Mpx**
- **Rear camera resolution: 8.0 Mpx**
- **input and output charger parameters:**
  - **input: 100-240V AC, 50/60Hz, 150mA**
  - **output: 5V DC, 1000mA**
- **Power the phone under standard conditions:**
  - **5V DC, 500mA**
- **Smartphone`s weight: 210g**

### ***SIM card inserting***

myPhone CUBE is a mobile phone using Dual SIM technology. Dual SIM allows you to use two mobile networks at the same time. To insert the SIM card correctly follow the instructions:

- Turn off the phone, remove the back cover (undermining the slot located in the right corner of the base of the phone with your nail) and pull out the battery.
- Insert the SIM card into the slot.

### ***Memory card inserting***

Use only memory cards compatible and approved by myPhone. Incompatible memory card may damage itself and the device and remove stored data. Incompatibility of memory card can be caused by incorrect card format (micro SD format is required) or unsupported card size (over 32GB). To insert the memory card correctly follow the directions:

- Turn off the phone and take off the back cover (undermining the slot located in the left corner of the base of the phone with



your nail).

- The memory card slot is located above the battery on the right. Following the drawing insert the memory card into the slot.

### ***Battery inserting***

To insert the battery:

- Turn the phone back cover up.
- Take off the back cover (undermining the slot located in the right corner of the base of the phone with your nail).
- Insert the battery (pay attention to the correct orientation of the battery contacts and phone contacts – these should be adjacent to each other).
- Replace the back cover.

### ***Battery charging***













The battery should be charged prior to the first turning on the device. Charge the battery with the kit charger. The device has a battery capacity of 2400mAh. In case of any problems with the battery - the device must be provided to myPhone service center.

Use only chargers and cables approved by myPhone. Using unapproved chargers or cables could cause an explosion or damage the battery in other way.



*Phone overview:*


















Numer	Symbol	Funkcja
1		Touch screen 5.5"
2		Digital camera lens 2.0Mpx
3	-	Light and proximity sensor
4		Internal speaker
5		Microphone
6		Menu Button
7		Home Button
8		Back Button
9	-	Keypad lock
10	-	Volume control
11		Multifunctional micro-B USB slot
12		Headphones slot mini jack 3.5mm
13		Digital camera lens 8.0Mpx
14		LED Flash light
15		External speaker

## ***Turning on/off the phone***

To turn on the phone press and hold (for about 3 seconds) the keypad lock key. To turn the phone off press and hold (for about 3 seconds) the keypad lock key and select: **[Power off]**.

## ***Indicator icons***

Icon	Description
	Battery status
	Active connection to a Wi-Fi network
	New e-mail
	New SMS
	Network signal strength
	Active 3G network
	Active 2G network
	Missed call
	Active call
	Held call
	The device is connected to a computer
	Active Bluetooth mode
	Active alarm
	Flying mode
	Speakerphone
	Sound profile set to vibrations



***Declaration of conformity with EU Directives***

**CE** **myPhone Sp. z o.o.** declares that this product is compatible with the essential requirements and other important recommendations of the European Directive 1999/5/EC - and all other EU directives.

 Attention: Some of the alerts in your phone may appear in English.



Numer Deklaracji 29/05/2014  
Number of Declaration of Conformity

Data wystawienia deklaracji 14-05-2014  
(date of issue of declaration)

## DEKLARACJA ZGODNOŚCI WE

### EC DECLARATION OF CONFORMITY

My/We, **myPhone Sp. z o. o.**  
(nazwa importera / importer's name)

**ul. Nowogrodzka 31, 00-511 Warszawa**  
(adres importera / importer's address)

niniejszym deklarujemy, że następujący wyrób:  
declare under our responsibility, that the electrical product:

**telefon komórkowy / GSM mobile phone**  
(nazwa wyrobu / name)

**myPhone LUNA**  
(typ wyrobu / type of model)

spełnia wymagania następujących norm:

to which this declaration relates is in conformity with the following standards:

**Safety;** EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013

**SAR;** EN 50360:2001+A1:2012  
EN 62209-1:2006  
EN 62209-2:2010  
EN 62311:2008  
EN 62479:2010  
EN 50566:2013

**EMC;** EN 301 489-1 V1.9.2  
EN 301 489-3 V1.4.1  
EN 301 489-7 V1.3.1  
EN 301 489-17 V2.2.1  
EN 301 489-24 V1.5.1  
EN 301 489-34 V1.1.1

**RADIO;** EN 301 511 V9.0.2  
EN 301 908-1 V5.2.1  
EN 301 908-2 V5.2.1  
EN 300 328 V1.7.1  
EN 300 440-1 V1.6.1  
EN 300 440-2 V1.4.1

jest zgodny z postanowieniami następujących dyrektyw:  
following the provisions following directives:

**Dyrektywa R&TTE 1999/5/EC - Artykuł 3.1a, 3.1b, 3.2**

Rok, w którym umieszczono oznaczenie CE na produkcie: 2014

14-05-2014 Warszawa  
(data i miejscowość / date, place)

Olga Oikowska  
  
(podpis sygnatariusza)  
(signature of the signatory)