


INTEK®

i-Talk T70


Walkie-Talkie PMR446 8 channels with accessories

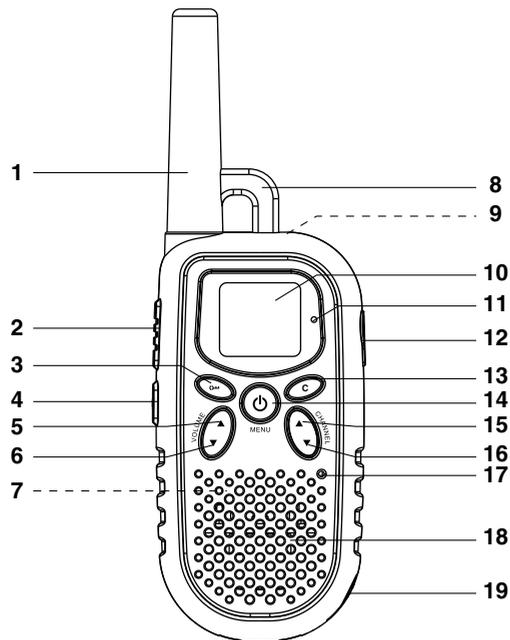

KEYS AND CONTROLS

- | | |
|------------------------------|-------------------------------------|
| 1. High efficiency antenna | 10. Backlighted LCD Display |
| 2. PTT (Push-To-Talk) Key | 11. TX LED |
| 3. Keypad LOCK / Confirm Key | 12. External earset-microphone jack |
| 4. LAMP / Monitor Key | 13. C (CALL Tone) Key |
| 5. VOLUME UP Key | 14. ON-OFF / Menu Key |
| 6. VOLUME DOWN Key | 15. CHANNEL UP Key |
| 7. Battery compartment | 16. CHANNEL DOWN Key |
| 8. Hook for Necklace | 17. Built-in Microphone |
| 9. Belt clip | 18. Built-in Speaker |
| | 19. DC6V Charger jack |

LCD DISPLAY

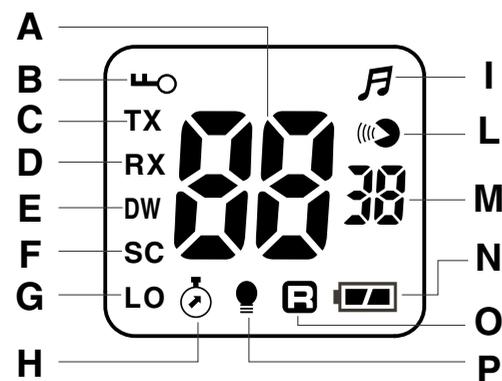

- | | |
|--|---|
| A. Selected channel indication (1-8) | G. LO Icon - Transmitter Low Power Icon |
| B. Keypad LOCK icon | H. Stop Watch function Icon |
| C. TX Icon - Is lighted when the radio is in transmit mode | I. Keypad Tone Icon |
| D. RX Icon - Is lighted when the radio is in receive mode | L. VOX (handsfree use) Icon |
| E. DW Icon - Dual Watch function | M. CTCSS Code Number (1-38) |
| F. SC Icon - Automatic channels or CTCSS Tone scanning | N. Battery Status Indicator |
| | O. R Icon - Roger Beep function |
| | P. Power SAvE function Icon |

CONTENTS OF THE PACKAGE

Per favore verificare che nella confezione siano contenuti i seguenti componenti :


- | | |
|----------------------------|-----------------|
| 2 x Walkie-Talkie | 2 x Belt Clip |
| 1 x Double Desktop Charger | 2 x Necklace |
| 6 x 1.2V Ni-MH AAA Battery | 1 x User Manual |
| 2 x Earset-microphone | |

BATTERIES AND BELT CLIP INSTALLATION

Remove the belt clip before installing the batteries.


Removing and installing the Belt Clip

- To remove the clip, pull the block tab and slide the clip toward the up side of the unit.
- To install the clip, slide it down into the slot situated on the rear side of the unit, until the block system make a click.

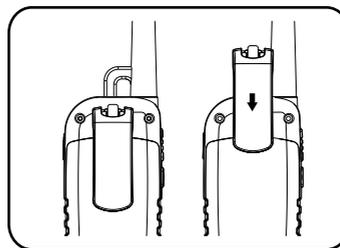

Battery installation

- Release the battery cover latch located on the rear side of the radio and remove the battery cover.
- Install 3 x 1.5V AAA alkaline batteries or Ni-MH rechargeable batteries and pay attention to the correct polarity as indicated in the battery room.
- Reinstall the battery cover and lock the battery cover latch.

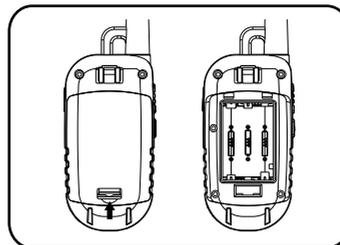

Battery charging

Radios must be recharged only by using supplied accessories.


- Switch OFF the radio (do not turn ON the unit during charging process).
- Install 3 x Ni-MH AAA batteries and pay attention to the correct polarity as indicated in the battery room (7).
- Connect the supplied 230VAC adaptor charger jack to the desktop charger outlet and make sure that it has been fully inserted.
- Plug the adaptor charger to the 230VAC outlet.
- Place the unit into the desktop charger.
- The LED indicators will be lighted to confirm that the charger is powered.
- When the charging process has finished, remove the unit from the desktop charger and disconnect it from the AC outlet.

NOTES :

- LED indicators on the charger will not turn OFF automatically, except radio is removed from the charger or it is disconnected from the AC outlet.
- The charging time is around 6 hours to fully charge batteries if they are at their lowest level or around 14 hours to fully charge new batteries.
- In case LED indicators on the desktop charger do not light up with unit placed inside, please check if it is in proper position and the correct batteries operation.

WARNING :

- Do not attempt to charge any type or regular Alkaline batteries !
- Only use the original 230VAC supplied adaptor charger !
- If you're not going to use the unit for a long period of time, please take out the batteries.

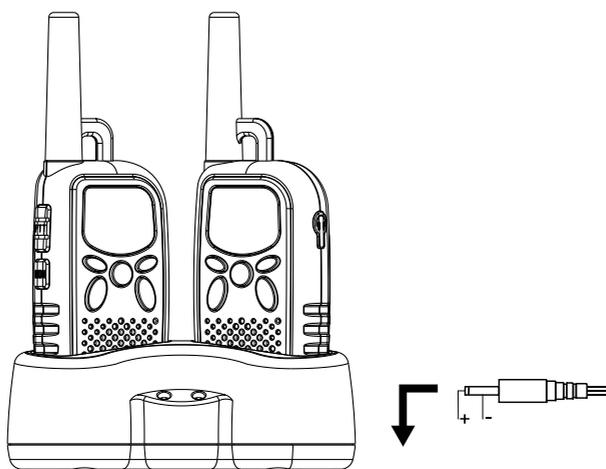

BASIC OPERATION

Power ON-OFF

- To power on the unit, press and hold the ON-OFF/MENU key (14), the LCD display (10) will show the channel number (A) and the CTCSS code number (M).
- To power off the unit, press and hold again the ON-OFF/MENU key (14).

Using the radio

The unit has 8 main channels and 38 CTCSS codes. You can communicate with any other PMR that is using the same main channel & CTCSS code.

Speaking to other radios

- Press and hold the PTT key (2), the TX Icon (C) will be lighted on the LCD display (10).
- Hold the unit in a vertical position with the Microphone at 5-8 cm from the mouth and then speak.
- When you have finished speaking, release the PTT key (2).
- Now you are ready to receive incoming transmission. Adjust the volume to the desired level if necessary.

Using the supplied Earset-microphone (for PTT use only)

- Plug the supplied Earset-Microphone into the earphone Jack (12).
- Press the PTT key on the earphone to speak and release it to listen.
- Adjust volume control if necessary.

WARNING !

Use only original accessories. Connecting and using accessories other than the original ones, may cause serious damage to the radio and will void the warranty. Always set the volume to minimum before connecting an external earset, in order to avoid damaging the earset or the user's ear.

Channel Selection

Press the CHANNEL UP (15) or CHANNEL DOWN (16) to select the desired channel (1-8).

Adjusting speaker volume (8 Levels)

- Press the VOLUME UP (5) to increase the volume level.
 - Press the VOLUME DOWN (6) to decrease the volume level.
- The LE (A) icon and the selected volume level (01-08) (M) will appear on the LCD display (10).

ADVANCED FUNCTIONS

Menu Operation

Press ON-OFF/Menu Key (14) several time to select the Menu functions.

Menu --> CTCSS - TX Power selection --> VOX --> VOX sensitivity --> Channel SCAN --> CTCSS Tone SCAN --> Dual Watch --> CALL Tone --> Roger Beep --> Keypad Beep Tone --> Stop Watch

CTCSS Code Selection

The radio has 38 CTCSS private codes available. Different CTCSS tones may be associated to different channels. To choose the desired CTCSS code, please proceed as follows :

- Press the ON-OFF/Menu Key (14) until the CTCSS code number (M) blinks on the LCD display (10). The CTCSS code 00 (M) indicates that no CTCSS tone is programmed on that channel.
- Press the CHANNEL UP (15) or CHANNEL DOWN (16) keys to select the desired CTCSS code number. Pressing and holding the CHANNEL UP (15) or CHANNEL DOWN (16) keys, the selection will move quicker.
- To confirm the selection and exit the Menu Mode, press the LOCK key (3) or press the ON-OFF/MENU Key (14) to move to the next function.

Selecting a CTCSS code of 00 will disable the CTCSS feature. To communicate between two or more radios, both the channel and CTCSS code selections must be the same. To communicate with other models and brands of radios, the actual radio frequency and CTCSS frequency must be matched. The frequency chart and CTCSS Code chart are included to help with this selection.

Transmitter RF Power Setting

Your radio has a HI/LOW Power selection function. This function is very convenient to reduce the current drain and extend battery life when communicating within short distance. To select the output power proceed as follow :

- Press the ON-OFF/MENU Key (14) 2 times, until the HI or Lo (M) icons will blink on the LCD display (10).
- Press the CHANNEL UP (15) or CHANNEL DOWN (16) keys to select the desired power level HI (high power) or LO (low power).
- To confirm the selection and exit the Menu Mode, press LOCK key (3) or press the ON-OFF/MENU key (14) to move to the next function.

VOX (Handsfree use) Function

Your radio is equipped with a user selectable Voice Operated Transmitter function (VOX), that is used for automatic voice transmission (handsfree use or baby room monitor use). In this mode, transmission is automatically initiated by speaking into the microphone (17) and there is no need to push the PTT key (2). To enable the VOX function, please proceed as follows :

- Press the ON-OFF/MENU key (14) three times, until the VOX icon (L) and the OFF indication appear on the LCD display (10).
- Press the CHANNEL UP (15) or CHANNEL DOWN (16) keys to enable the VOX function; the On indication will appear on the LCD display (10).
- To confirm the selection and exit the Menu Mode, press LOCK key (3) or press the ON-OFF/MENU key (14) to move to the VOX sensitivity level selection function.

VOX SENSITIVITY LEVEL SELECTION

- Press the ON-OFF/MENU key (14) four times, until the LE indication, the VOX icon (L) and the selected VOX level will blink on the LCD display (10).
- Press the CHANNEL UP (15) or CHANNEL DOWN (16) keys to select the level of sensitivity (from 01 to 05). The VOX level 05 indicates the highest VOX sensitivity.
- To confirm the selection and exit the Menu Mode, press LOCK key (3) or press the ON-OFF/MENU key (14) to move to the next function.

- When VOX feature is on, the **VOX** icon (L) will appear on the LCD display (10).

Automatic Channel Scanning

To start the automatic channel SCAN function proceed as follows :

- Press the ON-OFF/MENU key (14) five times, until the channel number (A) and the **SC** icon (F) will blink on the LCD display (10). Press the CHANNEL UP (15) or CHANNEL DOWN (16) keys to start the automatic channel scanning. SCAN will automatically stop when a signal is detected on one channel, in order to listen to the communication and SCAN will re-start when no more signal is detected on that channels.
- If you press the PTT (2) or LOCK (3) keys during the SCAN operation, SCAN will stop automatically and radio will set the last used channel.

Automatic CTCSS tone Scanning

This function allows automatic CTCSS tone scanning on the selected channel. Please proceed as follows :

- Select the desired channel number; the CTCSS tone scanning will be activated on this channel.
- Press the ON-OFF/MENU key (14) six times, until the CTCSS tone number (M) and the **SC** icon (F) will blink on the LCD display (10).
- Press the CHANNEL UP (15) or CHANNEL DOWN (16) keys to start the automatic CTCSS tone scanning on the selected channel; the **SC** icon (F) will be lighted on the LCD display. SCAN will automatically stop when a signal is detected on the active channel, in order to listen to the communication and SCAN will re-start when no more signal is detected on that channel.
- If you press the PTT (2) or LOCK (3) keys during the SCAN operation, SCAN will stop automatically and radio will set the last used channel.

Dual Watch Function

The radio is equipped with a Dual Watch function that allows to monitor 2 differents channels without the CTCSS code. To set the Dual Watch function, please proceed as follows :

- Select the first channel to be monitored.
- Press the ON-OFF/MENU key (14) seven times, until the **DW** icon (E) and the selected channel will blink on the LCD display (10).
- Press the CHANNEL UP (15) or CHANNEL DOWN (16) keys to select the second channel to be monitored.
- Now the radio will start monitoring the two channels and will stop when a signal is received on one of the two stored channels.
- To disable the Dual Watch function and return to Stand-by mode, press the LOCK key (3).

Call Tone Setting

Call Tone can only be transmitted once (not more than 3 sec.) in any 60 sec. period. The radio is equipped with 5 user selectable Call tone melodies. To set the desired Call tone melody, please proceed as follows :

- Press the ON-OFF/MENU key (14) eight times, until the **C** indication (A) and melody number (M) will blink on the LCD display (10).
- Press the CHANNEL UP (15) or CHANNEL DOWN (16) keys to set the desired melody, between the 5 available melodies.
- To confirm the selection and exit the Menu Mode, press LOCK key (3) or press the ON-OFF/MENU key (14) to move to the next function.
- Press the C key (13) to transmit the Call Tone Melody.

Roger Beep Tone Setting

The radio is equipped with a user selectable Roger Beep Tone feature, which enables you to send a Beep Tone at the end of each transmission after every release of the PTT key (2). This will prompt any receiving unit that your transmission has ended. To enable or disable this function, please proceed as follows :

- Press the ON-OFF/MENU key (14) nine times, until the Roger Beep icon (O) and the **On** or **OFF** indications will blink on the LCD display (10).
- Press the CHANNEL UP (15) or CHANNEL DOWN (16) keys to set the desired selection **on** (Roger Beep tone enabled) or **oFF** (Roger Beep tone disabled). If the Roger Beep function is enabled, a beep tone is heard to confirm the selection.
- To confirm the selection and exit the Menu Mode, press LOCK key (3) or press the ON-OFF/MENU key (14) to move to the next function.
- When the Roger Beep tone is enabled, the **R** icon (O) appears on the LCD display (10).

Keypad Program Tone Setting

When a key is pressed, a beep tone is heard to confirm your command. The user may enable or disable this keypad program tone.

- Press the ON-OFF/MENU key (14) ten times, until the keypad tone icon (I) and the **On** or **OFF** indications will blink on the LCD display (10).
- Press the CHANNEL UP (15) or CHANNEL DOWN (16) keys to set the desired selection **on** (keypad tone enabled) or **oFF** (keypad tone disabled). If the keypad tone is enabled, a beep tone is heard to confirm the selection.
- To confirm the selection and exit the Menu Mode, press LOCK key (3) or press the ON-OFF/MENU key (14) to move to the next function.
- When the Keypad tone is enabled, the keypad tone icon (I) appears on the LCD display (10).

Stop Watch function

This function will enable a timer function.

- Press the ON-OFF/MENU key (14) ten times, until the Stop Watch Icon (H) and the **00:00** indication will blink on the LCD display (10).
- Press the CHANNEL UP key (15) to start counting and press the CHANNEL DOWN key (16) to stop the function. The radio can still operate in this mode.
- Press the CHANNEL UP key (15) again to re-start.
- To reset the timer press the CHANNEL DOWN key (16) two times.
- To exit to Stand-by mode press the LOCK Key (3).

ADDITIONAL FUNCTIONS

Keypad Lock

To avoid entering unwanted command, press and hold the LOCK Key (3) for about 2 seconds. The Lock Icon (B) will appear on the LCD Display (10). When the keypad is locked, the PTT (2), C (13) and LAMP/MONITOR (4) keys are enabled. To unlock the keypad press and hold the LOCK key (3) for about 2 seconds.

LCD Backlight

Shortly press the LAMP/MONITOR key (4) to backlight the LCD display (10). Press this key again to turn OFF the LCD backlight.

Monitor Function

Press and hold the LAMP/MONITOR key (4) for about 2 seconds to activate the Monitor function. This function opens temporary the Squelch in order to listen to the background noise and weak signals. Press and hold this key for about 4 seconds to activate the Auto Monitor function in order to activate the Auto Squelch function.

To disable the Auto Monitor function, shortly press the LAMP/MONITOR key (4).

Automatic Power Save

The radio has a Automatic Power Save circuit designed to extend battery life. If it senses no transmission within 10 seconds, it automatically switches to the Power Save mode. The Power Save icon (P) will appear on the LCD display (10). The Radio can still receive transmissions in this mode.

SPECIFICATIONS

Channels	8 PMR Channels with 38 CTCSS Codes
Channel Spacing	12.5 KHz
Operating Frequency	446.00625 - 446.09375 MHz
Power Source	3 x 1.2V Ni-MH AAA Battery 3 x 1.5V Alkaline AAA Battery
RF Output Power	0.5W ERP
Dimensions	H160 x W56 X D41 mm
Weight	gr. 115 (with batteries)

CHANNELS FREQUENCY TABLE

FREQ.	CH	FREQ.	CH	FREQ.	CH
446.00625	1	446.04375	4	446.08125	7
446.01875	2	446.05625	5	446.09375	8
446.03125	3	446.06875	6	-	-

CTCSS - TONE FREQUENCY CHART					
No	Freq. (Hz)	No	Freq. (Hz)	No	Freq. (Hz)
01	67,0	08	88,5	16	114,8
02	71,9	10	94,8	18	123,0
03	74,4	11	97,4	19	127,3
04	77,0	12	100,0	20	131,8
05	79,7	13	103,5	21	136,5
06	82,5	14	107,2	22	141,3
07	85,4	15	110,9	23	146,2
OF	CTCSS OFF	24	151,4	32	203,5
		25	156,7	33	210,7
		26	162,2	34	218,1
		27	167,9	35	225,7
		28	173,8	36	233,6
		29	179,9	37	241,8
		30	186,2	38	250,3
		31	192,8	-	-

IMPORTANT INFORMATIONS

Important !

Changes or modifications to this product could void your authority to operate this unit. Your radio is produced and factory set to transmit a regulated signal on an assigned frequency. It is against the law to alter or adjust the settings inside the radio to exceed those limitations. Any adjustment to your radio must be made by a qualified authorized technician or service.

To be safe and sure :

Never open the cabinet of your radio.

Never change or replace anything in your radio (except the battery).

Your radio might cause TV or radio interference even when it is operating properly. To determine whether your radio is causing the interference, turn it off. If the interference goes away, your radio is causing it. Try to eliminate the interference by moving your radio away from the receiver. If you cannot eliminate the interference, stop using the radio.

Hazardous Environments :

Do not operate the radio in hazardous environments.

Care and Safety :

To clean the radio, use a soft cloth dampened with water. Do not use cleaners or solvents because they can harm the body of the unit and leak inside, causing permanent damage. Use a dry, lint-free cloth to clean the battery contacts. **Do not submerge the unit in water or use it on a wet environment.** If the unit gets wet, turn it off and remove the battery immediately. Dry the battery and the battery compartment with a soft cloth to minimize potential water damage. Leave the battery compartment cover off overnight to ensure complete drying. Do not use the radio until it is completely dry.

Battery Operation - Important Information

Dispose of battery in the proper manner, according to federal, state and local regulations that apply in your area. A battery may leak electrolyte if it is mixed in a set with different battery types, if inserted incorrectly, if disposed of in fire, or if an attempt is made to charge a battery not intended to be charged. Discard leaky batteries immediately. Leaking batteries can cause skin burns or other personal injury.

Notice ! Use of PMR446 Transceivers

This transceiver may be used in all the European countries and in some other countries as well, according with the regulation of the country where the product is used.

PMR446 (8 channels) : Austria, Belgium, Czech Rep., Denmark, Finland, France, Germany, Greece, Island, Irland, Italy, Luxembourg, Norway, Holland, Poland, Portugal, Spain, Sweden, Switzerland, UK, Turkey

User Information

in accordance with art. 13 of the Legislative Decree of 25th July 2005, no. 15 "Implementation of Directives 2002/95/EC, 2002/96/EC and 2003/108/EC, relative to reduction of the use of hazardous substances in electrical and electronic equipment, in addition to waste disposal".



The crossed bin symbol shown on the equipment indicates that at the end of its working life the product must be collected separately from other waste.

The user must therefore take the above equipment to the appropriate differentiated collection centres for electronic and electro technical waste, or return it to the dealer when purchasing a new appliance of equivalent type, in a ratio of one to one.

Appropriate differentiated waste collection for subsequent recycling, treatment and environment-friendly disposal of the discarded equipment helps to prevent possible negative environmental and health effects and encourages recycling of the component materials of the equipment.

Illegal disposal of the product by the user will be punished by application of the administrative fines provided for by the legislative decree no. 22/1997 (article 50 and following of the legislative decree no. 22/1997).

DECLARATION OF CONFORMITY

EC Certificate of Conformity (to EC Directive 2006/95, 2004/108, 99/5)	
DECLARATION OF CONFORMITY	
With the present declaration, we certify that the following products :	
INTEK i-Talk T70	
comply with all the technical regulations applicable to the above mentioned products in accordance with the EC Directives 2006/95/EC, 2004/108/EC, 1999/5/EC.	
Type of product :	PMR 446 Transceiver
Details of applied standards :	EN 300 296-2 V1.3.1 EN 301 489-1 V1.9.2, EN 304 489-5 V1.3.1 EN 60950-1:2006+A11:2009+A1:2010+A12:2011
Manufacturer :	INTEK S.R.L. 16 Via G. Marconi 20090 Segrate (Mi) Tel. 02-26950451 / Fax 02-26952185 E-Mail intek.com@intek-com.it
Notified Body :	Bay Area Compliance Laboratories Corp. 1274 Anvilwood Ave, Sunnyvale CA 94089, USA Identification Number : 1313
Contact Reference :	Armando Zanni Tel. 02-26950451 / Fax 02-26952185 E-Mail intek.com@intek-com.it
Segrate, 15-11-2012	dr. Vittorio Zanetti (C.E.O.)