

Brookstone®

iCONVERT®

Instant Slide & Negative Scanner

CONVERT SLIDES & NEGATIVES TO DIGITAL FILES—
NO COMPUTER NEEDED



TABLE OF CONTENTS

Cautions, Warnings and FCC Information.....	2
Accessories.....	6
Location of Parts and Controls	7
Operation.....	9
Scanning	12
Image Playback	15
Printing Photos.....	17
Transferring Scanned Images to a PC.....	19
Cleaning the Scanner.....	21
Troubleshooting	22
Specifications	23
Warranty.....	25

CAUTION

- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. THERE ARE NO SERVICEABLE PARTS INSIDE.
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



The lightning flash with arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the unit’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

IMPORTANT SAFETY INSTRUCTIONS

All of the safety and operating instructions should be read, adhered to and followed before the unit is operated.

DANGER

To reduce the risk of electric shock, burns, fire or injury:

1. Do not use while bathing or in a shower.
2. Do not place or store unit where it can fall or be pulled into a tub or sink.
3. Do not place in, drop or submerge in water or other liquid.
4. Do not reach for unit that has fallen into water. Unplug it immediately.
5. Care should be taken so that objects do not fall and liquids are not spilled onto the unit.

WARNING

1. Close supervision is necessary when this appliance/product is used by or near children or mentally disabled individuals.
2. Use this unit only for its intended use as described in this manual.
3. Unplug this unit during lightning storms or when unused for long periods of time.
4. Never drop or insert an object into any opening other than what is specified by the instructions.
5. Protect the power cord from being walked on or pinched, particularly at plug outlets, convenience receptacles and the point where it exits the unit.
6. Do not allow the cord to touch hot surfaces. Wrap the cord loosely around the unit when storing.
7. The unit should be situated away from direct sunlight or heat sources such as radiators, electric heaters, heat registers, stoves or other units (including amplifiers) that produce heat. Avoid placing on top of stereo equipment that radiates heat.
8. Never block the air openings of the unit with materials such as clothing, plastic bags or papers, or place it on a soft surface such as a bed or couch, where the air openings may be blocked.
9. Do not overload the electrical outlet. Use only the power source as indicated.
10. Never operate this unit if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. If the unit's power supply cord or plug is damaged, do not attempt to fix it yourself.
11. To avoid the risk of electric shock, do not disassemble or attempt to repair the unit. Incorrect repair can cause risk of electric shock or injury to persons when the unit is used.
12. Do not operate in the presence of explosive and/or flammable fumes.

WARNING

1. Do not try to disassemble the unit.
2. Changes or modifications to this unit could void the warranty.
3. Do not place the unit near heat sources such as radiators and heating vents.
4. Do not store the unit in extreme temperatures.
5. Disconnect the unit from the USB port when not in use.
6. Do not place the unit where there is moisture, rain, vibration, shock or excessive dust.

FCC INFORMATION

FEDERAL COMMUNICATIONS COMMISSION (FCC)

This device has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

 
If your device needs repairs, you must arrange for the manufacturer to make them if you are to keep the device's FCC registration valid.

This equipment, like other electronic equipment, generates and uses radio frequency energy. If not installed and used according to the instructions in this manual, this equipment may cause interference with your radio and television reception. There is no guarantee that interference will not occur in a particular installation. If you think this equipment is causing interference with your radio or television reception, try turning the equipment off and on. If the interference problems stop when the equipment is switched off, then the equipment is probably causing the interference.

You may be able to correct the problem by doing one or more of the following:

- Adjust the position of the radio or TV antenna.
- Move the device away from the radio or TV.
- Consult your dealer or an experienced radio/television technician if the problem still exists.


ACCESSORIES




Cleaning Brush



 
Negative Tray

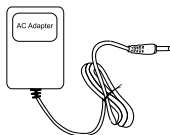

Power Adapter (5V/1.0A)

 

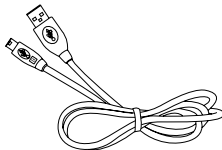 


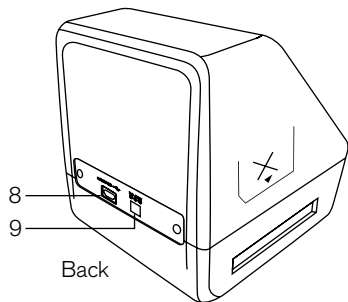 
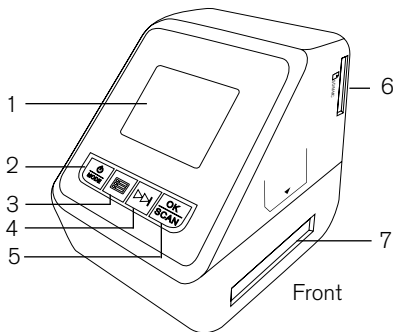 
Slide Tray



Mini USB Cable

 
LOCATION OF PARTS AND CONTROLS

1. LCD Screen
2.  **MODE** Power/Mode Button
3.  Menu Button
4.  Next Button
5. OK/SCAN Button
6. SD/MMC Card Slot
7. Negative/Slide Tray Slot
8. Mini USB Port
9. DC-IN 5V Jack
10. Power Adapter (not shown)



LOCATION OF PARTS AND CONTROLS


1. Negative Tray Hinge
2. Slide Tray Hinge
3. Negative Tray Open Tab
4. Slide Tray Open Tab

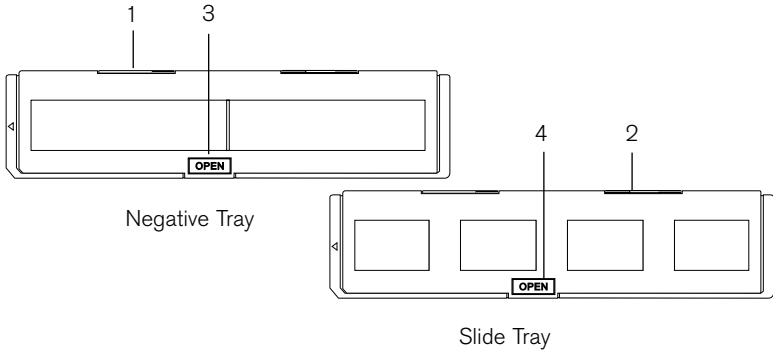



OPERATION

 GETTING STARTED

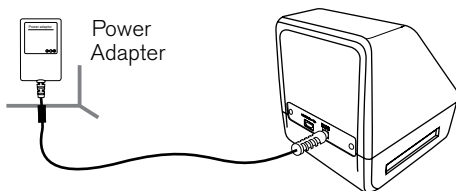1. Connect one end of the supplied power adapter (DC 5V) to the scanner and the other end to an electrical outlet (see example below).

 


2. Press  **MODE** and the power turns on.
3. To turn the power off, press and hold  **MODE**.

INSERTING AN SD OR MMC MEMORY CARD


Note: Make sure to insert an SD or MMC card prior to scanning. The scanned images will be stored on the SD or MMC card.

1. Insert an SD or MMC memory card into the slot according to the orientation marked on the scanner (see example at right).
2. To remove the memory card, simply pull the card straight out of the unit.


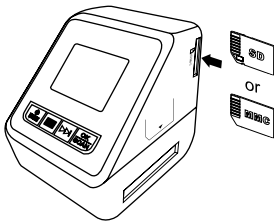


PLACING THE NEGATIVES AND SLIDES IN THE TRAYS

 1. Open the trays by pulling the OPEN tab.

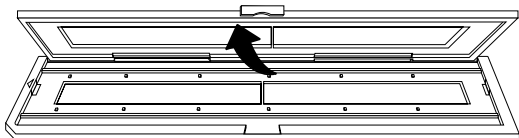

  
2. Place the negative or slide films with the shiny side facing up.
Follow the illustrations below to place the negative or slide film.

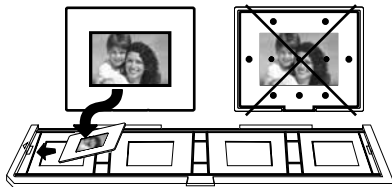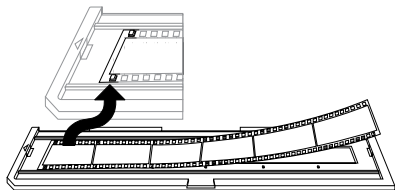

3. Close the tray. Make sure the OPEN tab is secured on the tray, and negatives and slides are securely in place.

LOADING SLIDE AND NEGATIVE TRAYS

 1. Insert the tray through the FILM HOLDER SLOT with the arrow mark facing up and toward the slot in the direction from RIGHT to LEFT.

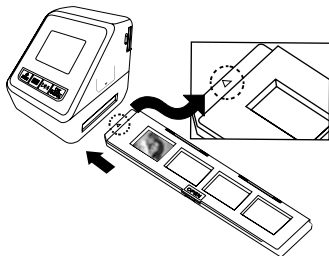



2. Gently push the tray into the unit until the photo you wish to scan is showing on the screen.

 








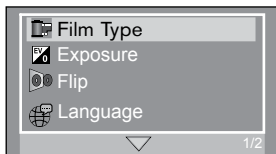

Note: If the image is scanned upside down or mirrored, you can rotate the images by using the Flip and Rotate functions (see page 14).

SCANNING


SCANNER SETTINGS

1. In the Scan mode, press  to bring up the Setting Menu.
2. Repeatedly press  to select the option, then press **OK/SCAN** to confirm.







Menu	Description
 Film Type	Select the type of film that is placed in the film holder. Options: Auto, Slide (), Color Negative () and B&W Negative ()
 Exposure	Adjusts the exposure value. Options: -2/3, -1/3, 0, +1/3, +2/3
 Flip	Rotates the film image you wish to scan. Options: Normal, Vertical, Horizontal and Hor and Ver (Horizontal + Vertical)
 Language	Select a preferred language to display on the screen. Options: English, Deutsch, Francais, Italiano, Español, Nederlands, Português, Polski
 Format	Formats the inserted memory card. This function is invalid and invisible if the memory card is not inserted. Warning: All data will be erased when the Format function is executed.


BEGIN TO SCAN

 1. Insert a memory card.
2. Press  **MODE** to switch to the Scan mode if the scanner is in the Photo Playback mode.




1. Film type: Slide Films (),
Negative Films (),
Black and White Films ()
2.  Exposure Value
3. Remaining number of images

Note: By default, the scanner can only detect the slide and negative film types automatically. To manually set for negative and black and white films, refer to Scanner Settings on page 12 to select the appropriate film type before scanning.


3. Press  to bring up the Setting Menu.



 4. Press **OK/SCAN** to select Flip if it is necessary to rotate the image, then press **OK/SCAN** to enter.

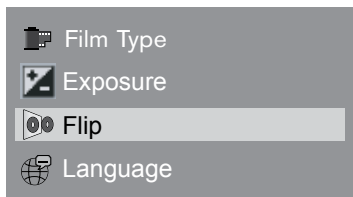

 
5. Select a flip option, then press **OK/SCAN** to confirm.

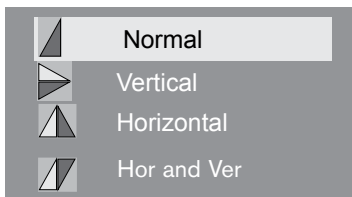


6. Press **OK/SCAN** to scan the film directly. Once the scan process is finished, "Capture done!" will appear on the screen.


Note: By default, the folders **DCIM\100MEDIA** have been created on the **SD/MMC** card. All scanned images will be saved in the **100MEDIA** folder. When the counter reaches **9999** it will automatically generate another new folder in sequential order.

IMAGE PLAYBACK

1. Press  **MODE** to switch to the Photo Playback mode if the scanner is in the Scan mode.




1.  Image Playback mode
2. Number of Folder/Scan

Note: The  icon shows on the screen when the scanner is in the Image Playback mode.

2. Press  to view the next scanned image.


IMAGE PLAYBACK MENU

 Press  to bring up the Playback menu for the image being viewed.

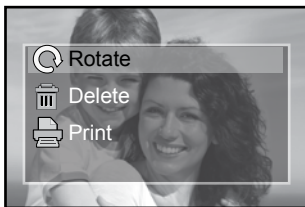


ROTATING AN IMAGE

 1. Press **▶▶** to select Rotate, then press **OK/SCAN**.

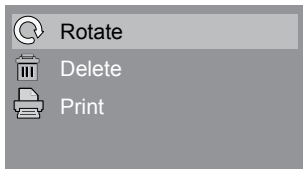


 2. Press **▶▶** to select an angle, then press **OK/SCAN** to confirm and exit.

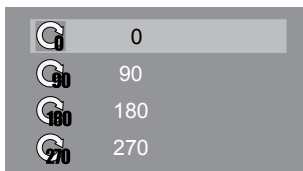


DELETING AN IMAGE

 1. Press **▶▶** to select Delete, then press **OK/SCAN**.

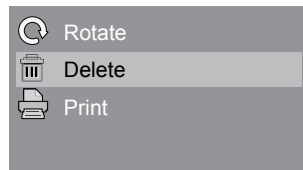



2. Press **⏮|** to select a delete option, then press **OK/SCAN** to confirm and exit.

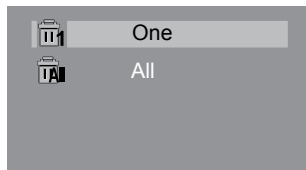 

PRINTING PHOTOS

1. Press **⏮|** to select Print from the Playback menu, then press **OK/SCAN**.
2. Connect to a PictBridge-compatible printer using the mini USB cable when the "Please connect the device" message appears on the screen.

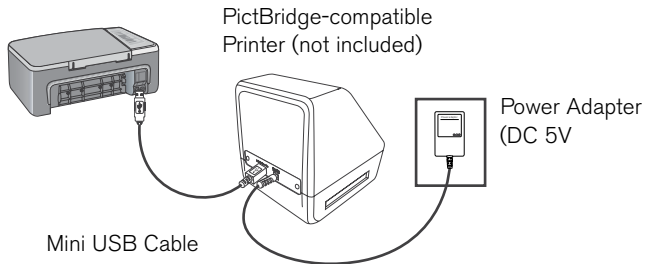 

Press  to select the photo you wish to print when the message "Press OK to print" appears on the screen.

3. Press **OK/SCAN** again to print.

 
Note:

1. Do not connect the USB cable before the "Please connect the device" message appears; otherwise, the print function may be invalid.
2. To change the print size, quality and other settings, please refer to your printer's instruction manual.


TRANSFERRING SCANNED IMAGES TO A PC

IMPORTANT: Please turn the power off before connecting to a PC.


1. Insert the SD/MMC memory card into the memory card slot of the scanner, connect the mini USB connector to the scanner, the other end to the PC's USB port, and the Power Adapter to an electrical outlet (see below).

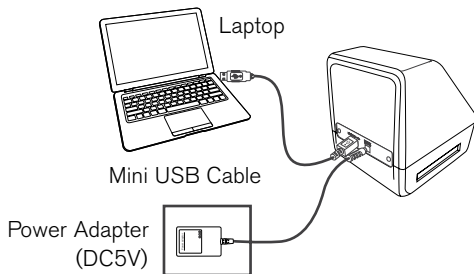

 2. Turn the scanner's power to on.
3. It may take a few seconds for Windows® to recognize the scanner. When the scanner has been recognized, two AutoPlay windows corresponding to the mUploadr software and SD/MMC card, in that order, will pop up on the screen automatically (see right).

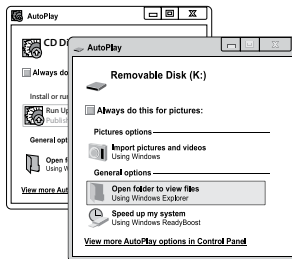

 
4. Select AutoPlay that corresponds to the SD/MMC card, and then click the Open folder to view files to access the DCIM folder in the scanner (see right).
5. You may transfer the scanned images stored on the SD/MMC card to your PC using the drag-and-drop method.

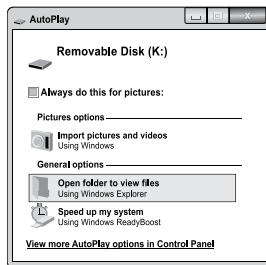

Note: If AutoPlay does not launch automatically, double-click My Computer on the desktop to find the Removable Disk for the SD/MMC card inserted.

DISCONNECTING THE SCANNER FROM A PC

 Double-click the Safely Remove Hardware icon on the task bar in Windows to remove the scanner.

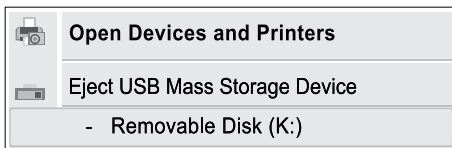


Note: For more supported Windows OS details, please refer to Specifications.

CLEANING THE SCANNER


To get high image quality and good recognition results, occasionally clean the unit before scanning films.

Ensure the cleaning brush is clean prior to use. Store the cleaning brush in a safe place to protect it from dust and damage.

 DO NOT insert the cleaning brush into the slot at the left side of the scanner.

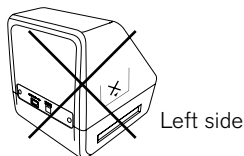

 To clean the scanner, insert the thin end of the cleaning brush into the right slot against the bottom side of the scanner (see at right) with the fabric covered side facing down. Move the cleaning brush from one side to the other slightly a few times to clean the scanner.

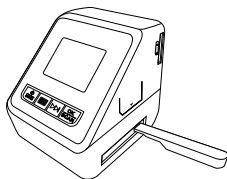

Right side

ATTENTION: DO NOT place the fabric covered side of the cleaning brush face up and toward the inside of the scanner's slot for cleaning, as this may cause damage to the internal components.

TROUBLESHOOTING

ISSUE

SOLUTION

Does not detect the film type automatically.

Manually select the film type (see page 12).

Image quality of the scan is poor.

Ensure the slide or negative film is clean and dust-free before scanning.

My computer does not recognize the scanner.

Ensure the USB cable is firmly plugged into the scanner and PC.

Ensure the scanner is powering on when you connect it to a computer.

Some of my slides/negatives look overexposed.

Manually adjust the exposure value (see page 12). Also, check your slides/negatives to see if they may have been overexposed when originally developed.

Unable to play the JPEG files taken by other electronic devices.

The scanner can only browse the scanned photos taken by this scanner. The other JPEG photos are not playable on this scanner.

SPECIFICATIONS

Image Sensor	1/2.5-inch 5 megapixels CMOS sensor
Lens	F no.= 6.0, 4 Glass
Focus Type	Fixed
LCD	2.4" 480x234 (4:3) Color TFT LCD
Button (4 keys)	Mode/Power, Menu, Next, OK/Scan
Card Slot	SD/MMC-compatible
USB Port	Mini USB for PC (mass storage)/printer (PictBridge-compatible)
Light Source	Backlight (3 white LEDs)
Exposure Control	Automatic/Manual (-2/3, -1/3, 0, +1/3, +2/3)
Color Balance	Automatic
Scan Quality	1,800 dpi
Data Conversion	10 bits per color channel
Scan Speed	1 second per photo
Image Editing	Rotate, Flip, Delete

SPECIFICATIONS (CONTINUED)

Power Source	AC 100-240V 60Hz; DC 5V/1.0A
Dimensions	3.5 W x 4.6 D x 4.4 H
Weight.....	11.8 oz.
Supported Operating System Requirements	Windows® 2000, XP, Vista®, 7 Mac® OS 10.4 ~ 10.6
Accessories	Negative Film Holder, Slide Film Holder, Cleaning Brush, Power Adapter (5V/1.0A), User Manual, Mini USB Cable

ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers other than Brookstone may provide their own warranties to the purchaser,

but Brookstone, in so far as permitted by law, provides these products “as is.” This warranty does not apply to: a) damage caused by failure to follow instructions relating to product’s use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold “as is” including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Brookstone®

A WORLD OF INNOVATION

Since 1965, people have come to Brookstone to see what's new, discover smart solutions to everyday problems—and have some fun. At Brookstone, we believe there's always a better way to do things. And we created a world of innovation to prove it.

Merrimack, New Hampshire USA 03054 • 800-846-3000 • www.Brookstone.com

649236