

Quick Guide




This Quick Guide will help you to set and use the lock quickly. It provides the simple description of the basic operation. For more information about this product, please refer the user manual.


Lock Introduction

The lock supports 3~12 digits password. Up to 10 Password Users can be saved by default. Each password has one own user code from 0 to 9. One complete user password should consist of 'User Code' and 'User Password'. When unlock by password, you should input the 'User Code' first, then input the 'User Password'. (In some case, you can input the 'User Password' only for unlock operation.)

Lock Part Diagram

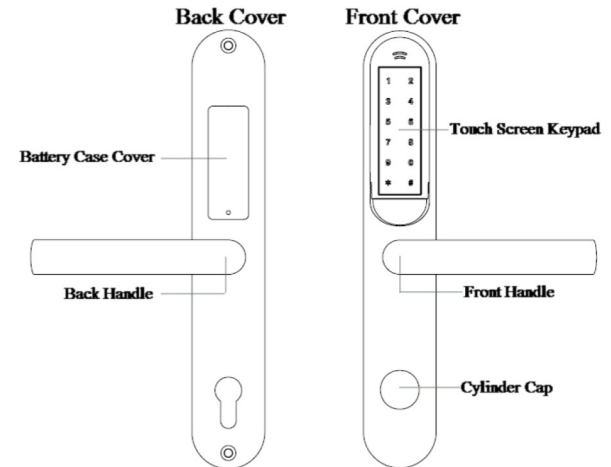


Lock Setting Process

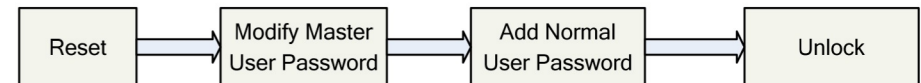

Reset


Reset the lock means initializing the information of the lock. After resetting the lock, all the Password Users will be deleted, a new Master User Password with User Code '0' and User Password '11111111 (8 times 1)' will be created at the same time. The Master User Password can only be modified, can not be deleted.

 Operation:

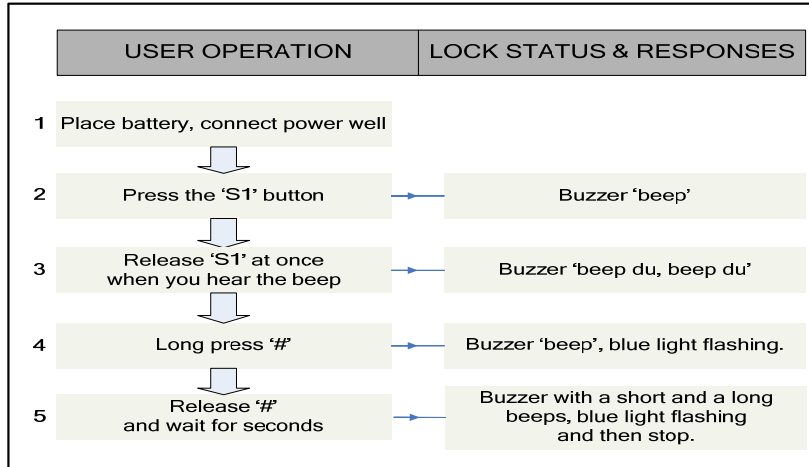

◆Note:

- Because the reset button is on the back of the front cover, you need to reset the lock before you install the lock on the door.

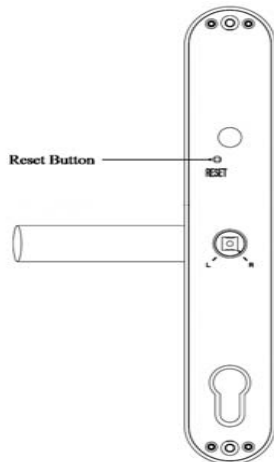

Modify Master User Password

Operation:

 
【#】 + [['0' + '11111111']] + 【#】 + [['0' + '3~12 digits new password']] + 【#】

Add User Password

Except the unlocking, Master User mainly is used to add and delete users. Normally the lock can support up to 9 Normal User Password which User Code are from '1' to '9'. The password should be 3~12 digits and can not all be '0'.

Operation:

【#】 + [[Master User Code '0' + Master User Password]] + 【#】 + [[New User Code + New User Password]] + 【#】

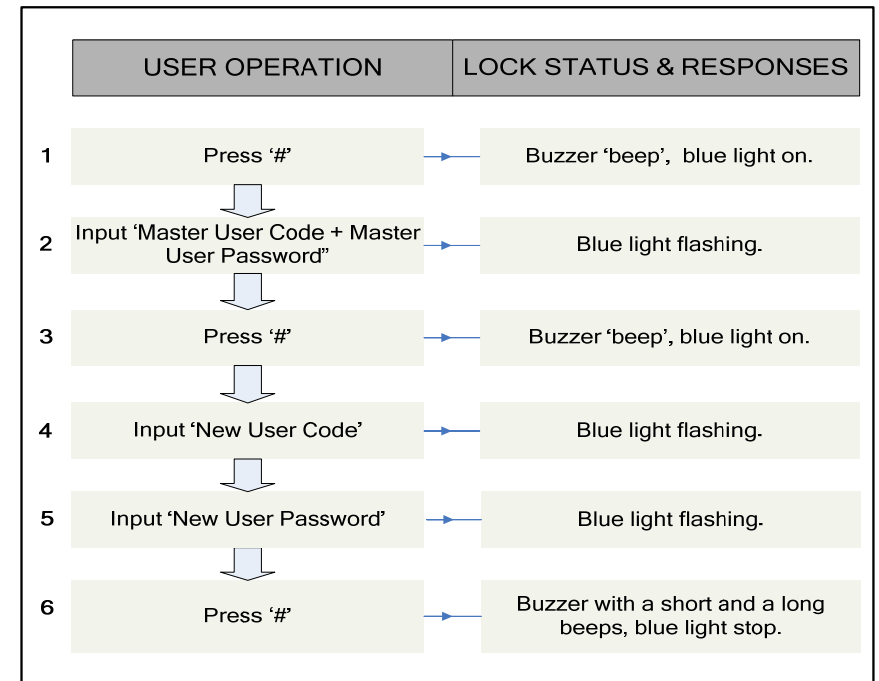

◆Note:

 
- Make sure input the correct Master User Code '0' and Master User Password. If not, The lock will alarm.

- The 'New User Code' should be vacated '1~9'. If the New User Code have been occupied, the lock will alarm.
- If input New User Code same as the Master User Code, the Master User Password will be modified.

Delete User Password

Operation:

【#】 + [[Master User Code '0' + Master User Password]] + 【#】 + [[User Code want to be deleted]] + 【#】

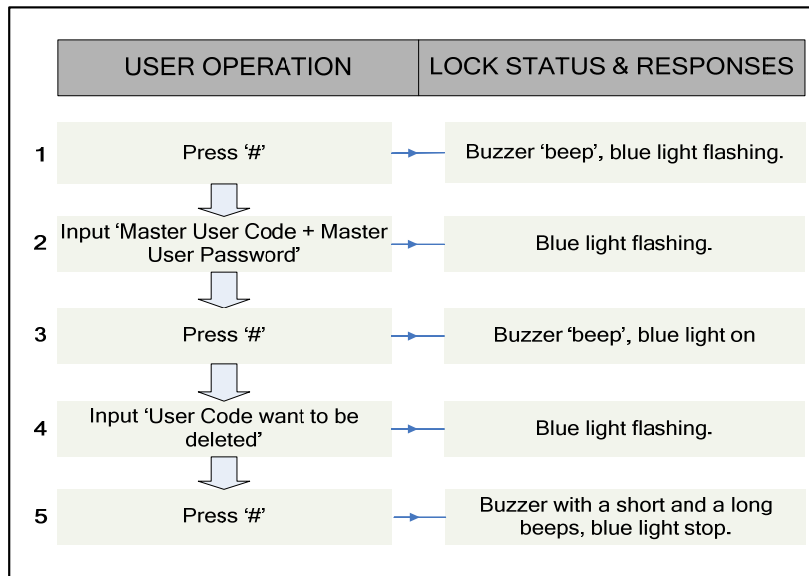


◆Note:

- This operation is for deleting one password.
- Master User Password can not be deleted.
- You can follow the operation of Reset to delete all the password users.

Modify User Password

Operation:

【#】 + [[User Code +Old User Password]] + 【#】 + [[User Code + New User Password]] + 【#】

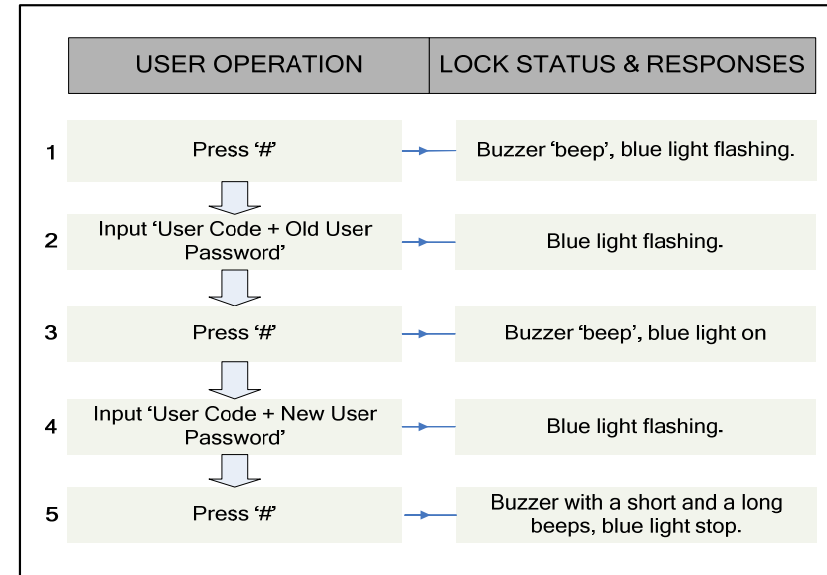

◆Note:


- Two times User Code input should be same.
- When modify the Normal User Password, if the second time User Code is different from first time input, the lock will alarm.
- When modify Master User Password, the second time User Code should be '0', if not, the lock will consider the new valid code as a new User Code with password.
- Know password only but do not know the User Code, please follow the advance operation in the manual.

öThe Normal User can only modify its own password.
 öThe password modified can not all be '0', if not, this user will be deleted.
 öOnce the user is deleted, can only be added by Master User Password.

Unlock By Password

Operation:

[[User Code]] + [[User Password]] + [#]

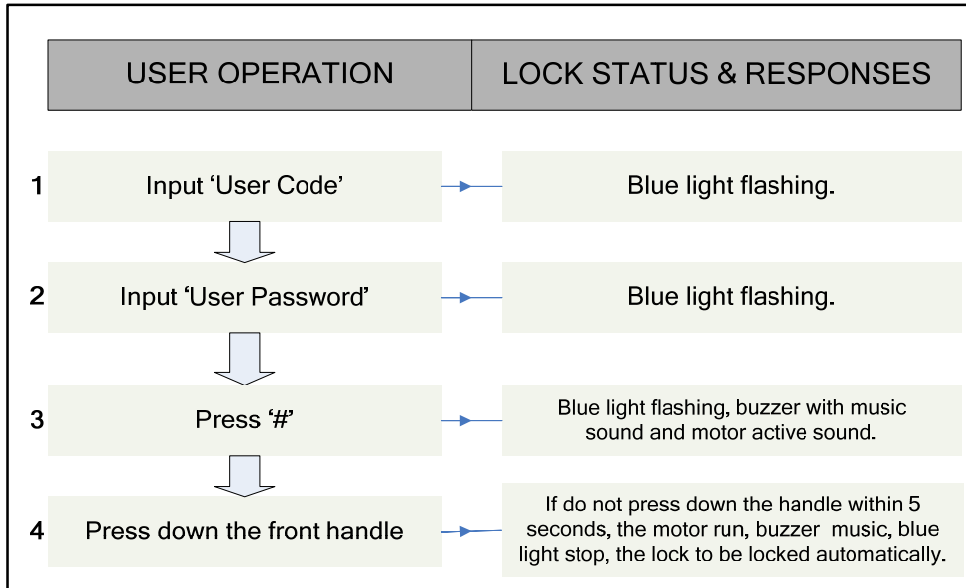

注:

- Make sure the lock is standby before input the User Password. Press **【*】** to enter standby state.
- Please input the correct password without intermission. The password should be 3-12 digits.
- When unlock the lock, you can input the User Code also can without the User Code.

Always Open

Input the registered User Password, hear the sound of running motor, please DO NOT press down the handle, but press **【0】** for 3 seconds till hear 'beep, beep' from the buzzer, then please release the **【0】** button.

Cancel Always Open

 
- 1) Please unlock the lock normally by registered User Password.
- 2) Press **【#01#】**, the lock will lock automatically.

Unlock By Mechanical Key

(1) Unlock by mechanical key

The lock supports mechanical key unlocking in emergency. Due to the cylinder is not exposed, you need to use the sucker to take off the cylinder cap, insert the mechanical key and turn the mechanical key with correct direction, press down the handle to open the door.

Unlock By Mechanical Key

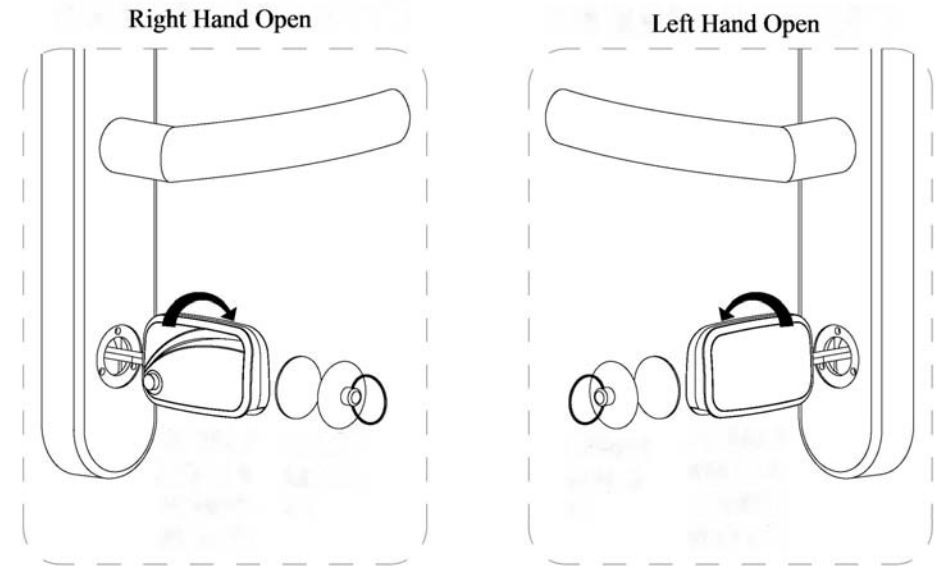

(2) Lock by mechanical key

When lock by mechanical key, please make sure the key is in horizontal direction, then take out the key and put on the cylinder cover.