

15 January 2010



USER'S MANUAL

**RibEye™ Multi-Point Deflection Measurement System
3-Axis Version for the SIDIIs ATD
Hardware Manual for Model 7715**

15 January 2010

**Boxboro Systems, LLC
978-257-2219
www.boxborosystems.com**

Table of Contents

	<u>Page</u>
1.0 Overview	4
2.0 Mounting the RibEye	6
2.1 Controller/sensor mounting	6
2.2 LED mounting	9
2.3 Interface box mounting.....	11
3.0 Operating the RibEye	11
3.1 RibEye IP address.....	12
3.2 Powering up the RibEye	12
3.3 Ambient light cancellation	12
4.0 RibEye Software	12
5.0 RibEye Maintenance	12
 Appendixes	
A. DAS/trigger connector pinouts and trigger circuits.....	13
B. RibEye specifications	18

List of Figures

<u>Figure No.</u>		<u>Page</u>
1A	RibEye controller/sensor rear view	4
1B	RibEye controller/sensor front view	4
2	RibEye LEDs	5
3	RibEye interface (trunk) box	5
4	RibEye connections	6
5	RibEye controller/sensor mounting	7
6	RibEye controller/sensor mounted in the SIDIIs thorax.....	8
7	LEDs mounted on the SIDIIs ribs	9
8	LED connectors	10
9	LED connector removal.....	10
10	LED radiation pattern	11
A1	Control signals	13
A2	Trigger switch connection	14
A3	Alternate trigger switch connection.....	14
A4	TTL trigger source connection	15
A5	Differential trigger source connection	16
A6	Armed output circuit.....	17
B1	RibEye measurement range in X-Y plane.....	18
B2	RibEye measurement range in Z-Y plane.....	18
B3	Isometric view of RibEye measurement range	19
B4	RibEye power requirements	20
B5	RibEye active trigger and control signals.....	20

USER'S MANUAL
RibEye™ Multi-Point Deflection Measurement System
3-Axis Version for the SIDII's ATD

1.0 Overview

The RibEye measurement system as designed for the SIDII's anthropomorphic test dummy (ATD) has the following components:

- The RibEye controller/sensor (**Figures 1A and 1B**), located in the ATD spine.
- Six light-emitting diodes (LEDs), mounted on the ribs. The LEDs (**Figure 2**) are designed to be mounted in the order shown in the photo; that is, the top LED goes on the top rib, etc.
DANGER: *The LEDs are very bright when driven at full power. DO NOT LOOK DIRECTLY AT THE LEDs.*
- Interface box (**Figure 3**), also called the trunk box because it is usually placed in the trunk of the vehicle.



Figure 1A. RibEye controller/sensor rear view



Figure 1B. RibEye controller/sensor front view

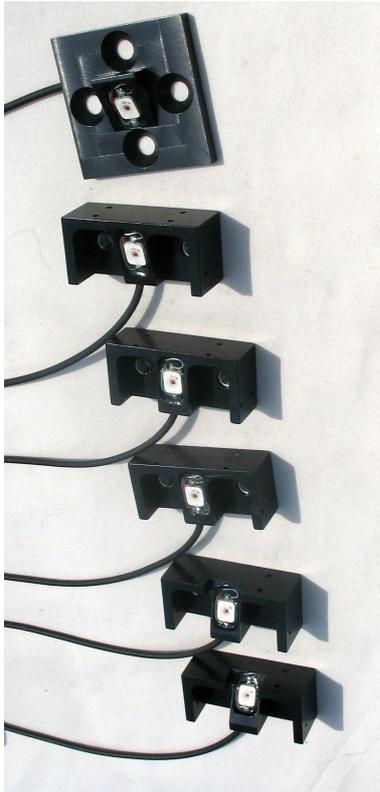


Figure 2. RibEye LEDs



Figure 3. RibEye interface (trunk) box

The RibEye components are interconnected as shown in **Figure 4**. Power and communications cables are provided for connecting the controller/sensor to the interface box in the trunk. The interface box has sockets for Ethernet connection, power input, and data acquisition system (DAS) connection/trigger input. Mating connectors and pigtail cables are provided for the power input and DAS/trigger connectors. The power input cable should be connected to a good quality DC power source. The DAS/trigger cable is used to provide a trigger input to the RibEye and has several control signals that can be used to interface the RibEye data acquisition systems (DAS) for automatic control of the RibEye through the DAS.

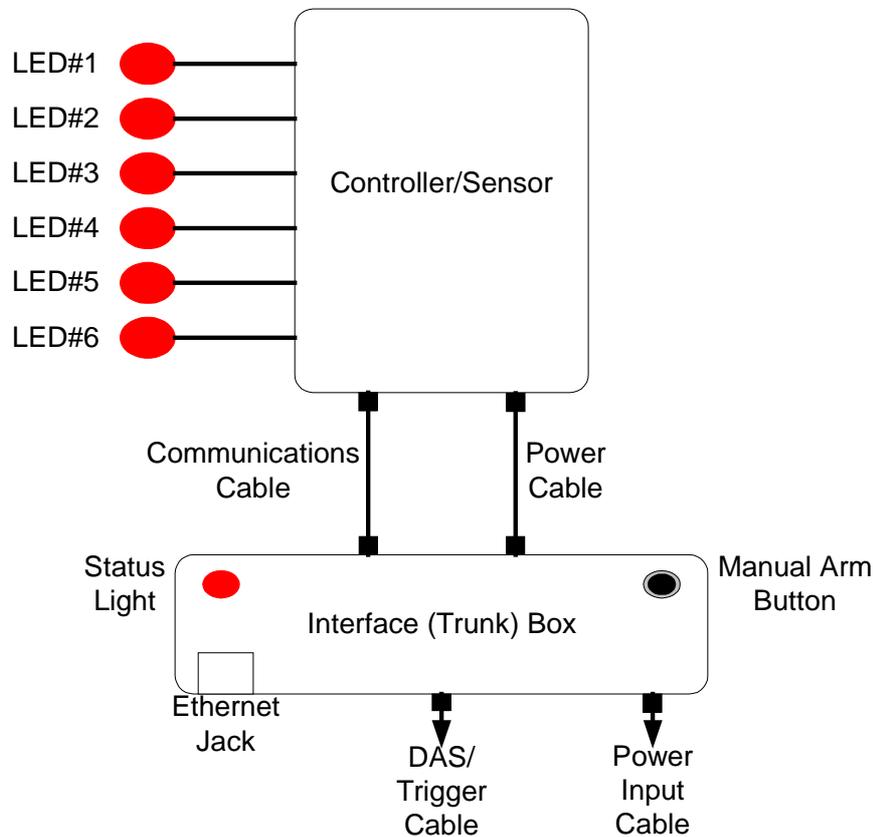


Figure 4. RibEye connections

2.0 Mounting the RibEye

2.1 Controller/sensor mounting

The RibEye controller/sensor should be mounted to the dummy's spine before assembling the ribs onto the spine. The controller/sensor is mounted using four bolts and a standoff as shown in **Figure 5**. Route the LED wires through the large hole on the non-struck side of the spine and out the rib opening. Connect the LEDs to the RibEye controller/sensor connector. Then slide the RibEye controller/sensor in through the rib side opening and mount it with the screws and spacers. **Figure 6** shows the RibEye controller mounted in the SIDIIs thorax.

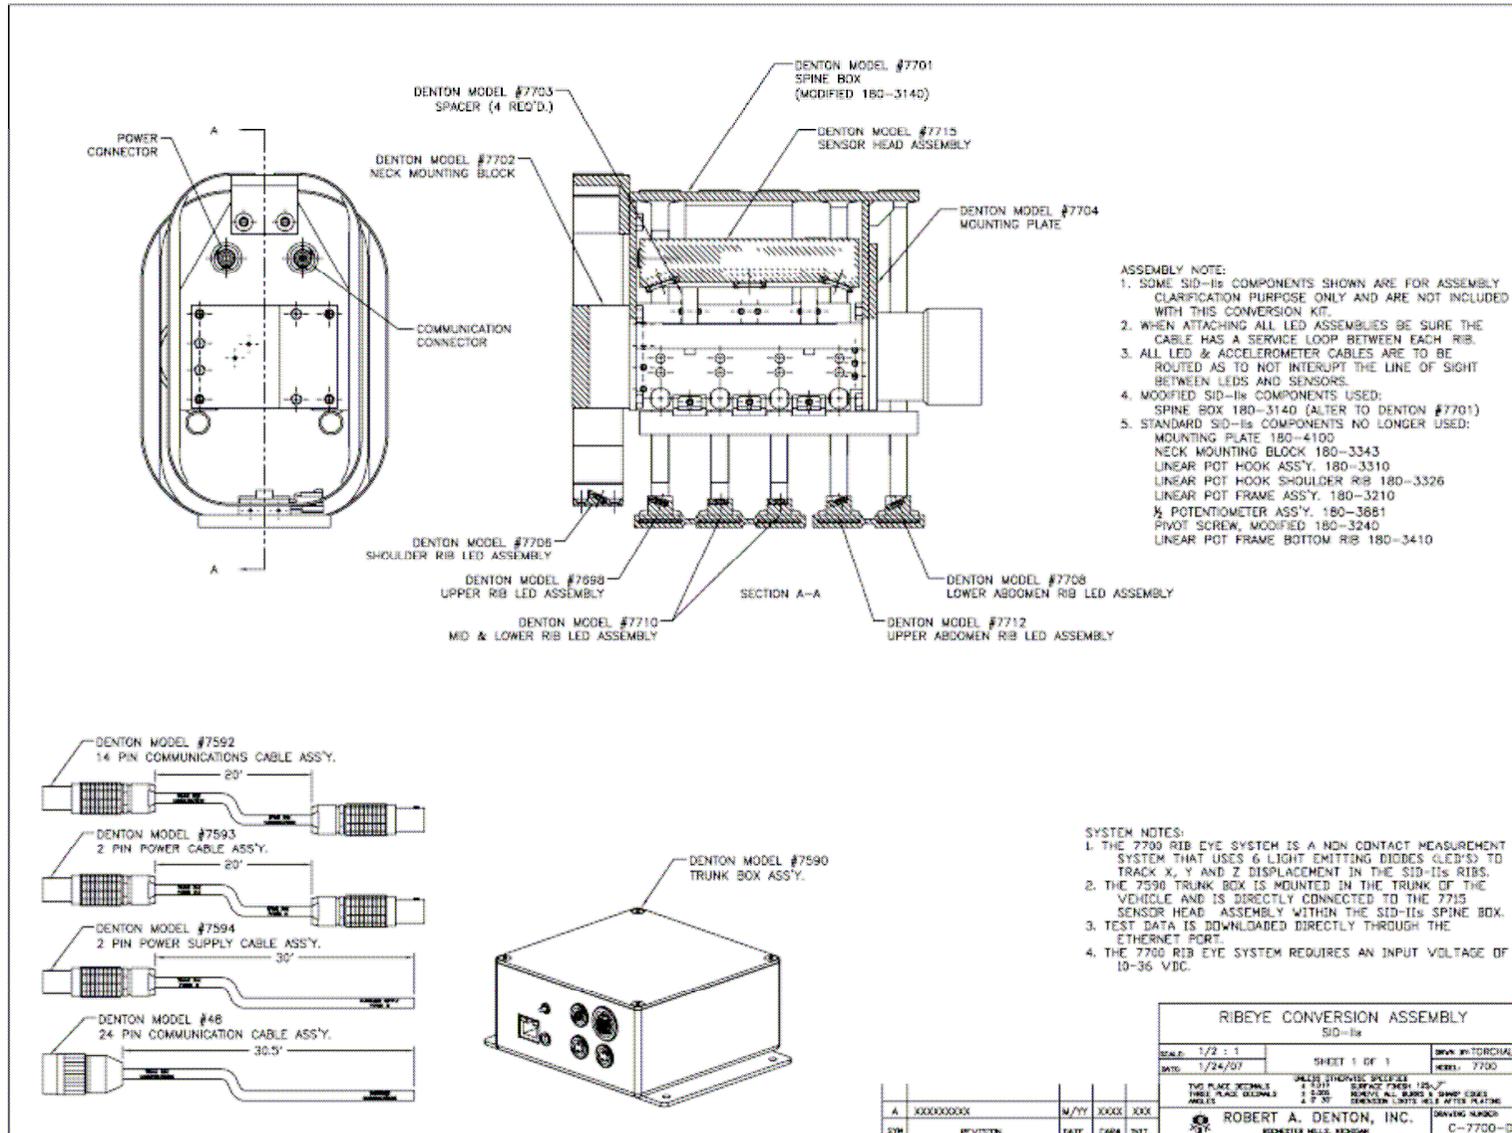


Figure 5. RibEye controller/sensor mounting



Figure 6. RibEye controller/sensor mounted in the SIDII's thorax

2.2 LED mounting

The LEDs mount to the center of the inside of the ribs using four screws for the top (shoulder) rib and two screws for each of the remaining ribs. Referring back to **Figure 2**, the LEDs are shown in the order that they are mounted, with the top LED in the picture attaching to the top rib. Note that the LEDs for ribs 1, 2, 5, and 6 are angled so that they will be aimed toward the sensor heads, providing the maximum amount of light to the sensors. **Figure 7** shows the LEDs mounted on the ribs. The LED cables must be securely tied down to prevent them from moving between the LEDs and the sensors during the crash, blocking the light from the LED to the sensor. If a LED cable, or anything else, blocks light from a LED to a sensor, the RibEye will generate error codes in the data. See the RibEye software manual for more information on error codes.

Route the LED cables along the ribs to the non-struck side of the spine box, and through the large holes in the spine box to the back of the sensor/controller. Make sure that the LED cables will not get pinched by the motion of the ribs.

DANGER: *The LEDs are very bright when driven at full power. Do not look directly at the LEDs during full power operation.*

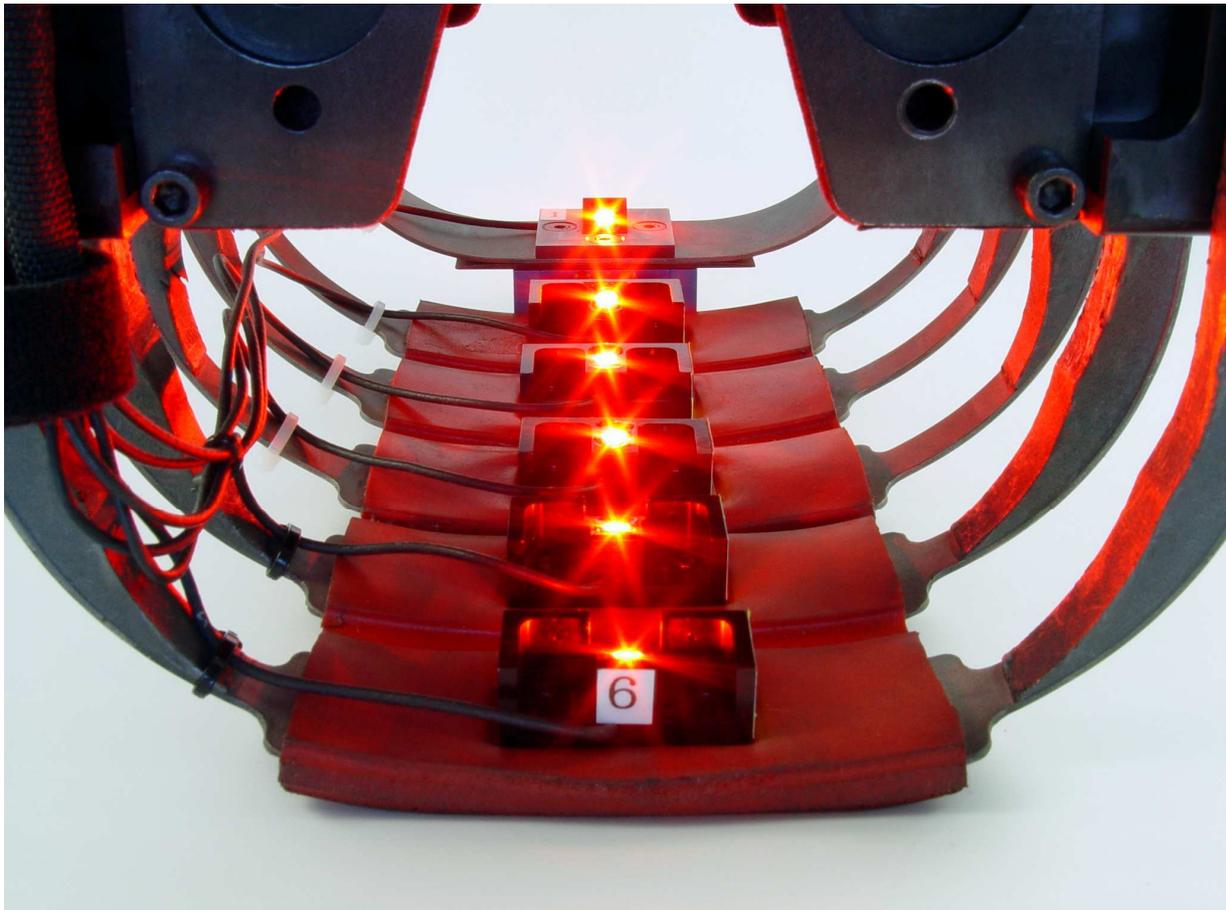


Figure 7. LEDs mounted on the SIDII ribs

The LED cables have connectors on them that mate with the receptacle on the back of the RibEye controller. The LED connectors are shown in **Figure 8**. The LED receptacle has locking tabs that must be

pressed in with a pen or small tool to disengage the connector from the receptacle, as shown in **Figure 9**. (**Figure 9** shows a similar connector used on a RibEye for the Hybrid III 50th Male ATD.)



Figure 8. LED connectors

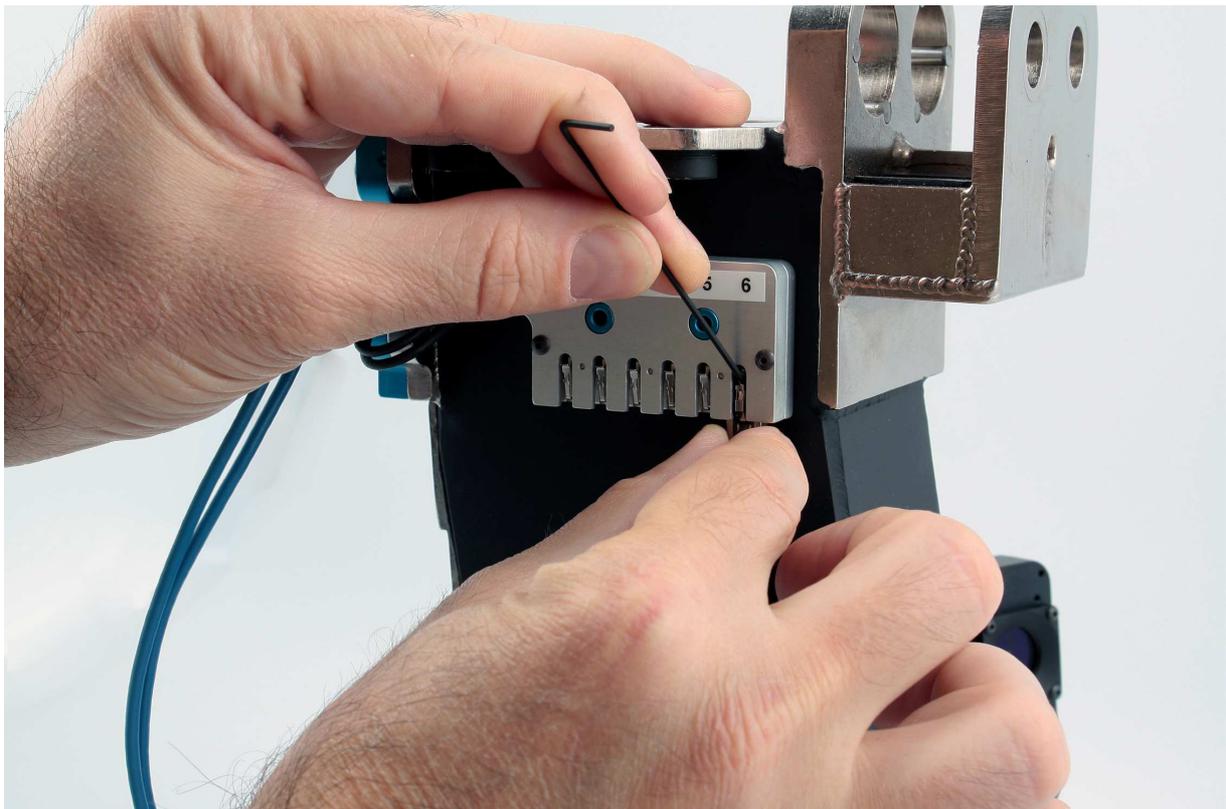


Figure 9. LED connector removal (shown on a Hybrid III 50th male ATD)

Figure 10 shows the radiation pattern of the LEDs. Note that the brightest light is directly in front of the LED (on axis), and the brightness gets lower at larger angles. The RibEye controller continuously adjusts how hard it drives the LEDs to get a good signal from the sensors.

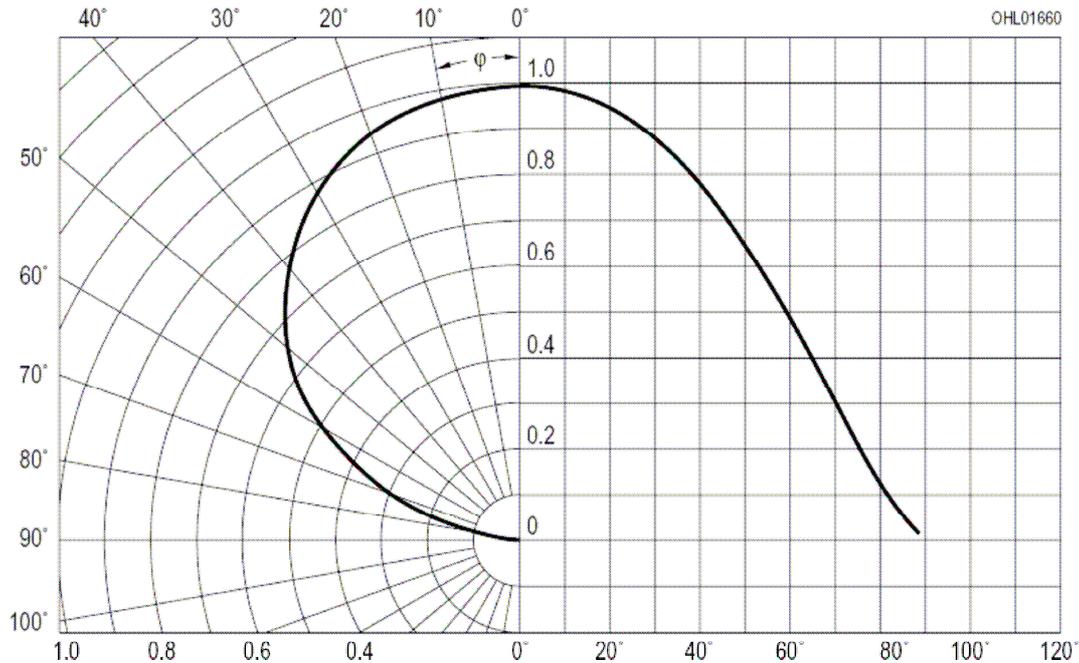


Figure 10. LED radiation pattern

2.3 Interface box mounting

The interface box, or trunk box, is intended to be mounted in the trunk of the vehicle, near the DAS and the power source. Four holes are provided on the base of the box for mounting. The interface box can be mounted in any orientation, but we recommend that it be mounted such that the side of the box with all of the connectors is easily accessible.

The communications and power cables from the spine box are connected to jacks on the interface box. An Ethernet cable is used to connect the interface box to a router/hub or directly to a laptop PC. Jacks are provided for incoming power and DAS/trigger connections.

3.0 Operating the RibEye

The RibEye operates as a stand-alone smart sensor that collects and stores data. In this stand-alone mode, a PC program is used to control the RibEye and download data. In addition to controlling the RibEye with the PC program, the interface box has a status light and a manual “Arm” button. The status light will blink at different rates depending on the state of the RibEye:

- 0.5 Hz = idle with data in memory
- 1.0 Hz = idle with memory erased
- 2.0 Hz = acquiring data
- 5.0 Hz = storing data in flash memory
- 10 Hz = erasing flash memory or downloading data.

The Arm button can be used to manually arm the RibEye when it is idle and the memory is erased. You must hold the Arm button for at least 3 seconds to arm the RibEye.

3.1 RibEye IP address

The RibEye ships from the factory with its IP address set to 192.168.0.240. This IP address can be changed to work with your local area network (LAN). You can also communicate with the RibEye directly using a PC, without connecting to a LAN. To directly connect a PC to the RibEye, your PC must be set up with a fixed IP address on the same subnet as the RibEye. Refer to the RibEye Software Manual for instructions on how to change the RibEye IP address.

3.2 Powering up the RibEye

When the RibEye is powered up, it will flash each of the LEDs for about 1 second, starting with rib 1 - the top (shoulder) rib - and going sequentially through rib 6 (abdominal 2). It takes the RibEye communications processor about 10 seconds to be ready for communications after it is booted.

3.3 Ambient light cancellation

To compensate for ambient light conditions, the RibEye takes an additional sensor reading each collection cycle with none of the LEDs turned on. If there is very bright ambient light (much greater than normal room lighting), the difference between the reading with the LED being turned on and the ambient reading may not be enough for an accurate position calculation, and the data will display error code values. The RibEye PC software allows you to view plots of the ambient light data collected.

4.0 RibEye Software

Instructions for installing and operating the RibEye PC software can be found in the RibEye Software User's Manual. The software manual can be found on the disk shipped with the RibEye or on the Boxboro Systems website at <http://www.boxborosystems.com/servicepage.html>. Updates to the RibEye PC software can be downloaded from the website as they become available.

5.0 RibEye Maintenance

The RibEye lenses must be kept clean for accurate measurements. Dust and smudges from fingers can affect the accuracy.

To clean the lenses:

1. Blow the lenses off with canned compressed air (not shop air) to remove any grit
2. Wipe the lenses with a clean, lint-free cloth and lens cleaning solution or alcohol
3. Wipe the lenses with a dry, clean, lint-free cloth.

Never remove the lenses from the case or loosen the lens cover screws. If the lens are loosened, the calibration will be invalid.

There are no user-serviceable parts in the RibEye.

Appendix A. DAS/trigger connector pinouts and trigger circuits

The DAS/trigger interface connector on the RibEye's interface box is a 24-pin connector. A mating cable, terminated in a pigtail, is supplied with the RibEye. At this time, 7 of the connector's 24 pins can be used. **Figure A1** lists the pinouts, pigtail color code, and signal function for these 7 pins. The remaining pins are for future control and communications connections to DAS systems. The unused signal pins are internally connected to active signals and should not be connected externally.

Figure A1. Control signals

Pin #	Color Code	Function
10	white	switch trigger in
20	tan	5V through 1k resistor for pull-up
7	blue	ground
6	green	differential trigger in +
11	black/stripe	differential trigger in -
8	violet	+5V (50 milliamp maximum)
1	black	armed output

Figures A2 through A5 show how to connect trigger switches, active TTL level trigger sources, and differential trigger sources. Where a trigger switch is shown, you can use the same configuration for open collector transistor output trigger sources. If you want to use a photo-interrupter type trigger source, you can power it from the 5V supply on pin 8.

Figures A2 through A5 also show the input circuitry in the interface box. Note that the differential receiver connected to pins 6 and 11 is enabled when a differential trigger is selected. The output of the receiver is internally connected to pin 10, the "SWITCH OR TTL" trigger input.

WARNING: DO NOT DRIVE PIN 10 WHEN DIFFERENTIAL TRIGGERING IS SELECTED. THIS MAY CAUSE THE INPUT CIRCUITS TO BE DAMAGED.

WARNING: DO NOT EXCEED THE MAXIMUM INPUT RATING GIVEN IN THE SPECIFICATIONS SECTION (Appendix B).

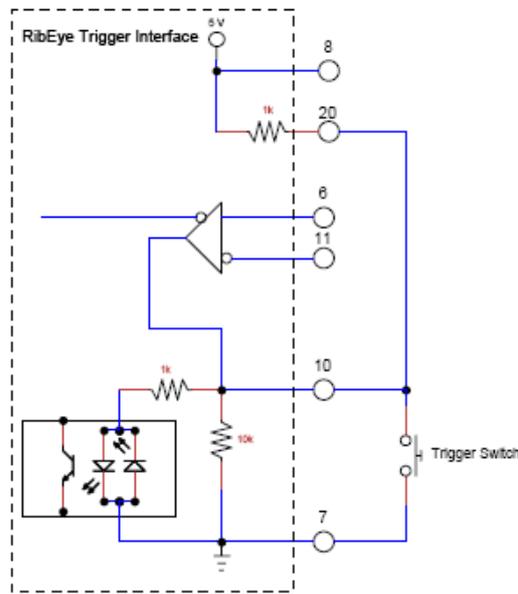


Figure A2. Trigger switch connection

For this connection, if the switch closes at the start of the event, select—
 SWITCH OR TTL, FALLING EDGE TRIGGER
 If the switch opens at the start of the event, select—
 SWITCH OR TTL, RISING EDGE TRIGGER

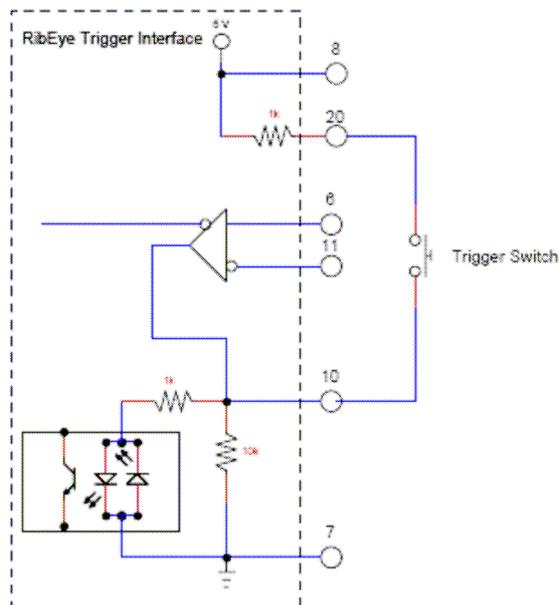


Figure A3. Alternate trigger switch connection

For this connection, if the switch closes at the start of the event, select—
 SWITCH OR TTL, RISING EDGE TRIGGER
 If the switch opens at the start of the event, select—
 SWITCH OR TTL, FALLING EDGE TRIGGER

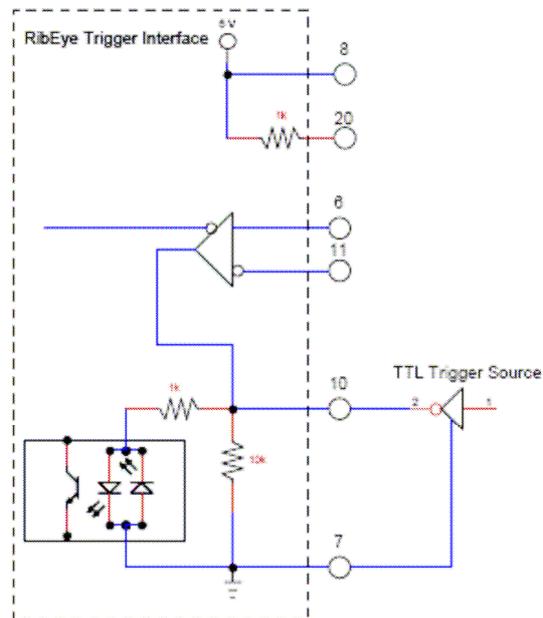


Figure A4. TTL trigger source connection

For this connection, if the input at pin 10 goes from 0V to 5V at the start of the event, select—
 SWITCH OR TTL, RISING EDGE TRIGGER
 If the input at pin 10 goes from 5V to 0V at the start of the event, select—
 SWITCH OR TTL, FALLING EDGE TRIGGER

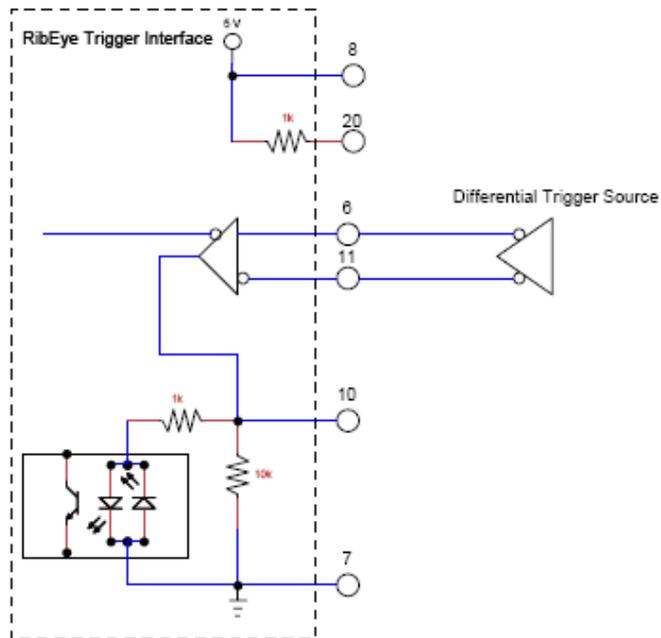


Figure A5. Differential trigger source connection

In this configuration, if the differential driver transitions from HIGH (pin 6 voltage > pin 11 voltage) to LOW (pin 6 voltage < pin 11 voltage) at the start of the event, select—

DIFFERENTIAL, FALLING EDGE TRIGGER

If the differential driver transitions from LOW (pin 6 voltage < pin 11 voltage) to HIGH (pin 6 voltage > pin 11 voltage) at the start of the event, select—

DIFFERENTIAL, RISING EDGE TRIGGER

Note that when differential triggering is selected, the output of the differential receiver can be monitored at pin 10.

Trunk Box

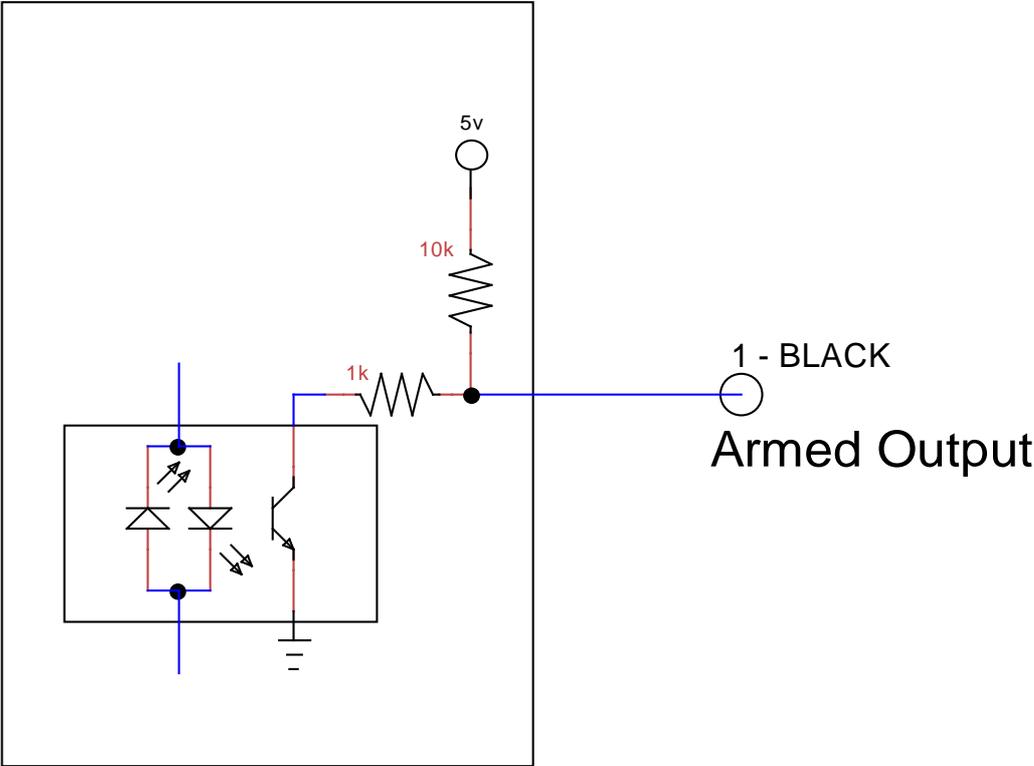


Figure A6. Armed output circuit

Appendix B. RibEye specifications

Measurement accuracy and range

The measurement accuracy is ± 1 mm over the measurement range, which is a volume defined in **Figures B1 and B2**. **Figure B3** shows an isometric view of the measurement range.

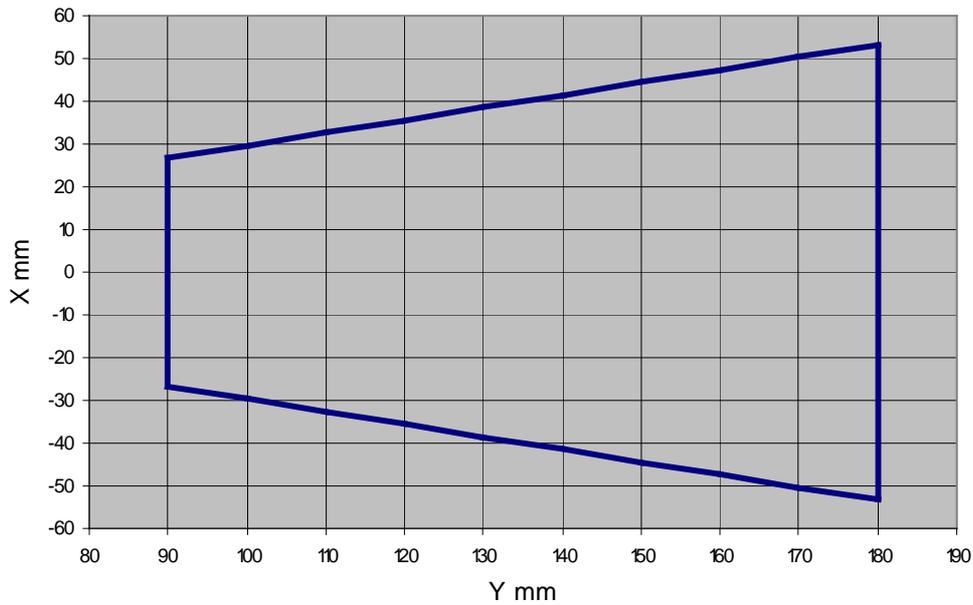


Figure B1. RibEye measurement range in X-Y plane

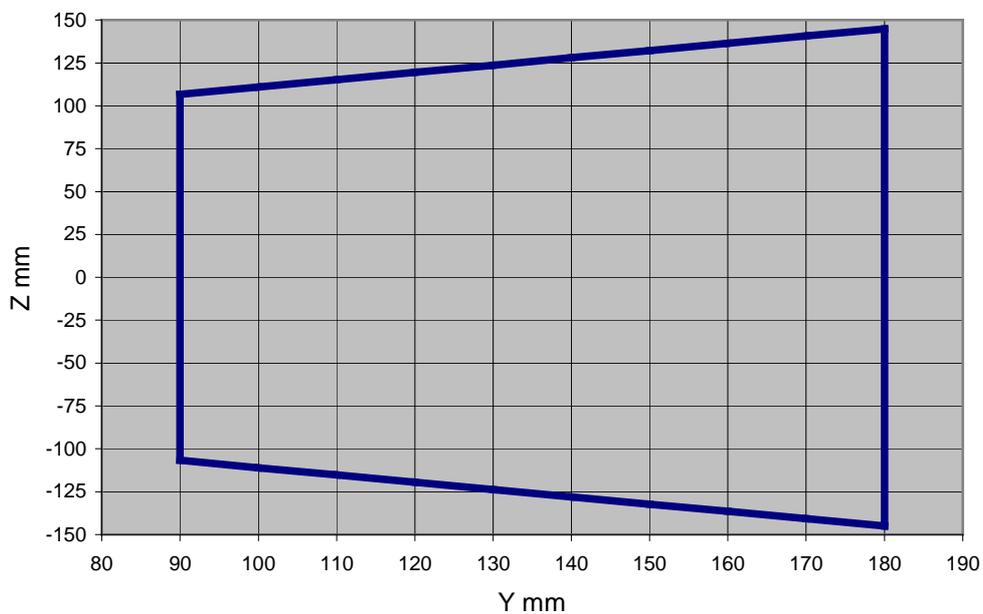


Figure B2. RibEye measurement range in Z-Y plane

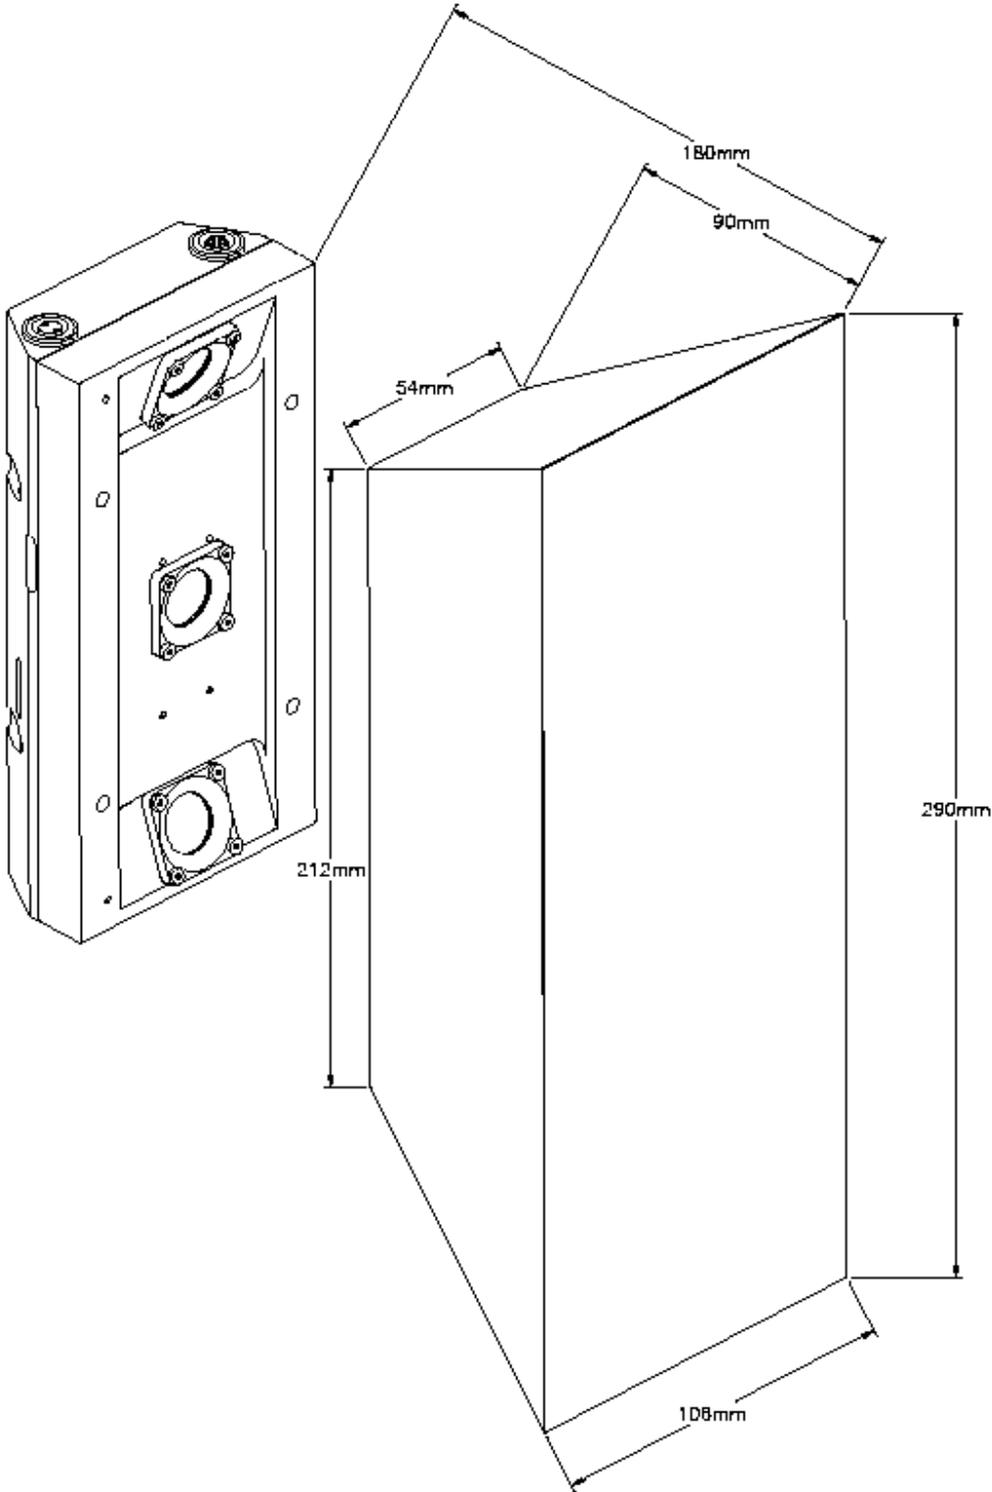


Figure B3. Isometric view of RibEye measurement range

Power requirements

The RibEye can be powered by a good quality DC voltage source from **12 to 36** Volts. Note that the input power cable is terminated at the user end in pigtailed. The red wire is connected to the DC power supply positive power connection. The black wire is for the DC power supply negative (ground) connection. The power cable shield should be tied to either the vehicle common ground point or the DC power supply negative (ground) connection, or both, depending on the configuration of your DC power grounding scheme. We recommend that you try the various shield connection options and see which option provides the lowest noise on the RibEye data.

The trunk box has an internal self-resetting polymer fuse. It can take up to ½ hour to reset after an overload.

The power draw depends on the RibEye's operating conditions, as shown in Figure B4.

Figure B4. RibEye power requirements

Operating Conditions	Interface Box	Controller + LEDs	Total
	Watts		
On/idling	3.3	2	5.3
Collecting data (typical)	3.3	5	8.3
Maximum*	3.3	9	12.3

- When all LEDs are out of view of both sensors and driven to full power.

Data acquisition and storage

Sample rate: 10,000 samples per second per LED

Acquisition time: 30,000 ms (30 seconds) in D-RAM, 2 seconds in flash

Data is collected to RAM memory and stored post-test in flash memory.

Control signals

The DAS/trigger interface cable has 20 conductors used for trigger inputs and control/hand-shaking signals to an external data acquisition system. At this time, only the trigger and armed output signals are programmed. The other control wires are not used, but are connected to internal circuitry and should not be connected. All unused control wires should be individually insulated and protected.

The active trigger and control signals are listed in Figure B5.

Figure B5. RibEye active trigger and control signals

Pin #	Color Code	Function
10	white	switch trigger in
20	tan	5V through 1k resistor for pull-up
7	blue	ground
6	green	differential trigger in +
11	black/stripe	differential trigger in –
8	violet	+5V (50 milliamp maximum)
1	black	armed output

Differential trigger inputs (pins 6, 11)

- Maximum differential input voltage: +/- 12 VDC
- Minimum differential input voltage: +/- 0.2 VDC
- Common mode input voltage +/- 12 VDC

Switch trigger input (pin 10 with respect to pin 7, ground)

- Maximum input voltage = 5.0 VDC
- Minimum “on” voltage = 3.3 VDC
- Maximum “off” voltage = 0.4 VDC
- Current limited by 1k resistor

Additional 5V for external power (pin 8)

- Output voltage 4.75 to 5.25 volts
- Limit external loads to 50 milliamp maximum
- Short circuit will cause resettable fuse to trip

Armed output (pin 1)

- Output voltage 4.75 to 5.25 volts at 0.5 ma max when armed
- Output voltage 0.5 volts when disarmed
- See Appendix A for a schematic of the armed output circuit

Communication and power cables

These cables connect the trunk box in the vehicle trunk to the RibEye’s controller. The communication and power cables are internal to the RibEye system and should not be modified in any way. No user connections are available on these cables.