

# User's Manual



# Notification

Dear Users,

Thank you for your purchase of FH 7000 Frame Heater. Please take time to read our user's manual carefully before use.

This guarantees you to make full use of this unit and prolongs the operation life of this unit.

# Precautions

If you have detected abnormal heat, smoke, noise or smell, immediately stop using the product.

In the event of an abnormality, turn off the power and disconnect the power plug from the power socket. Continuing to use the product may result in electric shock or fire.

Observe the instructions given below regarding the power cable:

- Be sure to use the supplied or specified power cable.
- Do not modify, forcibly bend, kink or pull the power cable.
- When disconnecting the power cable from the AC outlet, be sure to hold the cable by the plug.  
Pulling the cable may cause wire breakage or short circuit, resulting in fire or electric shock.
- Do not connect or disconnect the plug of the power cable to/from the AC outlet using wet hands.  
Doing so may result in electric shock.
- Do not touch the product with wet hands while the power cable is connected to the AC outlet.  
Doing so may result in electric shock.
- If the product will not be used for a long period, disconnect the power cable from the power source. Leaving the cable connected to the power socket for a prolonged period will consume electricity and may result in heating.

# 1. Function Introduction

The Frame Heater is a hot air blower for the softening of celluloid frames and similar material.

The Frame heater permits a forced air ventilation, changing the desired power with the insertion of one or two resistance.

Constant air temperature, controlled by variable thermostat.

Two heat and one cooling setting:

1. Using the low heat setting:  
Low temperature 60° C ~ 85° C controlled by variable thermostat.
2. Adding the high heat setting:  
High temperature 130° C ~ 170° C controlled by variable thermostat.
3. Cooling setting:  
Separate cooling setting for cool air.  
Heat resistant plastic vents concentrator included.  
Incorporates safety thermal cut-out switch.

## 2. Specifications

Voltage	Volt 220 ~ 230
Frequency	Hz 50
Installed Power	Kw 1.5
Fuse	A 10
Machine Weight	Kg 3
Maching Legth	mm 305
Maching Width	mm 210
Maching Height	mm 220

Working surface 160mm from equipment support surface.

LUXVISION is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use or performance of the product or damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, costs of removal or installation or other consequential damages of whatsoever nature. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to you.

Every effort has been made to ensure the accuracy of this manual. However, LUXVISION, makes no warranties with respect to the documentation and disclaims any implied warranties of merchantability and fitness for a particular purpose. LUXVISION, Inc. shall not be liable for any errors or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual or the examples herein. The information in this document is subject to change without notice.