

# Technical Documentation

---

## Hand-held Analyzers Types 2250 and 2270

With Sound Level Meter Software BZ-7222,  
Frequency Analysis Software BZ-7223,  
Logging Software BZ-7224,  
Enhanced Logging Software BZ-7225,  
Sound Recording Option BZ-7226,  
Reverberation Time Software BZ-7227 and  
Tone Assessment Option BZ-7231

User Manual



# **Hand-held Analyzers Types 2250 and 2270**

**with**

**Sound Level Meter Software BZ-7222,  
Frequency Analysis Software BZ-7223,  
Logging Software BZ-7224,  
Enhanced Logging Software BZ-7225,  
Sound Recording Option BZ-7226,  
Reverberation Time Software BZ-7227 and  
Tone Assessment Option BZ-7231**

***User Manual***



# Safety Considerations

This apparatus has been designed and tested in accordance with EN/IEC 61010–1 and ANSI/UL 61010–1 *Safety Requirements for Electrical Equipment for Measurement, Control and Laboratory Use*. This manual contains information and warnings which must be followed to ensure safe operation and to retain the apparatus in safe condition. Special note should be made of the following:

## Safety Symbols



The apparatus will be marked with this symbol when it is important that you refer to the associated warning statements given in the manual.



Protective Earth Terminal



Hazardous Voltage

## Explosion Hazard

The equipment is not designed to be used in potentially explosive environments. It should not be operated in the presence of flammable liquids or gases.

## Warnings

- Switch off all power to equipment before connecting or disconnecting their digital interface. Failure to do so could damage the equipment.
- Whenever it is likely that the correct function or operating safety of the apparatus has been impaired, it must be made inoperative and be secured against unintended operation.
- Any adjustment, maintenance and repair of the open apparatus under voltage must be avoided as far as possible and, if unavoidable, must be carried out only by trained service personnel.



- Do not dispose of electronic equipment or batteries as unsorted municipal waste
- It is your responsibility to contribute to a clean and healthy environment by using the appropriate local return and collection systems
- Hazardous substances in electronic equipment or batteries may have detrimental effects on the environment and human health
- The symbol shown to the left indicates that separate collection systems must be used for any discarded equipment or batteries marked with that symbol
- Waste electrical and electronic equipment or batteries may be returned to your local Brüel & Kjær representative or to Brüel & Kjær Headquarters for disposal

## Trademarks

**Microsoft, Windows and Excel** are registered trademarks of Microsoft Corporation.

**PCL** is a registered trademark of the Hewlett-Packard Company.

**Pentium** is a registered trademark of Intel Corporation or its subsidiaries.

## Copyright © 2004 – 2011, Brüel & Kjær Sound & Vibration Measurement A/S

All rights reserved. No part of this publication may be reproduced or distributed in any form, or by any means, without prior written consent from Brüel & Kjær Sound & Vibration Measurement A/S, Nærum, Denmark



# Contents

---

## CHAPTER 1

<b>Introduction.....</b>	<b>1</b>
1.1 Welcome.....	1
1.2 How to Use this Manual .....	1
Conventions Used in this Manual .....	1
Beginners.....	2
Experienced Users of Acoustic Measurement Equipment.....	2

## CHAPTER 2

<b>Assembling your Analyzer .....</b>	<b>3</b>
2.1 Introduction .....	3
2.2 Instrument Components.....	3
2.3 Description of Inputs/Outputs.....	6
Top Socket.....	6
USB Interface.....	6
Earphone .....	7
Output .....	7
Trigger Input.....	7
Input 1 (Type 2270 only) .....	8
Input (Input Ch.2 for Type 2270).....	8
External Power.....	8
Battery Charge Indicator .....	8
Reset Button .....	8
Slot for Compact Flash (CF) Cards.....	8
Slot for Secure Digital (SD) Cards .....	9
LAN Socket (Type 2270 only) .....	9
2.4 Hardware Setup.....	10
2.5 Assembling the Analyzer .....	11
Charging the Battery for the First Time.....	11
Making Good Measurements.....	11
Alternative Measurement Method (Extended Microphone).....	12
Measuring for Convenience.....	14

## CHAPTER 3

<b>Making your First Measurement .....</b>	<b>15</b>
3.1 Introduction .....	15
3.2 Point and Shoot .....	15
Congratulations!.....	16
3.3 Making a Measurement .....	16
What is a Project Template? .....	16
Switching On.....	16
Set the Sound Level Meter Project Template .....	17

3.4	Save your Measurement.....	21
	Viewing the Saved Measurement .....	21
3.5	Document your Measurement.....	22
3.6	Switching Off.....	25

#### CHAPTER 4

CHAPTER 4		
<b>Calibration.....</b>		<b>27</b>
4.1	Introduction .....	27
4.2	Acoustic Calibration .....	27
4.3	Sound Level Calibration.....	27
	Standard Calibration .....	28
	Calibration Settings.....	29
4.4	Vibration Calibration.....	30
4.5	Electrical Calibration .....	30
4.6	Manual Calibration .....	30
4.7	Calibration History.....	30
4.8	Transducer Database .....	31
4.9	Calibration Reminder .....	33
4.10	Charge Injection Calibration.....	34
	Theory of CIC.....	34
	Performing a Manual CIC Calibration with your Type 2250/2270.....	35

#### CHAPTER 5

<b>CHAPTER 5</b>		
<b>Getting to Know Your Analyzer.....</b>		<b>37</b>
5.1	What is a Sound Level Meter?.....	37
5.2	What is the Hand-held Analyzer? .....	38
	Sound Level Meter Software Module BZ-7222.....	38
	Frequency Analysis Software Module BZ-7223.....	39
	Logging Software Module BZ-7224 .....	39
	Enhanced Logging Software Module BZ-7225 .....	39
	Sound Recording Option BZ-7226.....	39
	Reverberation Time Software BZ-7227 .....	40
	Tone Assessment Option BZ-7231 .....	40
	Built-in Help.....	40
5.3	What is Utility Software for Hand-held Analyzers BZ-5503?.....	40
5.4	Basic Principles when using the Analyzer .....	41
	Navigation Principles – ‘Star’ Navigation Concept.....	41
	The Display Screen.....	45
	Use of Pushbuttons for Controlling Measurements .....	47
	On-screen Feedback and Traffic Light.....	48
	Use of Stylus and Navigation Pushbuttons.....	48
	How to Change Parameter Values .....	49
	How to Personalise your Setup.....	51
	How to Manage the Project Templates.....	53
	Locking the Pushbuttons and Display.....	54

#### CHAPTER 6

<b>Data Management.....</b>	<b>55</b>
6.1 Organising Measurements.....	55



	Description of Jobs and Projects .....	55
	Navigating in Jobs.....	56
6.2	Selecting Default Measurement Job/Path.....	57
6.3	Recalling Measurements .....	57
	Viewing Data.....	57
	Re-using Setups from Projects .....	59
	Viewing or Listening to Annotations and Metadata.....	59
CHAPTER 7		
	<b>Connection to PC or Mobile Phone .....</b>	<b>61</b>
7.1	Introduction .....	61
7.2	Transferring Measurement Data to Your PC .....	63
7.3	Post-processing and Reporting.....	63
7.4	Internet Browser for On-line Display and Control of the Analyzer .....	64
CHAPTER 8		
	<b>Advanced Use of the Analyzer –</b>	
	<b>Tips and Tricks .....</b>	<b>67</b>
8.1	Setting your Preferences on the Analyzer .....	67
	Display Settings .....	67
	Power Settings.....	68
	Regional Settings.....	70
	Storage Settings .....	70
	Headphone Settings .....	71
	Multi-user Facility .....	72
	Printer Settings .....	73
8.2	Modem/DynDNS Settings.....	73
	Connection Through Modem .....	74
	Connection to Network using GPRS/EDGE/HSPA Modem.....	75
	DynDNS .....	76
8.3	Network Settings.....	77
	Parameters in Network Settings .....	78
8.4	Notifications .....	80
8.5	Web-server .....	83
8.6	Preparing your Measurements.....	84
	Metadata.....	85
	Timers and Automatic Measurements .....	86
CHAPTER 9		
	<b>Updating and Upgrading Applications,</b>	
	<b>Maintenance, Calibration and Troubleshooting .....</b>	<b>89</b>
9.1	How to Install New Applications.....	89
9.2	How to Update/Upgrade Applications and Install New Languages.....	89
	Update/Upgrade using BZ-5503 .....	90
	Update Through the Internet.....	90
	Downgrade to an Earlier Version .....	91
9.3	How to Move a License.....	92
9.4	Troubleshooting .....	92
	Analyzer Measurements .....	92

	SD and CF Cards.....	93
	Battery Pack and Recalibration of Battery Charge Indicator.....	94
	Touch Screen.....	94
	Reset Options .....	94
9.5	Care, Cleaning and Storage .....	97
	Handling the Instrument.....	97
	Cleaning the Instrument.....	97
	Storing the Instrument.....	97
9.6	Services at Brüel & Kjær for Types 2250 and 2270.....	98
	Accredited Calibration.....	98
	Initial Calibration .....	98
	Regular Re-calibration .....	98
	Filter Calibration.....	98
	Service and Repair .....	98
	Hardware Maintenance and Repair .....	98
	Rental.....	99
	Training.....	99

#### CHAPTER 10

### **1/1- or 1/3-octave Frequency Analysis (Optional Module)..... 101**

10.1	Setting up the Instrument.....	101
10.2	Controlling the Measurement.....	102
10.3	Displaying the Results .....	102
	Smileys .....	106
10.4	Saving Results .....	106

#### CHAPTER 11

### **Logging (Optional Module)..... 107**

11.1	Setting up the Instrument.....	108
11.2	Controlling the Measurement.....	111
	Annotating a Project.....	112
	Recording Sound .....	112
11.3	Displaying the Results .....	112
	The Profile View.....	112
	Marking Sound Categories .....	115
	Editing Markers on Profiles .....	117
	Annotate Sound Categories.....	117
	Editing Annotations on Profiles .....	118
11.4	Saving and Recalling Results .....	119

#### CHAPTER 12

### **Enhanced Logging (Optional Module)..... 121**

12.1	Setting up the Instrument.....	122
12.2	Controlling the Measurement.....	123
	Annotating a Project.....	124
	Recording Sound .....	124
12.3	Displaying the Results .....	124
	The Profile View.....	124
	Displaying Noise Indicators.....	125

Saving and Recalling Results .....	125
CHAPTER 13	
<b>Sound Recording (Optional Module) .....</b>	<b>127</b>
13.1 Sound Level Meter and Frequency Analysis Software .....	127
Setting up the Instrument.....	127
Controlling the Recording .....	129
Playing the Recording.....	129
13.2 Logging and Enhanced Logging Software .....	129
Setting up the Instrument.....	130
Controlling the Recording .....	131
Control Recording using the Stylus.....	132
Playing the Recording.....	133
Sound Recordings on the PC .....	135
CHAPTER 14	
<b>Reverberation Time Software (Optional Module) .....</b>	<b>137</b>
14.1 Introduction .....	137
Definition .....	137
How Do We Measure Reverberation Time? .....	138
14.2 Setting up the Instrument.....	141
Interrupted Noise Method .....	142
Impulsive Method.....	142
Sound Recording .....	143
Controlling the Measurement.....	143
Annotating Projects and Positions .....	143
14.3 Displaying the Results .....	144
Overview.....	144
Spectrum.....	146
Decay.....	148
14.4 Measurements with Graphical Position Management.....	150
14.5 Quality Indicators .....	154
14.6 Saving and Recalling Results .....	155
CHAPTER 15	
<b>Tone Assessment Option BZ-7231 – 1/3-octave Method.....</b>	<b>157</b>
15.1 General .....	157
15.2 Tone Assessment According to ISO 1996-2, Annex D .....	158
ISO 1996-2, Annex D – Tone Assessment Calculations .....	158
15.3 Tone Assessment according to Italian Law .....	160
15.4 Setting up the Instrument.....	160
Selecting the Tone Assessment Option.....	160
Setting up a Measurement Manually .....	162
Setting up the Measurement using the Default Setup .....	163
Sound Recording .....	164
15.5 Measuring .....	164
Result Display .....	164
15.6 Logging Software BZ-7224 Template .....	166

15.7	Enhanced Logging Software BZ-7225 Template .....	167
15.8	Status Codes (Smiley's).....	167
15.9	Recalling Saved Measurements .....	168

## CHAPTER 16

<b>Specifications .....</b>	<b>169</b>
-----------------------------	------------

## APPENDIX A

<b>Setup Parameters .....</b>	<b>185</b>
-------------------------------	------------

A.1	Input (for Type 2250) .....	185
A.2	Input (for Type 2270) .....	188
A.3	Input Ch. 1 (for Type 2270).....	189
A.4	Input Ch. 2 (for Type 2270).....	190
A.5	Frequency Weightings .....	191
A.6	Bandwidth .....	192
A.7	Statistics.....	192
A.8	Measurement Control – for BZ-7222 to BZ-7225.....	193
A.9	Measurement Control – for Reverberation Time Software BZ-7227.....	195
A.10	Logged Broadband (100 ms) .....	196
A.11	Logged Broadband .....	197
A.12	Logged Spectrum.....	198
A.13	Markers.....	199
A.14	Level Trigger .....	200
A.15	Triggers.....	201
A.16	Sound Recording .....	204
A.17	Output Socket Signal .....	207
A.18	$L_{den}$ Periods.....	208
A.19	Occupational Health.....	208
A.20	Generator.....	210
A.21	Post-processing .....	212
A.22	Tone Assessment .....	213

## APPENDIX B

<b>Measurement Parameters.....</b>	<b>215</b>
------------------------------------	------------

B.1	Total Measurement.....	216
	For Sound Level Meter Software BZ-7222, Frequency Analysis Software BZ-7223, Logging Software BZ-7224 and Enhanced Logging Software BZ-7225	216
B.2	Periodic Reports .....	218
	For Enhanced Logging Software BZ-7225.....	218
B.3	Logged Measurement.....	220
	For Logging Software BZ-7224 and Enhanced Logging Software BZ-7225....	220
B.4	Logged (100 ms) Measurement.....	222
	For Logging Software BZ-7224 and Enhanced Logging Software BZ-7225....	222
B.5	Instantaneous Measured Parameters (available at any time).....	222
	Processed Parameters for Display Only.....	223
	Relationship Between Setup and Measurement Parameters .....	223
B.6	Reverberation Time Measurement .....	225
	For Reverberation Time Software BZ-7227 .....	225

## APPENDIX C

<b>Instrument Parameters .....</b>	<b>227</b>
C.1 Current Transducer .....	227
C.2 Transducer Database .....	228
Transducer Setup .....	228
Calibration History .....	230
C.3 Calibration Setup .....	231
C.4 Type 2250/2270 Microphones .....	231

## APPENDIX D

<b>Preferences .....</b>	<b>233</b>
D.1 Display Settings .....	233
D.2 Power Settings .....	234
D.3 Regional Settings .....	235
D.4 Storage Settings .....	235
D.5 Headphone Settings .....	236
D.6 Users .....	237
D.7 Printer Settings .....	238
D.8 Modem/DynDNS Settings .....	238
D.9 Network Settings .....	240
D.10 Notification Settings .....	241
D.11 Web Server Settings .....	243
D.12 Image Settings (Type 2270 only) .....	244

## APPENDIX E

<b>Glossary .....</b>	<b>245</b>
<b>INDEX .....</b>	<b>253</b>



# Chapter 1

---

## Introduction

### 1.1 Welcome

This user manual describes the Type 2250 Hand-held Analyzer and the Type 2270 Hand-held Analyzer platforms, including Sound Level Meter Software BZ-7222, Frequency Analysis Software BZ-7223, Logging Software BZ-7224, Enhanced Logging Software BZ-7225, Sound Recording Option BZ-7226, Reverberation Time Software BZ-7227 and Tone Assessment Option BZ-7231.

The manual explains how to perform a basic sound measurement, which parameters you can measure and how the instrument should be operated. In addition, some practical hints and guidelines are provided, including all relevant technical specifications. Finally, a glossary is added to help with specific terminology found in this manual.

### 1.2 How to Use this Manual

#### 1.2.1 Conventions Used in this Manual

“Analyzer” refers to Type 2250 or Type 2270 if the description is valid for both types.

Instructions and descriptions that refer to the analyzer pushbuttons are shown with the pushbutton icons as seen on the instrument. See Chapter 2 for a list of pushbutton icons and their functions.

#### **Menu items and buttons/tabs used on the screen**

Indicated by bold type face (for example, select **Calibration** from the list of options).

#### **Parameter Text Appearing on the Screen**

Parameters, instructions and descriptions appearing on the screen are indicated by italics (for example, *Measurement Mode*).

#### **Path Denotations**

Indicated by capitals (for example, SETUP\BZ7222\).

### **1.2.2 Beginners**

Before you read the rest of this manual, read Brüel & Kjær's primer on Measuring Sound. This will give you a basic idea of acoustic measurements. It can be found on the [www.bksv.com](http://www.bksv.com) Web site, by typing 'Primer' in the search window. The Web site also contains lots of other information you might find useful.

Further information is available in the On-line Help installed on the analyzer.

### **1.2.3 Experienced Users of Acoustic Measurement Equipment**

The manual is designed so that you don't have to read all of it to be able to use the instrument. It is built around the most frequently used operations, these are as follows:

- Assembling your Analyzer (see Chapter 2)
- Making your First Measurement (see Chapter 3)
- Getting to Know Your Analyzer (see Chapter 5)
- Calibration (see Chapter 4)
- Data Management (see Chapter 6)
- Connection to PC or Mobile Phone (see Chapter 7)
- Advanced Use of the Analyzer – Tips and Tricks (see Chapter 8)
- Updating and Upgrading Applications, Maintenance and Troubleshooting (see Chapter 9)

However, it is recommended that you read the entire manual for appropriate procedures on how to use the analyzer to obtain accurate sound level measurement results.



# Chapter 2

---

## Assembling your Analyzer

### 2.1 Introduction

This chapter describes how to assemble and set up your analyzer. It provides a brief description and an associated diagram showing the instrument components and the various input and output connections. This enables you to start getting familiar with the instrument, while assembling your system.

This is followed by an overview of the hardware components, showing all the main configurations of the instrument and its accessories.

Finally, instructions are provided that explain how to assemble standard and optional hardware components used in your system. Once you have followed the assembly instructions, your hand-held analyzer will be ready to make measurements.

### 2.2 Instrument Components











An overview of the main Instrument components is provided in Fig.2.1. The descriptions that follow refer to those components.

Fig.2.1 Instrument components



- 1) **Measurement Microphone:** A Brüel & Kjær Prepolarized Free-field  $\frac{1}{2}$ " Microphone is used. A robust and reliable microphone with a wide frequency range.
- 2) **Preamplifier:** Used to convert the high-impedance output of the microphone to low impedance, suitable for driving long extension cables.
- 3) **(Manual Event Pushbutton):** This allows you to manually indicate events during a measurement. Using BZ-7222 and BZ-7223 software you can control sound recording (this requires a license for the BZ-7226 option), and using BZ-7224 Logging Software or

BZ-7225 Enhanced Logging Software you can insert an Event Marker and control sound recording (the latter requires a license for the BZ-7226 option). In Type 2270 this button can also be used to capture images.

- 4)  (**Commentary Pushbutton**): This allows you to add recorded audio messages to your measurement files.
- 5)  (**Navigation Pushbuttons**): These move the active screen component (Field Selector) and navigate the user interface.
- 6)  (**Back-erase Pushbutton**): This allows you to erase the last 5 seconds of measurement data or to insert an Exclude Marker (BZ-7224 Logging Software or BZ-7225 Enhanced Logging Software only).
- 7)  (**Accept Pushbutton**): This allows you to accept any changes you make to the instrument's setup.
- 8)  (**Reset Measurement Pushbutton**): This allows you clear the current measurement from the screen.
- 9)  (**Start/Pause Pushbutton**): Press this to start, pause or continue with a measurement.
- 10)  (**Status Indicator**): The red, yellow or green lights, (or LEDs), referred to as the 'Traffic Light' either side of the **Start/Pause** pushbutton, indicate important states of the instrument during operation, i.e., measurement stopped, paused or running. See Chapter 4 for further details.
- 11)  (**Save Pushbutton**): This allows you to save measurement results.
- 12) **Display Screen**: A high-contrast, colour, touch-sensitive screen.
- 13)  (**Main Menu Icon**): This calls up the Main Menu, which allows you to navigate immediately to all the main functions of the instrument, such as Setup, Explorer (or Data-browser), **Preferences**, and the **Calibration** procedure.
- 14)  (**Power-on Pushbutton**): Turns the instrument on and off. If held in for 1 second, the instrument goes into standby mode; if held in for more than 4 seconds, it turns the instrument off.
- 15) **Stylus**: Stored in a holder on the side of the instrument, for use on the touch-sensitive screen. You can choose to use the stylus or the hardkeys, depending on your preference and the measurement situation. (Also see section 5.4.5.)
- 16) **Secondary Microphone**: This is used to add recorded comments to measurements and is positioned on the underside of the instrument.
- 17) **Top Socket**: This is the main microphone input socket for the instrument. The Measurement Microphone and Preamplifier (items 1 and 2 respectively) are normally connected directly to this socket. For more details see section 2.3.
- 18) **Tripod Mounting Thread**: Use this to mount the instrument onto the tripod and/or tripod extension.

- 19) **Wrist Strap/Tripod Mounting Thread:** Use this to attach the wrist strap to the instrument for added security, or use it to mount the instrument onto the tripod and/or tripod extension using the tripod adaptor UA-1673.
- 20) **Internal Battery Pack:** Rechargeable, high-capacity Li-Ion battery pack to power the instrument.
- 21) **Hinged Cover FB-0679/FB-0699:** A removable plastic cover is provided, which is hinged at the top to provide protection for the connector panel underneath. To remove, simply open the cover and pull the hinge out of the slot at the top of the connector panel. The cover includes a rubber insert printed with an overview of the main connectors and reset button for easy recognition. Six indents are provided on the inside of the cover (behind the insert) which allow you to drill holes in the plastic cover, giving access to the main connectors underneath, so you can use the cover while power is connected, for example.
- 22) **Camera (Type 2270 only):** This feature is used to add images to measurements. Protected and positioned on the underside at 45 degrees, this is designed to allow simultaneous image capture and noise measurement without the need to reposition the analyzer for each task.
- 23) **High Speed USB and LAN Interfaces (Type 2270 only):** This is used to provide fast and seamless transfer of measurement data, recordings and photographs back to the office. Both high-speed interfaces, USB or LAN, can be used when the analyzer is located in close proximity to the PC. However, if the analyzer is remote from the host PC, the LAN interface has the further advantage of data download from anywhere within the same LAN network. Both interfaces are not just used for data download, but also for remote monitoring and remote control of Type 2270.

## 2.3 Description of Inputs/Outputs

### 2.3.1 Top Socket

This 10-pin LEMO connector is the main microphone input for the instrument (see item 17 in Fig.2.1). Microphone Type 4189 (including Preamplifier ZC-0032) is normally connected directly to this connector. If required, however, one of two microphone extension cables (AO-0697-D-030, 3 m and AO-0697-D-100, 10 m), can be fitted between the input stage and the main microphone input socket, to extend the distance to the desired length.

For Type 2270, the microphone is connected to input Channel 1. In addition, you can use the Dual 10-pole Adaptor JP-1041 for accessing both input Channel 1 and input Channel 2.

### 2.3.2 USB Interface

The USB Interface (see item 1 in Fig.2.2) provides high-speed direct communication with a PC's USB port. It is used to synchronise measurement and setup data with a host PC. Use the supplied cable, AO-1476.

The USB Interface is also used for connection to a printer (see section 8.1.7). Use cable AO-0657 for connection to a printer that supports PCL language.

### 2.3.3 Earphone

The 3.5 mm minijack earphone socket (see item 2 in Fig.2.2) enables the instrument to be connected to a set of headphones/earphones, for reviewing recorded comments or for monitoring the measured sound. Use the supplied earphones, HT-0015.


### 2.3.4 Output

This triaxial LEMO connector (see item 3 in Fig.2.2) is used to output the conditioned input signal, for monitoring purposes, or to output the generator signal. Use cable AO-0440-D-015 (LEMO to BNC).

### 2.3.5 Trigger Input

This triaxial LEMO connector (see item 4 in Fig.2.2) is used for the external trigger input, or start/stop signals to the instrument, or for monitoring an external voltage. Using BZ-7222, BZ-7223, BZ-7224 or BZ-7225 software you can control sound recording (this requires a license for the BZ-7226 option). If you want to start and stop the recording using an external device, connect it to this input. See details in Appendix A.

**Fig.2.2** Connector panel of Type 2270

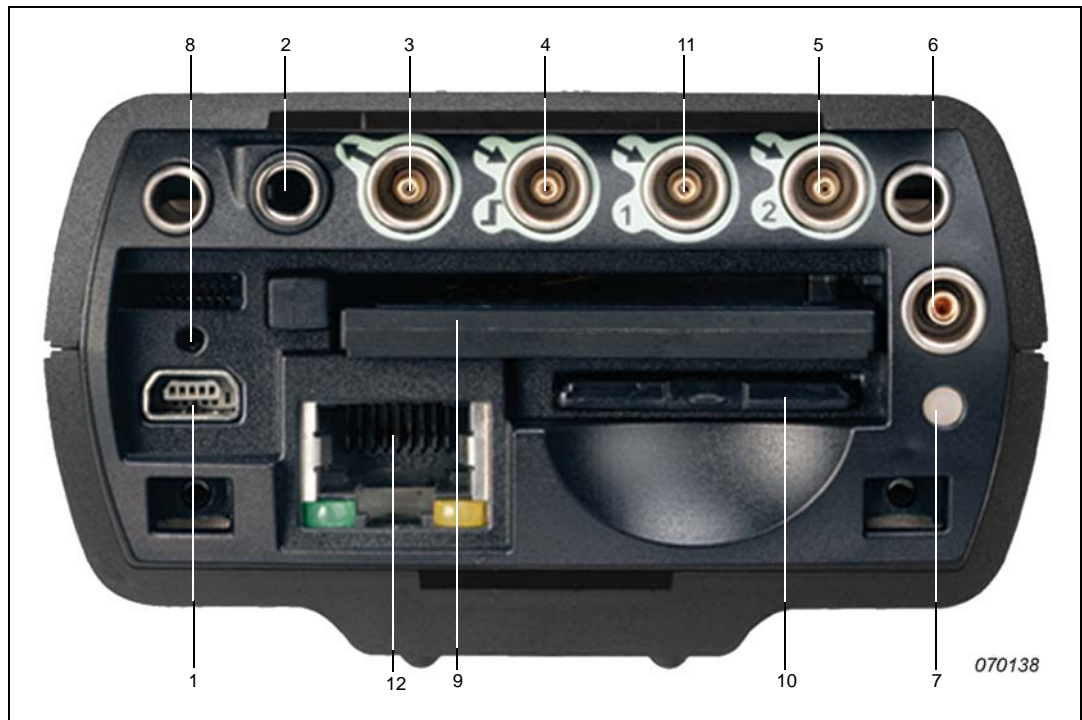

### 2.3.6 Input 1 (Type 2270 only)

This triaxial LEMO connector (see item 11 in Fig.2.2) is used for AC or CCLD inputs to Channel 1. It can be used when analysing electrical signals, from (for example) transducers or sound recordings. Use cable AO-0440-D-015 (LEMO to BNC).

**Note:** This connector is referred to as the Rear Socket Channel 1, also in the software.

### 2.3.7 Input (Input Ch.2 for Type 2270)

This triaxial LEMO connector (see item 5 in Fig.2.2) is used for AC or CCLD inputs to Type 2250 or to Channel 2 of Type 2270. It can be used when analysing electrical signals, from (for example) transducers or sound recordings. Use cable AO-0440-D-015 (LEMO to BNC).

**Note:** This connector is referred to as the Rear Socket (Type 2250) or Rear Socket Channel 2 (Type 2270), also in the software.

### 2.3.8 External Power





**CAUTION:** Use specified battery charger only.

Charging below 0°C (32°F) is not recommended.

**Note:** If you charge the battery pack below 0°C, the lifetime of the batteries will be reduced.

Do not charge battery pack in temperatures above 60°C.

Do not disassemble or expose battery pack to fire or water.

The instrument is powered by an internal rechargeable battery pack. An indication of available charge is shown by the battery icon  at the bottom of the screen. If the charge remaining is low or empty, the batteries can be recharged by connecting Mains Power Supply (Part No. ZG-0426) to the 'Ext. Power' socket (see item 6 in Fig.2.2). When the power supply lead is connected, the  icon will be displayed in place of the battery icon.

### 2.3.9 Battery Charge Indicator

A battery charge light, (LED), indicates when the battery pack is being charged from external power (see item 7 in Fig.2.2). It shows a steady green light when external power is applied (and the battery is charging), and a flashing green light when charging has finished.

### 2.3.10 Reset Button

Located above the USB connector (see item 8 in Fig.2.2), it is used to reset the instrument if you have problems with the instrument and cannot get it to operate. To reset, press the button with the point of the stylus – see chapter 9 for troubleshooting.

### 2.3.11 Slot for Compact Flash (CF) Cards

This slot (see item 9 in Fig.2.2) accepts CF sized cards and can be used for memory or, for example, a modem.

### **2.3.12 Slot for Secure Digital (SD) Cards**


This slot (see item 10 in Fig.2.2) accepts SD and Secure Digital High Capacity (SDHC) memory cards, and is typically used to save measurement data. Capacities in excess of 2 gigabytes are acceptable.

### **2.3.13 LAN Socket (Type 2270 only)**

The LAN Socket (see item 12 in Fig.2.2) provides high-speed direct communication with a Local Area Network. It is used to synchronise measurement and setup data with a host PC.

## 2.4 Hardware Setup

**Fig.2.3** Type 2250/2270 – Hardware Overview

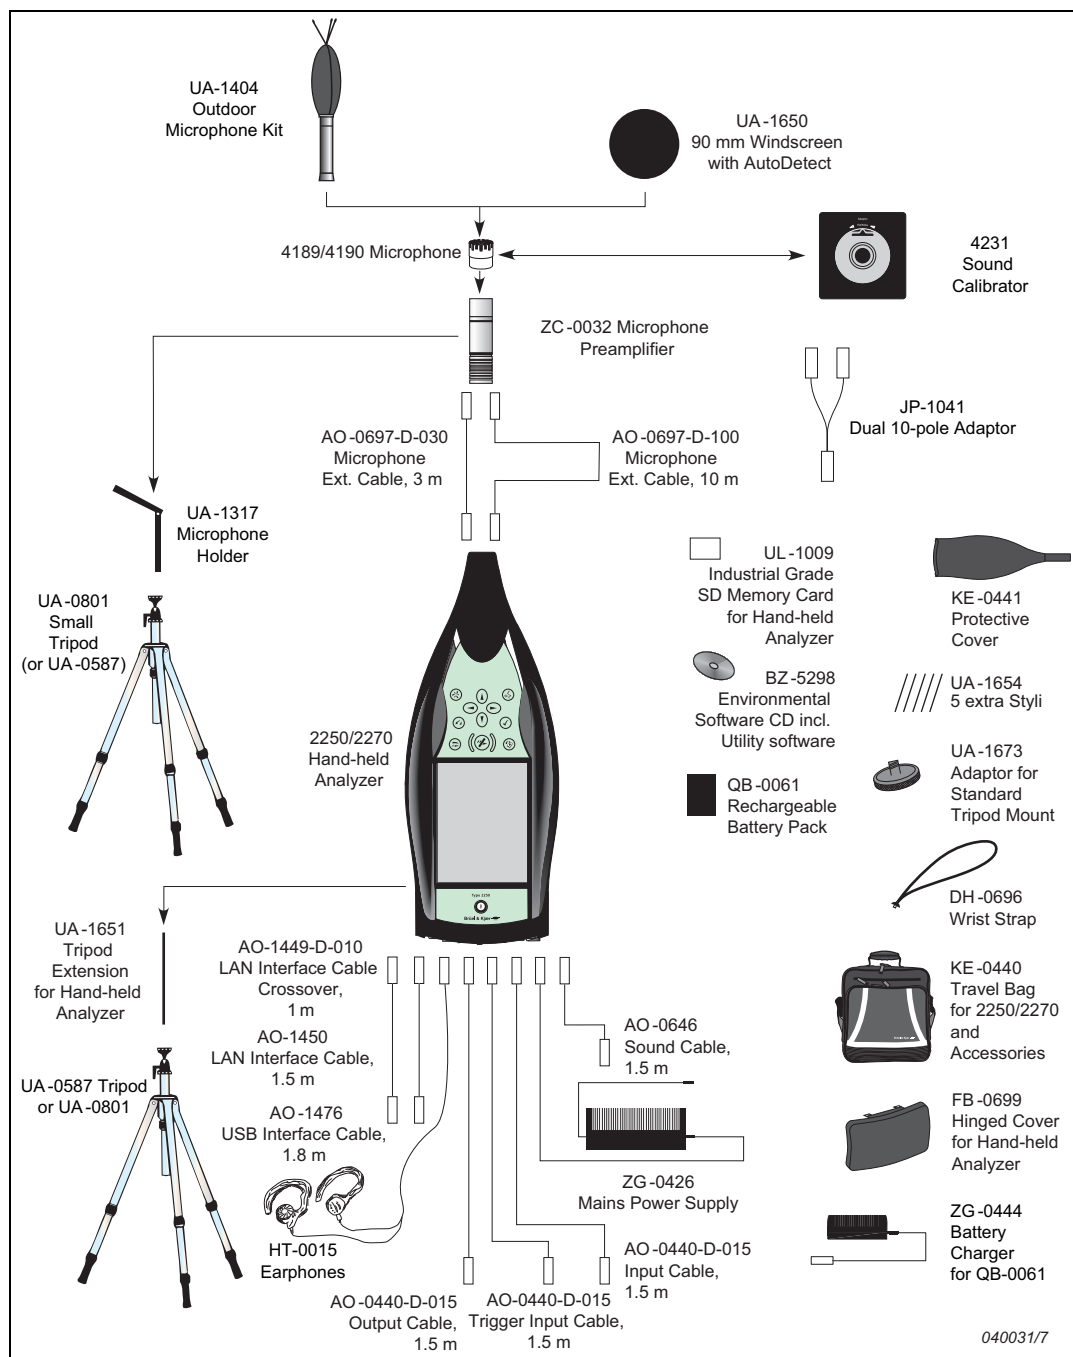



## 2.5 Assembling the Analyzer

### 2.5.1 Charging the Battery for the First Time

Battery Pack QB-0061 comes charged to approximately half capacity on initial delivery. Before assembling your analyzer for the first time, it is recommended that you fully charge the battery pack, by connecting Mains Power Supply ZG-0426 to the external power socket (see item 6 in Fig. 2.2). It should take approximately 8 – 10 hours.

The battery charge light (see item 7 in Fig. 2.2) shows a steady green light when external power is applied (and the battery is charging), and a flashing green light when charging has finished. You can leave the analyzer with external power on, even when the battery is fully charged. Also refer to section 9.4.3.

### 2.5.2 Making Good Measurements

The fact that you are using your Type 2250 or Type 2270, which fully complies with the IEC 61672–1 standard, ensures you always make good measurements. The analyzer should be set up using the following recommended assembly instructions. This is to minimise the influence of acoustical reflections during measurements. All the components described below are shown in Fig. 2.1 and Fig. 2.3.

Another set of instructions are provided in section 2.5.3, for situations where you need to position the microphone at a distance from the instrument, while still complying with the standard.

#### Placing the Measurement Microphone

The measurement microphone must be placed away from shielding, reflecting, or absorbing objects. In a diffuse sound field, absorbing objects will reduce the measured sound levels. In a free sound field, reflecting objects can change the measured sound levels. Typically, the sound level 0.5 m from a plane reflecting wall is 3 dB higher than if there was no wall.

The operator of the system may be personally shielding, absorbing, and reflecting, and can be an additional noise source. Measure downwind in dry conditions with a windspeed less than 5 m/s.

The optimum position for the microphone is best found by trying different positions and observing the resulting sound levels.

#### Mounting the Measurement Microphone

Before mounting the measurement microphone, note the following precautions:

- When screwing the microphone on, **do it gently** to avoid damaging threads
- Keep dust and foreign matter off the microphone diaphragm. **Do not touch** the diaphragm with anything – it is very delicate

**Note:** Once the measurement microphone and preamplifier have been assembled and connected to your analyzer, they should normally be left connected to the instrument.

**To connect**

- 1) Gently screw the microphone onto Preamplifier ZC-0032, see items 1 and 2 in Fig.2.1.
- 2) Insert the male plug of the preamplifier into the top socket of the hand-held analyzer (see item 17 in Fig.2.1) and push gently until it snaps into position.

**To Disconnect**

- 1) To remove the preamplifier and microphone, grip the locking collar firmly and slide back, to remove the preamplifier and microphone combination from the instrument.

**Mounting the Windscreen**

For short outdoor noise measurements (or indoor measurements exposed to air movement) mount Windscreen UA-1650 onto the microphone and preamplifier combination, making sure it ‘snaps’ into place over the windscreen sensor. The sensor is built into the preamplifier, see item 2 in Fig.2.1. Icons in the status field on the screen indicate whether the windscreen is detected or not. For longer-term outdoor measurements, see Mounting the Outdoor Microphone Kit below.

**Mounting the Analyzer onto the Tripod Extension Stem and Tripod**

Mount the analyzer onto the Tripod Extension Stem UA-1651 and Small Tripod UA-0801, as follows:

- 1) Screw Tripod Extension Stem UA-1651 onto the threaded stud of the ball-joint on Small Tripod UA-0801. Secure the ball-joint roughly in a vertical position (i.e., in-line with the tripod) until ready to follow the instruction in step 4.
- 2) Screw the Extension Stem UA-1651 into the instrument, using the threaded socket situated on the underside of the instrument, at the back (see item 18 in Fig.2.1).
- 3) Set Small Tripod UA-0801 (including the instrument) in the required position, and adjust it to the required height. Ensure that one of the three legs is pointing roughly in the same direction as your instrument needs to point. (We will refer to this leg as the front leg.)
- 4) Position the extension stem at an angle of 45° to the horizontal and vertically in-line with the front leg of the tripod – this is to ensure the whole setup is stable.

**Note:** The procedure is the same if Tripod UA-0587 is used instead of Small Tripod UA-0801.

Once you have carried out these instructions, you are ready to start measuring, see Chapter 3.

**2.5.3 Alternative Measurement Method (Extended Microphone)**

The measurement microphone can be placed a distance from the instrument by connecting an extension cable and fitting the microphone to a microphone holder or to Outdoor Kit UA-1404. The instrument should be set up using the following assembly instructions. This is to ensure that the accessories have limited acoustical influence on the instrument during measurement. All the components described below are shown in Fig.2.1 and Fig.2.3.

### Mounting the Outdoor Microphone Kit

For longer-term outdoor measurements, an Outdoor Microphone Kit UA-1404 will be required as an alternative to the windscreen. If this is the case, mount the kit onto the microphone and preamplifier combination according to assembly and mounting instructions in the User Manual for the Outdoor Microphone Kit, BE 1077.

### Connecting a Microphone Extension Cable

The optional extension cables that are recommended for use with Type 2250/2270 are:

- AO-0697-D-030 – 3 m long
- AO-0697-D-100 – 10 m long

**Note:** Connecting a recommended microphone extension cable has no acoustical effect on the hand-held analyzer's measurement and has no effect on the instrument's calibration. However, although it is not essential to re-calibrate, it is good measurement practice to calibrate the whole measurement chain (including microphone extension cable) before starting a measurement.

Decide which cable you require and assemble as follows:

- 1) Gently screw the microphone onto Preamplifier ZC-0032, see items 1 and 2 in Fig.2.1.
- 2) Insert the preamplifier into the female plug of the extension cable and push gently until it snaps into position.
- 3) Insert the male plug of the extension cable into the top socket of the hand-held analyzer (see item 17 in Fig.2.1) and push gently until it snaps into position.

### Connecting Two Microphones (Type 2270 only)

To connect two microphones to a Type 2270, use the Dual 10-pole Adaptor JP-1041, two extension cables (AO-0697-D-030 3 m long or AO-0697-D-100 10 m long) and two Preamplifiers and two Microphones.

- 1) Gently screw the Microphones onto Preamplifiers ZC-0032, see items 1 and 2 in Instrument components (Fig.2.1).
- 2) Insert the preamplifiers into the female plugs of the extension cables and push gently until into position.
- 3) Insert the male plugs of the extension cables into the female plugs of the dual 10-pole adaptor and push gently until they snap into position. **Note:** Channel 1 is tagged CH 1 and Channel 2 is tagged CH 2 on the dual 10-pole adaptor.
- 4) Insert the male plug of the dual 10-pole adaptor into the top socket of Type 2270 (see item 17 in Fig.2.1) and push gently until it snaps into position.

### Mounting the Measurement Microphone on the Microphone Holder and Tripod

Mount the microphone and preamplifier combination onto Microphone Holder UA-1317 and Small Tripod UA-0801, as follows:

- 1) Set Small Tripod UA-0801 in the required position, and adjust to the required height.

- 2) Screw Microphone Holder UA-1317 onto the threaded stud on the tripod ball-joint, and position the holder as required.
- 3) Push the microphone and preamplifier combination carefully into the microphone holder, so that it grips onto the body of the microphone and preamplifier. Ensure that the microphone cable sits properly in the plastic guide.

Once you have carried out these instructions, you are ready to start measuring, see Chapter 3.

#### **2.5.4 Measuring for Convenience**

Measurements that need to be done at short notice, with no particular accuracy can be carried out by simply holding the instrument or using any combination of hardware components and accessories shown in Fig.2.3.

# Chapter 3

## Making your First Measurement

### 3.1 Introduction









This chapter describes how to make a basic measurement and how to save and document the results. It assumes you have just received your Hand-held Analyzer Type 2250 or Type 2270 and are turning it on for the first time. If the instrument has been used before, and the previous user has initiated the multi-user facility, then the screens that are displayed may not follow the sequence described below. If this is the case, please refer to section 8.1.6.



**Note:** A stylus is stored in a holder on the side of the instrument, see item 15 in Fig. 2.1. This can be used on the touch-sensitive screen to select icons and functions during the procedures that follow. Alternatively, you can use the various pushbuttons, see items 3 to 11 in Fig. 2.1.

The following procedures assume that the measurement microphone and preamplifier have been mounted as described in Chapter 2 and the analyzer has a fully charged battery, see section 2.5.1.

### 3.2 Point and Shoot

Using the following basic procedure you will be able to start using your hand-held analyzer immediately to make measurements and start the familiarisation process:

- 1) Switch on by pressing  and make sure the **SOUND LEVEL METER** Project Template is selected.
- 2) Check that the data path at the top of the screen displays the correct job/project, (i.e., where you want to save the new data). See section 6.1.1.
- 3) Set *Measurement Mode* to manual and change any setup parameters by tapping the Main Menu icon  and selecting **Setup** from the drop-down that appears.
- 4) Press the **Start/Pause** pushbutton , then monitor the status indicator (traffic light).
- 5) Use the **Start/Pause** , **Continue** , **Back-erase**  and **Reset**  pushbuttons to control the measurement.
- 6) When measurement has finished, press the **Save**  pushbutton to save your data.

7) Add any spoken comments to the measurements by pressing the **Commentary**  pushbutton, and add any written comments by tapping the Main Menu icon  and selecting **Add Note to Current Measurement** from the drop-down that appears.

8) To view and organise your data, tap the Main Menu icon  and select **Explorer**.

**Note:** You are not required to set any measurement ranges on the analyzer, the instrument has a dynamic range of more than 120 dB, from 140 dB down to the noise floor of the microphone, (if the microphone has nominal sensitivity).

### 3.2.1 Congratulations!

You should now be familiar with the basic principles of the the analyzer. If you need more help, the following section goes into the measurement process in more detail. If not, please refer to Chapter 1.

## 3.3 Making a Measurement



### 3.3.1 What is a Project Template?

A Project Template contains all the common display settings and measurement setups required to perform a noise measurement. The template does not contain any measurement data – this data is saved as individual projects, stored in job folders, see section 6.1.1. The Project Templates covered by this manual, are:


- Sound Level Meter Project Template (included in BZ-7222 software)
- Frequency Analysis Project Template (included in BZ-7223 software)
- Logging Project Template (included in BZ-7224 software)
- Enhanced Logging Project Template (included in BZ-7225 software)
- Reverberation Time Project Template (included in BZ-7227 software)

**Note 1:** Sound Recording Option BZ-7226 does not contain a specific template – the sound recording options are available in all templates.

**Note 2:** Tone Assessment Option BZ-7231 does not contain a specific template – the tone assessment options are available in all templates included in BZ-7223/24/25/30.

If you make any changes to the settings in a Project Template, an ‘\*’ will appear next to the template name to indicate that the new settings have not been saved. Tap the Template to select **Template Explorer** (or select it from the Main Menu ) and tap the Save icon  to save the settings in the current template.

### 3.3.2 Switching On


Switch the analyzer on by pressing . The start-up time depends on the state the instrument was in when last switched off and it may take up to 2 minutes from a cold start, or up to 10 seconds if the instrument is already in Standby Mode, (i.e., from a warm start).

**Note:** A cold start is described as a re-boot of the instrument from ROM. This normally occurs after the instrument has been turned off for some time, either by the user or following an automatic power-down. A warm start takes the instrument quickly from Standby Mode to Operating Mode without having to re-boot. (The battery needs to be charged for this to happen, see section 2.5.1.)

### 3.3.3 Set the Sound Level Meter Project Template


After initialisation, the screen shown in Fig.3.1 appears:

**Fig.3.1**  
*Initial sound level meter screen*

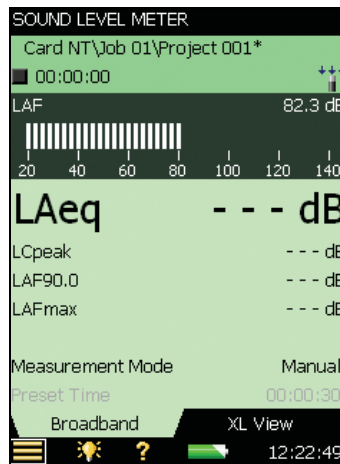

- 1) Check that the **SOUND LEVEL METER** Project Template is displayed at the top of the screen, see Fig. 3.1. If not, use the stylus to tap the bar at the top of the screen to reveal the Template Explorer and select **SOUND LEVEL METER** from the list, see Fig.3.2. Tap the Template icon to open directly or tap the template name to reveal a drop down where you select Open.


**Fig. 3.2**  
Changing the project  
template

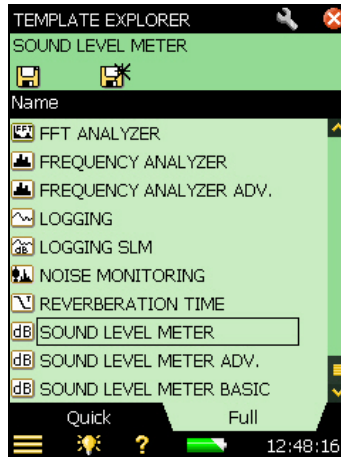

- 2) Tap *Measurement Mode* in the view area and set to *Manual*, see Fig.3.3.

**Note:** The bar-graph showing the sound pressure level  $L_{AF}$  is now live, but parameters such as  $L_{Aeq}$  are not. This is because  $L_{AF}$  is an instantaneous value, always available for display, whereas  $L_{Aeq}$  is a measured value that needs to be averaged over a period of time. Therefore, it cannot be displayed before you have started a measurement using the **Start/Pause** pushbutton (⏏).

**Fig. 3.3**  
Setting the measurement  
mode

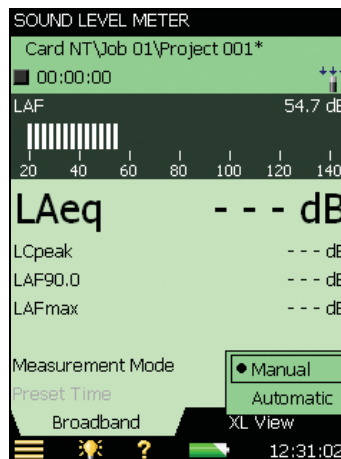

- 3) Press the **Start/Pause** pushbutton (⏏) to start the measurement.


**Note:** *Start* appears on the screen as feedback when you press the **Start/Pause** pushbutton. Notice the *Running* Icon (▶) on the screen and monitor the red, yellow, green ‘traffic light’ status indicators around the **Start/Pause** pushbutton while you are measuring.



The indications should be as follows:

- Yellow status indicator flashing every 5 s before you start the measurement
  - Steady green status indicator after you have pressed the **Start/Pause** pushbutton (⏏) and during the measurement (if everything is OK)
  - Short green flash every second means the measurement is waiting for the trigger
  - Yellow status indicator flashing every 5 s when you have stopped, saved the measurement and are ready to do another measurement
  - Yellow status indicator flashing slowly, 0.5 s on, 0.5 s off, if you pause the measurement
  - Red status indicator flashing rapidly if you encounter an overload condition during the measurement
- 4) Use the **Start/Pause** (⏏), **Continue** (⏏), **Back-erase** (⏏) and **Reset** (⏏) pushbuttons to control the measurement. The status field at the top of the screen will give short textual feedback on the pushbutton operation. A visual indication of measurement status is also displayed on the status line, by way of the *Stopped* icon ■, the *Running* icon ▶, and the *Pause* icon ||. See Fig. 3.4.


**Fig. 3.4**  
Measurement  
feedback in the  
status field

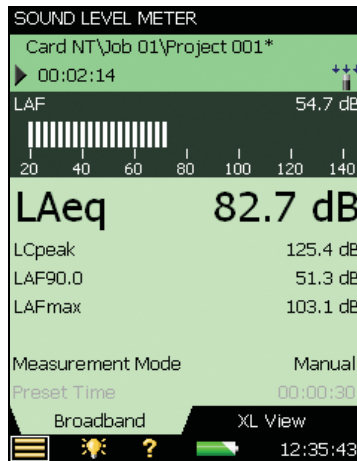



- 5) Toggle between different display parameters, as required, by tapping on each parameter field (for example LAF90.0 in Fig.3.4) with the stylus and selecting other parameters from the drop-down lists that appear.


**Note:** The tabs at the bottom of the screen allow you to choose different ways of displaying the measurement results:

- The *Broadband* view shows an instantaneous  $L_{AF}$  readout, with associated bar graph and four measurement parameters, followed by two measurement setup parameters. (The first parameter is displayed in a larger font size for better readability, see Fig. 3.4)
- The *XL View* increases the size of the first parameter readout to a 4 digit, full-screen display (including decimal point)

- 6) Set *Measurement Mode* to *Automatic* and choose a preset time for your measurement. Then repeat steps 3 and 4. The measurement will automatically pause after the preset time. This allows you to either save your measurement or continue measuring, as required.
- 7) Tap the Main Menu icon  and select **Setup** from the list of options, see Fig.3.5.

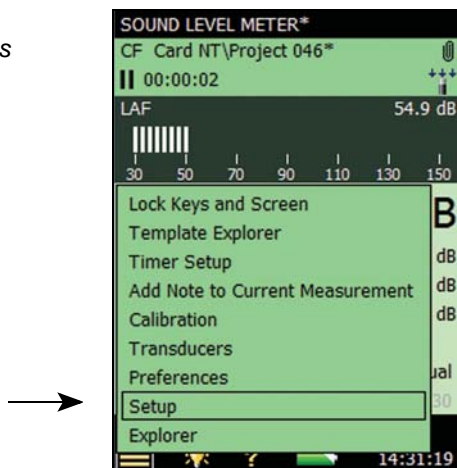**Fig.3.5***Main Menu options*

Change the broadband weighting parameters by tapping on the 'plus' icon  next to *Frequency Weightings*, then on the weighting parameter field on the right-hand side of the screen. A weighting drop-down menu will appear, see Fig.3.6. Change the parameters as required.

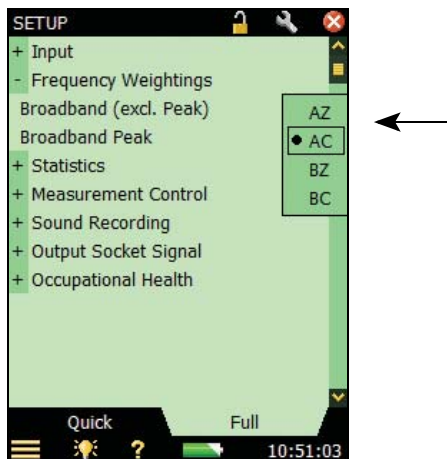**Fig.3.6***Changing the broadband frequency weightings*

- 8) Return to the bar-graph screen of the **SOUND LEVEL METER** template, by tapping  and you are ready to make a new measurement.


## 3.4 Save your Measurement

When you have completed your measurement, you need to save it. By default the analyzer creates a job folder called *JOB 01*. Job folders represent the upper level of the data (or file) management system, with individual measurements or sets of data, represented by projects appearing under the relevant job. By default the analyzer also creates a project called *Project 001* under *JOB 01*. (Subsequent measurements will be labelled *Project 002*, *Project 003*, etc., under *JOB 01*. This will happen each time you have saved a measurement<sup>a</sup>.)

Check that the data path at the top of the screen displays *\JOB 01\Project 001\** and save your measurement by pressing the **Save** pushbutton (📁). For more details refer to section 6.1.

**Note:** An asterisk will appear alongside the project at the top of the status field as soon as you start your measurement, see Fig. 3.7. This signifies that the measurement has not been saved. It will disappear once you have saved the measurement.

**Fig. 3.7**  
Saving your  
measurement

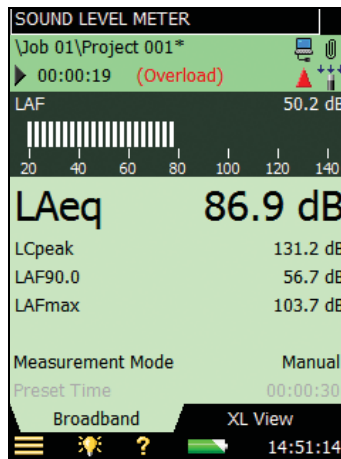


### 3.4.1 Viewing the Saved Measurement

- 1) To view the saved measurement, tap project name or the Main Menu icon (☰) and select **Explorer** from the list of options. Tap the name of your measurement (*Project 001* in this case) and select *View* from the drop-down that appears, see Fig. 3.8. (Or just tap the measurement icon to the left of the name.)


a. If you are using Reverberation Time Software BZ-7227 (see Chapter 14), please note that there are **more** measurements stored in Reverberation Time projects than Sound Level Meter, Frequency Analyzer or Logging Projects, which all contain one measurement within each project.

**Fig. 3.8**  
Viewing your  
measurement in Explorer

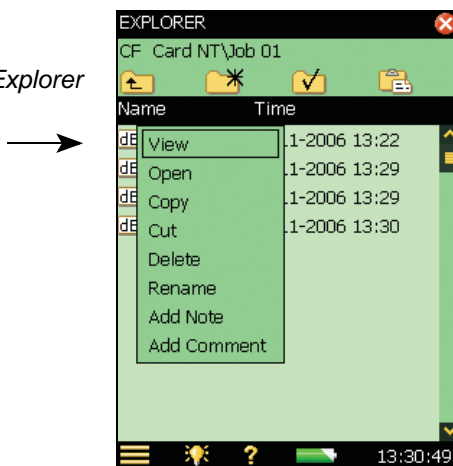


- 2) This opens the Data Viewer, see example in Fig.3.9. The viewer displays the data in a pre-defined format, where you can select and view different parameters, as necessary.

**Fig. 3.9**  
The Data Viewer

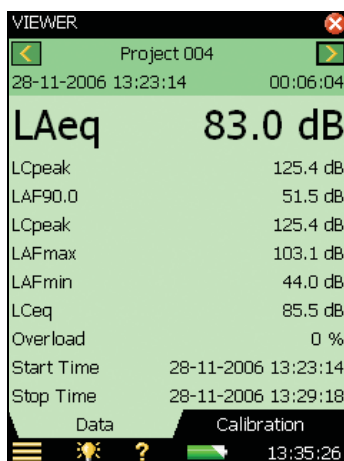


- 3) When finished, tap  to return to Explorer and  to return to the measurement screen.

## 3.5 Document your Measurement

One method for documenting your measurement is adding metadata to your project. Tap  (upper right corner of the screen, see Fig.3.7) to open the Annotations screen with metadata on the *Metadata* tab and annotations on the *Annotations* tab. see Fig.3.10.

**Fig. 3.10**  
The Metadata tab of the  
Annotations screen

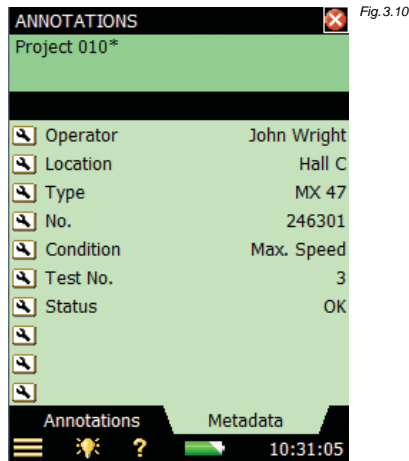

Metadata are text or numbers, which are easily set and changed using the keyboard or selected from a user-defined picklist. The metadata are stored together with the measurement on the project. Refer to section 8.6 for a more comprehensive description of using metadata.

Tap the icon to close the *Annotations* screen.

Another method for documenting your measurement is by attaching a short spoken comment to the project you are working on. This is done before, during<sup>a</sup> or after saving the measurement by pressing and holding down the **Commentary** pushbutton, while talking to the instrument. (The microphone situated on the underside of the analyzer will pick up your comments.) Recording stops when you release the pushbutton.

**Note:** Tap the paperclip icon to see a list of all annotations in the project and tap the loudspeaker icon in the annotation to hear the comment using the earphones plugged into the earphone socket.


A third method is to make a short written comment and attach it to the project you are working on. This is done before, during or after saving the measurement by tapping the Main Menu icon and then tapping on **Add Note** to Current Measurement in the list of options. A blank 'note' screen will appear, where you can make written comments about the measurement, using the standard full character keyboard that appears at the bottom of the note screen. See the example in Fig. 3.11.



Tap the paperclip icon to see a list of all annotations in the project and tap the text icon in the annotation to view the comment.

a. For Logging Software BZ-7224 and Enhanced Logging Software BZ-7225, annotations can be added directly to the measurement profile during the measurement, see section 11.2.

**Fig. 3.11**

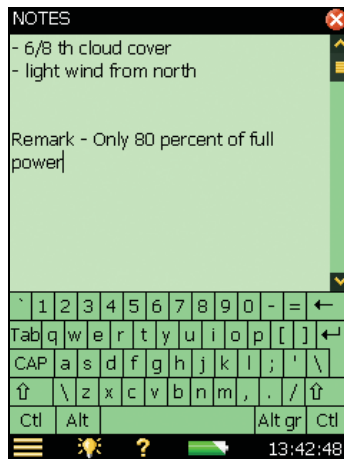Example of a written annotation that is attached to a measurement





A fourth method is to attach an image (Type 2270 only). Similar to adding notes or comments, adding an image can also be done before, during or after saving the measurement by a tap **Main Menu** icon  and then a tap **Add Image to Current Measurement** in the list of options. The Viewfinder display will then appear showing what is coming through the camera lens. The camera has fixed focus and automatically adjusts the light sensitivity; you just have to position the analyzer so that the object you want to capture is visible in the Viewfinder and then press the **Manual Event** pushbutton  or tap the icon to capture the image – see Fig.3.12.

**Fig. 3.12**

Viewfinder

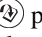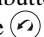

When captured, the image is presented as a still picture and you can save the captured image by pressing the Save  pushbutton (or by closing the Images view), or you can reject the image by pressing the Back-erase  pushbutton.

**Fig. 3.13**  
Viewfinder



**Note:** When finished, tap the icon to return to the measurement screen. Tap the paperclip icon to see a list of all annotations in the project and tap the camera icon in the annotation to view the image.

To get more familiar with this process, try the following:

- 1) Make a new measurement (see section 3.2, if unsure).
- 2) Tap the paperclip icon and define or select metadata.
- 3) Make a short written comment and attach it to the new measurement (as previously described).
- 4) Make a short spoken comment (as previously described).
- 5) Make an image (as previously described – for Type 2270 only).
- 6) Tap the paperclip icon and check that you have three annotations – select one of them to see/hear the annotation.

## 3.6 Switching Off

Switch the analyzer off by pressing . If held in for 1 second, the instrument goes into standby mode; if held in for more than 4 seconds, it switches the instrument off.

The instrument will automatically switch off, when it has been in standby mode without external power for more than 30 hours.





# Chapter 4

---

## Calibration

### 4.1 Introduction

Calibration is an adjustment of your analyzer to measure and display correct values. The sensitivity of the transducer as well as the response of the electronic circuitry can vary slightly over time, or could be affected by environmental conditions such as temperature and humidity. While you are unlikely to ever experience a large drift or change in sensitivity with the analyzer, it is nevertheless good practice to perform regular calibrations, normally before and after each set of measurements. Often calibration is required by measurement standards, such as IEC 61672–1.

If you want your analyzer to remind you when the next Accredited/Traceable calibration is due, you can set it up on the *Reminder* tab of the Calibration screen. See section 4.9.

You can check the complete measurement chain during long-term measurement using Charge Injection Calibration. See section 4.10.

### 4.2 Acoustic Calibration



Acoustic calibration is the preferred calibration method when measuring with microphones, particularly when standards and regulations require calibration before a measurement. The method involves applying an acoustic signal of known magnitude and frequency to the microphone, which calibrates all the instrument's components (microphone, preamplifier and electrical circuitry).

### 4.3 Sound Level Calibration


To perform acoustic calibration use Sound Calibrator Type 4231. It provides a stable sound pressure at 1 kHz and has minimal susceptibility to environmental factors. The procedure itself is relatively simple, and on the analyzer the procedure is referred to as the Standard Calibration procedure.

The procedure for performing an acoustic calibration and instructions on how to fit the calibrator are given in the following section.

### 4.3.1 Standard Calibration

- 1) Stand away from loud sound sources that may interfere with the calibrator's signal.
- 2) Switch on the analyzer by pressing .
- 3) Tap the Main Menu icon  and select **Calibration** from the list of options. The screen shown in Fig.4.1 will appear.


**Fig. 4.1**  
Initial Calibration screen

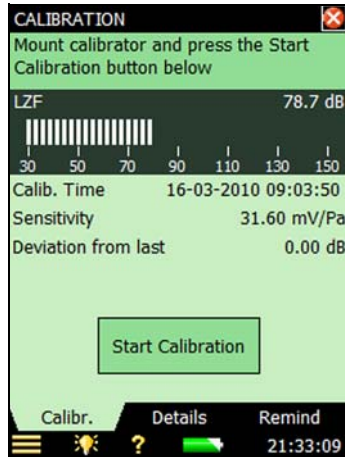

This screen contains a bar graph showing the actual sound pressure level and three placeholders for displaying information about the last calibration.

- 4) Following the first part of the instruction in the status field, fit Sound Calibrator Type 4231 carefully onto the microphone of the hand-held analyzer. (To avoid handling vibrations to disturbing the calibration rest the assembly in a roughly horizontal position on a table or other flat surface.)

Ensure that the calibrator fits snugly on the microphone.

- 5) Switch on the Calibrator. Wait a few seconds the level to stabilise.
- 6) Tap the  button on the screen to start the calibration.

**Note:** *Detecting level...* appears on the screen as feedback.

- 7) While the analyzer is searching for the calibration signal and the signal level is stabilising, the 'traffic light' indicates a short green flash every second. When the level is stable, the traffic light indicates a steady green and the signal is measured and used for calibration. **Once the calibration has been completed successfully, the traffic light indicates a short yellow flash every 5 seconds.** The *Sensitivity* is automatically calculated and displayed in a pop-up together with the deviation from the last calibration. Press *Yes* to accept and use the new sensitivity and save it in the calibration history. Press *No* to disregard the new calibration and continue with the old calibration.

If the calibration deviates more than  $\pm 1.5$  dB from the initial calibration (microphones only), then the calibration is stopped without changing the calibration of the instrument.

The traffic light will indicate a fast flashing red and an error description will appear in the status field.


**Hint:** If the microphone is separated from the analyzer using a microphone extension cable then place the analyzer so it can be seen from the location of the microphone. Start the calibration process (select the **Calibration** screen and tap the **Start** button on the screen), then go to the microphone and fit the Calibrator onto the microphone, switch on the Calibrator and monitor the traffic light on the the analyzer, as discussed previously.

- 8) Once you have completed the calibration, tap the **Exit** button and remove the calibrator. It will automatically switch off after a few seconds.


### 4.3.2 Calibration Settings

Select the *Details* tab on the **Calibration** screen to view the calibration details, see Fig.4.2.

**Fig. 4.2**  
*Calibration details screen*

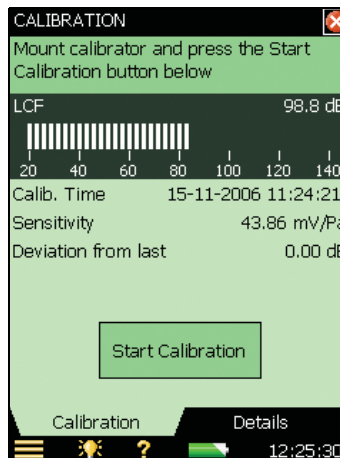

This screen displays the following information:

- Details of the last calibration: date, sensitivity, deviation from last calibration and deviation from initial calibration
  - The connected transducer: type and serial number
- Note:** you select a new transducer by tapping on the Main Menu icon  and selecting **Setup**, followed by *Input*)
- *Max. Input Level*: the maximum sinusoidal input level to be measured without overload indication
  - *A Calibration History* link: which is provided to enable you to view a history of transducer and calibration settings, see below

The calibration settings can be adjusted as follows:

- *Calibrator*: select between Type 4231 and a custom calibrator

- *Calibration Level*: type in the specific level of your custom calibrator. If you are using Type 4231 calibrator, and the microphone being used is connected to the top socket, then the level of the calibrator is automatically detected (shown as *Auto detect* on the screen)

**Note:** The *Auto detect* setting enables the calibration process to automatically detect the calibration level. For free-field types of microphones (like Types 4189 and 4190) the calibration level from a Type 4231 Calibrator is either 93.85 dB or 113.85 dB. For diffuse or pressure field types, the calibration level is either 94 dB or 114 dB. The calibration process automatically determines the correct level

- *Calibrator Serial Number*: type in the serial number for your calibrator. The calibrator will be documented in the calibration history

## 4.4 Vibration Calibration

To calibrate an accelerometer use Calibration Exciter Type 4294. It provides a stable acceleration of  $10 \text{ m/s}^2$  at 159 Hz. The procedure is very similar to the Standard Calibration procedure for Sound Calibration described above; however, follow the procedure for mounting the accelerometer to the exciter as described in the user manual for Type 4294.

## 4.5 Electrical Calibration



To calibrate the Direct input use a stable sinusoidal voltage at a frequency between 150 Hz and 10 kHz. The procedure is very similar to the Standard Calibration procedure for Sound Calibration described above; however, without the transducer mounting procedure.

## 4.6 Manual Calibration

If no calibrator is available (or a known amplification is introduced, i.e., by analyzing a tape recorded signal) then you can type the sensitivity directly into the *Sensitivity* field. The analyzer will be regarded as un-calibrated and the text '*Uncal.*' will appear in the status field.

## 4.7 Calibration History

You select the calibration history by tapping on the *Calibration History* link on the Calibration Details screen, see Fig.4.2.

The analyzer saves the last 20 calibrations, plus the initial calibration, which can be viewed on the *Calibration History* screen, see Fig.4.3. When you have finished, tap  to return to the calibration details screen and then tap  again to return to the measurement screen.

**Fig. 4.3**  
*Calibration History*  
screen

CALIBRATION HISTORY	
Transducer:	4189 (1234567)
Used at Top Socket	
Date	Deviation
+ 15-11-2006 11:24	0.00 dB
- 26-10-2006 10:15	1.14 dB
Time	26-10-2006 10:15:32
Sensitivity	50.00 mV/Pa
Preamplifier	
User	2250
Input	Top Socket
Calibration Type	Manually adjusted
Calibrator	
Comment	

## 4.8 Transducer Database

The specifications for Microphone Types 4189 and 4190 (and Preamplifier ZC-0032), which come fitted in the top socket of the analyzer, are described in a transducer database.

- 1) Select the Transducer Database by tapping the Main Menu icon and choosing **Transducers** from the list of options. The screen shown in Fig.4.4 will appear.


**Fig. 4.4**  
*Transducer Database*  
screen

TRANSDUCERS	
Transd. used	4189 (1234567)
Top Socket	
+ 4189 (1234567)	

- 2) Tap the transducer name/number, or select the plus icon next to name/number, to view the details in the database, see Fig.4.5.

**Fig. 4.5**  
Details in the  
Transducer Database

TRANSUCERS	
Transd. used	4189 (1234567)
	Top Socket
- 4189 (1234567)	
Serial No.	1234567
Name	4189
Description	Prepolarized 1/2"
Preamplifier ID No.	1234
Family	Microphone
Microphone Type	4189
Nominal Sensitivity	50.0 mV/Pa
Polarization Voltage	No
Free-field	Yes
Capacitance	13.0 pF
CCLD	No

All the details for the currently selected microphone can be found in the database. You can add other transducers by tapping on the Add New Transducer icon , selecting Microphone, Accelerometer or Direct input from the drop-down, and filling in the details of your particular transducer parameters. See section C.2.1. This is done by selecting the item from the drop-down list that appears on some parameter fields, or by entering the data via the keyboard that appears on other parameter fields.

A number of parameters are set automatically for a known microphone type, such as Type 4189.


**Note 1:** If the transducer is a microphone and the microphone type is known to the analyzer (as in the example in Fig.4.5, where Type 4189 details are known), then the parameters *Nominal Sensitivity*, *Polarization Voltage*, *Free-field*, *Capacitance* and *CCLD* are set automatically. See details in Appendix C. The analyzer can then make sound field correction and windscreen correction as specified in the setup. To confirm which type of correction is being applied, an icon is displayed in the measurement Status field, as described on section 5.4.2. If the microphone is unknown to the analyzer, no corrections can be made and no icon appears in the Status field. The parameters mentioned above have to be set manually (i.e., typed in). We recommend that you insert the value for Nominal Sensitivity directly from the calibration chart. Nominal Sensitivity is used in the automatic level detection calculations, when calibrating using the Type 4231 Calibrator, to determine whether the level is 94 or 114 dB.

**Note 2:** If the transducer is an accelerometer and the accelerometer type is known to the analyzer, then the parameters *Nominal Sensitivity*, *CCLD* and *Weight* are set automatically.


In the top line of the status field you can select which transducer is currently connected to the analyzer. This can also be done via the **Setup** screen by selecting *Input*, then selecting the transducer in the *Transducer Used:* field.

In the first line of the status field you can select whether the transducer is connected to the top socket or the rear socket of the analyzer. This can also be done via the **Setup** screen by selecting *Input*, then selecting the socket in the *Input:* field.


For Type 2270 only: In the second line you also have a Channel Selector.

To change which input the transducer uses to connect to the analyzer, tap the Main Menu icon  and select **Setup** from the list, next tap the *Input* value field and finally, choose the required input from the drop-down list: *Top socket* or *Rear Socket* (*Rear Socket* refers to the **Input** socket on the connector panel of the analyzer).

At the bottom of the parameter list you can select the calibration history for the currently selected transducer by tapping on the *Calibration History* link. See section 4.7 and Fig.4.2.

You can delete a transducer by tapping on the Delete Transducer icon  and selecting the transducer to delete from the drop-down that appears.


**Note:** Only transducers that are not connected can be deleted. The calibration history will also be deleted.

When you have finished, tap  to return to the measurement screen.

## 4.9 Calibration Reminder

The Calibration *Reminder* tab, see Fig.4.6, allows you to keep track of when you need to run your next Accredited/Traceable calibration, and shows you the date of your last calibration.

**Fig. 4.6**  
Calibration Reminder tab

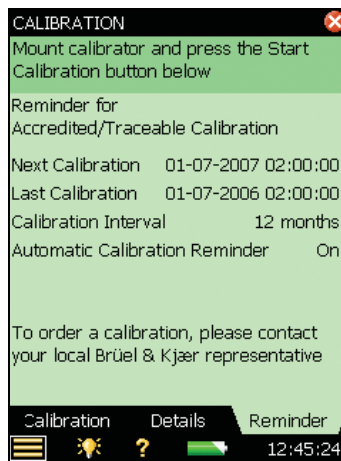


The automatic calibration reminder facility will pop-up a reminder approximately 2 months before your next calibration and keep on reminding you every week until you do one of the following actions:

- Send your instrument for Accredited/Traceable Calibration and update the *Last Calibration* date
- Check the 'Do not ask/remind again' checkbox in the reminder pop-up
- Disable the automatic calibration reminder

An example of a reminder pop-up is shown in Fig.4.7:

**Fig. 4.7**  
Reminder pop-up

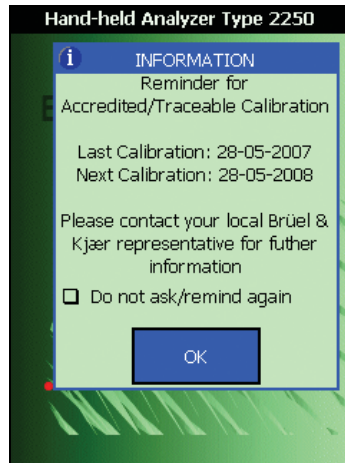

You can set the *Calibration Interval* parameter to either *12 months* or *24 months* depending on your local requirements.

You can disable the facility by selecting the *Automatic Calibration Reminder* parameter to *Off*.

## 4.10 Charge Injection Calibration

### 4.10.1 Theory of CIC

If an external sound source is not available, for example during short or long term monitoring, you can check the calibration of the analyzer using the Charge Injection Calibration (CIC) facility. This is done automatically during a logging measurement (see section 11.2 and section 12.2). Unlike an internal calibration, the Brüel & Kjær patented CIC technique enables a complete measurement chain to be verified, including the microphone, preamplifier, cabling and analyzer. Each verification measurement is compared to an initial reference measurement.


As the name implies, the CIC method injects an internally generated charge into the microphone and preamplifier input circuit, and the ratio between the measured signal and the injected signal is measured (CIC Ratio), see Fig.4.8.

This method is based on the detection of changes in impedance at the input terminal. It was developed for monitoring of microphone channels and requires a preamplifier with a small, extremely stable built-in capacitor, which enables the application of an electrical signal to a preamplifier (and microphone) input terminal.

A stable CIC Ratio means a 'healthy' system and assures stable operation of the microphone, cable, preamplifier and remaining measurement system.




**Fig. 4.8** *Charge Injection Calibration. Low-leakage resistance capacitor  $C_c$  is set in parallel with the microphone and fed with voltage  $e_i$ . The ratio  $e_o/e_i$  is constant when  $g$ ,  $C_c$ ,  $C_m$  and  $C_i$  are constant. Changes to preamplifier gain ( $g$ ), cable parameters, microphone capacitance ( $C_m$ ), etc., will change  $e_o/e_i$  and, hence, indicate probable changes in calibration*

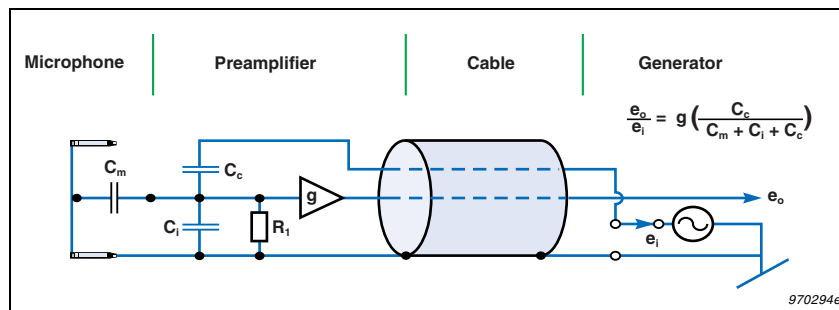

#### 4.10.2 Performing a Manual CIC Calibration with your Type 2250/2270

CIC is only available for microphones connected to the Top Socket of the Analyzer and with Logging Software BZ-7224 and Enhanced Logging Software BZ-7225.

Tap the Main Menu icon  and select **Calibration** from the list. Click the *CIC* tab to view the various CIC parameters that are available. The available parameters will include the results of the latest manual CIC, together with the reference, see Fig.4.9.

The status field at the top of the screen informs you how to perform the CIC.

Press the **Start CIC** button to start the CIC. After approx. 10 secs you will see the result.


Normally, the *CIC Reference Ratio* is set the very first time a CIC is performed, however, you should update the *CIC Reference Ratio* if you change the microphone preamplifier. You do this by checking the *Use as new Reference* checkbox.

The *CIC Reference Ratio* and *CIC Ref. Date* parameters display the results of the very first manual CIC, and this will be used as the 'reference' for all subsequent CIC Ratio measurements.

**Note:** Each microphone in the transducer database has a CIC Reference Ratio.

If the *CIC Ratio* parameter deviates by more than 0.5 dB from the *CIC Reference Ratio*, there may be a problem, and it should be investigated, see page 36.

**Fig. 4.9**  
CIC tab

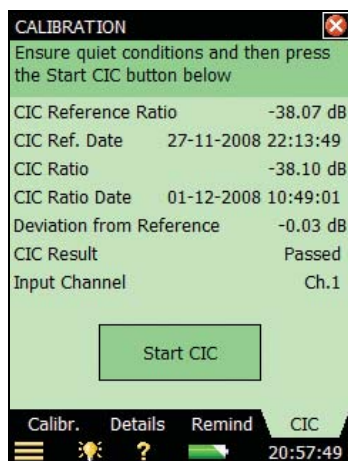

The result of the Charge Injection Calibration consists of four parameters:

- CIC Ratio
- CIC Ratio Date
- Deviation from Reference
- CIC Result

The CIC result can be either 'Passed', 'Background noise too high' or 'CIC Ratio deviates from Ref.'

# Chapter 5

## Getting to Know Your Analyzer

### 5.1 What is a Sound Level Meter?

A Sound Level Meter (SLM) is an instrument that is designed to measure sound levels in a standardised way. A sound level meter comprises a microphone, a preamplifier, a main processor and a read-out unit.

The microphone converts the sound signal into an equivalent electric signal. The electric signal that the microphone creates is at a very low level, so it is made stronger with the help of a preamplifier before it is processed by the main processor.

Processing includes applying frequency and time weightings to the signal as specified by international standards, such as IEC 61672-1, to which Type 2250 and Type 2270 conform.

**Frequency weighting** adjusts how the sound level meter responds to different sound frequencies. This is necessary because the human ear's sensitivity to sound varies according to the sound's frequency. The most commonly used frequency weighting is A-weighting, which adjusts a signal in a way that best resembles the human ear's response at medium-range levels. It is the weighting required for nearly all environmental and workplace noise measurements, and is specified in international and national standards and guidelines. All of the analyzer's measurement parameters apply A- or B-weighting and a choice of C- or Z-weighting, except for the measurement of peak levels where a single weighting (typically the 'C' frequency weighting) is applied. In this case, C-weighting is used to take into account the energy present at low frequencies even when they are not particularly annoying.

**Time weighting** specifies how the sound level meter reacts to changes in sound pressure. It is an exponential averaging of the fluctuating signal, providing an easy-to-read value. The analyzer applies the Fast, Slow and Impulse (or 'F', 'S' and 'I') time weightings, which are the required weightings according to the vast majority of international and national standards and guidelines.

Once the signal is processed through the weighting filters, the resulting sound pressure level is displayed in decibels (dB) referenced to 20  $\mu\text{Pa}$  on the instrument's screen. In the analyzer, the sound pressure level values are updated at least once per second.

Assessing a fluctuating noise level means getting a value for a level that is, in simple terms, the average level. The 'equivalent continuous sound level',  $L_{eq}$ , is known around the world as the essential averaged parameter.  $L_{eq}$  is the level that, had it been a steady level during the

measurement period, would represent the amount of energy present in the measured, fluctuating sound pressure level. It is a measure of the averaged energy in a varying sound level. It is not a direct measure of annoyance, though extensive research has shown that  $L_{eq}$  correlates well with annoyance.

$L_{eq}$  is measured directly with a hand-held analyzer, such as the analyzer running Sound Level Meter Software BZ-7222. If an A-weighting filter is used, it is expressed as  $L_{Aeq}$ , defined as *the measurement of the equivalent continuous sound level using the A-weighted filter network*.

A full range of measurement parameters is given in Appendix B.

## 5.2 What is the Hand-held Analyzer?

The hand-held analyzer is a versatile hardware platform suitable for covering a wide range of different applications. Together with Sound Level Meter Software BZ-7222, it is a Class 1 modular precision integrating-averaging sound level analyzer with an easy to use interface for quick and simple measurement setups.

### 5.2.1 Sound Level Meter Software Module BZ-7222

Sound Level Meter Software BZ-7222 allows you to measure a comprehensive set of parameters used for rating noise in terms of its impact on the environmental and working environments and on occupational noise evaluation.

The more commonly used parameters, which cover a large range of applications, are either instantaneous measured parameters (available at any time) or timed measured parameters (measured within a controlled time interval):

#### Timed Measured Parameters

- Equivalent Continuous Sound Levels ( $L_{eq}$  – example:  $L_{Aeq}$ )
- Peak Sound Levels ( $L_{peak}$  – example:  $L_{Cpeak}$ )
- Time for Peak Sound Level (example:  $T_{Cpeak}$ )
- Maximum Time-weighted Sound Levels ( $L_{max}$  – example:  $L_{AFmax}$ )
- Minimum Time-weighted Sound Levels ( $L_{min}$  – example:  $L_{AFmin}$ )
- Percentile Levels ( $L_N$  – example:  $L_{AF90,0}$ )
- Sound Exposure Level (example:  $L_{AE}$ )
- Sound Exposure (example:  $E$ )
- Daily Noise Exposure Levels (example:  $L_{ep,d}$  or  $L_{EX,8h}$ )
- Noise Dose (example: based on ISO standards: Dose, based on US standards: DoseS5)
- Number of Peaks (example:  $\#Cpeaks(>140\text{ dB})$ )
- Time Weighted Average (example: TWA)
- Level Average with Exchange Rates 4, 5 or 6 (example:  $L_{avS5}$ )

### Instantaneous Measured Parameters

- Instantaneous Time-weighted Sound Levels ( $L_p$  – example:  $L_{AF}$ )
- Sound Pressure Levels (max levels once per second – example:  $L_{AF}(SPL)$ )
- Instantaneous Peak Sound Levels (example:  $L_{Cpeak,1s}$ )

**Note:** See Appendix B for a comprehensive list of all parameters.

Sound Level Meter software BZ-7222 incorporates a simple user interface which is easy to learn and uses intuitive data storage and recall. Comprehensive security features means no loss of data, even on accidental power-off. Smart features are built-in for field use, for example, allowing you to personalise your measurements. Sound Level Meter software BZ-7222 also provides connectivity between your PC and other sound analysis software.

This highly versatile hand-held analyzer platform includes a range of optional software modules, that are enabled through easily activated software license keys. The combination of software modules and innovative hardware makes the instrument a dedicated solution for performing all your high-precision measurement tasks. The following optional software module is covered in this manual:

## 5.2.2 Frequency Analysis Software Module BZ-7223

This software module allows real-time frequency measurements in 1/1- and 1/3-octave bands, making it a simple matter to, for example, select suitable hearing protection, qualify noise from heat and ventilation systems and assess tonality.

## 5.2.3 Logging Software Module BZ-7224

This software module allows logging of broadband and spectral data<sup>a</sup> to obtain a time history for later analysis, for example, for use in environmental noise as well as workplace noise assessment. It allows free selection of up to 10 parameters to log at periods from 1 s to 24 h. Results are logged directly to CF or SD memory cards.

## 5.2.4 Enhanced Logging Software Module BZ-7225

This software module is optimised for long-term monitoring. It has the functionality of the Logging and Frequency Analysis software, and in addition it can measure continuously, save data in manageable portions (every 24 hours), make periodic reports (i.e., every hour) and measure  $L_{dn}$  and  $L_{den}$ , etc.

## 5.2.5 Sound Recording Option BZ-7226

This option allows recording of sound during measurement. The sound recording can be controlled manually or by using an external trigger signal. The recording can also be triggered when a measured parameter exceeds a preset level (BZ-7224 and BZ-7225 only). The recorded sound can be played back and listened to using the supplied earphones, HT-0015. Sound is recorded directly to CF or SD memory cards.

---

a. Requires Frequency Analysis Software BZ-7223






### 5.2.6 Reverberation Time Software BZ-7227


This software module allows measurement of reverberation time using Impulsive excitation and backwards integration of the impulse, or using Interrupted Noise from the built-in noise generator. Measurements can be made in a number of positions in the room and the average reverberation time for the room is calculated.

### 5.2.7 Tone Assessment Option BZ-7231

This option allows the assessment of tones on-site, according to selected methods. The option described in this manual is based on the 1/3-octave method. (Please refer to User Manual BE 1778 for detailed information about tone assessment based on FFT spectra.) When used with BZ-7223 Frequency Analysis, BZ-7224 Logging and BZ-7225 Enhanced logging, it allows you to assess tones in a measured 1/3-octave spectrum according to ISO 1996:2007, Annex D, or, assess tones in a measured 1/3-octave spectrum according to Italian Law, “Ministero dell’ambiente, Decreto 16 marzo 1998”.

### 5.2.8 Built-in Help

If you need more detailed information at any time during operation, tap the Help icon  on the instrument’s screen. The resulting screen will explain that particular item in much more detail. You can scroll up and down the explanatory text using either the  and  pushbuttons, or the scrollbar  on the screen. Return to the normal display screen by tapping .

If you need to view any of the previous 10 screens you have visited in the help system, tap the  icon at the top of the display.

#### Software and Hardware Versions

Once in the help system, you can access the list of installed software versions and licenses, together with information about the hardware. This information is always available and is accessed by selecting **About** from the top of the display.

## 5.3 What is Utility Software for Hand-held Analyzers BZ-5503?

Utility Software for Hand-held Analyzers BZ-5503 functions as the link between the analyzer and reporting software on a PC, such as Noise Explorer Type 7815, Evaluator Type 7820/21, Protector Type 7825 or Qualifier Light Type 7831.

The software enables you to do the following:


- Setup or control the analyzer from a PC
- Retrieve data from the analyzer
- Manage and archive data from the analyzer
- View data in archives
- Export data to Type 7815, Type 7820, Type 7825, Type 7831 or Microsoft® Excel

- Update the software in the analyzer
- Install license for use of software modules in the analyzer

Utility Software for Hand-held analyzer BZ-5503 is supplied on the Environmental Software DVD (BZ-5298), which is included with your analyzer.


## 5.4 Basic Principles when using the Analyzer

### 5.4.1 Navigation Principles – ‘Star’ Navigation Concept

The main principle is that all the main menus are accessible via a single tap of the stylus. The Main Menu icon  forms the centre of the ‘star’ navigation concept, see Fig.5.1.

**Fig.5.1** The 'Star' navigation concept




This configuration gives you immediate access to screens you need most, i.e., those you will need to perform, save and document your measurements. The Main Menu  allows you to navigate to the following screens:


- Explorer
- Setup
- Preferences
- Transducers
- Calibration
- Add Note to Current Measurement
- Add Image to Current Measurement (Type 2270 only)
- Template Explorer
- Timer Setup

In addition, the Main Menu  also allows you to perform the following actions:

- Lock Keys and Screen
- Log Off


## Explorer



The **Explorer** screen is accessed from the Main Menu or by tapping on the Project name, and gives you access to the instrument's Data/Project manager. This allows you to view the overall project structure, including job folders and projects, and to view all the individual measurements. When you have finished, tap  to return to the measurement screen.

You can tap any measurement file to view the saved measurement and if there are any voice text or image annotations attached, these can be viewed by tapping the paperclip icon visible next to all measurement files with attachments. When you have finished reading, listening or viewing the attachments, tap  to return to the **Explorer** screen.

## Setup


The **Setup** screen is accessed from the Main Menu and gives you access to the various setup parameters, such as frequency weightings, control of the measurement, bandwidth, statistics and the type of input currently connected. You can change these as required, see section 5.4.6.

The *Full* tab at the bottom of the screen allows you to view the complete list of setup parameters, while the *Quick* tab allows you to access the more frequently used parameters defined by yourself. When you have finished viewing or updating the parameters, tap  to return to the measurement screen.


Changes made to the setup will only be applied temporarily, i.e., until you select another project template or open another project to re-use the setup from that project. However, if you want the setup changes to be saved in the current template, select the **Template Explorer** option from the Main Menu  and tap the Save icon .


**Note:** If you make changes to the setup that you do not want to keep (and you have not yet saved the template), you can undo them by selecting the template again from the Project Template bar at the top of the screen.

## Preferences


The **Preferences** screen is accessed from the Main Menu and gives you access to the instrument's preferences (if Multi User is disabled) or your own preferences (if Multi User is enabled). These include things such as regional settings, appearance of the screen, power management, user profiles and language. You can change these as required, see section 5.4.6. For more information refer to section 8.1. When you have finished viewing or updating the parameters, press  to return to the measurement screen.


## Transducers

The **Transducers** screen is accessed from the Main Menu, you can view/set which transducer is connected to the instrument and add new ones if required. Details can be changed for existing transducers or entered for new ones, see section 5.4.6. When you have finished viewing or updating the details, tap  to return to the measurement screen.


When a transducer is selected, you can tap the *Calibration History* link at the bottom of the transducer details and open the *Calibration History* screen, see Fig.5.1. This screen includes the calibration history for the transducer (i.e., microphone) that is currently selected. When you have finished viewing or updating the details, tap  to return to the **Transducers** screen.

## Calibration


The **Calibration** screen is accessed from the Main Menu, and gives you access to the instrument's calibration procedure. To calibrate the instrument, follow the instructions in the status field. For more information refer to section 4.2. When you have finished calibrating or viewing the details, tap  to return to the measurement screen.

The *Calibration* tab at the bottom of the calibration screen allows you to perform and monitor the calibration, while the *Details* tab allows you to view the details of the calibration and the calibrator that are being used to calibrate the instrument. While you are viewing the *Details* tab, you can tap the *Calibration History* link at the bottom of the calibration details and open the *Calibration History* screen, see Fig.5.1. This screen includes the calibration history for the currently selected transducer, tap  to return to the *Calibration* screen.


## Add Note to Current Measurement

The *Notes* screen is accessed from the Main Menu by selecting **Add Note to Current Measurement**. This screen allows you to create a text annotation that you can attach to your measurement. Text is inserted using a character keyboard, similar to the one covered in section 5.4.6. When you have finished, tap  to return to the measurement screen.


## Add Image to Current Measurement (Type 2270 only)

The View Finder screen is accessed from the Main Menu by selecting **Add Image to Current Measurement**. This screen allows you to capture an image that you can attach to your measurement – see Chapter 3. When you have finished, tap  to return to the measurement screen.

### Template Explorer

The *Template Explorer* is accessed from the Main Menu and gives you access to managing your project templates. When you have finished, tap  to return to the measurement screen.

### Timer Setup

The *Timer Setup* is accessed from the Main Menu and enables you to control the analyzer via one or more of the analyzer's timers. The purpose of a timer is to initiate measurements in the absence of an operator. When you have finished, tap  to return to the measurement screen.


## 5.4.2 The Display Screen

During normal operation, you will use the display screen to view your measurements and carry out a variety of functions, which are described in the following sections.

**CAUTION:** The touch-sensitive screen is susceptible to damage from sharp objects, such as pencils, fingernails, etc. We therefore recommend you use the stylus provided to activate items on screen. See also section 5.4.5.

A typical screen is shown in Fig. 5.2.


**Fig. 5.2**  
*Typical screen when making a measurement*

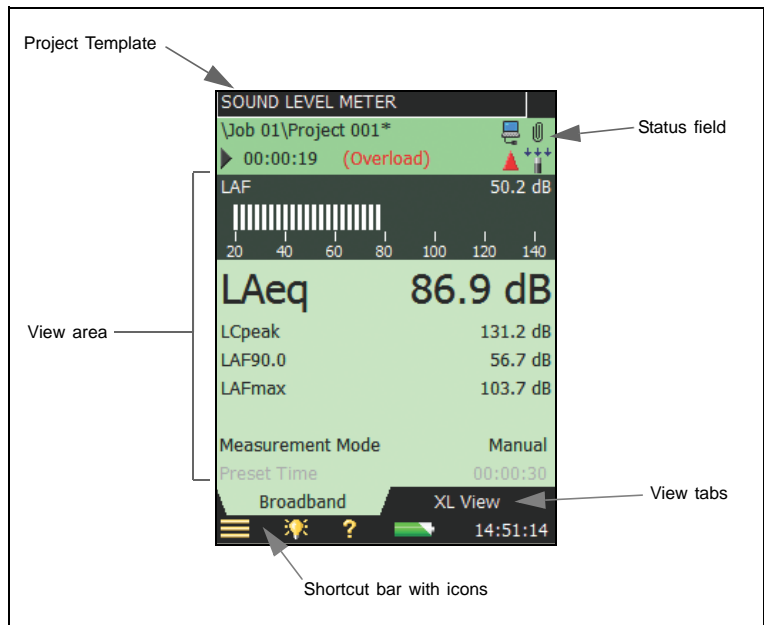

The main areas, starting at the top of the screen, are:

- Project Template
- Status Field
- View Area (with View tabs)
- Shortcut Bar







## Project Template Bar

This bar displays the name of the Project Template, which contains all the screen settings and measurement setup for the current project. Tap the text to open the Template Explorer screen containing all the available templates. If you make any changes to the setup in a template an '\*' will appear next to the template name to indicate that the new settings have not been saved. Tap the Save icon  in the Template Explorer to save the settings in the current template.















## Status Field

The area just below the Project Template bar is called the Status field. Depending on the template, this field displays status information using up to three lines of text, as follows:

### First Line:

- Path and name of the current project. (section 6.1.1) Tap it to open the Explorer. To change the path, navigate to the desired job (path) and tap the  icon to save this path as the default measurement path. As in the project template, an '\*' will appear next to the project name to indicate that the project has not been saved. Press the **Save** pushbutton  if you want to save the measurement or changed settings.
- Smiley (if applicable)
- The PC icon  indicates connection to a PC
- The commentary icon  indicates when a spoken commentary is being recorded, together with an indication of the available recording time
- The recording icon  indicates when the measurement signal is being recorded
- A paperclip icon  indicates that a spoken or written comment is attached to the project. Tap the icon to view, or listen to, the comment

### Second Line:


- Measurement state represented as icons: Stopped , Running  and the Pause icon 
- Elapsed time of the measurement
- Feedback on the action of pressing the following pushbuttons: **Reset** , **Back-erase** , **Start/Pause**  and **Save** 
- Indication that the measurement microphone is uncalibrated. In this case the word *Uncal.* appears in the Status Field
- When a microphone has been selected as input, then four icons are used to represent whether, or not, the windscreen is fitted and whether you are measuring in a free-field or diffuse field. For example, no windscreen fitted, measuring in a free-field – ; no windscreen fitted, measuring in a diffuse field – ; windscreen fitted, measuring in a free-field – ; windscreen fitted, measuring in a diffuse field – . An accelerometer icon  is displayed if an Accelerometer is selected as input, and an input socket icon  is displayed if Direct input is selected. For Type 2270, two icons are displayed - one for Ch. 1 and one for Ch. 2. If only one channel is used, then no icon is displayed for the unused channel
- Immediate textual feedback on overload situation and latched overload indicated with an overload icon 

### Third Line:

- Used for Logging and Enhanced Logging, see section 11.3.1, **or** used for Reverberation Time, see section 14.3.1

### Central View Area


The Central View Area contains the screens required for a particular measurement, such as bar graphs, result readouts and various frequently used setup parameters (e.g., *Meas. mode*). The template defines the content of this area. More than one screen can be used for displaying the information. Select the screen using the View Tabs at the bottom of the View area.


Changes made to the screens will only be applied temporarily, i.e., until you select another project template or open another project to re-use the screen from that project. However, if you want the screen changes to be saved in the current template, tap the **Project Template** bar at the top of the screen to open the Template Explorer and tap the Save icon .


**Note:** If you make changes to the screen that you do not want to keep (and you have not yet saved the template), you can undo them by selecting the template again from the Project Template bar at the top of the screen.



### Shortcut Bar

The Shortcut Bar, at the bottom of the screen, displays a number of fixed icons that are always accessible. These include:

Main Menu icon , giving access to the Main Menu. This allows you to navigate to a specific function, see description earlier under Navigation Principles

Backlight icon , allows you to select a backlight level

Help icon , a quick way to get context-sensitive help from any screen by tapping on the icon at the bottom. Closing the help window will return you to the previous screen




Battery/power status icon , shows the condition of the battery. All green shows a fully charged battery, while red means power levels are low. Tap the icon to get more details of the battery condition. (When the Power Supply lead is connected, the  icon will be displayed in place of the battery icon.)

The clock in the lower right corner displays the current time. Tap the readout to get details of the time and date, or to set the clock.


## 5.4.3 Use of Pushbuttons for Controlling Measurements

The design of the analyzer is such that the layout of the pushbuttons has been optimised for single-handed operation.

### Reset Pushbutton

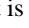Use the **Reset** pushbutton  to reset a measurement, i.e., to reset all detectors, averagers, maximum and minimum hold, etc. If the measurement is paused (i.e., Pause icon  is displayed in the status field), then the measurement reverts to a 'stopped' state after a reset, (i.e., stopped icon  displayed with a zeroed readout). If the measurement is running, then the measurement will be automatically re-started after the reset.


### Start/Pause Pushbutton

Use the **Start/Pause** pushbutton  for controlling the measurement. The function of this key depends on the current measurement state, see Table 5.1.

**Table 5.1**  
*Start/Pause  
pushbutton functions*

Current Measurement State	Function of Start/Pause Pushbutton	Next Measurement State
■ Stopped	Start the measurement	▶ Running
▶ Running	Pause the measurement	Pause
Pause	Continue the measurement	▶ Running


### Save Pushbutton

Use the **Save** pushbutton  to save the measurement data together with the current project template (including all the screen settings and setup information) and the calibration documentation.

Pressing **Save** will affect the pause and running states. In both cases the measurement state will be 'stopped' shortly after pressing the pushbutton (stopped icon ■ displayed).


### Back-erase Pushbutton

#### For BZ-7222 and BZ-7223 Software:

Use the **Back-erase** pushbutton  to erase the last 5 seconds completely from the measurement. (This includes, of course, overload indications you would like to erase.)

If used when the current measurement is running, then the measurement will be paused. The status field displays *Pause*, *Back erase* briefly, and then displays the shortened elapsed time along with the Pause icon ||.

#### For BZ-7224 and BZ-7225 Software:

Pressing the **Back-erase** pushbutton  will start drawing an Exclude Marker on the display, see section 11.3.2. Pressing it again will stop drawing the marker on the display (toggle function).

## 5.4.4 On-screen Feedback and Traffic Light

Feedback is given on screen in the Status Field, see Fig.5.2, and the Traffic Light indicates important states of the instrument, see Table 5.2.

## 5.4.5 Use of Stylus and Navigation Pushbuttons

The stylus and navigation pushbuttons are used for setting up the analyzer, navigating through the screens and managing the results.

A number of items that appear on the screen (parameter values or icons) can be selected, updated and activated. For instance, a new parameter value can be selected from a drop-down list.

**Table 5.2**  
*Traffic Light*  
*Indications*

State	Light Scheme
During power-on or loading template	Nothing
■ Stopped. Ready to measure	Short yellow flash every 5 s
▶ Awaiting trigger, searching for calibration signal	Short green flash every second
▶ Running measurement, everything OK	Steady green light
Pause. Measurement not saved	Slow yellow flash on 1/2 s, off 1/2 s
▲ Overload	Fast red flash

The selection and activation of items on the screen can be done in two ways:

- Tapping once on the item on the screen will select and activate it, or
- Moving the field selector around using the navigation keys until the item you want is highlighted, then pressing the **Accept** pushbutton (✓) to activate it


You can choose to use the stylus or the pushbuttons, depending on your preference and the measurement situation. For instance, if the amount of noise generated by the instrument needs to be kept to an absolute minimum, consider using the pushbuttons rather than the stylus – this is because tapping of the stylus on the touch-sensitive screen may create extra noise. However, if speed is of major importance, the stylus can navigate through the setup and measurement screens quicker.

Throughout the manual we have described how to perform the measurement procedures using the stylus only, but you may also use the alternative method (using the Navigation and Accept pushbuttons) if you prefer.

### 5.4.6 How to Change Parameter Values

Most parameter values are changed by selecting a new value from a drop-down list, which appears when the parameter field is selected. See the example in Fig. 5.3.

**Fig. 5.3**  
Changing parameter  
values

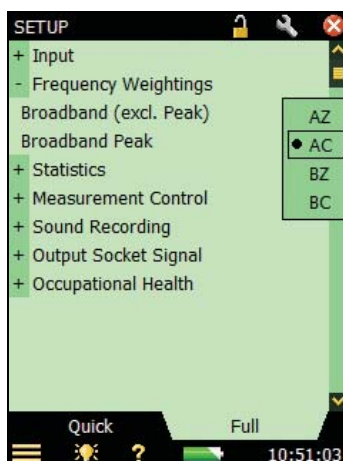

### Stylus Usage

Tap the value you want in the drop-down, or tap outside the list to cancel the selection.

### Pushbutton Usage

Use the navigation pushbuttons (up arrow  $\blacktriangle$ , or down arrow  $\blacktriangledown$ ) to select the value you want and press the **Accept** pushbutton (✓) to activate it. Use the left arrow  $\blacktriangleleft$  to cancel the selection.

### Number Keyboard

When activating a number, a number keyboard appears, see Fig. 5.4.

**Fig. 5.4**  
Number keyboard as it  
appears on the screen






Tap the digits or use up arrow ▲ /down arrow ▼ to increment/decrement the number. Use left arrow ◀ /right arrow ▶ to select other digits if necessary. Press the **Accept** pushbutton (✓) or tap the (✓) button on the screen to enter the number for the parameter. Tap the (X) button on the screen, or outside the number keyboard to cancel the change of value.

### Character Keyboard

When activating a text value, a standard full character keyboard appears on the screen, see Fig.5.5.

**Fig.5.5**  
*Character keyboard as it appears on the screen*

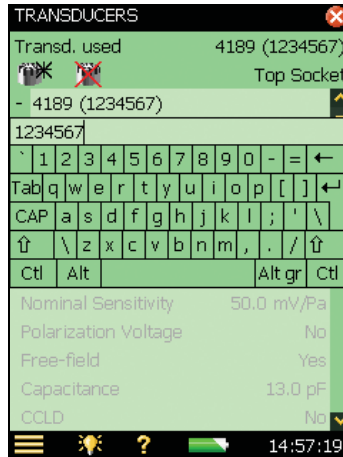

The character keyboard has all the functionality of a normal keyboard, enter text as required by tapping the individual keys with the stylus. Tap the Enter key (↵) to accept the changes, or tap outside the keyboard to cancel.


### 5.4.7 How to Personalise your Setup


Setup contains all the settings for the measurement and some settings for post-processing.

Select **Setup** from the Main Menu (☰), and the Setup screen appears, see Fig.5.6.

**Fig. 5.6**


The Setup screen –  
Edit Mode

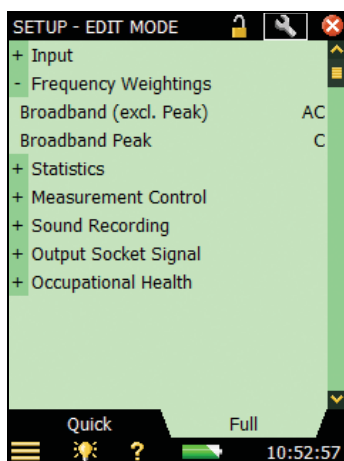

The *Full* tab at the bottom of the screen allows you to view the complete list of setup parameters, while the *Quick* tab allows you to access the more frequently used parameters defined by yourself. Press the Edit icon  on top of the screen to enter Edit mode.

This mode allows you to copy parameters from the Full View to the Quick View simply by tapping on the parameters in the Full View – and to remove parameters from the Quick View by tapping on the parameters in the Quick View.


When you have finished, tap the Edit icon again to exit Edit mode.

Setup settings can be protected from accidental changes by tapping the padlock icon  on the top of the screen. This will also protect the template from being deleted or renamed.

When locking the template you get the option of password protecting the lock. If you choose this, then you enter a password (see Fig.5.7).

**Fig. 5.7**

Password protecting  
a template

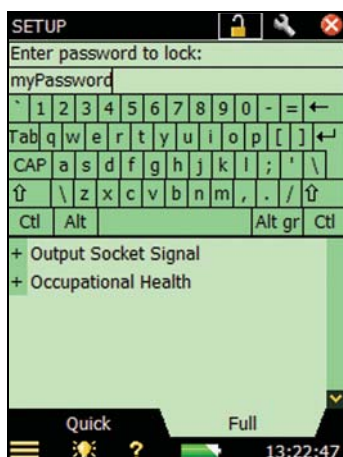

The password must consist of minimum two characters and/or digits. Note: the password is case sensitive.


To unlock the setup settings and template, tap the padlock icon again. If the lock is password protected, you must enter the password.

**Note:** It is important to remember the password; the template cannot be unlocked without the password.


The only way of overwriting a locked template is to re-install the software using BZ-5503. The default templates will be overwritten by a standard installation. New or renamed templates will be deleted, if you install using the option "Install and reset settings to default"..

### 5.4.8 How to Manage the Project Templates


The Project Templates containing all the display and measurement settings required to perform a measurement are selected in the Project Template Bar at the top of the display screen, see Fig.5.2.


You can save changes to the project template, create new templates, rename templates or delete templates from the Template Explorer screen. Select **Template Explorer** by tapping on the **Project Template Bar** at the top of the screen or from the Main Menu , and the screen shown in Fig. 5.8 will appear.

**Fig. 5.8**  
*Template Explorer*

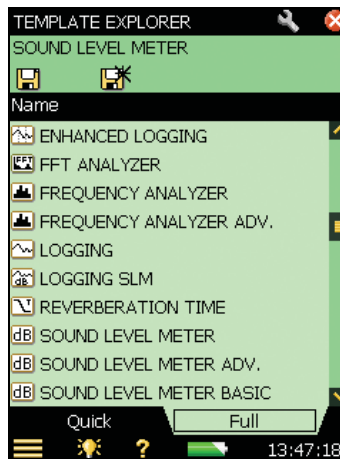


The topmost line in the status area (SOUND LEVEL METER in Fig.5.8) contains the name of the current template. If you make any changes to the settings in the current template, an '\*' will appear next to the template name to indicate that the new settings have not been saved.

The next line contains icons for saving the settings. Tap the Save icon  to save the settings in the current template.

Tap the Save As icon  to save the settings in a new template. Use the keyboard that pops up to define the name of the template.

The rest of the screen is used for listing the defined templates with an icon, a template name and possibly an annotation icon (paper clip):

- 1) Tap the template icon to open and use the template.
- 2) Tap the template name to get a drop-down list with the options:
  - Open (open and use the selected template)
  - Clone (create a copy of the selected template)
  - Delete (delete the selected template)
  - Rename (rename the selected template)
  - Add Note (or commentary) to the template
  - View Annotations on the template
- 3) Tap the annotation icon to get the list of annotations attached to the project.

The *Full* tab at the bottom of the screen allows you to view the complete list of Project Templates, while the *Quick* tab allows you to access the more frequently used Project Templates. Press the Edit icon  on top of the screen to enter Edit mode.

This mode allows you to copy Project Templates from the Full View to the Quick View simply by tapping on the *Project Template* in the Full View – and to remove Project Templates from the Quick View by tapping on the *Project Template* in the Quick View.

When you have finished, tap the Edit icon  again to exit Edit mode.


**Note 1:** Annotations on templates are for describing the template and will not be copied to the project, when starting or saving a measurement.

**Note 2:** If you delete all templates of a certain type (for example, the Frequency analyzer) and you want a template of this type again, then you either have to open a project made with this template and save the template, or you have to use the BZ-5503 Utility Software for Hand-held analyzers to transfer a template of this type to the analyzer.

#### 5.4.9 Locking the Pushbuttons and Display

The pushbuttons and display can be locked to prevent inadvertent operation.

**To Lock:** Select the **Lock Keys and Screen** option from the Main Menu .

**To Unlock:** Press the left arrow pushbutton ◀, followed by the right arrow pushbutton ▶, then the **Accept** pushbutton .

If you attempt to press a pushbutton, or tap the screen, while the instrument is locked, an information window pops up with instructions on how to unlock it.

# Chapter 6

## Data Management

### 6.1 Organising Measurements


#### 6.1.1 Description of Jobs and Projects

When saving a set of measurement results, they are organised together with setup information, calibration information, annotations and sound recordings in a project.

A project contains the following:

- Measurement results:
  - Broadband values (for example,  $L_{Aeq}$ ,  $L_{AFmax}$ ,  $L_{AFmin}$ , etc.)
  - Frequency spectra (if Frequency Analysis Software BZ-7223 is enabled on your analyzer and you have selected a Frequency Analyzer template)
- Measurement Setup
- Display Setup (parameters you have selected)
- Information on the microphone
- Calibration
- Annotations – Commentary (attached to measurements as required)
- Annotations – Text (attached to measurements as required)
- Annotations – Image (attached to measurements as required) – Type 2270 only
- Sound Recordings (attached to measurements as required)

The Project name is automatically created by combining the Project Name Prefix with a number (starting from 001), i.e., Project 001 for the first project, Project 002 for the next, etc.


If preferred, the Project Name Prefix can be changed from the default name of 'Project'. To do this, tap the Main Menu icon , then **Preferences** followed by **Storage Settings** to reveal the Project Name Prefix. Tap the current name to reveal a keyboard for you to type in the required name.

Projects are saved in folders which are called 'jobs' on your analyzer. These are similar to folders in the Windows® filing system.


Jobs can be created in the internal memory, on a Secure Digital (SD) Card or on a Compact Flash (CF) Card.

### 6.1.2 Navigating in Jobs

On the analyzer, a results browser called Explorer is used to navigate through the jobs and projects.

To view all jobs and projects, tap the Main Menu icon  and select **Explorer** from the list of options – or simply tap the Project Name on the measurement screen. A screen similar to Fig.6.1 will appear.


**Fig. 6.1**  
The Explorer screen

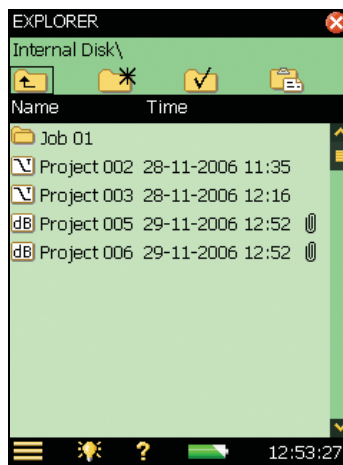

The example from Explorer in Fig.6.1 displays a list of jobs and then some projects which have not been stored under a job name.


The topmost line in the status area (*Internal Disk\* in the example in Fig.6.1) shows the location in the memory.



The next line in the status area contains 4 icons for navigation.

Tap the  icon to go up one level in the job-levels. The top level is the Memory level, where physical memory devices can be selected. You can select between:


- Internal Disk
- SD Card (if available in SD Slot)
- CF Card (if available in CF Slot)

If Multi-user is enabled (see Chapter 8), then each user can access data on the three devices. However, a user cannot see or access jobs for other users.

To go down one level (i.e., exit the Memory level), you tap the job name (*Internal Disk* in this case) and select *Open* from the dropdown list – or you simply tap the memory icon  next to *Internal Disk*.

Tap the  icon to create a new job folder. The first job folder name will be 'Job 01', subsequent job folders will be labelled 'Job 02', 'Job 03', etc. You can rename the job folder name by tapping on the name and selecting *rename* from the dropdown list. Use the keyboard to key in a new name – accept by tapping on the Enter key .

To go down one level (open a job), you tap the job name in the list and select *Open* from the dropdown list – or you simply tap the job icon to the left of the job name.



You can move a job/project (and its content) to another job by tapping the job name/project name and selecting *Cut* from the dropdown list. Then navigate to the job you want as the new holder of the moved job/project and tap the Paste icon , or navigate to the level above and tap the job name and select paste from the dropdown list.

In order to copy a job/project do as described above, but use *Copy* instead of *Cut* from the dropdown list.

Select *Delete* from the dropdown list in order to delete the job/project and all of its contents.

You can select more than one job/project for copy, cut or delete by tapping and holding the stylus on a job/project name and then dragging the stylus up or down to select other jobs/projects.

## 6.2 Selecting Default Measurement Job/Path

Tap the  icon to select the current job as the default measurement job, where all projects will be saved when you press the **Save**  pushbutton. The job name, followed by the current project name, will appear in the topmost line in the status area to confirm which job you have selected.

## 6.3 Recalling Measurements

You can recall your measurement results in one of two ways:


- To display the measured results (and calibration details) only, use the results viewer – this can be done during an ongoing measurement and is a convenient way of browsing several sets of measurement data, see below
- To re-use setups from previously saved projects or view logged data as a profile, use the *Open* command in Explorer – this will recall the project template (display settings and measurement setup used on the saved results) along with the results. This will, however, stop and reset the current measurement


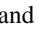
### 6.3.1 Viewing Data

Use Explorer to locate the project with the results you want to view, then tap the project name and select *View* from the dropdown that appears (or simply tap the project icon). This will open the Viewer (Fig. 6.2).



**Fig. 6.2**

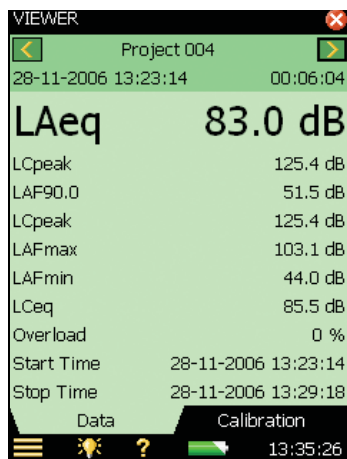The Viewer for Sound Level Meter data



The project name is displayed at the top of the Viewer, along with two buttons:  and . These are used to view results on the previous or next project in the job folder.


**For Sound Level Meter and Frequency Analysis data** the line below this shows the start time and elapsed time for the measurement.

**For Logging and Enhanced Logging data** the second line shows the Result Selector (selects between *Total*, *Logged*, *100 ms* and *Report* data) and the start time for the measurement, along with two buttons:  and . These are used to view results on the previous or next interval in the project, see Fig. 6.3. The Overview profile is also available.

**For Reverberation Time Data** the second line shows the Position Selector.

**Fig. 6.3**

The Viewer for Logging and Enhanced Logging data

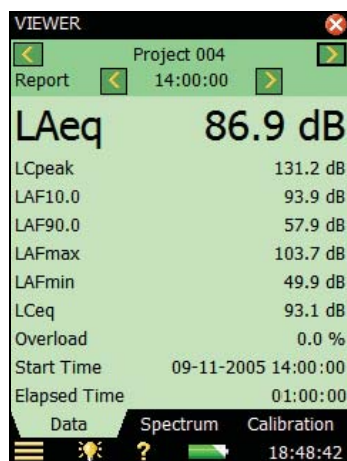


All the measured values are displayed below the top two lines – Sound Level Meter data on the *Data* tab and spectrum information (Frequency Analysis only) on the *Spectrum* tab. Tap the spectrum parameters or broadband parameters to select other parameters.




The *Calibration* tab allows you to view the calibration details for the measurement.

You can view data on projects without disturbing the ongoing measurement.


To exit the Viewer, tap the  icon.

### 6.3.2 Re-using Setups from Projects

Use Explorer to locate the project with the setup you want to re-use, then tap the project name and select *Open* from the dropdown that appears. This will stop and reset the current measurement and load the project including all setups and data. You are now using the same screens as the ones you were using just before you saved the data. Use the screens to browse the results. Pressing **Start/Pause**  will start a new measurement using the setups from the project.


You can save the setup information in a template by tapping the Template Bar on the top of the screen, see section 5.4.8.


### 6.3.3 Viewing or Listening to Annotations and Metadata

Use Explorer to locate the project with the annotations you want to view/hear, then tap the project name and select *Annotations* from the dropdown that appears (or simply tap the annotations icon ) and select the *Annotations* tab. This will show all annotations attached to the project (see Fig. 6.4.)



**Fig. 6.4**

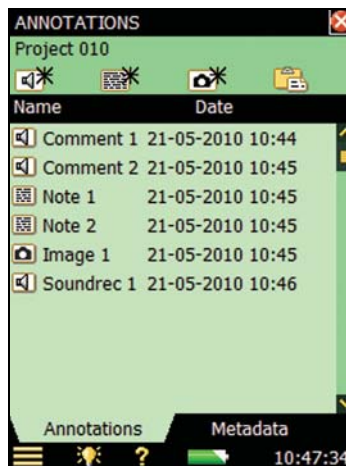

*Example of an annotation attached to a project*



The  icon represents a verbal annotation, or commentary. Tap the annotation name and select *Play* from the dropdown that appears (or tap the icon) to play the commentary using the headphone output.


**Note:** you can also rename or delete annotations, or copy or move annotations to other projects or jobs.

The Text  icon represents written annotations, or notes. Tap the annotation name and select *Open* from the dropdown that appears (or tap the icon) to open the Notes Editor. View the comments and, if required, edit the comments using the simulated keyboard that appears at the bottom of the screen. Tap the  icon to accept the changes and return to the previous screen.

The Image  icon represents image annotations. Tap the annotation name and select *Open* from the dropdown that appears (or tap the icon) to open the Image Viewer. Tap the  icon to return to the previous screen.

Select the *Metadata* tab to see all metadata attached to the project (Fig.6.5). You can change the metadata just by tapping on them and entering new values. You can also edit the settings for the metadata and reuse specific metadata on new projects by tapping on the Edit icon for the specific metadata (further information in section 8.6).

**Fig. 6.5**  
Example of metadata

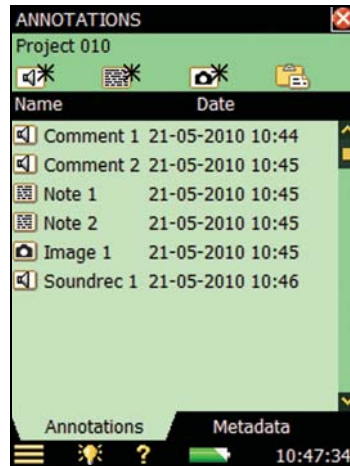

**Fig. 6.6** Inserting  
Annotations Using  
Explorer

In addition to inserting commentary, text or image annotations on your current measurement, see section 3.5, you can insert commentary, text or image annotations on projects or jobs using Explorer.

Tap a job or project name and select *Add note*, *Add Comment* or *Add Image* (Type 2270 only) from the drop-down that appears.

# Chapter 7

---

## Connection to PC or Mobile Phone

### 7.1 Introduction

You can connect to your analyzer from a PC or mobile phone in a number of different ways using a wide range of different connection types:

- Use Utility Software for Hand-held Analyzers, BZ-5503 for full control of the analyzer – see Section 7.2.
- Use an Internet Browser for On-line display and control of the analyzer - see Section 7.4

Three different methods are available for connecting to the Analyzer:

- USB: BZ-5503 connects to the analyzer through a USB cable
- Modem: BZ-5503 connects to the analyzer through modem (BZ-5503 uses two modems - one modem connected to the PC for dialling up, and another modem connected to the analyzer)
- Network: The analyzer is connected to a network (local or Internet). BZ-5503 or an Internet Browser will then be able to connect to the analyzer through TCP/IP using the analyzer's (global) IP address

In addition to connecting to the analyzer, the analyzer itself can notify you by SMS, or E-mail, based on various conditions - see Section 8.4.

Table 7.1 gives you an overview of the different connection possibilities including links to relevant chapters with more details.

**Table 7.1** Connection overview

Connect from	Connection Type	Settings in Preferences	Available Notifications
BZ-5503	USB	Modem = <i>Disabled</i> see Section 8.2.	N.A.
BZ-5503	Modem <i>analogue (PSTN)</i>	Modem = <i>Auto Answer</i> see Section 8.2.	N.A.
BZ-5503	Modem GSM	Modem = <i>Auto Answer</i> . see Section 8.2.	SMS <sup>a</sup> see Section 8.4
BZ-5503	Modem <i>GPRS/EDGE/HSPA</i>	Modem = <i>Auto Answer</i> . see Section 8.2.	SMS <sup>a</sup> see Section 8.4
BZ-5503 or Internet Browser <i>Mobile Phone with Internet Browser</i>	Network <i>GPRS/EDGE/HSPA modem</i>	Modem = <i>GPRS/EDGE/HSPA Dialup</i> Settings in Dialup Networking. Network Settings. Possibly settings in DynDNS. see Sections 8.2 and 8.3.	E-mail see Section 8.4
BZ-5503 or Internet Browser <i>Mobile Phone with Internet Browser</i>	Network <i>Ethernet cable</i>	Modem = <i>Disabled</i> Possibly settings in DynDNS. Network Settings. see Sections 8.2 and 8.3.	E-mail see Section 8.4
BZ-5503 or Internet Browser <i>Mobile Phone with Internet Browser</i>	Network <i>CF WLAN</i>	Modem = <i>Disabled</i> Possibly settings in DynDNS. Network Settings. Settings in Wireless Network. see Sections 8.2 and 8.3.	E-mail see Section 8.4
BZ-5503 or Internet Browser <i>Mobile Phone with Internet Browser</i>	Network <i>DSL Modem/Router</i>	Modem = <i>Disabled</i> Possibly settings in DynDNS. Network Settings. see Sections 8.2 and 8.3.	E-mail see Section 8.4

a. SMS is also possible for the setting Modem = *Disabled*.

**Note:** The on-line help for BZ-5503 contains additional information on how to connect an instrument using the different connection types.

## 7.2 Transferring Measurement Data to Your PC

Utility Software for Hand-held Analyzers BZ-5503 is used for communication between your PC and the analyzer. Connect the analyzer to your PC using the supplied USB Cable AO-1476, using a modem connection, or through a LAN connection (see Chapter 8).

Use this software to:

- Transfer measurement data and templates from the analyzer to your PC, and vice versa
- View data
- Organise data on the analyzer
- Create users on the analyzer
- Upgrade software on the analyzer
- Install software licenses on the analyzer

Using this software, measurements on the analyzer can be controlled from your PC and displayed on-line, using the same user interface on the PC as on the analyzer.

Data transferred to the PC are organised in Archives.

View the measurement data in the Archives or edit the project templates.

Data in the archives can be exported to:

- Noise Explorer Type 7815
- Evaluator Type 7820
- Protector Type 7825
- Qualifier Type 7831/31
- Predictor Type 7810
- Lima Type 7812
- Acoustic Determinator Type 7816
- Microsoft® Excel® for further post-processing and reporting

Sound Recordings can be input to the Brüel & Kjær PULSE™ analyzer Platform for further analysis – please contact your local Brüel & Kjær representative for further information.

## 7.3 Post-processing and Reporting


The software modules are further enhanced by Brüel & Kjær's post-processing software suite, including Utility Software for Hand-held Analyzers BZ-5503 for data transfer, setup and remote display (included with your analyzer), Noise Explorer Type 7815 for viewing data, Evaluator Type 7820 for assessing environmental noise, Protector Type 7825 for assessing workplace noise and Qualifier Light Type 7831 for documenting reverberation time measurements.


For further information, please refer to the on-line help included with the relevant PC Software. This software is supplied on the Environmental Software DVD (BZ-5298), which is included with your the analyzer.

## 7.4 Internet Browser for On-line Display and Control of the Analyzer

When the analyzer is connected to a network (see Fig.7.1) you can connect to the analyzer from a PC or mobile phone using an Internet Browser supporting Java scripts.

Analyzer settings:

You access preferences by tapping on the Main Menu icon  and selecting **Preferences** from the list of options (the screen shown in Fig.8.1 will appear).


Tap *Web Server Settings*, or select the plus icon  next to *Web Server Settings* and set the *Web Server Parameters to Enabled*. Define sets of Usernames and Passwords:

- one set for guest use (view only)
- one set for administrator use of the instrument (view and full control)

See Sections 8.5 and Appendix D, Section D.11 for more details.

When you enter the IP address or Hostname of the analyzer (see Sections 8.2. and 8.3) in the address or location bar of the Internet Browser, the following screen appears:

**Fig. 7.1**  
2250 home page

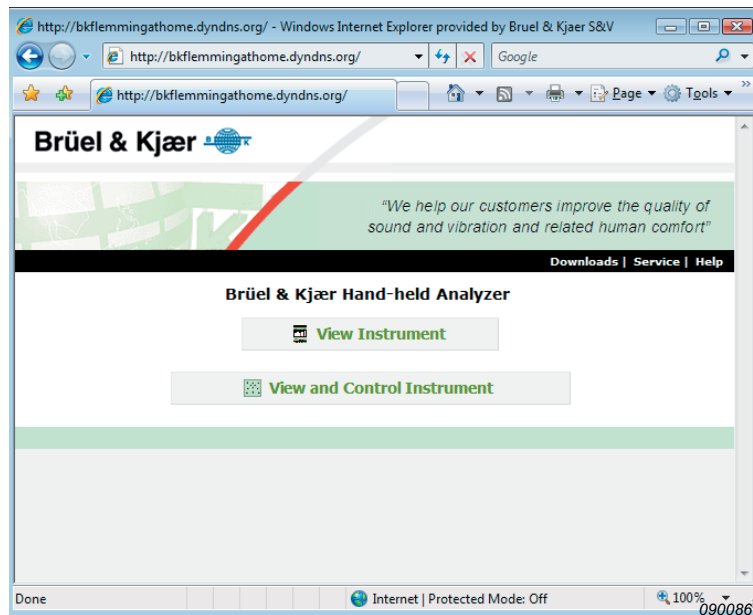


Press the *Help* link to get more detailed help on using the web page.

Press the *View Instrument* button to enter the web page for viewing the instrument only. You might be prompted for the *Guest Username* and *Guest Password* defined for the web server (see Section 8.5).

Press the *View and Control Instrument* button to enter the web page for full access to the instrument. You will be prompted for the Username and Password defined for the web server.


**Fig. 7.2**  
*Prompt for username and password*

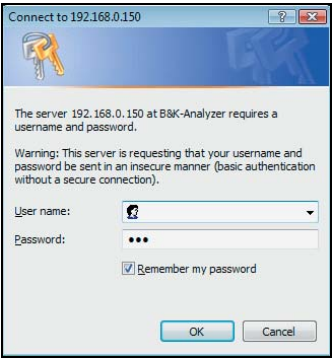

**The View Instrument Web Page**

Fig.7.3 shows the View Instrument web page, where you have an on-line display of the instrument. You can use the on-line display for monitoring the measurement only, you cannot change the display, or setup parameters, or start and stop measurements, etc.

**Fig. 7.3**  
*On-line display for monitoring only*

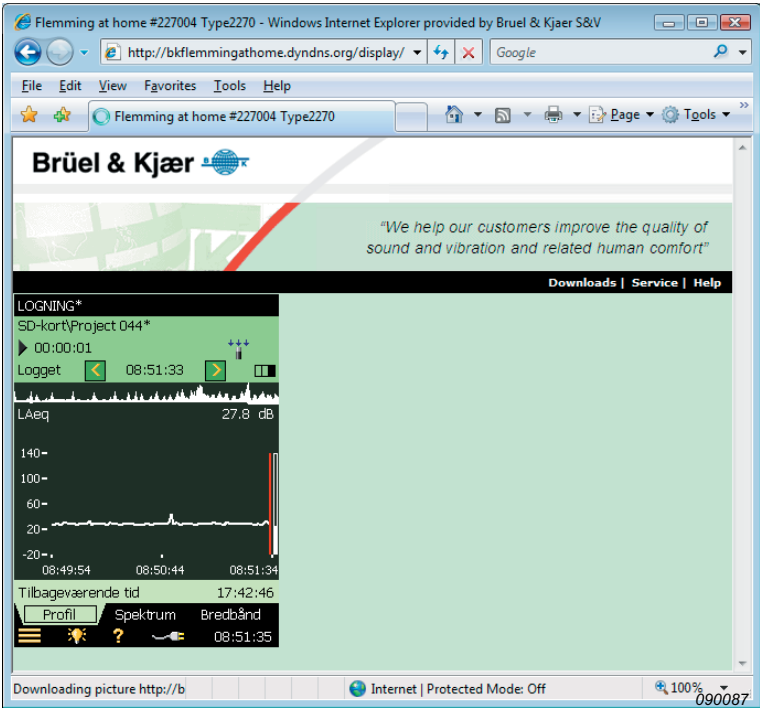

The instrument can be viewed by several people at the same time, however, the instrument response time will increase with the number of connected browsers.


### The View and Control Instrument Web Page

Fig.7.4 shows the View and Control Instrument web page, where you have an on-line display and keyboard for full control of the instrument. The on-line display can be used for monitoring the measurement.

The keyboard on the screen has the same functions as the instrument's keyboard. Click on the display with the cursor to control the instrument as you do when tapping on the screen of the instrument.

**Fig. 7.4**

*On-line display and keyboard for full control of the instrument*

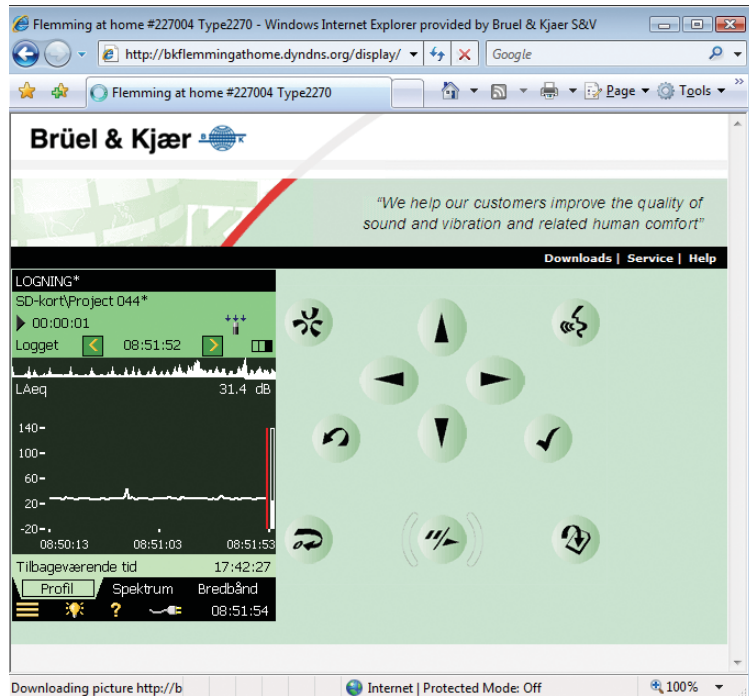




# Chapter 8


## Advanced Use of the Analyzer – Tips and Tricks

### 8.1 Setting your Preferences on the Analyzer


You can specify a number of parameters controlling display settings, power settings, regional settings, storage settings and users. These parameters are grouped together under Preferences.

You access preferences by tapping on the Main Menu icon  and selecting **Preferences** from the list of options. The screen shown in Fig. 8.1 will appear.


**Fig. 8.1**  
*The Preferences screen*

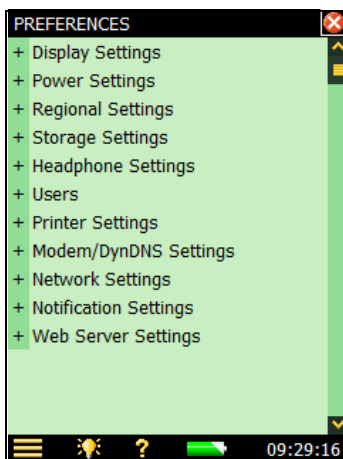

#### 8.1.1 Display Settings

Tap *Display Settings*, or  next to *Display Settings*, to expand the list of available display settings (Fig. 8.2). These parameters allow you to select a suitable display colour scheme. This may vary, depending on the lighting conditions at the time of the measurement.

**Fig. 8.2**  
Display Settings screen

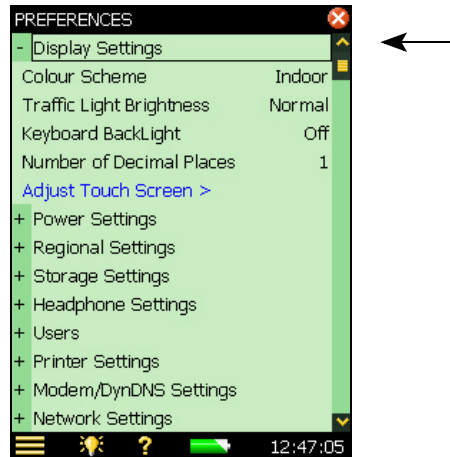

The colour schemes are:

- *Indoor* scheme – for everyday use
- *Alhambra* and *Arcade* schemes – alternative colour schemes for everyday use
- *Outdoor* scheme – for very bright conditions, where you need as much contrast as possible
- *Night* scheme – for measuring under very dark conditions, where is needed night vision

For each colour scheme, you can select the optimum choice of brightness for the traffic light (e.g., *High* for *Outdoor* in bright light conditions and *Low* for *Night* in dark conditions) and whether to have backlight on the keyboard. In very bright lighting conditions you will not be able to see the backlight, set it to *Off* to save some power.

A link is also provided in *Display Settings* to adjust the touch-sensitive screen. Tap *Adjust Touch Screen >* to display a full screen with guidance on how to tap a cross five times at different places on the screen. At the end of the adjustment procedure you can save the values or cancel the adjustment.

To change the number of decimal places on your dB results readout tap *Number of Decimal Places* and set to either 1 or 2 decimal places, as required. This setting is for display only and has no effect on the measurement precision or resolution.

Tap *Display Settings*, or , to collapse the list.


## 8.1.2 Power Settings


The analyzer has an advanced power management function that takes care of supplying the different circuits with adequate power and switches off circuits that are not in use. These power management functions can be changed via the *Power Settings* screen (Fig. 8.3).

Tap *Power Settings*, or , next to *Power Settings*, to expand the list of power settings:

- *Turn Off Backlight*
- *Turn Off Backlight Dim*
- *Standby*


**Fig. 8.3**  
Power Settings screen

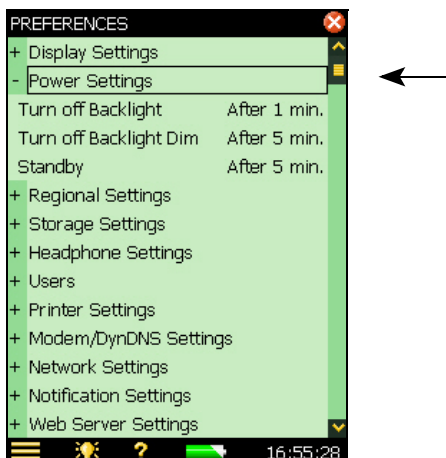


The backlight will be switched on as soon as you operate the instrument, either by using the keyboard or stylus on the touch-sensitive screen. The backlight brightness will be one of the 6 levels set by tapping  at the bottom of the screen. Select *Minimum* for minimum brightness and (power consumption), and *Maximum* for maximum brightness and (power consumption). Once you have chosen the level, select *Close* to save the settings.

When the instrument has been left unused for the time specified in the *Turn off Backlight* parameter, the backlight level will change to the dim level (*Minimum*). This state will hold for the time specified in the *Turn off Backlight Dim* parameter (if still left unused). If the instrument has been left unused for the time specified in the *Turn off Backlight* parameter plus the *Turn off Backlight Dim* time period, then the backlight will be switched off completely (Fig.8.4). Use the keyboard or tap the screen to switch the backlight on again.

**Fig. 8.4**  
Power Settings overview

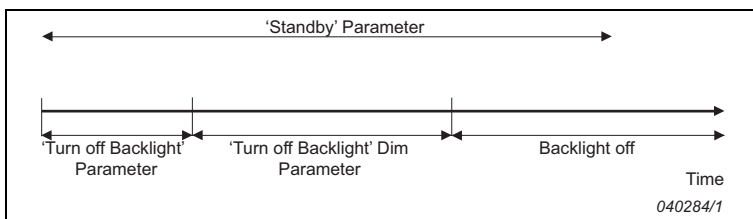

If the instrument is left unused, not measuring and not communicating over the USB interface, it will go to standby after the time specified in the *Standby* parameter. If in standby mode, you must press  to switch the instrument on again.


The instrument will automatically switch off when it has been in standby mode without external power for more than 30 hours.

**Note 1:** If the instrument is powered externally the *Standby After* parameters are ignored and the instrument will never go to standby. However, if the instrument is left unused for more than *Standby After* time the *Standby After* setting will overrule the Backlight settings and the backlight will be switched off .


**Note 2:** Please use the *Display Settings* in conjunction with the *Power Settings* to save power during measurements and extend the battery operating time.

When you have made your choices, tap *Power Settings*, or , to collapse the list.

### 8.1.3 Regional Settings

Tap *Regional Settings*, or  next to *Regional Settings*, to expand the list of available regional settings, see Fig.8.5.

**Fig.8.5**  
*Regional Settings screen*

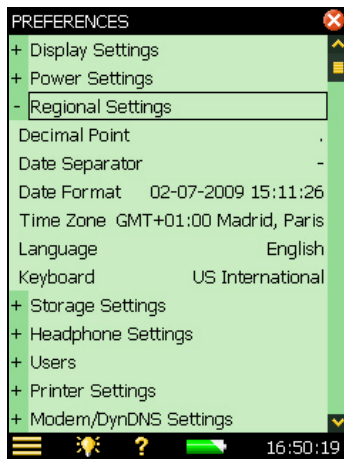


Select your preferred settings for *Decimal Point* and *Date Separator* and select your preferred date/time format from the six different formats provided in the drop-down. Then select your time zone from the list.

A number of different languages are available for your analyzer. Select your preferred language – if it is not in the list, then it might be available for installation using BZ-5503.

Built-in help is provided in the more commonly used languages – if your particular language is not covered, English will be chosen automatically.

Select a keyboard matching the one you prefer when using your PC.


When you have made your choices, tap *Regional Settings*, or on the minus icon , to collapse the list.

### 8.1.4 Storage Settings

Each time you save the results of a measurement, the analyzer suggests a project name and number for the project. The Project Name Prefix can be generated automatically (from the start date of the project as Year, Month, Date in the format YYMMDD, e.g., 051112 as 2005, November 12th) or you can specify a *Project Name Prefix* (max. 8 characters), using the standard full character keyboard that pops up when you tap the current name set as the

project name prefix, see Fig.8.6. (The field where you type in the project name prefix will appear at the top or bottom of the pop-up keyboard, depending on how many settings you have expanded in the list.) The project suffix number will be generated automatically.

**Fig.8.6**  
Storage Settings screen

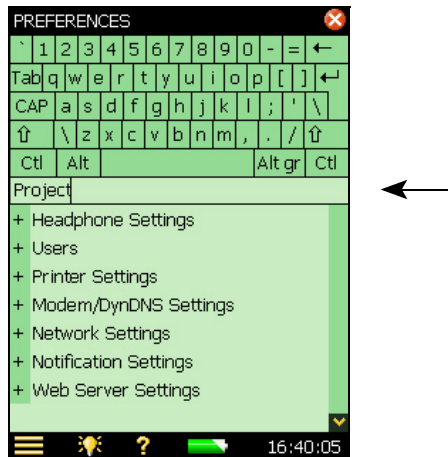

### 8.1.5 Headphone Settings

The headphone settings allow you to control the output to the headphone socket on the connector panel (see item 2 in Fig.2.2).

Commentary annotations on measurements can always be heard on the headphones, regardless of the options chosen in *Headphone Settings*.

In addition to the commentary annotations, you can listen to the measured signal for monitoring purposes. Select between A/B-weighted, C-weighted or Z-weighted. (A/B-weighting is determined by setting the parameter in *Setup, Frequency Weightings, Broadband (excl. Peak)*).

The measured signal covers approx. 120 dB (from approx. 20 dB to 140 dB with a Type 4189 or Type 4190 microphone of nominal sensitivity). The output of the headphone socket covers approx. 75 dB. Use the gain settings for the measured signal to adjust the output level to suit the listening conditions. If the signal has a very high dynamic range (or the levels are unknown), you can set *Automatic Gain Control* to *On* – this will convert the 120 dB input range to 40 dB output range enabling you to hear signals of any level clearly.

Individual gain settings are provided for the commentary annotations and the measured signal. Tap the gain parameter and use the keypad to enter a new setting. Use '@' to assign the new value for immediate response at the output – or use the up/down navigation keys to increment/decrement the value.

**Note 1:** A 0 dB gain on the measurement signal means you get a 1 V output for a 1 V input (when the measured signal *Automatic Gain Control* is set to *Off*).

**Note 2:** While playing back an annotation, you can use the up/down navigation keys to increase/decrease the gain of the annotation.


**Note 3:** If you do not want to listen to the input signal, then set the *Listen to Signal* parameter to *No*, to economise on power.


### 8.1.6 Multi-user Facility

The analyzer can handle more than one user of the instrument. Each user can have their own set of preferences, templates and jobs and projects – completely invisible to other users. This can also be very useful in organising large measurement jobs, or cases – you can separate the cases completely from each other by handling each case as a separate user.

The transducers, the calibration setup and the calibration histories of the transducers are common to all users, as shown in the overview provided in Fig.8.7.

**Fig.8.7** Overview of Multi-user Facility

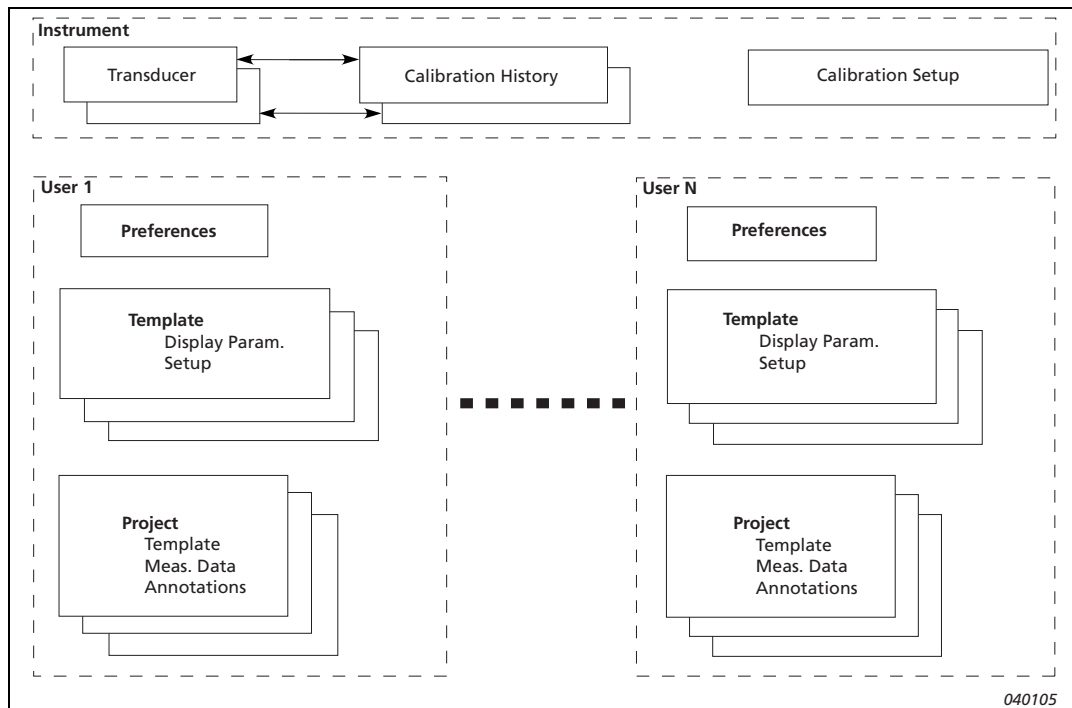

Tap *Users*, or the plus icon , then select *Yes* in the *Multi User Enabled* drop-down to distinguish between different users.

The instrument, when delivered, has one default user called '2250' (for Type 2250) or '2270' (for Type 2270).

You require Utility Software for Hand-held Analyzers BZ-5503 (included with the analyzer) to set up new users on the instrument (see Section section 7.1).

### 8.1.7 Printer Settings

You can make screen dumps on a printer connected to the analyzer using USB cable AO-0657. Use the Printer Settings to select your preferred printer.

When a printer has been selected under the *Printer Used* parameter, then the **Print Screen** command in the Main Menu appears. Use this command to print a screen dump of any screen on the analyzer.

The printer must either be an MPS type, or accept the PCL<sup>®</sup> printer language (PCL: Printer Control Language developed by Hewlett-Packard – see details on their Web site: [www.hp.com](http://www.hp.com)):

- *MPS*: Mobile Pro Spectrum thermal printer from AM-TECH, see details on Web site: [www.amteq.co.kr](http://www.amteq.co.kr)
- *PCL*: printers accepting PCL printer language
- *PCL Inkjet*: suitable for Inkjet printers and supports colour printing
- *PCL Laser*: suitable for Laser printers

For the PCL printers you can use the *Top* and *Left Margin* parameters to position the print on the paper, and use *Width* and *Height* parameters to set the size of the print.

## 8.2 Modem/DynDNS Settings

You can use the analyzer for monitoring in remote places and control it using Utility Software for Hand-held Analyzers BZ-5503, via a telephone connection – wired or wireless – using suitable modems or via network connections. See the overview of possibilities in section Table 7.1, in Chapter 7. When you connect via a modem, or via a network connection, you will see the contents of the analyzer in the Instrument Task as if you had made the connection via USB. You then have the same possibilities for transferring data to the Archive and organising data on the analyzer, as if you were connected via the USB connector.

Modems can be used for connection in two different ways:

- BZ-5503 connects to the analyzer through modem (BZ-5503 uses two modems, one modem connected to the PC for dialling up and another modem connected to the analyzer). The setup of the modem connected to the analyzer is described in section 8.2.1 – please refer to the BZ-5503 on-line manual for dial-up and connection details
- The analyzer is connected to the Internet through a modem. BZ-5503 or an Internet Browser will then be able to connect to the analyzer through TCP/IP using the analyzer's (global) IP address. The setup of the modem connected to the analyzer is described in section 8.2.2 – please refer to the BZ-5503 on-line manual for details of how to make a connection

The modem connected to the analyzer should either be a Compact Flash modem, or a modem with an RS-232 serial interface, to be connected via a Compact Flash to Serial converter.

### 8.2.1 Connection Through Modem

Hayes compatible modems (serial GSM or standard serial analogue (PSTN) modems) are supported.

To use the modem all you need to do is to set the *Modem* parameter to *Auto Answer* in the *Modem/DtmDNS Settings*. No other settings are necessary.

The modem is initialized with the following command string:

```
AT<cr>AT&FE0V1&C1&D2<cr>
```

If your modem needs extra commands for initialization, they can be defined in Extra Init.

If you are not familiar with the command strings for modems, then please consult the documentation from the manufacturer of the modem or web-sites such as [www.modemsite.com](http://www.modemsite.com), [www.modemhelp.org](http://www.modemhelp.org) or [support.microsoft.com/default.aspx/kb/164660](http://support.microsoft.com/default.aspx/kb/164660).

**Note:** Before you connect or disconnect a modem (or switch it on or off), the *Modem* parameter should be set to *Disabled*, or the analyzer must be in standby mode or switched completely off – the latter is recommended.

#### Compact Flash Modems

Compact flash modems can be inserted directly in the compact flash socket of the analyzer (see item 9 in Fig.2.2).

#### Analogue Modems

The following modems have been tested:

- CF 56 K Modem Card (V90 and V92) from Socket - see details on Web site: [www.socketmobile.com](http://www.socketmobile.com)
- 56 K CompactModem (V92) from Pretec - see details on Web site: [www.pretec.com](http://www.pretec.com)

#### GSM Modems

The following modems have been tested:

- Compact GPRS from Pretec - see details on Web site: [www.pretec.com](http://www.pretec.com)

**Note:** The SIM card should be usable without pin-code.

#### Modems with RS–232 Serial interfaces

Modems with an RS–232 serial interface can be connected using a Compact Flash to Serial converter inserted in the compact flash slot of the analyzer. Switch off the analyzer when connecting a serial I/O CF Card and modem to the analyzer. The following Compact Flash to Serial converter has been tested:

- Serial I/O CF Card - Ruggedized, from Socket - see details on Web site: [www.socketmobile.com](http://www.socketmobile.com)



### Analogue Modems

The following modems have been tested:

- MT5600ZDXe from MultiTech Systems (Brüel & Kjær order number: ZM-0069) – see details on Web site: [www.multitech.com](http://www.multitech.com)
- Hayes Accura 56k speakerphone, model 5670NL

### GSM Modems

The following modems have been tested:

- GSM Module M1 from Siemens
- WMOD2B-G900/1800 Dual Band Modem from Wavecom
- M1306B FASTRACK Dual Band Modem from Wavecom
- FASTRACK Supreme 10 and 20 GSM/GPRS/EDGE Modem from Wavecom
- Airlink Fastrack Xtend GPRS, EDGE and HSPA from Sierra Wireless – see details on Web site: [www.sierrawireless.com](http://www.sierrawireless.com)
- GSM Small from INSYS

**Note:** The SIM card should be usable without pin-code.

### Modems Incompatible with the Analyzer

The following modems don't work correctly together with the analyzer:

- Fujitsu - Siemens/CONNECT2AIR GSM/GPRS Compact Flash Card
- Audiovox RTM-8000P GSM/GPRS CF modem
- Enfora GSM 0110 Modem

### Modems with USB Interface

Modem to USB interface is currently not supported.

## 8.2.2 Connection to Network using GPRS/EDGE/HSPA Modem

GPRS/EDGE/HSPA modems are supported.

The modem is initialized with the same command string as described in Section section 8.2.1.

**Note:** The SIM card account should include a Data subscription and should be usable without a pin-code.

To use the modem you need to set up the parameters in *Dialup Networking* (listed below) and set the *Modem* parameter to *GPRS/EDGE/HSPA Dialup*.

Parameters in Dialup Networking:

- APN (Access Point Name) is an identifier required by the Network Operator. Examples are Internet, public and [www.vodafone.de](http://www.vodafone.de)
- Username, Password and possibly *Domain* should be set as required by the Network Operator.

When the *Modem* parameter is set to *GPRS/EDGE/HSPA Dialup*, then a connection is made using the settings in *Dialup Networking*. The *Status* parameter reflects the current status of the network connection – eg. ‘Connected’ or ‘Disconnected’. If the connection fails, then the analyzer will try to reconnect – until it succeeds, or the *Modem* parameter is set to *Disabled*.

If the connection succeeds, then the instrument will automatically get an IP address, which is readable (but not accessible) in *Network Settings* – for more details see Section section 8.3.

The IP address is the address on the WAN (Wide Area Network) or Internet. Use this address in BZ-5503 or an Internet Browser to connect to the analyzer.

**Note:** In some cases you might be able to get a static IP address from the Network Operator, which means that the analyzer will always get the same IP address, when connected to the network. However, typically the IP address will be renewed each time the analyzer connects to the network. In order to deal with this in BZ-5503 or an Internet Browser you need to use DynDNS - see Section section 8.2.3.

### Compact Flash Modems

Compact flash modems can be inserted directly in the compact flash socket of the analyzer (see item 9 in Fig.section 2.2).

The following modem has been tested:

- Compact GPRS from Pretec – see details on Web site: [www.pretec.com](http://www.pretec.com)

### Modems with RS-232 Serial Interfaces

Modems with an RS-232 serial interface can be connected using a Compact Flash to Serial converter inserted in the compact flash slot of the analyzer. Switch off the analyzer when connecting a serial I/O CF Card and modem to the analyzer. The following Compact Flash to Serial converter has been tested:

- Serial I/O CF Card – Ruggedized, from Socket – see details on Web site: [www.socketmobile.com](http://www.socketmobile.com)

The following modems have been tested:

- FASTRACK Supreme 10 and 20 GSM/GPRS/EDGE Modem from Wavecom
- Airlink Fastrack Xtend GPRS, EDGE and HSPA from Sierra Wireless – see details on Web site: [www.sierrawireless.com](http://www.sierrawireless.com)

### Modems with USB Interface

Modem to USB interface is currently not supported.

## 8.2.3 DynDNS

If the analyzer is connected to:

- the Internet through a GPRS/EDGE/HSPA modem, or
- a local network with access to the Internet through a DSL modem/router

and you want to connect to the instrument from a place outside the local network, then you need to know:

- global IP address of the instrument or
- the global IP address of the DSL modem/router (and ensure that correct port forwarding in has been set the router – details in the on-line help for BZ-5503)

In some cases the global IP address is static and will never change, so you connect to the instrument using BZ-5503 or an Internet Browser by using this IP address.

Normally when you browse to addresses using an Internet Browser you don't use the IP address itself, but a hostname for it (e.g. you would use the hostname `www.google.com` instead of '74.125.77.99'). This requires a DNS (Domain Name System) provider, which is a kind of Internet phone book that translates hostnames to IP addresses for you.

However, for a GPRS/EDGE/HSPA or even a DSL router then often the global IP address is renewed at each new connection or at certain time-intervals (e.g., every two weeks). In this case you will have to change the IP address in BZ-5503 or the Internet Browser accordingly. To avoid this, a service like DDNS (Dynamic Domain Name System) can be used.

DDNS is a network service that provides the capability for a modem/router/computer system to notify a domain name system provider to change, in real time (ad-hoc), the active DNS configuration of its configured hostnames and IP addresses. This will ensure that the hostname you use will always be updated to reflect the correct IP-address.

The analyzer supports DDNS provided by the world-wide DDNS service provider 'DynDNS.com'.

The analyzer can then be configured to notify DynDNS.com each time the global IP address is set or changed. When BZ-5503 or an Internet Browser connects to the analyzer it then uses a hostname defined by DynDNS.com. From DynDNS.com it then gets the updated IP address.

You need to make an account at DynDNS.com, specifying a user name and a password for the account and a hostname (e.g., 'MyBK2250.dyndns.org') identifying the analyzer.

In the analyzer you need to specify the Hostname, Username and Password and set *Active* to *Yes* in *Preferences*, under *Modem/DynDNS* settings. Each time the analyzer detects a change in the IP address it notifies DynDNS.com.

**Note:** To avoid too much traffic at DynDNS.com, the analyzer ensures that this service doesn't allow updates of settings more frequently than every 10 minutes. So you may experience up to a 10 minute wait for DynDNS settings to update.

## 8.3 Network Settings

The analyzer can be connected to a LAN (Local Area Network) through an Ethernet interface or to WLAN (Wireless Local Area Network) using equipment conforming to the IEEE 802.11a/b/g standard. This connection can be used to synchronise measurement and setup data with a host PC using BZ-5503.

Type 2270 has a built-in LAN Socket on the Connector Panel (Fig.2.2).

Type 2250 (and Type 2270) accepts the following Compact Flash LAN and WLAN Cards:

- 10/100 Ethernet Ruggedized CF Card (Brüel & Kjær order number: UL-1016) – see [www.socketmobile.com](http://www.socketmobile.com)
- Go Wi-Fi! P500 CF WLAN, rev. B and rev. C – see [www.socketmobile.com](http://www.socketmobile.com)

Use a “straight-through” (standard) Ethernet cable with RJ45 connectors at both ends to connect the analyzer to the network (via a hub, switch or router).

Use a “crossover” Ethernet cable with RJ45 connectors at both ends to connect the analyzer directly to a PC.

The analyzer supports TCP/IP (Transmission Control Protocol/Internet Protocol) on the LAN and WLAN.

This requires the analyzer to have a unique address on the network. This address is called an IP address and consists of four sets of 3-digit numbers, e.g. 010.116.121.016.

The IP address can be obtained in different ways:

- Automatically
- Using DHCP

A DHCP (Dynamic Host Configuration Protocol) Server on the network assigns automatically an IP address to the analyzer when connected to the network. This is the most common way of setting up IP addresses.

- Using Link-local

If no address is automatically assigned by the DHCP Server, then after a few seconds the analyzer will use an address from the Link-local address range 169.254.x.x.

This will most likely be the case when connecting the analyzer directly to a PC using an Ethernet Crossover cable

- Manually

You setup the IP address manually.

This will typically be the case in a private network without a DHCP Server.

### 8.3.1 Parameters in Network Settings

#### Location

Use the *Location* parameter to specify a text up to 20 character long identifying the analyzer or location of the analyzer. The Location will be displayed on the PC as well as the serial number of the analyzer when browsing for analyzers in BZ-5503 and when connected using the on-line display. **Note:** The location parameter is useful for both USB and LAN connections.

#### Network Connection (Type 2270)

LAN Socket: Use the built-in LAN socket as connection

CF Socket: Use an Ethernet CF Card in the Compact Flash Socket. This setting is only available if an Ethernet CF Card is present. The LAN Socket is disabled, if an Ethernet

CF Card is present

### **Network Connection (Type 2250)**

None: If no Ethernet CF Card is present

CF Socket: If an Ethernet CF Card is present

### **Set IP Address**

Automatically: This will obtain an IP address from a DHCP server – if no server available, then a Link-local address will be set

Manually: You have to set the IP Address, Subnet Mask and Default Gateway

### **IP Address**

The IP address of the instrument

Selectable if Set IP Address = Manually

### **Subnet Mask**

The Subnet Mask combined with the IP address identifies the network segment the analyzer is on

Selectable if Set IP Address = Manually

### **Default Gateway**

Address to a gateway for routing to another network

Selectable if Set IP Address = Manually

### **Set DNS**

Automatically: This will automatically obtain the DNS

Manually: You have to set the DNS

### **Preferred DNS**

The IP address of the primary DNS server

### **Alternate DNS**

The IP address of the secondary DNS server

### **MAC Address**

The MAC Address of the network adaptor (LAN or WLAN) in use. MAC (Media Access Control) Address is a unique identifier assigned to the network adaptor. This field is for information only

### **Status**

The status of the network connection, either Operational or Non-operational:

- Operational: the network adaptor can be used for a connection
- Non-Operational: the network adaptor cannot be used

### **Parameters for Wireless LAN Only**

#### **Name**

Name (SSID) of the network you want to connect to. Update the name either by:

- entering a name directly, or
- tapping on the Available Networks and selecting a name from the list

#### Available Networks

Tap the line to get a list of available networks. Tap a name in the list to connect to this network. The name is inserted in the *Name* line above this line. Each network name is preceded with Signal Strength information, ranging from Excellent (displayed as '•••••') down to No Signal (displayed as no dots at all)

#### Security

Select the security as required by the network: *Open*, *Shared*, *WPA PSK* or *WPA2 PSK*. Open and Shared are for WEP (Wired Equivalent Privacy) Infrastructure mode. WPA PSK is for WPA (Wi-Fi Protected Access) with Pre-shared Key (also called Personal mode). WPA2 is an enhanced version of WPA

#### Encryption

Select the encryption as required by the network: *None*, *WEP Enabled*, *AES Enabled* or *TKIP Enabled*. None is for Open security. WEP Enabled is for Open and Shared security. AES and TKIP Enabled are for WPA PSK and WPA2 PSK security

#### Encryption Key

Insert the encryption key required by the network. The key will be displayed until you press **Enter**, then it will be replaced by ' \*\*\* '

## 8.4 Notifications

The analyzer can notify you if disk space is getting low or external power has disappeared, etc. This is done via SMS or e-mail, as described in this section. The SMS/e-mail notification contains a short status report for the analyzer. This facility is especially useful if the analyzer is left for unattended monitoring.

#### Alarm Settings

If one or more of the following alarms occur, then a notification will be issued as either an SMS or an e-mail, depending on your equipment and settings. If the notification fails (e.g. the connection has been lost), then the analyzer will retry to send the notification once more after 5 minutes.

**Table 8.1** Alarm Settings

Alarm Type	Condition	Comment
Power On	When analyzer is switched on or reboots	Indicates start from a timer, or a power failure, or unexpected behaviour
Measurement State	When a measurement starts or stops	Indicates measurement finished – or unexpected behaviour
CIC	When Charge Injection Calibration fails	Indicates possible measurement problem
Internal Battery	When Internal Battery is entering a specified state: High, Low or Critical.	Indicates internal battery getting low. Internal Battery will be in one of the states: Full, High, Low, Critical, Charging or Unknown. You can set alarm to <i>High</i> , <i>Low</i> or <i>Critical</i> in <i>Preferences, Notification Settings, Alarm Settings, Internal Battery</i> . <b>Note:</b> The internal battery will typically be in one of the states <i>Full</i> or <i>Charging</i> if externally powered. Entering one of the set states might then indicate a power failure
Trigger Input Voltage	When voltage at Trigger Input drops to or below a specified level	Indicates no external power, or external battery getting low. Set the <i>Setup, Input, Trigger Type</i> to <i>Voltage for Monitoring</i> . Set the voltage limit in <i>Preferences, Notification Settings, Alarm Settings, Trigger Input Voltage</i> . Connect the external battery or external power to this input (in addition to the External Power Socket) to get an alarm if the voltage drops to or below the specified level
Disk Space	When remaining disk space drops to or below a specified percentage of the total disk space	Indicates disk space getting low – needs to be swapped with an empty disk. Set the percentage in <i>Preferences, Notification Settings, Alarm Settings, Disk Space</i>
Level Trigger	When level trigger conditions are fulfilled	Indicates sound level exceeds trigger level specified in Logging or Enh. Logging template

**Table 8.2** Content of Notification

Information Type	Content
Reason for notification	'Test' or 'Alarm' followed by a short description
Time of notification	<i>Date and Time</i>
Instrument ID	<i>Serial No. and Location</i>
Status of current Disk	<i>Free memory / Total memory</i>
Status of Internal Battery	<i>Full, High, Low, Critical, Charging or Unknown</i>
Trigger Input Voltage (if available)	<i>The voltage</i>
Measurement Status (if available)	<i>Running, Paused or Stopped</i>
No. of Sound Recordings (if available)	The number
Latest CIC Result (if available)	<i>Passed, Background noise too high, Ratio outside tolerances, Ratio deviates from Ref., Undefined Ref., or Undefined</i>
Current value of LAF (if available)	The value

**Note:** some of the information listed above may not be available, depending on the conditions when the notification was sent, e.g., no measurement values will be available immediately after a power on.

### SMS Notifications


SMS notifications can be used if you have connected a GSM/GPRS/EDGE/HSPA serial modem to the analyzer (see section 8.2.1).

In addition to sending SMS notifications initiated by alarms, you can send an 'INFO' SMS to the analyzer and ask for an SMS notification, after which you will get a notification within 5 minutes.

You need to setup a *Phone Number* in *Preferences, Notifications, SMS* and set *Active* to *Yes* for the SMS. You can also add a Name for the number for easier identification.

You can setup two individual SMS phone numbers for sending the SMS notification to two recipients.

Set *Notification* to *SMS* and a notification will be sent by SMS to the active phone numbers, when any of the alarm conditions are met, or if the analyzer receives an 'INFO' SMS.

You can test the system by tapping on the Main Menu icon  and selecting "Send Notification via SMS".

**Note 1:** Two to three SMS's will be used to send the complete notification – depending on the content and language settings.



**Note 2:** SMS's cannot be sent or received while the analyzer is connected to BZ-5503 or On-line display.

**Note 3:** If you don't want the ability to connect to the analyzer using BZ-5503 and prefer to use the SMS Notification facility, then you can set *Modem = Disabled*, in which case the SMS Notification functionality will still be available. After having sent an 'INFO' SMS to the analyzer a notification will be sent out within 30 seconds.

### E-mail Notifications

E-mail notifications can be used if the analyzer is connected to a network with access to a mail server. This can typically be done if the analyzer is connected through LAN or by a GPRS/EDGE/HSPA serial modem (see section 8.2.2 and 8.3).

Go to *Preferences, Notifications, E-mail* and setup details for the E-mail account under the *To* parameter. The details consist of the SMTP server name, the SMTP port used, whether SSL/TLS is required or not, the Account, the Username and Password for the account – please consult Appendix D Section D.10 and your e-mail provider for more details.

Set *Notification to E-mail* and a notification will be sent by e-mail when any of the alarm conditions are met.

You can test the system by tapping on the Main Menu icon  and selecting *Send Notification via E-mail*.

### Example of e-mail:

Subject: E-mail from 2479719 Abbey Road Test: Manual e-mail  
 Test: Manual e-mail  
 29-04-2009 12:51:16  
 Instrument 2479719 Abbey Road  
 SD-Card 383 MB / 483 MB  
 Internal Battery Charging  
 Trigger Input Voltage 13.5V  
 Measurement Status Running  
 No. of Sound Recordings 13  
 CIC Result Passed  
 LAF 45.8dB

## 8.5 Web-server

To connect to the instrument using an Internet Browser, the following conditions must be fulfilled:

- The instrument must be connected to a network as described in Sections section 8.2.2, section 8.2.3 and section 8.3
- The Internet Browser must support Java scripts

The web page of the instrument has been tested on the following Internet Browsers:

- Microsoft Internet Explorer, from version 7
- Mozilla Firefox, from version 3
- Google Chrome, from version 2
- Apple Safari, from version 4

You may also be able to connect to the instrument using Internet Browsers on mobile phones and iPhones.

### **Password Protection**

Connection to the instrument is password protected. There are two levels of protection:

- Guest - for viewing only
- Administrator - for viewing and controlling the instrument

### **Username and Password**


Under *Preferences* you set the *Username* and *Password* individually for the *Guest* and for *Administrator* accounts.


You need to specify *Username* and *Password* for the administrator, however, you can specify whether the guest requires a login or not.

## **8.6 Preparing your Measurements**

You can prepare your measurements in advance by making job folders, setting up the correct measurement parameters in the templates, defining settings for metadata and by making checklists (see example in Fig. 8.8) either as memos containing addresses and phone numbers of relevant people, or notes that have been partly filled-in beforehand, where you just have to fill in the final information on location. The notes can be attached to jobs as annotations, and can be copied onto projects, when necessary.

**Fig. 8.8**  
Example notes screen

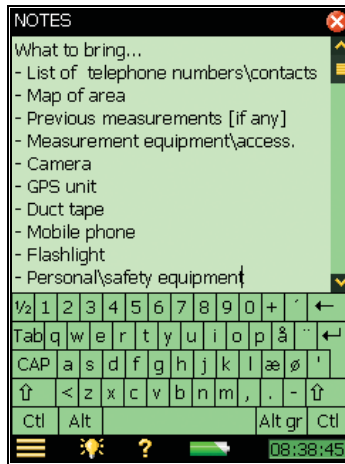

When you have finished typing in your note, tap the  icon to accept the changes and save it as a text annotation. See section 3.5 for more details on annotations.

## 8.6.1 Metadata

For easy and convenient use of metadata, it is an advantage to define the settings for the metadata entered and displayed on the *Annotations* screen (see section 3.5) in advance.

Define settings for each of the 10 metadata. Tap the **Edit** icon in front of the metadata you want to edit (Fig.8.9) to define:


- *Metadata:*
  - Enabled (visible and editable on the Annotations screen) or
  - Disabled (invisible on the Annotations screen)
- *Name:* Insert a name preceding the metadata value when displayed on the annotations screen
- *Type:* Select a type suitable for your metadata. Select between:
  - Text: The metadata is the text you enter or edit using the alphanumeric keyboard
  - Pick List: The metadata are selected from a list of up to 15 user-defined texts
  - Number: The metadata number is entered using the numeric keyboard
  - Index: The metadata number is automatically incremented after creating the project
  - Not defined: The metadata are removed from the project. This will be the initial state of metadata for old projects without metadata.
- *Entry No.:*
  - For Type = Pick List.
  - The entry number for the text to be defined in the pick list. Select the required number and enter text in the Entry Text field

- *Entry Text:*
    - For Type = Text: The text
    - For Type = Pick List: The text for the selected Entry No.
  - *Current No.:* For Type = Number: The number
  - *Current Index:* For Type = Index: The index.
  - *Step:*
    - For Type = Index.
    - The Current Index is incremented with Step after creation of a project.
    - The index wraps around when exceeding Upper Limit or getting below Lower Limit.
- Note:** Step can be negative
- *Upper Limit:* For Type = Index: The upper limit of the index
  - *Lower Limit:* For Type = Index: The lower limit of the index

At the top of the screen you can set a checkmark to use the settings for this metadata on new projects when closing the display.

The checkmark is disabled for changes to the definition of the metadata currently in use because this will always be used for new projects, however, when you are editing or looking at metadata from a previously saved project you can decide whether to use the settings on new projects too or keep the changes to the project only.

**Fig. 8.9**  
Edit metadata

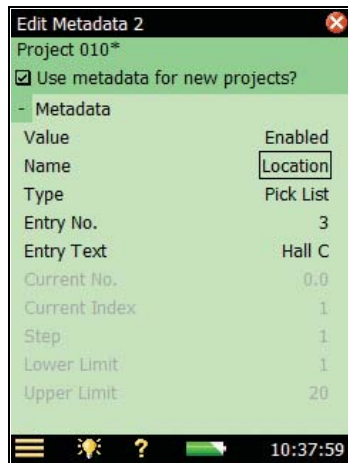

## 8.6.2 Timers and Automatic Measurements

Automatic control of the analyzer is available via one or more of the analyzer's timers (up to ten).

The purpose of a timer is to initiate measurements in the absence of an operator. Basically, a timer will:

- Switch on the analyzer at a preset time
- Load a preselected template
- Start a measurement as specified in the template
- Stop the measurement after a preset time defined by the Timer Setup
- Save the measurement
- Switch the analyzer off
- Repeat the above a preset number of times at preset intervals


For a timer to work, the analyzer must be in the ‘switched off’ state.



A timer will never interrupt the analyzer if it is already in use manually. If a switch-on time is during the time the analyzer is in use, the timer opportunity is lost.

You can control the analyzer during a timer-initiated measurement as long as this does not affect the measurements. If you try to change any parameters affecting the measurement you will be warned of this. If you persist, the analyzer will revert to manual control and timer control cannot be resumed.

The Timer Setup lists the timers that have been defined previously on the analyzer (i.e., added by you or previous users).

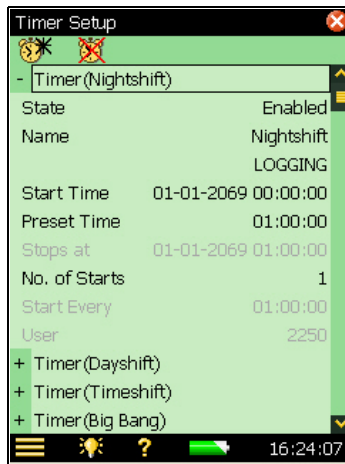**Fig. 8.10**  
*Example Timer Setup*



In the topmost line you can add other timers by tapping on the Add New Timer icon . You can delete a timer from the list by tapping on the Delete Timer icon . Only timers created by the current user can be deleted – to delete a timer defined by another user, you have to logon as the other user and then delete the timer.

For each timer you can specify:

- *State*: Enable or disable the timer
- *Name*: Name the timer
- *Template*: Select the template you want to use for the measurement.  
**Note:** Reverberation Time templates are not available for timer control
- *Start Time*: Set the start time – at least 3 minutes ahead of current time
- *Preset Time*: Set the preset time for the measurement – regardless of the settings in the template used by the timer
- *Stop Time*: The time when the measurement stops – for information only
- *No. of Starts*: Set to the total number of times you want to start the measurement
- *Start Every*: The time interval between the start of each successive measurement. This interval must be greater than *Preset Time* + 3 minutes
- *User*: The user who specified the timer. Cannot be changed

# Chapter 9


---

## Updating and Upgrading Applications, Maintenance, Calibration and Troubleshooting

### 9.1 How to Install New Applications

Sound Level Meter Software BZ-7222, Frequency Analysis Software BZ-7223, Logging Software BZ-7224, Enhanced Logging Software BZ-7225, Sound Recording Option BZ-7226, Reverberation Time Software BZ-7227, Building Acoustics Software BZ-7228, FFT Software BZ-7230, Tone Assessment Option BZ-7231 and Noise Monitoring Software BZ-7232 are pre-installed on Types 2250 and 2270. In addition Dual-channel Building Acoustics Software BZ-7229 are pre-installed on Type 2270. However, a valid license is required to run the software. If you have purchased the instrument together with the software application(s), then the relevant license(s) will come pre-installed on the instrument.

If you purchase a separate software application for your analyzer, then you have to install the license on the instrument. This is done using Utility Software for Hand-held Analyzers, BZ-5503, please consult the on-line help included with the BZ-5503 software for instructions on how to install a license.

Tap , on the instrument's screen, then **About** to get a list of installed software and licenses.

### 9.2 How to Update/Upgrade Applications and Install New Languages

When new versions of the analyzer software become available, you may want to install the software on your instrument. This is done using the Utility Software for Hand-held Analyzers, BZ-5503, or if the analyzer is connected to the Internet, by the analyzer itself. Some software versions will be free updates, and some will be upgrades requiring that a new license is purchased.

### 9.2.1 Update/Upgrade using BZ-5503

BZ-5503 can be used for updating or upgrading new software applications on your analyzer. It can even downgrade to specific software versions if required by type approving authorities. Using BZ-5503 you can also install your preferred language and you can install licenses for the specific applications. Installation requires a USB connection between BZ-5503 and the analyzer.

The BZ-5503 software will clearly indicate if the new software version is an update (free of charge) or an upgrade (license fee). Please consult the on-line help included with the BZ-5503 software for instructions on how to install upgrades/updates of the software, together with your preferred language.

Tap , on the instrument's screen, then **About** to get a list of installed software and licenses.


### 9.2.2 Update Through the Internet

The analyzer can update software by itself, if it is connected to the Internet – see section 7.1.

This method is particularly useful if the analyzer is used for long term monitoring, and you don't want to go to the measurement site for servicing (ie., you want to disturb the measurement as little as possible).

**Note:** The method is used for updating the software with the latest version available from the Brüel & Kjær web-site. The languages already installed will be updated at the same time, but you cannot install new languages or licenses – to do this use BZ-5503.

The update procedure is as follows:

- 1) Tap , on the instrument's screen, then **About** to get a list of installed software and licenses. Scroll down to the bottom of the screen and tap the *Check for updates on the web...* > link, the Software Update screen appears – see Fig.9.1 and Fig.9.2.

**Note:** This can be done remotely if you connect to the on-line display using either BZ-5503 or an Internet Browser.

- 2) Click on the **Check for Updates** button to check for the latest updates. This will connect to the Brüel & Kjær update server – if a new software version is available the build version will be displayed and you can start the update (you will be warned, if the new version requires a new license) or decline the update. If the versions that are available are not later than those already installed you will be told so and the update will be terminated.
- 3) If you choose to update the analyzer will start downloading the new software on the CF- or SD-card (required) already inserted in the analyzer. You need at least 100 MByte of free space on the memory card. Depending on the speed and quality of the Internet connection, this can take from a few minutes to several hours. If the connection is lost, then the download will automatically continue when connection is established again.

**Note:** The analyzer can continue measuring during the download period.

- 4) When download is complete, the measurement is paused and normal use of the instrument is prevented. Connections to the instrument are terminated and the upgrade of the



instrument will start. This will take 10-15 minutes and the analyzer will reboot when finished. Any unsaved logging data will be saved and the analyzer is ready to use again.


- 5) Connect to the instrument again and verify the new software version by tapping **?** on the instrument's screen, then **About**.

To continue the measurement, press the **Start** pushbutton.

**Note:** If you have set up your instrument for e-mail notifications (see Section 8.4), then you will get an e-mail in step 4), when the analyzer is paused, and you will get a new e-mail in step 5), when the analyzer has rebooted and is ready for connection again.


**Fig. 9.1**

About screen - Showing the 'Check for updates on the Web link'

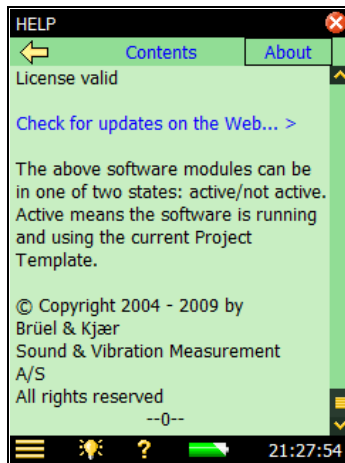

**Fig. 9.2**

Software update screen - Showing the 'Check for updates button'

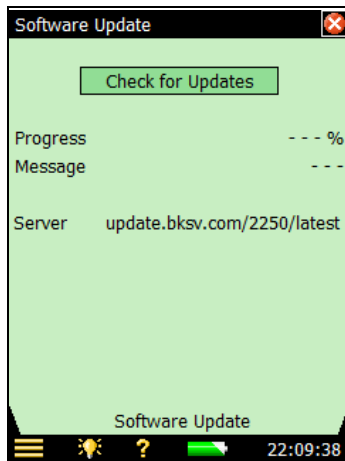

### 9.2.3 Downgrade to an Earlier Version

It is possible to downgrade to an earlier version of the software:

- 1) Change the “*latest*” part of the server address (see Fig.9.2) to the requested software package, e.g., “SW22”
- 2) Press **Check for updates**.
- 3) Follow the procedure described in section 9.2.1 or section 9.2.2.

**Note:** Only software packages equal to or above SW24 can downgrade to another package. Software packages down to SW21 are available for update through internet.

## 9.3 How to Move a License

If you have more than one analyzer, you may want to share application software between the instruments. You can do this by moving the license from one analyzer to another by using Utility Software for Hand-held Analyzers BZ-5503, together with the License Mover VP-0647.




If you lend out your analyzer, you may want to temporarily ‘un-install’ applications not needed. This can be achieved by moving the license of the application to License Mover VP-0647. When needed again, you move the license back to your analyzer.

Please consult the on-line help included with the BZ-5503 software for instructions on how to move a license.

## 9.4 Troubleshooting


### 9.4.1 Analyzer Measurements

If your analyzer measurement seems to be wrong, then:

- Check the cabling, if any
- Check that the microphone, including preamplifier, is correctly mounted in the top socket (or correctly connected to the extension cable)
- Check that the *Input* parameter is set to *Top Socket/Rear Socket* in agreement with how you are going to use the input. This is found by tapping the Main Menu icon , then **Setup**, followed by *Input*
- Check that the transducer you have mounted on your analyzer is selected as the *Transducer Used* parameter, this is also found in the **Setup** menu
- Check whether the parameters for the selected transducer (*Transducer Used*) are set correctly, especially the *Microphone Type* and *Polarization Voltage* parameters. These are found by tapping the Main Menu icon , then **Transducers**
- Check that the *Sound Field* and *Windscreen Correction* parameters have been set correctly. These are found by tapping the Main Menu icon , then **Setup**, followed by *Input*
- Check if the calibration is OK (make a new calibration using an external calibrator)

## 9.4.2 SD and CF Cards

The Logging, Enhanced Logging and Sound Recording software requires that measurements are saved on SD or CF memory cards. If you experience problems in storing or recalling data on memory cards, you can check and repair the integrity of the file system on the memory card or even re-format it, by doing the following:

- 1) Insert the memory card in the correct slot of the connector panel of the analyzer, see Fig. 2.2.
- 2) You will be notified that a memory card has been inserted – select *Yes* to change the default measurement path to the memory card.
- 3) Tap the Main Menu icon and then **Explorer**.
- 4) Tap the  icon to go up folder levels until you have reached the topmost level with a list of the available memory devices.
- 5) Tap the name of the memory card (not the icon) to get a list of available commands.
- 6) Select **Check and Repair** to start the procedure. If any errors are found in the file system, they are fixed. When finished, you will be informed whether the memory device was OK or that errors have been fixed.

**Note:** the checking procedure can take several minutes, depending on the size of the memory card.

Formatting a memory card:

- 7) Select **Format** to start the formatting procedure.



**WARNING:** All data on the memory card will be erased during the formatting process.

**Note:** the formatting procedure can take several minutes – depending on the size of the memory card.



**WARNING:** Do not remove the memory card or switch off the instrument during the procedure – this might damage the file system and data and make the card unusable.


**Note:** The read/write performance of SD and CF memory cards varies a lot. The performance depends on the manufacturer of the card, the type of card, the size of card and even on the day of production of the card – two ‘identical’ cards can have a different performance because the manufacturer has changed the internal technology without notice.



In general, as a rule of thumb, you should select cards aimed for the industrial or professional photographer market.

The cards delivered by Brüel & Kjær have all been tested for their read/write performance in the analyzer and can be used for the applications available in the analyzer. If you need more (or other) types of card, please consult your local Brüel & Kjær representative.

Remember to regularly re-format the card (especially before a long unattended measurement) – this will ensure the best performance of the card.

### 9.4.3 Battery Pack and Recalibration of Battery Charge Indicator

The software keeps the capacity of the battery pack updated. Over time the total capacity of the battery pack decreases. If you find that the 'Time Remaining' estimate (tap the battery icon  to get this information) does not match the real time remaining (e.g., the instrument switches off automatically because of lack of power while the Time Remaining estimate indicates at least ½ hour), then you should manually re-calibrate the capacity of the battery pack. This is done using the following method:

- Drain all the power from the battery:
  - Switch the instrument on
  - Disconnect external power
  - Disconnect the instrument from the PC
  - In the **Preferences** menu, under *Power Settings*, set *Standby After* to *Never*
  - You may want to set *Backlight On* to *Always* (in the same menu) and select the maximum level of display backlight in order to drain the battery faster (use the Backlight icon  at the bottom of the screen)
  - Leave the instrument until the battery voltage becomes so low that the instrument switches itself off
- Charge the battery fully (at least 10 hours):
  - Connect the Mains Power Supply ZG-0426 to the instrument
  - Switch the instrument on (and leave it on) and remember to reset the *Standby After* and *Backlight On* to your preferred settings
  - Tap the battery icon  and a pop-up appears, giving details of the battery condition. This will indicate 'Calibrating Battery' initially. Let the battery charge until the battery charge indicator just below the power socket starts flashing and the 'Calibrating Battery' indication has disappeared from the pop-up window

### 9.4.4 Touch Screen

If tapping with the stylus on the screen seems to be getting more inaccurate, you can adjust the touch sensitive screen, as follows:

- In the **Preferences** menu, under *Display Settings* activate the link *Adjust Touch Screen*. This displays a full screen with guidance on how to tap a cross five times at different places on the screen. The adjustment procedure ends with saving the values or canceling the adjustment

### 9.4.5 Reset Options

#### Reset Button



**WARNING:** Unsaved data or setups will be lost when you reset the instrument.

If your analyzer stops responding to pushbutton presses, or stylus taps:


- Reset and reboot the instrument by pressing the reset button (located on the connector panel – see Fig. 2.2 in Chapter 2) with the point of the stylus

## Instrument Reset

If you still experience problems:


- Reset the instrument to a default state, where the user is set to 2250 (for Type 2250) and 2270 (for Type 2270), the project template is set to **SOUND LEVEL METER** and *No Transducer* is selected. The existing **SOUND LEVEL METER** project template will be overwritten, as will the preferences for user 2250 (for Type 2250) and 2270 (for Type 2270). To reset the instrument to the default state:
  - Press and hold the power-on pushbutton for at least 5 seconds (power off)
  - Press and hold down the **Commentary** (ⓘ) and **Save** (💾) pushbuttons while switching on the instrument. The display in Fig. 9.3 will be shown.

**Fig. 9.3**  
*Maintenance Mode –  
initial screen*

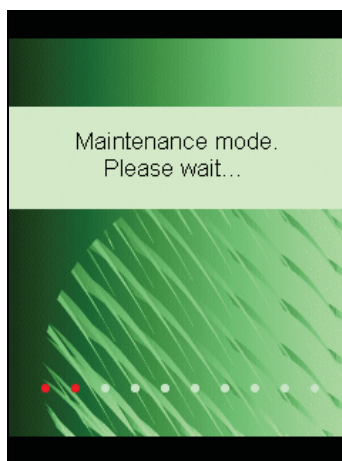


Within a few seconds the display in Fig. 9.4 will be shown.

**Fig. 9.4**  
*Update 2250 software  
screen*

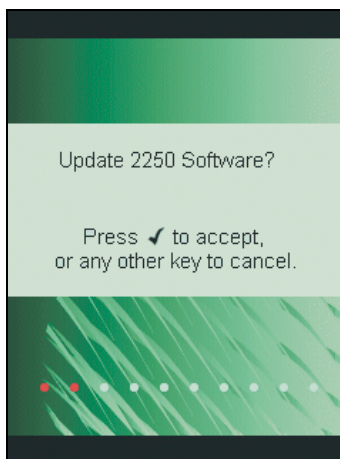

Press any other pushbutton than the **Accept** pushbutton (✓) to continue.

**Fig. 9.5**  
Reset to default settings  
screen

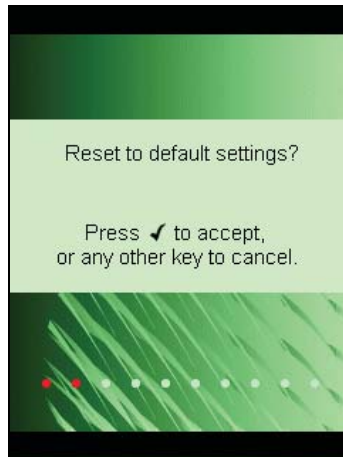

Press the **Accept** pushbutton (✓) to reset to default settings.

If the instrument now functions normally, you should select the correct transducer again in the **Transducers** menu, make your preferred settings in the **Preferences** menu, adjust the touch screen again and make necessary changes to **Setup** (all accessed via the Main Menu ≡).

If you experience problems selecting the correct transducer again, or selecting another template or you login as another user, then note which step causes the problem. You might need to delete a transducer, or delete/reconfigure templates or users.



**WARNING:** If you delete a transducer, the calibration history will be lost.

You can delete a transducer from the transducer database by tapping the Delete Transducer icon (see section 4.8).



To delete/reconfigure templates or users you can use Utility Software for Hand-held Analyzers BZ-5503, with the instrument connected to the PC using the USB interface cable (AO-1476) or a modem connection. Please consult the on-line help included with the BZ-5503 software for instructions on how to configure the analyzer.

### Re-installing Software

If the instrument still does not work normally after performing the 'Reset to Default Settings' procedure, then the software might need to be re-installed. This can be done in two ways:

- 1) If the connection to Utility Software for Hand-held Analyzers BZ-5503 works with the instrument connected to the PC using a USB cable, then the software can be re-installed and re-configured through the USB cable. Please consult the on-line help included with the BZ-5503 software for instructions on how to re-install software on the analyzer.
- 2) If the connection to the PC does not work, then you need a Compact Flash card (size at least 64 Mbytes) and a Compact Flash card reader for the PC. You can then use Utility

Software for Hand-held Analyzers BZ-5503 to update the Compact Flash card with the necessary files. Please consult the on-line help included with the BZ-5503 software for instructions on how to update a Compact Flash card with installation files for the analyzer.

Power off the analyzer and insert the compact flash card in the CF slot on the instrument. Then press and hold down the **Commentary**  and **Save**  pushbuttons while switching on the instrument. The Maintenance Mode initial screen will be displayed, and then within a few seconds the screen shown in Fig. 9.4 will appear.

Press the **Accept** pushbutton  to update the software. This will take approx. 5 minutes.



**WARNING:** Do not remove the CF-card while updating the analyzer software!

When the analyzer software has been updated, you will get the option of resetting to the default settings.

If the problem still persists, then you should contact your local Brüel & Kjær representative.

## 9.5 Care, Cleaning and Storage

The analyzer is a delicate precision instrument. When handling, storing or cleaning your instrument, please take the following precautions.

### 9.5.1 Handling the Instrument

- Do not try to remove the microphone grid as you can easily damage the microphone in this way
- Do not attempt to open the instrument. There are no user-serviceable parts inside. If you think your instrument requires service, please contact your Brüel & Kjær representative
- Do not allow the instrument to get wet
- Protect the instrument from impact. Do not drop it. Transport it in the supplied carrying pouch

### 9.5.2 Cleaning the Instrument

If the instrument casing becomes dirty, then wipe it with a lightly dampened cloth. Do not use abrasive cleansers or solvents. Do not allow moisture to enter the microphone, connectors or casing.

### 9.5.3 Storing the Instrument

- Keep the sound level meter in a dry place, preferably within its carrying pouch
- For long-term storage, remove the battery pack
- Do not exceed storage temperature limits of  $-25$  to  $+70^{\circ}\text{C}$  ( $-13$  to  $+158^{\circ}\text{F}$ )

## **9.6 Services at Brüel & Kjær for Types 2250 and 2270**

### **9.6.1 Accredited Calibration**

For Types 2250 and 2270, you can order accredited calibration and choose between DANAK, A2LA, UKAS, Eichamt (Austria), RvA, ENAC, NATA and Inmetro.

For Spain, Primitiva is available.

The calibration will be performed in an ISO 17025 certified laboratory.

### **9.6.2 Initial Calibration**

To start the measurement history from day one – if this is required, for example, for measurement use in public, for customer audit or quality procedures – we recommend you order accredited calibration together with the new instrument.

### **9.6.3 Regular Re-calibration**

To fulfil requirements for public measurements and to minimise the cost of errors due to faulty or inaccurate measurements, we can arrange for calibration every year in an ISO 17025 certified laboratory at Brüel & Kjær. With annual data, you will have an unbroken history to use as reference, either for internal requirements, for audit required by authorities or at the request of your customers. And not least, you can follow the history of sensitivity for your instruments over time.

### **9.6.4 Filter Calibration**

- You can order calibration of filters. Please specify at the time of ordering.
- Calibration of filter response for octave and 1/3-octave filters according to IEC 61260.

### **9.6.5 Service and Repair**

The hand-held analyzer is designed and constructed to provide many years of reliable operation. However, if a fault occurs that impairs the analyzer's correct function, then remove the battery pack and disconnect any external power supply to prevent risk of further damage.

For more information about preventing faults or damage to your sound level meter, see section 9.5.

### **9.6.6 Hardware Maintenance and Repair**

You can minimise the risk of unexpected costs by purchasing the hardware maintenance with a five years warranty. Minor repairs, such as those resulting from damage caused by unauthorised use of the instrument, can be performed at the same time as the instrument is being calibrated at Brüel & Kjær. This will save you time. If any other errors are detected by the technician during calibration, repair will be performed before returning the instrument to you.

Repair is available at a fixed price, which includes a Conformance Test Certificate upon the return of your instrument (no measurement data included).



### 9.6.7 Rental

To ensure optimal uptime, you can rent a substitute Hand-held Analyzer<sup>a</sup> while yours is being calibrated. To arrange rental, please contact your local Brüel & Kjær representative.

### 9.6.8 Training

Basic knowledge on sound and vibration measurement, instrument training and application training are a few examples of what local training or consultancy hours<sup>a</sup> can do for you. To find out more about training and consultancy hours, please contact your local Brüel & Kjær representative.

---


<sup>a</sup> Providing this service is available from your local Brüel & Kjær office



# Chapter 10

## 1/1- or 1/3-octave Frequency Analysis (Optional Module)

Frequency Analysis Software BZ-7223 enables you to make 1/1-octave or 1/3-octave measurements and broadband sound level measurements simultaneously.

Check the About Menu to see whether you have the license to run the frequency analyzer. The About Menu is accessed from the built-in help – tap  on the shortcut bar, then select **About**. See Chapter 9 for instructions on installing the license for the frequency analyzer.

### 10.1 Setting up the Instrument

The frequency analyzer measures the following spectrum parameters together with full spectral statistics during timed measurements:

- $L_{Xeq}$
- $L_{XFmax}$
- $L_{XSmax}$
- $L_{XFmin}$
- $L_{XSmin}$


where X is the frequency weighting A, B, C or Z.

These spectra and the spectral statistics are saved in the project together with the measured sound level meter (broadband) parameters.


The spectral statistics can be viewed as  $L_{XYN}$  percentile spectra, where Y is the time weighting F or S and N can be one of 7 defined percentiles.

In addition, the instantaneous spectra  $L_{XF}$  and  $L_{XS}$  are always available.


- 1) Select the **FREQUENCY ANALYZER** Project Template. (See section 3.3.1 for more details on templates.) The Project Template is displayed at the top of the screen, if it does not display **FREQUENCY ANALYZER**, tap the black bar at the top of the screen and select **FREQUENCY ANALYZER** from the drop-down that appears.

- 2) Tap the Main Menu icon  and select **Setup** from the list of options. Set the *Broadband* and *Spectrum* parameter to A, B, C or Z, as required. (A/B-weighting is determined by setting the parameter in *Setup, Frequency Weightings, Broadband (excl. Peak)*).


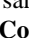
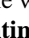
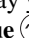
Then, under *Bandwidth*, set the *Bandwidth* parameter to 1/1-octave or 1/3-octave before making the measurement.

To exit the screen, tap the  icon.

**Fig. 10.1**  
Setting the frequency  
weighting and bandwidth  
parameters

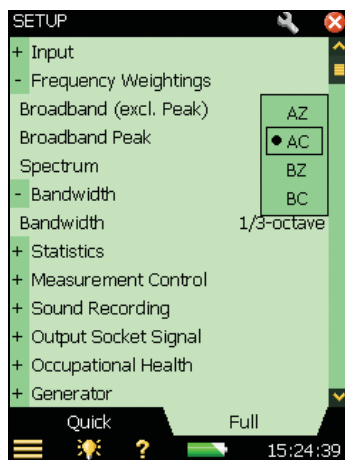

## 10.2 Controlling the Measurement

The measurement is controlled in the same way you would control a normal sound level meter measurement, using **Start/Pause** , **Continue** , **Back-erase**  and **Reset**  pushbuttons, see Chapter 3 for more details.

The measurement can control a generator connected to the Output Socket on the Connector Panel (see Fig. 2.2). Enable the generator by setting the *Source* parameter to *Generator* in *Setup, Output Socket Signal*, then set up the generator settings in *Setup, Generator*. The generator will be controlled using Escape Time and Build-up Time, as described in Fig. 14.3.



## 10.3 Displaying the Results

The frequency analyzer measurement screen includes three tabs at the bottom: *Spectrum*, *Broadband* and *XL View* (Extra Large View). The tabs allow you to choose different ways of displaying the measurement results. All but the *Spectrum* tab have been covered in Chapter 3. However, a quick recap is provided below.



The *Broadband* view shows an instantaneous  $L_{AF}$  readout, with associated bar graph and four measurement parameters, followed by two measurement setup parameters. (The first measurement parameter is displayed in a larger font size for better readability.)

The *XL View* increases the size of the first parameter readout to a 4 digit, full-screen display (including decimal point).

The *Spectrum* view, (which only appears as a tab if Frequency Analysis Software BZ-7223 is enabled), shows two different spectra parameters being measured simultaneously. In the example in Fig. 10.2,  $L_{ZFmax}$  and  $L_{ZF}$  are being viewed at the same time.


Note the Reference Spectrum  and Main Spectrum  icons, indicating which spectrum belongs to which parameter.


- 1) Select which spectra to view by tapping the parameter fields in the two lines above the spectrum display.

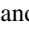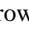These lines also include readouts of the spectrum values highlighted by the spectrum cursor. Tap the spectrum at the frequency of interest - or just tap anywhere in the spectrum area and then move the cursor to the position of interest using the left  and right  arrow pushbuttons.

To the right of the spectrum, two broadband bars (of the same parameters) are also displayed.


**Fig. 10.2**  
*Displaying the results –  
spectrum screen*

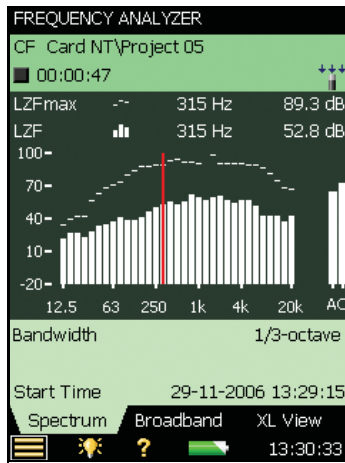


- 2) Scale the Y-axis (left-hand vertical scale of the graphical display) by tapping on the scale and accessing the drop-down menu, see Fig. 10.3. (You can also select the spectrum cursor and press the **Accept**  pushbutton.)

**Fig. 10.3**

Scaling the Y-axis on the  
Spectrum display

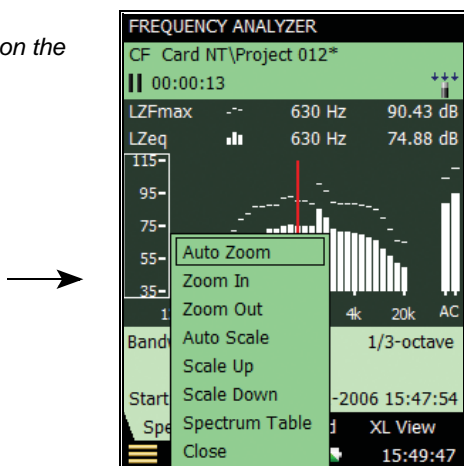


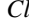
- 3) Select *Auto Zoom* to adjust the range of the Y-axis for best fit of the measured spectrum.
- 4) Select *Zoom In/Zoom Out* to adjust the zoom.
- 5) Select *Scale Up/Scale Down* to adjust the full scale value on the Y-axis – or select *Auto Scale* to select the best scaling for viewing the spectra – without adjusting the zoom.
- 6) *Spectrum Table* displays the spectrum in tabular form – as in Fig. 10.4. Press the Table Format icon  at the top of the screen to select between three different viewing formats:
  - *Two Parameters*: for displaying values from both spectra
  - *One Parameter*: for displaying values from the main spectrum only (available for Reverberation Time Software only)
  - *One Parameter (wrap)*: for displaying values from the main spectrum only, but with the columns wrapped on the display to allow as many values as possible on the screen


**Fig. 10.4**

Spectrum table

Spectrum Table		
Freq.	T30	T30Status
100 Hz	0.68 s	F%
125 Hz	0.60 s	k
160 Hz	0.79 s	%k
200 Hz	0.88 s	
250 Hz	1.02 s	%k
315 Hz	1.00 s	
400 Hz	1.12 s	k
500 Hz	0.79 s	
630 Hz	0.74 s	
800 Hz	0.63 s	
1 kHz	0.70 s	
1.25 kHz	0.61 s	
1.6 kHz	0.62 s	
2 kHz	0.64 s	
2.5 kHz	0.68 s	
3.15 kHz	0.61 s	

7) To exit the Spectrum Table, tap the  icon.

8) *Auto Zoom* and *Auto Scale* automatically close the drop-down menu, otherwise, select *Close*, tap outside the drop-down list or use the left arrow  pushbutton to close the menu.


**Hint:** a quick way of auto zooming is to tap anywhere in the spectrum and then press the **Accept**  pushbutton twice.

Some parameters are calculated based on the spectra:

- SIL, PSIL, SIL3 and  $L_{Xeq}(f1-f2)$  are calculated during the measurement and saved together with the other measurement data
- The Noise Parameters NC, NR, RC, NCB, Loudness and Loudness Level are for display only and calculated based on measured  $L_{Xeq}$  spectra. This means that whenever you have a  $L_{Xeq}$  spectrum you can also calculate and display these parameters
- NC, NR, RC and NCB are defined for 1/1-octave  $L_{Zeq}$  spectra, however, NC, NR, RC and NCB are calculated for any frequency weighting and any octave bandwidth. A-, B- and C-weighted spectra are converted to Z-weighted spectra and 1/3-octave spectra are converted to 1/1-octave spectra before the calculation
- Loudness and Loudness Level are calculated for 1/3-octave spectra with any frequency weighting. A, B and C weighted spectra are converted to Z-weighted spectra before the calculation

If 1/1-octave  $L_{Zeq}$  spectra have been measured, then you can display a Noise Curve together with the  $L_{Zeq}$  spectrum, see example in Fig. 10.5.

**Fig. 10.5**  
*Displaying a Noise Curve together with the  $L_{Zeq}$  spectrum*

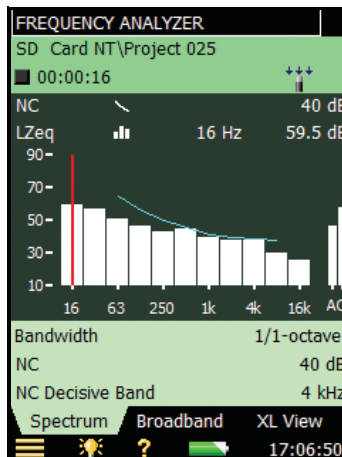








For RC and NCB you also have the possibility of displaying the limit curves for Rumble and Hiss, and for Rattle and Vibration together with the 1/1-octave  $L_{Zeq}$  spectrum.

### 10.3.1 Smileys

A smiley will be shown to the right of the project name if there are any issues with calculating noise parameters, or displaying noise curves (see the overview in Table 10.1).

**Table 10.1** Overview of Smileys

Smiley	Explanation	Description
	No Loudness for 1/1-octaves	Select 1/3-octave
	No $L_{eq}$ parameter logged	Select a $L_{eq}$ spectrum for logging
	Sound Field Mismatch for Loudness	Set the <i>Loudness</i> parameter in <i>Input</i> in accordance with the <i>Sound Field Correction</i>
	Frequency bands outside Noise Curves	Levels are lower or higher than any noise curve band
	Noise Curves require use of Mic.	Select a microphone
	Display Noise Curve with $L_{Zeq}$	Noise parameters are calculated but Noise Curves can only be displayed together with $L_{Zeq}$
	Noise Curve for 1/1-octaves only	Noise parameters are calculated but Noise Curves can only be displayed for 1/1-octaves

## 10.4 Saving Results

Measurements are saved and can be viewed later, in the same way as described for the Sound Level Meter Project in Chapter 3.



# Chapter 11

---

## Logging (Optional Module)

Logging Software BZ-7224 enables you to measure and save data periodically on SD- or CF-Cards. The module is optimised for attended use, which means that while measuring you can annotate any sound on-line, as well as ‘mark’ up to five different sound categories on-line.

The main benefit is that data is documented on-site and is therefore ready for post-processing and reporting back at the office using Utility Software for Hand-held Analyzers BZ-5503 or other post-processing software such as Noise Explorer Type 7815, Evaluator Type 7820, Protector Type 7825 or Microsoft® Excel.

In addition to measuring broadband parameters (see Chapter 3) and spectra<sup>a</sup> (see Chapter 10), the logging module allows you to simultaneously log the following parameters:

- Broadband Parameters (including broadband statistics)
- Spectra<sup>a</sup> (including spectral statistics)
- Broadband Parameters every 100 ms
- Record the measured signal<sup>b</sup>


An overview showing the options available during a typical logging task has been provided in Table 11.1.

---

a. Requires Frequency Analysis Software BZ-7223  
b. Requires Sound Recording Option BZ-7226

**Table 11.1** Overview of options available during a typical logging task


Selection	Period	Broadband Parameters	Broadband Statistics	Spectral Parameters	Spectral Statistics
<i>Logged</i>	1 s – 24 h	1 to 10 or All (32)	None or Full	0 – 3 or All (5)	None or Full
<i>Logged (100 ms)</i>	100 ms	None, $L_{Aeq}$ , $L_{AF}$ and/or $L_{AS}$	None available	None available	None available
<i>Total</i>	Elapsed Time	All (45)	Full	All (5)	Full

Check the **About** Menu to see whether you have the right license to run the Logging module. (The **About** Menu is accessed from built-in help – tap , on the shortcut bar, then **About**.) See Chapter 9 for instructions on installing the license for the Logging Module.


## 11.1 Setting up the Instrument

- 1) Select the **LOGGING** Project Template. (3.3.1 for more details on templates.) The Project Template is displayed on the black banner at the top of the screen. If this banner does not display **LOGGING**, tap the banner and select **LOGGING** from the drop-down that appears.

**Note:** The Logging Project Template assumes you have a license for the Frequency Analysis Software. If not, then select the **LOGGING SLM** Project template instead.


- 2) Insert an SD or CF memory card in the slot for SD or CF cards (see items 9 and 10 in Fig. 2.2). You will be notified that a memory card has been inserted – select *Yes* to change the default measurement path to the memory card.
- 3) Tap the Main Menu icon  and select **Explorer** from the list of options. Create a job folder for the measurements and set the default measurement job/path as described in Chapter 6.

**Note:** You cannot log data on the internal disk.

- 4) Tap the Main Menu icon  and select **Setup** from the list of options. The Setup screen will appear, see Fig. 11.1. Set the *Input*, *Frequency Weightings*, *Bandwidth*<sup>a</sup> and *Statistics* parameters as required for the Sound Level Meter and Frequency Analyzer<sup>1</sup> measurement, see Chapter 3 and Chapter 10 respectively. These settings are common to both the logging and the total measurement.

a. Requires Frequency Analysis Software BZ-7223

**Fig. 11.1**  
The Setup screen

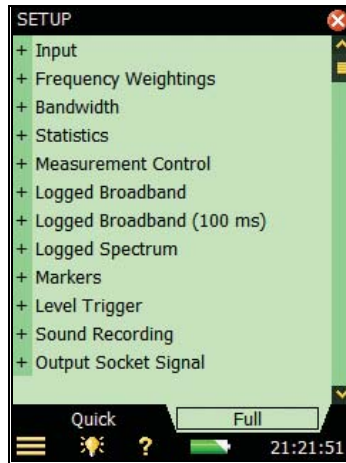

- 5) Under the *Measurement Control* parameters, set the *Measurement Time* and *Logging Period* as required. Set *Synchronize with clock* to *Yes* if you want the logging to synchronise with whole minutes or hours. For example, if *Logging Period* is set to 1 minute and you start the measurement at 8:12:33, then the first logging interval will be from 8:12:33 to 8:12:59 (27 seconds), the second will be from 8:13:00 to 8:13:59 (60 seconds), etc. Set *Synchronize with clock* to *No* if you want every logging interval to be the specified *Logging Period* exactly. Set *Charge Injection Calibration* to *On* if you want to validate the complete measurement chain by performing CIC at the start and end of the logging measurement, refer to 4.10.
- 6) Under the *Logged Broadband* parameters, choose which broadband parameters you want to log in accordance with the *Measurement Control* parameters. You can choose to log *Full Statistics* per *Logging Period* or not. You can also choose to log *all* the measured *Broadband Parameters* or a *Selected* number of parameters. If you choose *Selected* then you can specify up to 10 parameters.
- 7) The *Logged Broadband (100 ms)* parameter allows you to log  $L_{Aeq}$ , with an elapsed time of 100 ms and a logging period of 100 ms,  $L_{AF}$  and/or  $L_{AS}$ , with a logging period of 100 ms, irrespective of the other logging parameters.
- 8) The *Logged Spectrum<sup>a</sup>* parameter allows you to choose which spectra to log. You can specify to log *All*, *None* or up to 3 *Selected* spectra. You can also choose to log *Full Spectral Statistics* per *Logging Period* or not.
- 9) Under *Markers* you can specify the names of the five available markers. The markers are predefined as follows:
  - Marker 1: 'Exclude' – can be controlled by pressing the **Back-erase** pushbutton (↶)
  - Marker 2: 'Manual' – can be controlled by pressing the **Manual Event** pushbutton (⚙)
  - Marker 3: 'Level' – can be controlled by the Level Trigger detection
  - Marker 4: 'Marker 4'


a. Requires Frequency Analysis Software BZ-7223

- Marker 5: 'Marker 5'
- Marker 6: 'Sound' – is set when recording sound (requires Sound Recording Software BZ-7226)


All markers can be controlled by the stylus in the Profile display.

You can set a *Pre-marker Time* between 0 and 5 seconds. This will start markers 1, 2 or 3 the set number of pre-marker seconds before the point where the **Back-erase** pushbutton, the **Manual Event** pushbutton, or the Level Trigger, respectively, are pressed. See 11.3.2.

- 10) Under the *Level Trigger* parameters, choose the settings for triggering the number 3 marker 'Level', for starting a sound recording and for sending an SMS or e-mail – see Chapters 8.4 and 12:
  - Set *Level Trigger Control* to *On* to enable the level trigger facility or *Off* to disable the facility
  - Set *Trigger Parameter* to the parameter you want to monitor, e.g.,  $L_{Aeq}$  – see Appendix A for the total list of parameters
  - Set *Start Slope* to *Rising* if you want to start when the *Trigger Parameter* exceeds *Start Level* (and stop when it goes below *Stop Level*) or to *Falling* if you want to start when the *Trigger Parameter* goes below *Start Level* (and stop when it exceeds *Stop Level*)
  - Set *Start Duration* for the number of seconds the *Trigger Parameter* must fulfill the trigger condition before the trigger point is acknowledged
  - Set *Stop Duration* for the number of seconds the *Trigger Parameter* doesn't fulfill the trigger condition anymore to acknowledge the end point of the trigger. (See the relationship between the trigger parameters in Fig. 11.2)

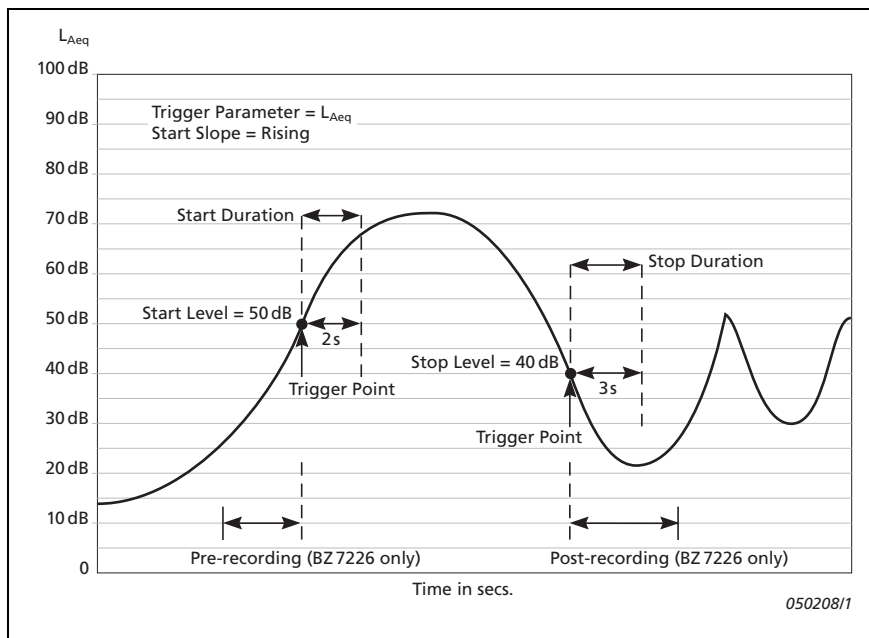**Fig. 11.2** Relationship between trigger parameters

- 11) Under the *Sound Recording* parameters, choose the settings for recording sound while making a logging – see Chapter 12.
- 12) Under *Input* specify *Trigger Input* if you want to start the sound recording using an external trigger signal. See details in Appendix A.

To exit the screen, tap the  icon.

## 11.2 Controlling the Measurement

The measurement is controlled in the same way you would control a normal sound level meter measurement, using **Start/Pause**, **Continue**, **Reset** and **Save** pushbuttons, see Chapter 3 for more details.

If you have set the *Charge Injection Calibration* parameter to *On*, then CIC is performed at the start of the measurement and at the end of the measurement. An Exclude marker is set on the logging profile at the point where CIC is being performed. The update of the *Total* parameters is stopped while CIC is being performed. You can see the results of the CIC under *Total* parameters, *CIC Result 1* and *CIC Result 2*.

### 11.2.1 Annotating a Project

While using the logging software you can annotate measurements using the normal method of adding annotations to a project, before or after a measurement, or while the measurement is paused. The annotations can then be viewed by tapping on the paperclip icon or tapping the Main Menu and selecting **Explorer** from the list of options. 3.5.

However, if you choose to annotate the profile during the measurement, the annotation icon will appear below the profile, not as a paperclip icon in the status field or attached to a project in **Explorer**, as described previously. In this case, you view the annotation using the method described under 11.3.1.

### 11.2.2 Recording Sound

You can record sound during the measurement<sup>a</sup> by pressing the **Manual Event** pushbutton (Manual Event marker), the **Back-erase** pushbutton (Exclude Marker) or when the level of a specific parameter exceeds a certain level – or you can record sound through the whole measurement – depending on the Sound Recording setting in the Setup – details in Chapter 12.

## 11.3 Displaying the Results

The Logging measurement screen (or Profile View) includes three tabs at the bottom: *Profile*, *Spectrum* and *Broadband* View (the Logging SLM includes the tabs: *Profile*, *Broadband* and *XL View*). The tabs allow you to choose different ways of displaying the measurement results. All but the *Profile* tab have been covered previously in Chapters 3 and 10, however a quick recap is provided below.

The *Broadband* view shows an instantaneous  $L_{AF}$  readout, with associated bar graph and a number of measurement parameters. (The first measurement parameter is displayed in a larger font size for better readability.)

The *XL View* increases the size of the first parameter readout to a 4 digit, full-screen display (including decimal point).

The *Spectrum* view shows two different spectra parameters being measured simultaneously.


### 11.3.1 The Profile View

The *Profile* view displays a profile of a logged broadband parameter (dB versus time). This is very convenient when marking sound categories on-line or annotating the measurement. See Fig. 11.3.

---

a. Requires License for Sound Recording Software BZ-7226

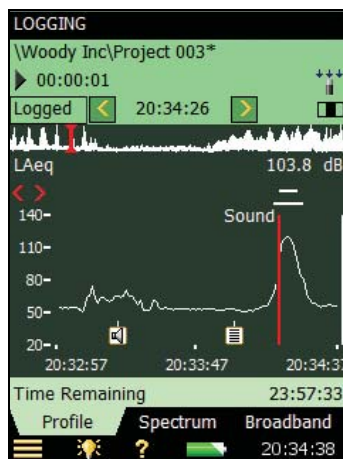


**Fig. 11.3**  
Profile View (showing  
extended status field)




### Status Field

The Status Field has been extended to include an extra line of information below the two existing lines of information covered previously in the Sound Level Meter and Frequency Analyzer (see Fig. 11.3).

This extra line of information allows you to:

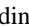- Select whether the results of the *Total* measurement from the *Logged* measurement, or from the *Logged(100 ms)* measurement are displayed. Select *Total* to display the measurement parameters of the Total measurement in all the views – the Broadband and Spectrum views will then display parameters or spectra similar to the Sound Level Meter or Frequency Analyzer. (The Profile View will be empty, because the Total measurement contains only a single set of parameters). Select *Logged* to display the measurement parameters from the logging intervals. The cursor in the profile selects which logging interval is displayed in all the views. Select *Logged(100 ms)* to display the  $L_{Aeq}$ ,  $L_{AF}$  or  $L_{AS}$  in the profile from the 100 ms logging intervals. This setting does not display spectra or parameters in other views
- View the start time of the measurement (for *Total*) or the start time of the current logging interval (for *Logged* or *Logged(100 ms)*) if measuring and the profile is not frozen) or the start time of the logging interval pointed out by the cursor. Tap the start time in any of the views to select data from another logging interval
- View whether the display of the profile during the measurement is frozen or not. When the  icon is “animated” the display is being updated with new logged data during the measurement. You can freeze the display update by tapping on the icon. This also freezes the icon. Tap the icon again to unfreeze the display
- Step forwards or backwards through the logging intervals on all displays, using the  and  icons. (The icons are also connected to the profile cursor, so that any corresponding movement backwards or forwards through the intervals in one display will be reproduced in the other)

Some interaction with the display will automatically freeze and unfreeze the display (only while measuring):

- Tap the stylus on the profile. This will set the profile cursor and freeze the display update of the profile. You can move the cursor to any point in the profile by using the left and right arrow pushbuttons. The profile will be scrolled automatically, if necessary. Unfreeze by tapping on the  icon
- Tap and hold the stylus on the profile display and drag it to the left or right. This will freeze the display and show two cursors. Next, remove the stylus from the display and a drop-down menu appears with the possibility of setting or editing a marker or annotation (see below). Select the required function from the drop-down menu. When the function has been carried out, the profile unfreezes automatically and progresses as it did before you tapped on the screen

The logged data are displayed as two profiles. The Profile Overview with the entire profile and the Profile with 100 logging samples.

### The Profile Overview

An overview of the entire profile is displayed across the screen on the topmost part of the graph area.

The overview is based on  $L_{Xeq,1s}$  ( $X = A$  or  $B$  depending on the *Broadband (excl. Peak) Frequency Weightings* parameter). The Y-axis is auto-zoomed.

When you have logged for more than 4 minutes, then each pixel on the X-axis will cover more than 1 s. The overview will then display from the minimum  $L_{Xeq,1s}$  to the maximum  $L_{Xeq,1s}$  within the interval covered by the pixels on the X-axis.


Tap in the Profile Overview to select the part of the entire profile to display in the Profile below.

### The Profile

The Profile displays a hundred samples of the logged data.

Select which parameter to view by tapping the parameter field in the line above the profile.

Markers are displayed between the profile and the profile parameter. Marker 1 (Exclude) is the topmost positioned marker. The name of the marker is displayed if the marker overlaps the cursor position. If a sound has been recorded, then a Sound Marker (Marker 6) is displayed above the profile – the marker covers exactly the time of the sound recording.

You can browse through markers using the  buttons in the profile.


The whole, or any part of the sound recording can be played back, once or repetitively – see Chapter 12 for details.

To the right of the profile, the broadband parameter  $L_{AF}$  is displayed and updated regardless of the measurement status and the display freeze status.

Annotations are displayed below the profile as icons. To select an annotation, tap and hold the stylus at one side of the icon, just above it, then drag the stylus to the opposite side of the icon (so it looks like the example in Fig. 11.4) and remove the stylus from the display.



**Fig. 11.4**  
*Selecting Annotations*

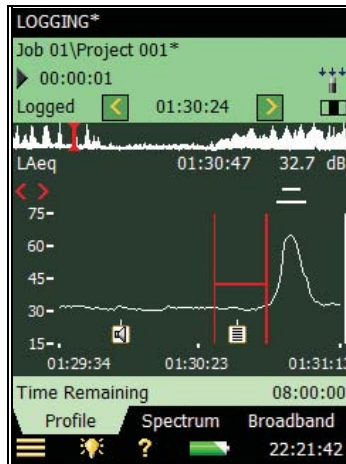

A drop-down menu appears, select the required function:

- Open note or play commentary
- Delete annotation
- Move annotation (to the position on the display where the stylus was removed from the display)

Scale the Y-axis (left-hand vertical scale of the graphical display) by tapping on the scale and accessing the drop-down menu (as in the Spectrum display):


- Select *Auto Zoom* to adjust the range of the Y-axis for best fit of the measured spectrum
- Select *Zoom In/Zoom Out* to adjust the zoom
- Select *Scale Up/Scale Down* to adjust the full scale value on the Y-axis - or select *Auto Scale* to select the best scaling for viewing the spectra – without adjusting the zoom
- *Auto Zoom* and *Auto Scale* automatically close the drop-down menu, otherwise, select *Close*, tap outside the drop-down list or use the left arrow pushbutton to close the menu

### 11.3.2 Marking Sound Categories

Use this facility to categorise the sound while you are measuring, or while you are observing the different kinds of sound on the display. This will make it much easier to do the post-processing and reporting back in the office.

You can mark up to five sound categories on-line. The markers are displayed as horizontal lines above the sound profile, see Fig. 11.3. There are two main types of marker:

- An *Exclude Marker* – this allows you to mark a sound you want to exclude from your measurement later during post-processing or reporting. (It does not remove any data from your measurement)
- An *Event Marker* – this allows you to mark a particular sound of interest during your measurement

On the analyzer, Marker 1 is used as an Exclude Marker, while Markers 2 to 5 are used as Event Markers. All four event markers can be user-defined. You can define a marker by tapping on the Main Menu icon  and selecting **Setup**, followed by **Markers**.

Marker 2 is set to a Manual Event marker by default – it can be controlled by the **Manual Event** pushbutton and the stylus.

Marker 3 is set to a Level Event marker by default – it can be controlled by the level trigger facility and the stylus.

Marker 6 is used as a Sound Marker and shows the size of the sound recording.


The analyzer allows you to view the markers at a later date by recalling the data and viewing the desired profile. (This can also be done if you have transferred the data to BZ-5503 or Type 7815 Noise Explorer).


If required, Type 7820 Evaluator and Type 7825 Protector can use the markers in their calculations. Marker number 1 (the Exclude Marker) will always be used as an Exclude Marker, while markers 2 to 5 will be used as defined in Type 7820 Evaluator/Type 7825 Protector software. The marker names, however, will be transferred from the analyzer. Marker 6 will be used as sound marker.

## Marking During the Measurement

The measurement parameter is displayed as a progressing profile.

### Use of Pushbuttons

Press the **Back-erase**  pushbutton to start an Exclude Marker (marker number 1). The marker is displayed above the profile. Press the button once more to stop the Exclude Marker.

Press the **Manual Event**  pushbutton to start a Manual Event Marker (marker number 2). The marker is displayed above the profile. Press the button once more to stop the Manual Event Marker.

### Use of Stylus

Tap and hold the stylus on the profile display at the position where you want the marker to start. This will freeze the display and show a cursor at the position of the stylus. Then drag the stylus left or right to the position where you want the marker to end. This will display a second cursor. Next, remove the stylus from the display and a drop-down menu appears showing the five markers you have specified in the setup. Select the marker you require. The marker is displayed above the profile, the cursors disappear and the profile unfreezes and progresses as it did before you tapped on the screen.

**Note:** If you select Sound Marker, then the sound for this part will be recorded – see Chapter 12 for details.

## Marking Measurement While it is Paused

The measurement parameter is displayed as a profile while the measurement is paused.

**You can use the Stylus to Mark the Sound Categories**

Tap and hold the stylus in the profile display at the position where you want the marker to start. This will display a cursor at the position of the stylus. Then drag the stylus left or right to the position where you want the marker to end. This will display a second cursor. Next, remove the stylus from the display and a drop-down menu appears showing the five markers you have specified in the setup. Select the marker you require. The marker is displayed above the profile and the cursors disappear.

**11.3.3 Editing Markers on Profiles**

To widen a marker:

- 1) Tap and hold the stylus on the profile display at a position within the marker range.
- 2) Drag the stylus left or right to the position where you want the marker to end.
- 3) Remove the stylus from the display and a drop-down menu appears.
- 4) Select the marker you want to widen from the drop-down menu.

To narrow a marker:

- 1) Tap and hold the stylus on the profile display at the position inside the marker range where you want it to stop.
- 2) Drag the stylus left or right to a position outside the marker range.
- 3) Remove the stylus from the display and a drop-down menu appears.
- 4) Select *Delete* for the marker you want to narrow from the drop-down menu. The part where the marker overlaps the gap between the two cursors will be deleted.

To delete a marker:

- 1) Tap and hold the stylus in the profile display at a position to the left of the marker you want to delete.
- 2) Drag the stylus to a position to the right of the marker.
- 3) Remove the stylus from the display and a drop-down menu appears.
- 4) Select *Delete* for the marker you want to delete from the drop-down menu.

**Note:** Sound markers cannot be edited. Marking the whole sound marker (or part of it) and selecting *Delete* will delete the whole sound marker and sound recording.


**11.3.4 Annotate Sound Categories**

You can annotate the measurement on-line with a spoken comment or a written note or (Type 2270 only) an image. The annotation is displayed as an icon below the sound profile.

**Annotating During the Measurement**

The measurement parameter is displayed as a progressing profile.

### Use of Pushbuttons

Press and hold down the **Commentary**  pushbutton and talk to the instrument to make your comment. Release the button when finished. This will insert a comment annotation in the profile at the time when the button was pressed.

### Use of Stylus

Tap and hold the stylus in the profile display at the position where you want the annotation to start. This will freeze the display and display a cursor at the position of the stylus. Then drag the stylus a little to the left or right and raise it again. A drop-down menu appears and below the five markers you can select *Add Comment* or *Add Note* or *Add Image* to add a spoken comment or write a note or capture an image. When finished, the Comment or Note or Image is inserted in the profile, the cursors disappear and the profile unfreezes and progresses as before tapping on the screen.


### Annotating While the Measurement is Paused

The measurement parameter is displayed as a profile while the measurement is paused.

### Use of Stylus to Annotate the Sound

Tap and hold the stylus in the profile display at the position where you want the marker to start. This will display a cursor at the position of the stylus. Next, drag the stylus a little to the left or right and remove the stylus from the display. A drop-down menu appears and below the five markers you can select *Add Comment*, *Add Note* or *Add Image* (Type 2270 only) to add a spoken comment, write a note or capture an image. When finished the Comment, Note or Image is inserted in the profile and the cursors disappear.

### Use of Pushbuttons

Using the **Commentary**  pushbutton during a pause means that the comment annotation will be added to the project instead of the profile. (The annotations can be viewed by tapping on the paperclip icon or tapping the Main Menu and selecting **Explorer** from the list of options. See 3.5.)

## 11.3.5 Editing Annotations on Profiles

To move an annotation:

- 1) Tap and hold the stylus on the profile display at a position on one side of the annotation icon.
- 2) Drag the stylus through the annotation icon to the position where you want the annotation moved to.
- 3) Remove the stylus from the display and a drop-down menu appears.
- 4) Select *Move Comment* (or *Move Note*, or *Move Image*) from the drop-down menu.

To delete an annotation:

- 1) Tap and hold the stylus on the profile display at a position to the left of the annotation icon you want to delete.
- 2) Drag the stylus to a position to the right of the annotation.
- 3) Remove the stylus from the display and a drop-down menu appears.
- 4) Select *Delete* for the annotation you want to delete from the drop-down menu.

## 11.4 Saving and Recalling Results

Measurements are saved and can be viewed later, in the same way as described for the Sound Level Meter Project in Chapters 3 and 6.

**Note:** The viewer only displays the results as one set of data per logging interval (you can browse through all data). To display the data as a profile and see or hear annotations – or even edit the markers or insert new markers and annotations – you must Open the saved project instead of Viewing it.



# Chapter 12

---

## Enhanced Logging (Optional Module)

Enhanced Logging Software BZ-7225 enables you to measure and save data periodically on SD or CF cards. The module is optimised for unattended use, which means that the module will measure and save data in an efficient way, without the requirement for an operator to be present.

In addition to measuring broadband parameters (see Chapter 3) and spectra<sup>a</sup> (see Chapter 10), it simultaneously logs the following parameters (see Chapter 11):

- Broadband Parameters (including broadband statistics)
- Broadband Parameters every 100 ms
- Spectra<sup>a</sup> (including spectral statistics)
- Record the measured signal<sup>b</sup>

Finally, the Enhanced Logging module can also log with a different period (periodic reports – for example, every hour) for reporting:

- Broadband Parameters (including broadband statistics)
- Spectra<sup>a</sup> (including spectral statistics)


The Enhanced Logging module can measure continuously, limited only by data memory and power supply. An overview showing the options available during a typical enhanced logging task has been provided in Table 12.1.

---

a. Requires Frequency Analysis Software BZ-7223  
b. Requires Sound Recording Option BZ-7226


**Table 12.1** Overview of options available during a typical enhanced logging task

Selection	Period	Broadband Parameters	Broadband Statistics	Spectral Parameters	Spectral Statistics
<i>Logged</i>	1 s – 24 h	1 to 10 or All (32)	None or Full	0 – 3 or All (5)	None or Full
<i>Logged (100 ms)</i>	100 ms	None, $L_{Aeq}$ , $L_{AF}$ and/or $L_{AS}$	None available	None available	None available
<i>Periodic Reports</i>	1 m – 24 h	All (45)	Full	All (5)	None or Full
<i>Total</i>	Elapsed Time	All (50)	Full	All (5)	Full


Check the **About** Menu to see whether you have the right license to run the Enhanced Logging module. (The **About** Menu is accessed from built-in help – tap , on the shortcut bar, then **About**.)

See Chapter 9 for instructions on installing the license for the Enhanced Logging Module.

## 12.1 Setting up the Instrument

- 1) Select the **ENHANCED LOGGING** Project Template. (section 3.3.1 for more details on templates.) The Project Template is displayed on the black banner at the top of the screen. If this banner does not display **ENHANCED LOGGING**, tap the banner and select **ENHANCED LOGGING** from the drop-down that appears.
- 2) Insert an SD or CF memory card in the slot for SD or CF cards (see items 9 and 10 in Fig.2.2). You will be notified that a memory card has been inserted – select *Yes* to change the default measurement path to the memory card.
- 3) Tap the Main Menu icon  and select **Explorer** from the list of options. Create a job folder for the measurements and set the default measurement job/path as described in Chapter 6.

**Note:** You cannot log data on the internal disk.


- 4) Tap the Main Menu icon  and select **Setup** from the list of options. Set up the measurement as described for Logging in Chapter 11, steps 4 to 12.
- 5) Under the *Measurement Control* parameters:
  - set the *Save Project Data at*, *Continuous Logging* and *Report Period* as required
  - select whether or not you want to save the Full Spectral Statistics for Reports

**Note:** all other measured broadband and spectral parameters are logged automatically per report period.



Then you can select:

- Number of CICs
  - Desired time periods for calibration
- 6) Under the *Logged Spectrum* parameters, you can choose to log *Full Spectral Statistics* per *Logging Period* or not.
- Note:** Logging the full spectral statistics at a short logging period (e.g., every second) takes up a lot of space on the memory card.
- 7) Under *Triggers* you can specify a *Timer Trigger* for periodically starting a sound recording (e.g., 5 minutes per hour) and you can specify up to four independent *Level Triggers* to be active at four different times during the day. Each level trigger works as specified in section 11.1. In addition, you can specify a *Hold Off* period – this means that during this period, new triggers are inhibited. You also have the ability to trigger  $L_{Xeq}(f1-f2)$ .
- Note:** you can trigger on a specific frequency band by setting  $f1 = f2$ .
- 8) Under *L<sub>den</sub> Periods* parameters you can set up the day, evening and night periods and the penalties in accordance with your local legislation.

To exit the screen, tap the  icon.

## 12.2 Controlling the Measurement

The measurement is controlled in the same way you would control a normal sound level meter measurement, using **Start/Pause**, **Continue**, **Reset** and **Save** pushbuttons, see Chapter 3 for more details.

However, during the measurement, data are automatically saved in projects, one per day. The projects are automatically saved at the time specified in the *Save Project Data at* parameter in the **Setup, Measurement Control** menu. The next project is (automatically) started immediately after the first one, without any data loss.

**Note:** When *Preset Logging Time* has elapsed, or you pause the measurement, then the project will not be saved automatically. This has to be done manually.

In the case of power failure, or other failures, the software is rebooted automatically. This means that the measurement data collected up until the time of the reboot is saved in a project and a new measurement is started. The new measurement is started in a new project.

The projects are named as specified in the *Preferences, Storage Settings*.

**Example:** If you select *Auto-naming of Projects*, and start the measurement on the 13th of November, then your projects for measuring 48 hours (assuming you have started in the middle of the day, and have set *Save Project Data at* parameter to 00:00:00) will be:

**051113 001** (containing data from the middle of the day November 13th until midnight)

**051114 001** (containing data for a whole day – November 14th)

**051115 001** (containing data from midnight to the middle of the day on November 15th)

If you didn't select *Auto-naming of Projects* then you would have the following projects (assuming the *Project Name Prefix* parameter was set to *Project* and no projects had been saved before in the directory):

**Project 001**

**Project 002**

**Project 003**

If you have set the *Charge Injection Calibration* parameter to *On*, then a CIC Calibration is performed at specified times of the day. An Exclude marker is set on the logging profile at the point where the CIC is being performed. The update of the *Total* parameters and the Periodic Reports is stopped while the CIC is being performed. You can see the results of the CIC calibration under *Total* parameters, *CIC Result 1* to *4*.

The CIC result can be either '*Passed*', '*Background noise too high*' or '*CIC Ratio deviates from Ref.*' (The '*Ref.*' mentioned here is the reference created by the very first manual CIC, and is the one used as the reference to all subsequent CIC Ratio measurements, see section 4.10.)

**Note:** If a Level Trigger is active when the CIC is due to start, then the CIC will not be done.

### 12.2.1 Annotating a Project

Measurements can be annotated in the same way as you annotate Logging measurements. See section 11.2.1.

### 12.2.2 Recording Sound

Sound Recording can be done in the same way as described under Logging measurements. See section 11.2.2.

## 12.3 Displaying the Results

The Enhanced Logging measurement screen includes three tabs at the bottom: *Profile*, *Spectrum* and *Broadband View* – as the Logging measurement screen does. You view the data in the same way as in the Logging module. You mark and annotate sound categories and edit markers and annotations in the same way as in the Logging module – please see Chapter 11.


The Result Selector (first item in the third line of the status field) determines whether results from the *Total*, *Logged*, *Logged (100 ms)* or *Report* measurement are displayed.

If you need to display data from another day of the measurement, then use Explorer to select and open the project from that day.

### 12.3.1 The Profile View

The *Profile* view displays a profile of a logged broadband parameter (dB versus time). See Fig. 12.1.


**Fig. 12.1**  
*Profile View in Enhanced Logging*

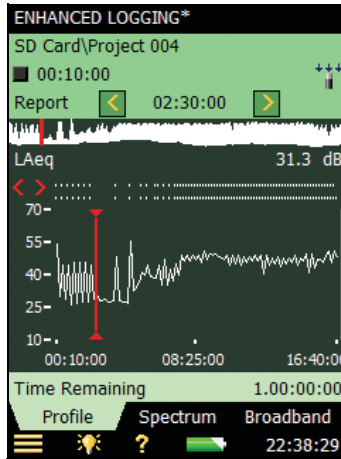

### 12.3.2 Displaying Noise Indicators

The  $L_{den}$  and  $L_{dn}$  parameters are displayed in the *Broadband* View when selecting *Total* in the Result Selector. Then select the Noise Indicators from the  $L_{eq}$  parameter group. See Fig. 12.2.

**Fig. 12.2**  
*Noise Indicators*

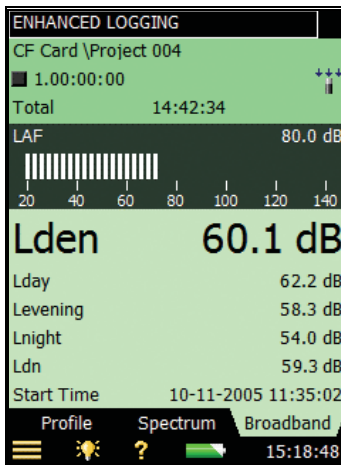

### 12.3.3 Saving and Recalling Results

Measurements are saved and can be viewed later, in the same way as described for the Sound Level Meter Project in Chapter 3 and Chapter 6.

**Note:** The viewer only displays the results as one set of data per logging interval (you can browse through all data). To display the data as a Profile and see or hear annotations – or even edit the markers or insert new markers and annotations – you must Open the saved project instead of Viewing it.




# Chapter 13

## Sound Recording (Optional Module)

Sound Recording Option BZ-7226 allows you to record sound during measurement. The sound recording can be controlled manually or by using an external trigger signal. The recording can also be triggered when a measured parameter exceeds a preset level (BZ-7224 and BZ-7225 only). The recorded sound can be played back and listened to using the supplied earphones, HT-0015. Sound is recorded directly to CF or SD memory cards.

The main benefit is that data is documented on-site and is therefore ready for post-processing and reporting back at the office using Utility Software for Hand-held Analyzers BZ-5503 or other post-processing software such as Noise Explorer Type 7815, Evaluator Type 7820, Protector Type 7825 or Microsoft® Excel®.

Check the **About** Menu to see whether you have the right license to run the Sound Recording module. (The **About** Menu is accessed from built-in help – tap  on the shortcut bar, then select **About**.) See Chapter 9 for instructions on installing the license for the Sound Recording Module.

### 13.1 Sound Level Meter and Frequency Analysis Software


You can use the Sound Recording facility together with the Sound Level Meter Software and the Frequency Analysis Software. You can record the sound for the whole measurement period or you can record sound for controlled parts of the measurement. The recordings are attached to the project as annotations, named “Soundrec N”, where N is the number of the recording for the project. (section 3.5 and section 6.3.3 for a description of how to use annotations.)

**Note 1:** Sound recordings can only be done during measurements.



**Note 2:** Sound recordings can only be done on projects saved on SD or CF cards.


#### 13.1.1 Setting up the Instrument

- 1) Select a Sound Level Meter Project Template or a Frequency Analyzer Project Template. (see section 3.3.1 for more details on templates.)

- 2) Insert an SD or CF memory card in the slot for SD or CF cards (see items 9 and 10 in Fig.2.2).
- 3) Tap the Main Menu icon  and select **Explorer** from the list of options. Navigate to the memory card, create a job folder for the measurements and set the default measurement job/path as described in Chapter 6.



**Note:** You cannot record sound on the internal disk.

- 4) Tap the Main Menu icon  and select **Setup** from the list of options. Set all the parameters as required for the Sound Level Meter or Frequency Analyzer measurement, see Chapter 3 and Chapter 10 respectively.
- 5) Under *Sound Recording* you can specify the *Recording Control* parameters as follows:
  - *Automatic*, if you want to start the recording when you start the measurement and stop when you pause the measurement, and to limit the recording to *Maximum Duration*, if *Duration Limit* is set to *On*
  - *Manual Event*, if you want to start and stop the recording using the **Manual Event** pushbutton  during the measurement and to limit the duration of the recording, if *Duration Limit* is set to *On*. In this case the recording will be at least *Minimum Duration* long, but no longer than the *Maximum Duration*. Use *Pre-recording Time* and *Post-recording Time* to specify how much extra you want to be recorded before and after the event
  - *External Event*, if you want to start and stop the recording using an external trigger signal, connected to the Trigger Input. See details in Appendix A
  - *Image Event* (Type 2270 only), if you want to make a short recording together with capturing an image. The recording will be "Pre-recording Time + Post-recording Time + 1" second long. See details in Appendix A
  - *Off*, if you don't want to record sound
- 6) Set *Recording Quality* to *High*, *Medium*, *Fair* or *Low* in accordance with your needs. Note, however, that high quality requires more disk space than low quality – details in Appendix A.
- 7) Set *Recorded Signal* to either *Input A/B-weighted*, *Input C-weighted* or *Input Z-weighted* (A/B-weighting is determined by setting the parameter in *Setup, Frequency Weightings, Broadband (excl. Peak)*). Input C-weighted is suitable for recordings used afterwards to identify the sound source – it contains all the audible content of the signal, but reduces the low-frequency noise from wind, etc.
- 8) Set *Automatic Gain Control* to *On* – if you don't know the dynamic of the signal beforehand, or the dynamic is very high, then the 120 dB dynamic range (from max. input level and down) will be converted to 40 dB. Otherwise, set it to *Off* and specify the *Peak Recording Level*.
- 9) Under *Input* you specify *Trigger Input* if you want to start the sound recording using an external trigger signal. See details in Appendix A.

To exit the screen, tap the  icon.

### 13.1.2 Controlling the Recording

The measurement is controlled in the same way you would control a normal sound level meter measurement, using **Start/Pause**, **Continue**, **Reset** and **Save** pushbuttons, see Chapter 3 for more details.

When the measurement signal is being recorded, the recording icon  is displayed in the status field. The recording is attached to the project as an annotation. The paperclip icon  is then displayed to indicate that the project has been annotated.

When *Recording Control* is set to *Automatic*, the recording will start when the measurement is started and last for the *Maximum Duration* or the *Elapsed Time*, whichever is smallest. If you continue a paused measurement, then a new recording is started.

When *Recording Control* is set to *Manual Event*, the recording will start the first time you press the **Manual Event** pushbutton during the measurement, and stop the second time you press it; if you press it a second time before the *Minimum Duration* has elapsed, then the recording will continue until *Minimum Duration* has elapsed; if you press it a second time after *Maximum Duration* has elapsed, then the recording has already been stopped when *Maximum Duration* elapsed and the pushbutton will initiate a new recording instead.


When *Recording Control* is set to *External Event*, and *Trigger Input* is set to *Voltage Level*, then recording is started when the voltage level is 'high' and stopped when voltage level is 'low' (details in Appendix A). *Duration Limit* has no effect on this setting.

When *Recording Control* is set to *Image Event* (Type 2270 only), then you will record 1s plus the Pre- and Post-recording Time

If *Pre-recording Time* has been set, then the recording will start this time before you hit the **Manual Event** pushbutton. This is possible because the recording is done continuously in an internal buffer, ready to be saved as a wave file. The *Pre-recording Time* is limited by this buffer size and the Recording Quality – details in Appendix A.

**Note:** Very long sound recordings will be split into wave files containing maximum 10 minutes, i.e., a 35 minute sound recording will consist of 4 wave files, three with 10 minutes of sound and one with 5 minutes of sound.

### 13.1.3 Playing the Recording

Sound recordings are attached to the measurement project as annotations. The paperclip icon  is displayed in the status field to indicate this. Tap the paperclip to open the list of annotations. Tap the annotation to play it back – details in Chapter 3 and Chapter 6.

## 13.2 Logging and Enhanced Logging Software


You can use the Sound Recording facility together with the Logging and Enhanced Logging Software. You can record the sound for the whole measurement period or you can record sound for controlled parts of the measurement. The recordings are attached to the profile as sound markers. The sound recordings can be controlled by the **Manual Event** pushbutton, the

**Back-erase** pushbutton, an external trigger signal, or by the level of the measured signal. You can also control the sound recording using the stylus to mark the interesting part on the profile.




**Note 1:** Sound recordings can only be done during measurements.

**Note 2:** Sound recordings can only be done on projects saved on SD or CF cards.

### 13.2.1 Setting up the Instrument

- 1) Select a Logging, Logging SLM or Enhanced Logging Project Template. (see section 3.3.1 for more details on templates.)
- 2) Insert an SD or CF memory card in the slot for SD or CF cards (see items 9 and 10 in Fig.2.2).
- 3) Tap the Main Menu icon  and select **Explorer** from the list of options. Navigate to the memory card, create a job folder for the measurements and set the default measurement job/path as described in Chapter 6.

**Note:** You cannot record sound on the internal disk.

- 4) Tap the Main Menu icon  and select **Setup** from the list of options. Set all the parameters as required for the Logging or Enhanced Logging measurement, see Chapter 11 or 12, resp.
- 5) Under *Sound Recording* you can specify the *Recording Control* parameters as follows:
  - *Automatic*, if you want to start the recording when you start the measurement and stop when you pause the measurement, and to limit the recording to *Maximum Duration*, if *Duration Limit* is set to *On*
  - *Manual Event*, if you want to start and stop the recording using the **Manual Event** pushbutton  during the measurement
  - *Exclude Event*, if you want to start and stop the recording using the **Back-erase** pushbutton  during the measurement
  - *External Event*, if you want to start and stop the recording using an external trigger signal, connected to the Trigger Input
  - *Level Event*, if you want to start and stop the recording based on the level trigger settings during the measurement
  - *All Events*, if you want to start and stop the recording based on any of the events

**Note:** When *Recording Control* set to any of the events, you can limit the duration of the recording, if *Duration Limit* is set to *On*. In this case the recording will be at least *Minimum Duration* long, but no longer than the *Maximum Duration*. Use *Pre-recording Time* and *Post-recording Time* to specify how much extra you want to be recorded before and after the event


*Image Event* (Type 2270 only), if you want to make a short recording together with capturing an image. The recording will be "Pre-recording Time + Post-recording Time + 1" seconds long. See details in Appendix A

- *Off*, if you don't want to record sound




- 6) Set *Recording Quality* to *High*, *Medium*, *Fair* or *Low* in accordance with your needs, note, however, that the high quality requires more disk space than low quality – details in Appendix A.
- 7) Set *Recorded Signal* to either *Input A/B-weighted*, *Input C-weighted* or *Input Z-weighted* (A/B-weighting is determined by setting the parameter in *Setup, Frequency Weightings, Broadband (excl. Peak)*). Input C-weighted is suitable for recordings used afterwards to identify the sound source – it contains all the audible content of the signal, but reduces the low-frequency noise from wind, etc.
- 8) Set *Automatic Gain Control* to *On* – if you don't know the dynamic of the signal beforehand, or the dynamic is very high, then the 120 dB dynamic range (from max. input level and down) will be converted to 40 dB. Otherwise, set it to *Off* and specify the *Peak Recording Level*.

Under *Input* you specify *Trigger Input* if you want to start the recording using an external trigger signal. See details in Appendix A.

To exit the screen, tap the  icon.

### 13.2.2 Controlling the Recording

The measurement is controlled in the same way you would control a normal logging measurement, using **Start/Pause**, **Continue**, **Reset** and **Save** pushbuttons, see Chapter 11 for more details.

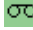When the measurement signal is being recorded, then the recording icon  is displayed in the status field. The recording is attached to the profile as a Marker 6 (Sound).

If you set *Recording Control* to *Automatic*, the recording will start when the measurement is started and last for *Maximum Duration* or *Elapsed Time*, whichever is smallest. If you continue a paused measurement, then a new recording is started.

If you set *Recording Control* to *Manual Event*, the recording will start the first time you press the **Manual Event** pushbutton during the measurement (this starts a Manual Event marker and a Sound marker), and stop the second time you press it; if you press it a second time before *Minimum Duration* has elapsed, then the recording will continue until *Minimum Duration* has elapsed; if you press it a second time after *Maximum Duration* has elapsed, then the recording has already stopped when *Maximum Duration* elapsed, and the pressing the button will have no effect on the sound recording (the Manual Event marker, however, is stopped).

If you set *Recording Control* to *Exclude Event*, the recording will start the first time you press the **Back-Erase** pushbutton during the measurement (this starts an Exclude Event marker and a Sound marker), and stop the second time you press it – the behaviour will be similar to control by the **Manual Event** pushbutton.

When *Recording Control* is set to *External Event*, and *Trigger Input* is set to *Voltage Level*, then recording is started when the voltage level is 'high' and stopped when voltage level is 'low' (details in Appendix A). *Duration Limit* has no effect on this setting.

If you set *Recording Control* to *Level Event*, the recording will start, controlled by the level trigger – see Chapter 11 for details.

When *Recording Control* is set to *Image Event* (Type 2270 only), then you will record 1s plus the Pre- and Post-recording Time

If you set *Recording Control* to *All Events*, the recording will start when any of the events above become active, and stop when all events are inactive again.


If *Pre-recording Time* has been set, then the recording will start this time before the Event appears. This is possible because the recording is done continuously in an internal buffer, ready to be saved as a wave file. The Pre-recording Time is limited by this buffer size and the Recording Quality – details in Appendix A.

**Note:** Very long sound recordings will be split into wave files containing maximum 10 minutes, i.e., a 35 minute sound recording will consist of 4 wave files, three with 10 minutes of sound and one with 5 minutes of sound.

### 13.2.3 Control Recording using the Stylus

If *Recording Control* is set to any of the events, or to *All Events*, the recording can also be controlled using the stylus directly on the profile, in the same way as you mark sound categories – details in Chapter 11.

**Fig. 13.1**  
Example Logging display  
(showing internal buffer  
marker)

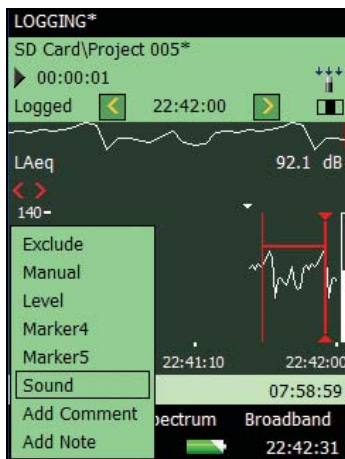

The small triangle above the profile indicates the amount of sound you have in the internal buffer – ready for storage in a wave-file. You will have sound from this triangle to the right-hand side of the profile. The triangle is updated every second.

To make a sound recording using the stylus, you tap and hold the stylus on the profile display and drag it to the position where the sound recording should end, then you remove the stylus and get a drop-down menu with the possibility of setting one of the six markers.


If you select *Sound*, then a sound marker is made and the sound for the marked interval is stored in a wave file. Only the portion of the sound available in the internal buffer (to the right of the small triangle) will be stored and the sound marker will only indicate this part.

**Note:** when selecting an interval for storing (or setting a marker), the profile display freezes, but the sound recording is still updated in the internal buffer. The part of the buffer available on the screen will decrease and you will see the small triangle move to the right. Be sure not to wait too long in selecting the Sound marker from the drop-down menu – otherwise the sound recording will disappear from the internal buffer.

### 13.2.4 Playing the Recording

You play-back the sound simply by selecting part of the marker – as described in section 11.3.3 – and choose *Play Sound* from the resulting drop-down menu. The following drop-down menu will then appear, see Fig.13.2.


**Fig. 13.2**  
*Playing the recording –  
the drop-down menu*

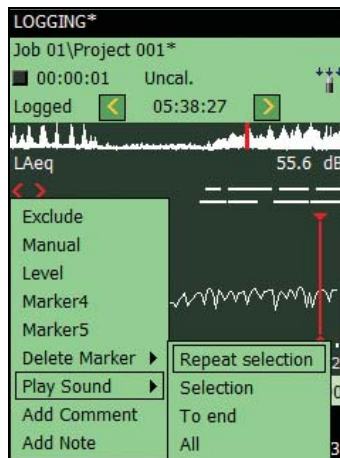

Select one of the four ways of playing a sound: *Selection* will play the part you have selected; *Repeat Selection* will play the selected part until you press *Cancel* on the pop-up menu; *To End* will play the sound from the position you selected the sound marker to the end; and finally *All* will play the entire sound recording, regardless of your selection point.

**Fig. 13.3**

*Playing the recording –  
output level pop-up*

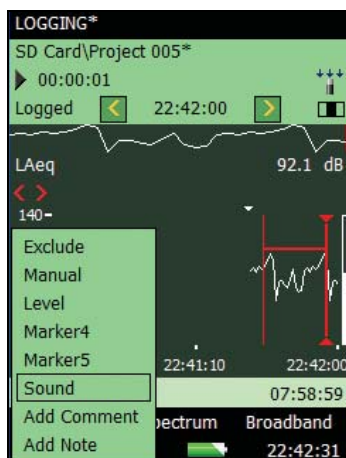




When you have selected the method of play-back, a pop-up appears explaining how to adjust the output level in the headphone and how to stop the play-back.

Tap the *Minimize* button to reduce this to a small blue bar at the top of the screen – allowing you to watch the profile underneath – you will notice that the profile cursor is updated every second to the position of the sound that is currently being played.

**Fig. 13.4**

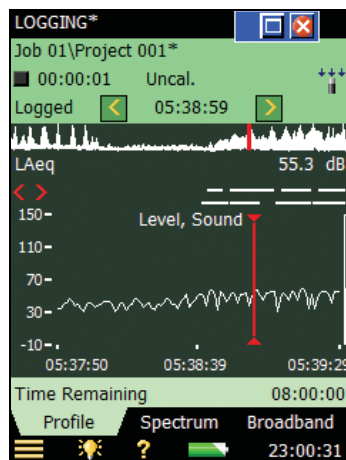*Playing the recording –  
minimizing the pop-up*



The small blue button bar at the top can be maximized again by tapping the  icon, or you can close it and stop playing back by tapping the  icon.

### 13.2.5 Sound Recordings on the PC

When projects including sound recording have been transferred into an Archive on a PC using Utility Software BZ-5503, then sound recordings on Sound Level Meter projects or Frequency Analysis Projects can be played back directly from BZ-5503.

Sound recordings on profiles can be played back when the Logging or Enhanced Logging projects have been transferred to Noise Explorer, Evaluator or Protector – the sound recording will appear in the profiles as Sound markers.

Sound Recordings can be input to the Brüel & Kjær PULSE Analyzer Platform for further analysis – please contact your local Brüel & Kjær representative for further information.

**Note:** When recording sound for further analysis in PULSE, be sure to record the Z-weighted signal and select *Automatic Gain Control* to *Off* under the *Sound Recording* parameters and select the *Recording Quality* to match your needs for frequency content – see details on sampling frequency in Appendix A.

When *Automatic Gain Control* is set to *Off*, then the calibration information is stored in the wave files – allowing PULSE to analyse the sound recordings, taking the calibration into account.




# Chapter 14

---

## Reverberation Time Software (Optional Module)

### 14.1 Introduction

Reverberation Time Software BZ-7227 enables you to measure reverberation time in 1/1-octave or 1/3-octave.

Check the **About** Menu to see whether you have the license to run the reverberation time software. (The **About** Menu is accessed from built-in help – tap  on the shortcut bar, then **About**.) See Chapter 9 for instructions on installing the license for the Sound Recording Module.

#### 14.1.1 Definition

Reverberation Time (RT) is the most important parameter describing the acoustic quality of a room or space. It is important for sound levels, speech intelligibility and the perception of music. In addition, it is used to correct for the effects of RT on building acoustics and sound power measurements.


RT is the decay time for sound in a room after the excitation stops. It is the time for a 60 dB drop in level, but the decay is usually evaluated over a 10, 20 or 30 dB drop, using the measurements within these ranges to make a regression line, which is then extrapolated to the 60 dB range, see Fig. 14.1.

RT may be labelled EDT, T20 and T30 respectively for those three evaluation ranges. EDT is used in room acoustics only, while T20 and T30 may be used for Building Acoustics, Sound Power and Absorption Coefficient measurements as well.

RT is measured in 1/1- or 1/3-octave frequency bands, some of which may be averaged to provide a single-number result for the most significant bands.

RT may range from 0.1 seconds (or less) in anechoic chambers, to 10 or more seconds in large public spaces.

**Fig. 14.1** Definition of Reverberation Time (RT). Evaluation range of 30 dB for calculation of  $T_{30}$  indicated

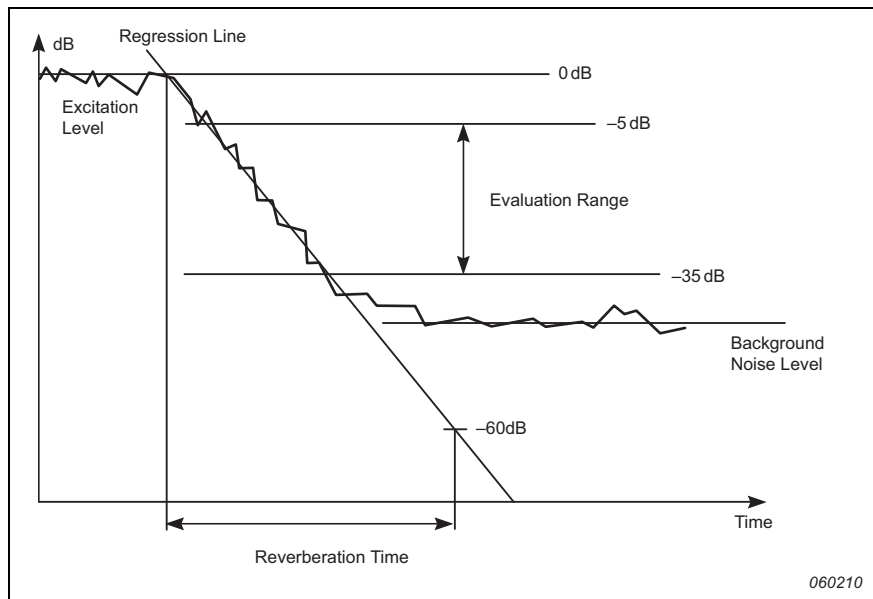

RT varies between positions in a room, so it is usually measured at several positions. The spatial average (Room average) for all positions gives an overall assessment, and the position results may be used to indicate the acoustic quality as a function of location.

The Room average can either be made as an average of the RT spectra, or calculated for the averaged decays (ensemble average), that is: the decays for each frequency band are averaged over all positions and the RT spectrum is then calculated for the averaged decays.

### 14.1.2 How Do We Measure Reverberation Time?


RT can be measured using either Interrupted Noise, with the built-in noise generator, or by using Impulsive Excitation (Schroeder Method), such as from a pistol or balloon burst.

#### Interrupted Noise Method

When using a power amplifier and loudspeaker sound source, see Fig. 14.2, Type 2250-F/2270-F/BZ-7227 will turn its noise generator on and off, then measure and display the RT spectrum and decays.



**Fig. 14.2** Typical RT measurement setup using a loudspeaker source

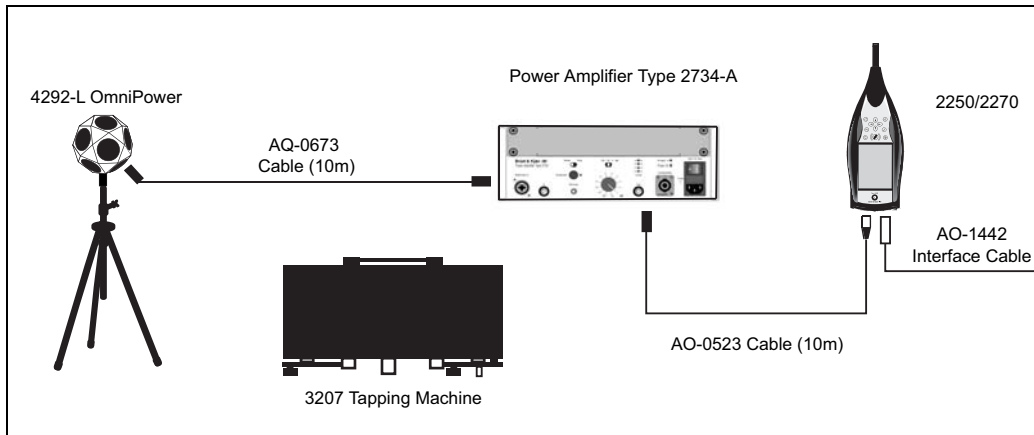

**Fig. 14.3** Typical RT measurement cycle for the interrupted noise method

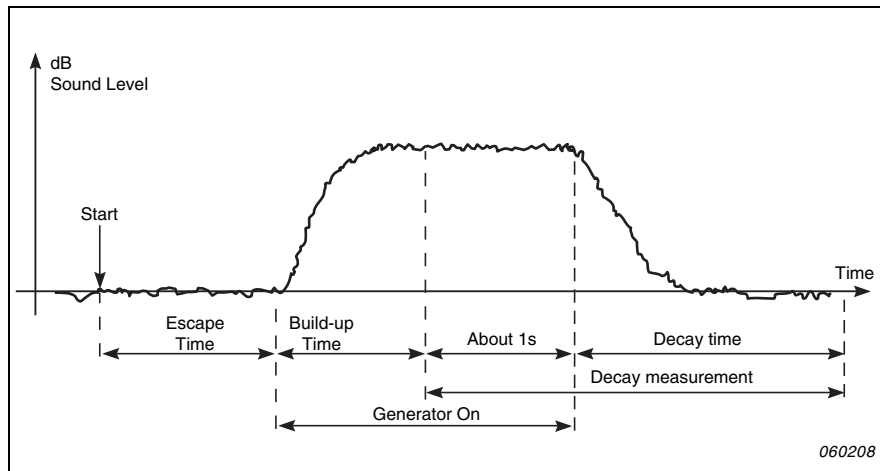


Fig. 14.3 shows a typical RT measurement cycle automatically performed by the Analyzer, where the different steps are described as follows:

- 1) After 'Start', there is a chosen 'Escape Time' which allows for vacating the measurement site.
- 2) The noise generator is then switched on and waits for the chosen 'Build-up' time to allow for a steady state to be reached.
- 3) The decay measurement starts. The level for the first second, or so, (labelled 'About 1s' on Fig. 14.3) is used to identify the excitation sound level as the 0 dB reference level.
- 4) The noise generator is switched off and the 'Decay time' starts.

- 5) The decay measurement ends when only the background noise level is measured (automatically detected by Type 2250/2270).
- 6) Steps 2) to 5) are automatically repeated a chosen number of times and the measured decays are averaged together to reduce the uncertainty of the measurement.
- 7) The reverberation time spectra EDT, T20 and T30 are calculated and displayed on the screen.

The measurement can be in octaves or 1/3-octaves in parallel over a selectable frequency range, allowing you to focus sound power on the relevant range. In each frequency band, the decay is sampled 200 times each second, for reverberation times as long as 20 seconds.

### Impulsive Excitation Method

With Impulsive Excitation, all you need to carry is Type 2250-F/2270-F, a tripod and a balloon (or other impulsive source, such as a starting pistol). After you start the analyzer and pop the balloon, the analyzer will start measuring, analyse the decay and display the RT spectrum and decay.

The single input range means that trial measurements are not necessary when using the impulsive excitation method.

**Fig. 14.4** Typical RT measurement cycle for the interrupted noise method

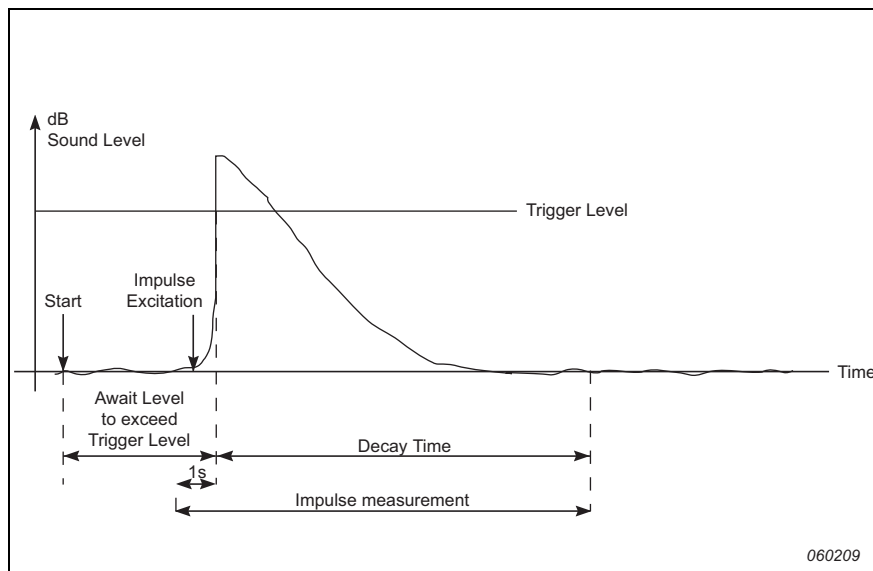


Fig. 14.4 shows a typical RT measurement cycle performed by the analyzer, where the different steps are described as follows:

- 1) After 'Start', the analyzer waits for the level to exceed the 'Trigger Level' (indicated on the analyzer in 3 places by the Traffic Light giving a short green flash every second).
- 2) The impulse excitation is made, e.g., a pistol is fired or a balloon is burst.


**Caution:** the use of hearing protection is highly recommended.

- 3) The impulse measurement is started 1 s before the level exceeds the 'Trigger Level'.
- 4) The impulse measurement stops after the analyzer detects the background noise level again (automatically measured by the analyzer).
- 5) The analyzer performs backward integration of the impulse measurement.
- 6) The reverberation time spectra EDT, T20 and T30 are calculated and displayed on the screen.

The measurement can be in octaves or 1/3-octaves in parallel over a selectable frequency range. In each frequency band, the decay is sampled 200 times each second.

The impulse response is backward integrated (according to the Schroeder method). In theory, the resulting decay will be equivalent to the average of a large number of decays made with the interrupted noise method. Therefore, the decays will be smooth using just one single shot.


## 14.2 Setting up the Instrument

- 1) Select the **REVERBERATION TIME** Project Template. (see section 3.3.1 for more details on templates.) The Project Template is displayed at the top of the screen, if it does not display **REVERBERATION TIME**, tap the black bar at the top of the screen and select **REVERBERATION TIME** from the drop-down menu that appears.
- 2) Tap the Main Menu icon  and select **Setup** from the list of options. Set the *Bandwidth* and *Bottom* and *Top Frequency* of the measurement as required.
- 3) Set *Map Based Measurement* = *No* in the **Measurement Control** setup – the reverberation decays will then be numbered from Pos. 1 to N – see how to measure with position management in next section.
- 4) Set *Automatic Save* = *No*, if you want to inspect the reverberation time and decays before manually saving the measurement – otherwise select *Yes* to automatically save the decays after each measurement.
- 5) The analyzer automatically detects the decay time and stops the measurement at the end of the decay – however, under special conditions (for example, when measuring with high background noise) the decay time cannot be detected and the measurement will run up to 20 s. To minimise the measurement time and memory requirement for the measurement, you can limit the measurement by setting the *Max Decay Time*. 3 s is adequate for most ordinary rooms, but should be increased for larger halls or reverberation rooms.
- 6) Set *Excitation to Impulse* if you want to measure using the impulse method (go to step 14) – otherwise select *Interrupted Noise*.

### 14.2.1 Interrupted Noise Method

- 7) Set the number of decays you want to measure per position – the analyzer automatically controls the generator, measurement of the decays and averaging the decays.
- 8) Set the Generator as required – set *Generator Type = External* if you want to control an external generator (details in Appendix A) – otherwise leave it at *Internal* to use the internal generator.
- 9) Select Noise Type for the internal generator. *Pink* noise is typically used.
- 10) Adjust the level of the internal generator output to match the input of the power amplifier used by setting *Level [re. 1 V]*.  
**Note:** You can manually turn the generator on and off by tapping on the loudspeaker icon in the status field.
- 11) Set the *Escape Time* allowing you to leave the room before the generator is turned on during the measurement – see Fig. 14.3.
- 12) Set *Build-up Time* to allow the excitation noise to reach a steady level before the measurement starts. 1 s is adequate in most ordinary rooms, but should be increased for larger halls or reverberation rooms.
- 13) Select the *Sound Source* used, to optimise the frequency response of the internal generator output for either a flat power response or optimum power difference between adjacent 1/1- or 1/3-octave bands – thereby eliminating the need for an equalizer to smooth the response in most cases. Select a type matching your sound source – select *Unknown* if you are using a non Brüel & Kjær sound source, or don't want to make a correction to the frequency response. Go to step 16).

### 14.2.2 Impulsive Method


- 14) Set *Trigger Level* low enough to be sure the impulse will be triggered, but high enough to avoid triggering on the background noise. A level between 80 and 100 dB is normally adequate.
- 15) If you have selected *Automatic Save = yes*, then *Trigger Repeat* can be set to *yes* to automatically start a new measurement when a measurement has been saved. This allows you to go to another position and make a new impulse, without the need for controlling Type 2250/2270 between the measurements. Observe how the Traffic Light indicates the status of the measurement (see Table 5.2 and Fig. 14.4) making it easy for you to change position and generate the impulse synchronised with the measurement procedure. Press the **Start/Pause**  pushbutton to stop the measurement when the last measurement has been saved.

### 14.2.3 Sound Recording

- 16) Set *Recording Control = Automatic* if you want to record the sound during the measurement. The recordings can be played back afterwards for identifying the cause of measurements differing from each other – or (if *Excitation = Impulse*) for further analysis of the measured impulse response by post-processing software like DIRAC Room Acoustics Software Type 7841.

The recordings will contain the signal from when you press the **Start** pushbutton until the measurement stops. The recording will be attached to the measurement as an annotation.

**Note:** Sound Recording requires a license for the Sound Recording Option BZ-7226.

To exit the setup screen, tap the  icon.

### 14.2.4 Controlling the Measurement

The measurement is controlled in the same way you would control a normal sound level meter measurement, using **Start/Pause**, **Continue**, **Reset** and **Save** pushbuttons, see Chapter 3 for more details.


Note the following exceptions:

- Pressing **Start** initiates a measurement cycle slightly more complex than a standard SLM measurement – see Fig. 14.3 and Fig. 14.4 for details. The results are the same, however, a set of measurement data – in this case the reverberation decays at one position

Creating a new Reverberation Time Project

- The measured data is stored at a position – and you can have several positions in one project. Therefore, starting a complete new project cannot be done by pressing **Reset** and then **Start** (as when measuring using the SLM template), because this will measure the decays at a single position within the Project – a new project is initiated by selecting a new project template (or the same again). This will create a new project

### 14.2.5 Annotating Projects and Positions

While using the reverberation time software you can annotate the reverberation time project using the normal method of adding annotations to a project. The annotations can then be viewed by tapping on the paperclip icon or tapping the Main Menu icon  and selecting **Explorer** from the list of options. See section 3.5.

However, your project can contain a lot of measurements, one per position, so you can annotate any position in the project. Sound recordings are automatically attached as annotations to the positions. Annotations at positions are managed in the *Overview* display – described in the next section.

## 14.3 Displaying the Results


The Reverberation Time measurement screen includes three tabs at the bottom: *Overview*, *Spectrum* and *Decay*. The tabs allow you to choose different ways of displaying the measurement results:

- *Overview*: Shows the measurement positions in a table – one position per row. Use this to get an overview of your measurements, to include/exclude positions from the spatial average of all positions in the room, and to manage annotations/sound recordings at the positions
- *Spectrum*: Shows the reverberation spectra graphically, or as a table, for one position, or for the room average. Alternatively, it can show the instantaneous sound pressure level while measuring
- *Decay*: Shows the reverberation decay at a single frequency, for one position, or for the room average

### 14.3.1 Overview

The *Overview* tab shows the measurement positions in a table – one position per row.

**Fig. 14.5**  
Overview tab

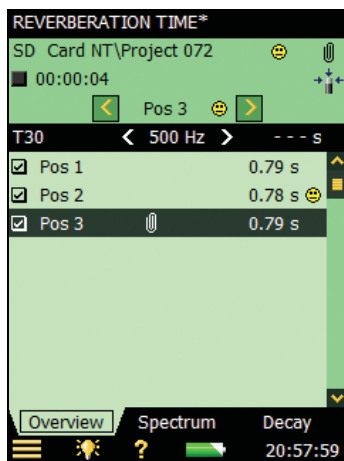




#### Status Field


The Status Field consists of three lines (see Fig. 14.5) – the first two lines of information are common to the status lines in the Sound Level Meter and Frequency Analyzer (see Chapter 5, page 32).

**Note:** The first line of the status field might also contain a smiley, indicating the quality of the Room (the spatial average of all positions), see the description of smiley's in the following paragraph and at the end of this chapter.

The third line of information allows you to:

- Select the measured position. The selected position is the one highlighted in the table. The selected position will be the one displayed when selecting the *Spectrum* or *Decay view*
- Step forwards or backwards through the positions on all displays, using the  and  icons
- Get information on the quality of the measurement through a Quality Indicator (Smiley) displayed as an icon:

: means results should be used with caution



: means results may be suspect or missing

No icon means Type 2250/2270 found no measurement quality issues



Tap the Smiley to get more detailed information about the quality indication. (See the description of smiley's at the end of this chapter.)

## Table

The header row of the table contains (from left to right):

- The RT selector (EDT, T20 or T30), which determines which RT to display in the table rows below. It is also linked to the main *Spectrum* selector and main *Decay* selector
- The Frequency selector (which includes decrement  and increment  buttons), determines the frequency of the readouts in the table rows below. The frequency selector is linked to the *Spectrum* cursor and the frequency of the selected decay
- Readout of the RT value for the current measurement, before it is saved to a position

Each row of the table contains (from left to right):


- A checkmark  controlling whether the position is included or excluded from the Room average. Tap it to include (check) or exclude (uncheck) the position. All positions are by default included in the Room average
- The position. Tap it to get a drop-down with two options, *Select* and *View Annotations*. Use *Select* to select the position and *View Annotations* to view the list of annotations for the position. You can add annotations on the position from this view – as described in Chapter 6
- Possible annotation indicated by . Tap it to view the list of annotations for the position
- The readout of the RT parameter at the frequency determined by the RT selector and Frequency selector in the table header row. There might be a smiley to the right of the readout warning about the quality of the readout. Tap the smiley to get more detailed information about the warning

### 14.3.2 Spectrum

The *Spectrum* tab shows the reverberation time spectrum from a position, or the Room average reverberation time, or both. The sound level is displayed during measurements.

**Fig. 14.6**

*Spectrum tab*

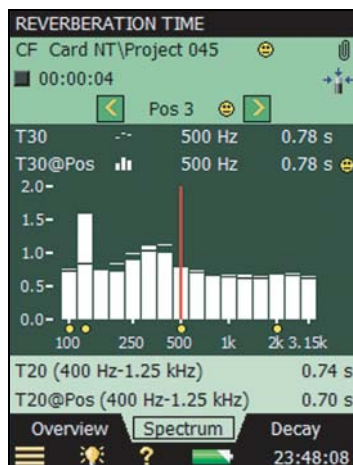

#### Status Field

The Status field on the *Spectrum* tab is the same as on the *Overview* tab.

#### Spectrum Graph

The Spectrum Graph is the same as in the Frequency Analysis software: Two 1/1-octave, or 1/3-octave spectra, superimposed with cursor readouts. The displayed frequency range is automatically adjusted for the measured frequency range.

Small Smiley's are set below each frequency band with a potential problem. The Smiley's are also available at the cursor readouts. Tap the Smiley at the cursor readout to get detailed information about the warning.


The Spectrum Parameter Selectors above the graph selects which spectra to display. You can choose to display: *T20@Pos*, *T30@Pos*, *EDT@Pos*, *T20*, *T30* or *EDT*. If you only want one graph you can set the other to *Off*.

In addition to choosing which parameter to display, you can choose to Display Sound Level – this will display the Z-weighted spectrum LZF together with the A- and C-weighted broadband levels – see Fig. 14.7. When displaying LZF you can tap the LZF selector and select *Display Reverberation Time* to display the reverberation time spectra.

When starting a measurement the graph will automatically display the sound level spectrum, when finished it will display the reverberation time spectrum.



**Fig. 14.7**  
*Spectrum view when measuring*

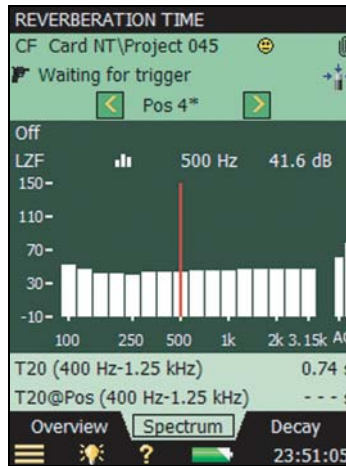

The Main Spectrum Graph on the display (the one with bars) is selected using the parameter selector on the second line of the two shown above the graph (LZF in Fig. 14.7). The Smiley's below the spectra (if there are any) belong to the main spectrum. The parameter selector for the main spectrum is linked to the selector on the *Overview* tab and the parameter selector for the main decay on the *Decay* tab.

The Reference Spectrum on the display (the one displayed as small lines above the bars in Fig. 14.6) is selected using the parameter selector on the first line of the two shown above the graph (T30 in Fig. 14.6). The parameter selector for the reference spectrum is linked to the parameter selector for the reference decay curve in the *Decay* view.

The cursor is linked to the frequency selectors on the *Overview* and *Decay* tabs.

Tap the Y-axis to select:

- *Auto Zoom* to adjust the range of the Y-axis for best fit of the measured spectrum
- *Zoom In/Zoom Out* to adjust the zoom
- *Spectrum Table* to display the spectrum in a table, see an example in Fig. 14.8

**Fig. 14.8**

Spectrum table

Freq.	T30	T30Status
100 Hz	0.68 s	● F%
125 Hz	0.60 s	● k
160 Hz	0.79 s	● %k
200 Hz	0.88 s	
250 Hz	1.02 s	● %k
315 Hz	1.00 s	
400 Hz	1.12 s	● k
500 Hz	0.79 s	
630 Hz	0.74 s	
800 Hz	0.63 s	
1 kHz	0.70 s	
1.25 kHz	0.61 s	
1.6 kHz	0.62 s	
2 kHz	0.64 s	
2.5 kHz	0.68 s	
3.15 kHz	0.61 s	

### Auxiliary Parameters

Below the graphics are two lines containing parameters for displaying the Wide Band Reverberation Times for the current position, or the Room Average. You are also able to display the  $L_{CF}$  and  $L_{AF}$  broadband values.

## 14.3.3 Decay

The *Decay* tab shows the reverberation time decay from a position or the Room average – or both, see Fig. 14.9.

### Status Field


The Status field on the *Decay* tab is the same as on the *Overview* and *Spectrum* tabs.

### Decay Graph

The Decay Graph shows the decay of one frequency band for the selected position and/or the decay of the same frequency band for the Room Average (requires Ensemble Averaging).

The Decay Parameter Selectors above the graph select which decay to display: *T20@Pos*, *T30@Pos* or *EDT@Pos*. Each of these selections show the decay for the measurement at the selected position together with the readout of *T20@Pos*, *T30@Pos* and *EDT@Pos* resp. *T20*, *T30* and *EDT* show the decay for the Room Average together with the readout of *T20*, *T30* and *EDT* resp. If you only want one graph you can set the other selector to *Off*.

**Fig. 14.9**  
*Decay view*

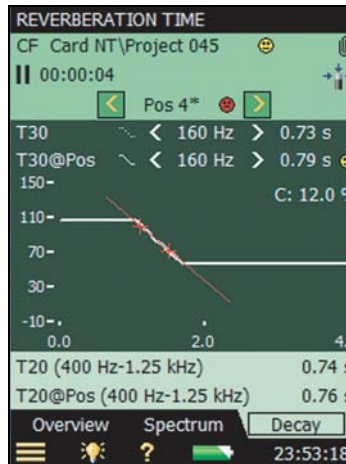

The Main Decay on the display (displayed as a continuous line) is selected using the parameter selector in the second line of the two shown above the display (*T30@Pos* in Fig. 14.9). The parameter selector for the main decay is linked to the selector on the *Overview* tab and the parameter selector for the main spectrum on the *Spectrum* tab.

The Reference Decay on the display (displayed as a dashed line) is selected using the parameter selector in the first line of the two shown above the display (*T20@Pos* in Fig. 14.9). The parameter selector for the reference decay is linked to the parameter selector for the reference spectrum on the *Spectrum* tab.

The Frequency selector (with decrement ◀ and increment ▶ buttons as well), determines the frequency of the decay curves. The frequency selector is linked to the spectrum cursor and the frequency selector on the *Overview* tab.

In the upper right corner of the view area, the value of a single quality indicator is displayed:

- C: xx%. The Curvature indicator – if above 10%, then the quality indicator ‘%’, meaning ‘Decay is bent’, is set

For more details of the quality indicators, see section 14.5.

Tap the Y-axis to select:

- *Auto Zoom* to adjust the range of the Y-axis for best fit of the measured spectrum
- *Zoom In/Zoom Out* to adjust the zoom
- *Auto Scale* to select the best scaling for viewing the spectra – without adjusting the zoom
- *Scale Up/Scale Down* to adjust the full scale value on the Y-axis
- *Show/Hide Regression Line* to show/hide the regression line and the evaluation range for the main decay, together with the two quality indicators C and  $\xi$


## 14.4 Measurements with Graphical Position Management

Type 2250/2270 can keep track of the source and receiver positions in a graphical way together with the measurements. To do this, make the following settings in the Setup:

- 1) Set *Map Based Measurement* = *Yes* in the **Measurement Control** setup – the reverberation decays will then be placed graphically on the ‘map’ shown on the *Overview* tab, and numbered as source-receiver relations (for example, S1R2 means the decay measurement with noise from Source 1 and measured at Receiver position 2).
- 2) Set *Meas. All Pos. for Each Source* = *Yes* for measuring all combinations of source and receiver positions. Set to *No*, if you want to measure at a specific number of receiver positions per source.
- 3) Set *No. of Positions per Source* to the number of receiver positions you want to measure per source.
- 4) Set *Increment* to *Sources First*, *Receivers First* or *Manual*. Typically *Sources First* is best for Impulsive excitation (you can then walk between the source positions and generate the impulses while Type 2250/2270 is placed on a tripod at one receiver position); *Receivers First* is best for Interrupted Noise excitation (you can move Type 2250/2270 between the receiver positions, while the sound source remains in the same place).

The *Overview* tab will then look like Fig. 14.10:


**Fig. 14.10**  
Overview tab showing  
one source and one  
receiver position

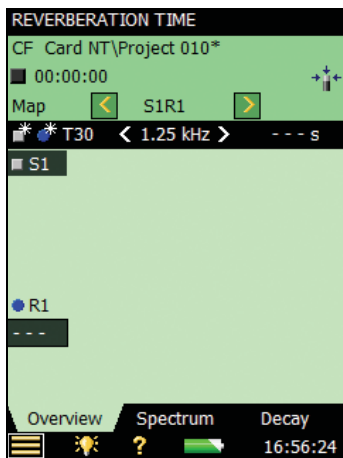

Note the Add Source  and Add Receiver  icons on the headline for the map. Tap  to add new sources, and tap  to add new receivers on the map.

**Fig. 14.11**


Overview tab showing  
two sources and three  
receiver positions

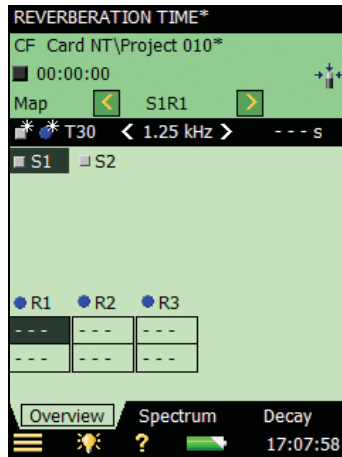

You can move the sources or receivers on the map by tapping on the source/receiver (see Fig. 14.12), select *Move* from the drop-down menu that appears, then tap at the position where you want the source/receiver (see Fig. 14.13).


**Fig. 14.12**

Tap a source to get a  
drop-down with options

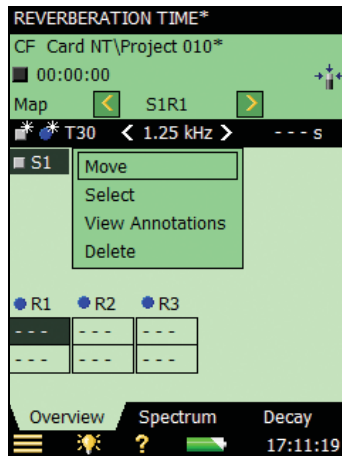

**Fig. 14.13**

Sources and receivers moved to places on the map in accordance with their physical position in a room

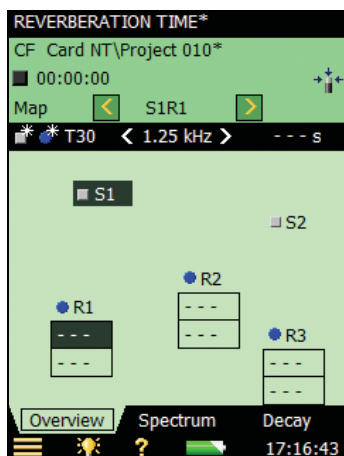


The dark-green fields on the map indicate the selected Source-Receiver relation. The next measurement will be saved at this position.

Results from the measurements at the receiver positions are displayed in the boxes at the receiver positions – determined by the parameter and frequency selector in the headline of the map.



**Fig. 14.14**

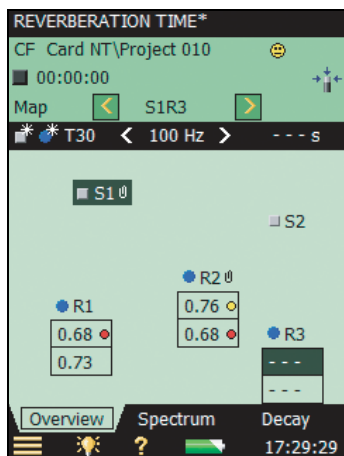Example display showing a measurement in progress




The example in Fig. 14.14 shows the state when four measurements have been made and saved and the position at S1R3 is selected, ready for the next measurement. Note the small smileys at some of the receiver positions – you can tap them and get more detailed information.

You can attach text or commentaries at source or receiver positions by selecting *View Annotations* (see Fig. 14.12) and add new annotations as described in Chapter 6. Note the two small paperclips at S1 and R2 – they indicate annotations at these positions.

Tap *Map* just above the Add Source  and Add Receiver  icons, and select *Table* to display the measurements in a table (see Fig. 14.15). The table contains the same information as the table described in the previous section when measuring without position management (Fig. 14.5).


**Fig. 14.15**  
*Map-based  
measurements displayed  
in a table*

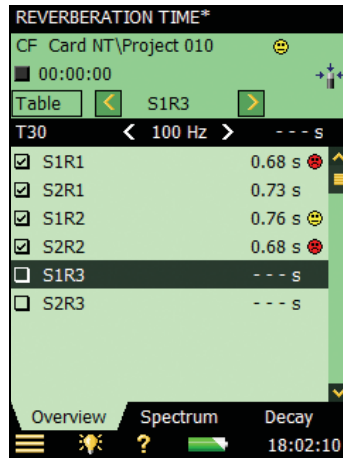


**Note:** You can move the data from one position to another: Tap a position you want to move and select *Cut* from the drop-down, then tap the position where you want to paste it and select *Paste*. This can be done on the map as well as in the table.

If you want to measure at a specific number of receiver positions per source, then the map for one receiver position per source, for example, will look like Fig. 14.16.

**Fig. 14.16**  
*Map-based  
measurement showing  
one receiver per source*

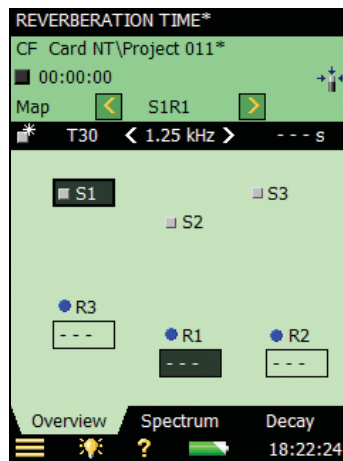

**Note:** there is only an Add Source icon  because the specified number of receivers is added automatically when adding a source.















The *Spectrum* and *Decay* views function in the same way as when measuring without position managing. The only difference is the indication of the position in the status field – this is now a Source-Receiver selector instead of a position number selector.

## 14.5 Quality Indicators

There are Quality Indicators for each frequency band in each reverberation time spectrum and for each reverberation time spectrum. (These include letters, symbols or smileys, see Table 14.1 for an overview). One of the quality indicators are recommended in ISO 3382-2 Annex B, as a measure of how good the slope of the decay can be approximated to a straight line:

- C: xx%. The Curvature indicator – if above 10%, then the quality indicator ‘%’, meaning ‘Decay is bent’, is set

**Table 14.1** Overview of Quality Indicators and Smileys

Quality Indicator	Smiley	Explanation	Description
N		No decay end found	The end of the decay cannot be determined because it doesn't end in the background noise
y		Background noise too high	Background noise is above the upper evaluation point
t		No decay start found	No decay start found
Y		Background noise too high	Background noise is above the lower evaluation point
T		Max. Decay Time too short	The lower evaluation point is beyond the decay time
Z		No decay found	The slope of the decay is positive, i.e., the reverberation time is negative
P		Reverberation time too short	Less than 2 points in Evaluation Range
O		Excitation sound level too high	Overload
F		Reverberation time too short	B×T below 16 (B = filter bandwidth and T = reverberation time of detector) – required by ISO 3382
R		T20 used (T30 unavailable)	T20 used (T30 unavailable)
n		High background noise	Background noise too close to level at lower evaluation point
p		Short reverberation time	Less than 4 points in Evaluation Range
%		Decay is bent	The difference between T20 and T30 is greater than 10%. (Recommended quality indicator from ISO 3382-2 Annex B)
k		Decay is non-linear	Correlation coefficient in linear regression is too low



The Quality Indicators (first column) are shown in the spectrum table only.

The Smileys are shown on:

- all readouts of reverberation time results
- on the position selector as the ‘sum’ of all quality indicators from each frequency band
- on the Room (Project) as the ‘sum’ of all quality indicators from each frequency band in the Room reverberation time spectrum

The explanation is shown if you tap a smiley (except on the small smileys below the frequency bands in the spectrum – select the frequency band with the cursor and tap the smiley in the cursor readout).

## 14.6 Saving and Recalling Results

Measurements are saved at position numbers (for example, *Pos. 1*) or Source-Receiver relations (for example, *SIRI*) within the Project. This means there are more measurements stored in the Reverberation Time Projects than the Sound Level Meter, Frequency Analyzer or Logging Projects, which all contain only one measurement within each project.

The saved project can be opened using *Open* in **Explorer**, then you can view all the measured data, and even continue measuring at new positions.

If you view the data using *View* in **Explorer**, then you can only view the Room Average of the project.



# Chapter 15

## Tone Assessment Option BZ-7231 – 1/3-octave Method

### 15.1 General

Tone Assessment Option BZ-7231 includes tone assessment according to selected methods. The software module includes an 'FFT based' as well as a '1/3-octave based' method. It allows assessment of tones on-site.

The result of the tone assessment is the adjustment to be added to the  $L_{Aeq}$  as described in the relevant standards for calculating rating level.

BZ-7231, when used with BZ-7223 Frequency Analysis, BZ-7224 Logging and BZ-7225 Enhanced logging, allows you to:


- Assess tones in a measured 1/3-octave spectrum according to ISO 1996:2007, Annex D
- Assess tones in a measured 1/3-octave spectrum according to Italian Law, "Ministero dell'ambiente, Decreto 16 marzo 1998", hereafter referred to as "Italian Law"

BZ-7231, when used with BZ-7230 FFT Analysis Software, allows you to:

- Assess tones in a measured FFT spectrum according to ISO 1996:2007, Annex C
- Use the "Generate tone at cursor" feature to generate a pure tone on the headphone output of the Hand-held Analyzer, for comparison to the actual noise

This section will focus on tone assessment based on the 1/3-octave method. Please refer to User Manual BE 1778: "FFT Analysis Software BZ-7230 and Tone Assessment Option BZ-7231, for use with Hand-held Analyzers Types 2270 and 2250" for detailed information about tone assessment based on FFT spectra.

Tone Assessment Option BZ-7231 brings results to the user on-site as well as preparing for post-processing and reporting back at the office. Documentation can be completed using Utility Software for Hand-held Analyzers BZ-5503, or the measured data can be exported for post-processing by Evaluator Type 7820 or other post-processing software such as Microsoft® Excel®.

Check the **About** Menu to see whether you have the right license to run the Tone Assessment Option. (The **About** Menu is accessed from built-in help – tap the Help icon  on the shortcut bar, then select *About*.)

If you have purchased Type 2250/2270 together with the software application(s), then the relevant license(s) comes pre-installed on the instrument.

If you purchased a separate software application for your Type 2250/2270, then you have to install the license on the instrument. This is done using Utility Software for Hand-held Analyzers, BZ-5503, please consult the on-line help included with the BZ-5503 software for instructions on how to install a license.

## 15.2 Tone Assessment According to ISO 1996-2, Annex D

When assessing noise, it is generally recognised that noise containing audible pure tones is more annoying than noise with the same A-weighted broadband level that does not contain audible tones. When assessing noise that contains tones or narrow bands of noise, an adjustment shall be added to the A-weighted time averaged level,  $L_{Aeq}$ . The first evaluation of audible tones in noise is most often carried out by the human ear. But for comparative analysis results, and documentation, an objective analysis may be needed.

Tone Assessment can be performed using the ISO 1996-2:2007 standard “Determination of environmental noise levels”, Annex D: “Objective method for assessing the audibility of tones in noise – Simplified method”. This method uses 1/3-octave measurements.

The selection of method depends on local legislation which may refer to ISO 1996-2 or a local method.


Find more information about rating level and assessment of environmental noise in ISO 1996-2 and in Brüel & Kjær’s Environmental Booklet.

### 15.2.1 ISO 1996-2, Annex D – Tone Assessment Calculations

The ISO method searches a measured, time averaged ( $L_{eq}$ ) spectrum, for level differences between adjacent 1/3-octave bands. If the level difference between a 1/3-octave band and the band either side of it are higher than a certain limit, an adjustment for audible tones may be added to the  $L_{Aeq}$  level when calculating the rating level,  $L_r$ .

In ISO 1996-2, Annex D, the spectrum is divided into three frequency ranges: Low, Middle and High. In each frequency range a specific limit for the level differences leading to an adjustment is defined, see Fig. 15.1.

**Fig. 15.1** Definition of frequency ranges and level differences

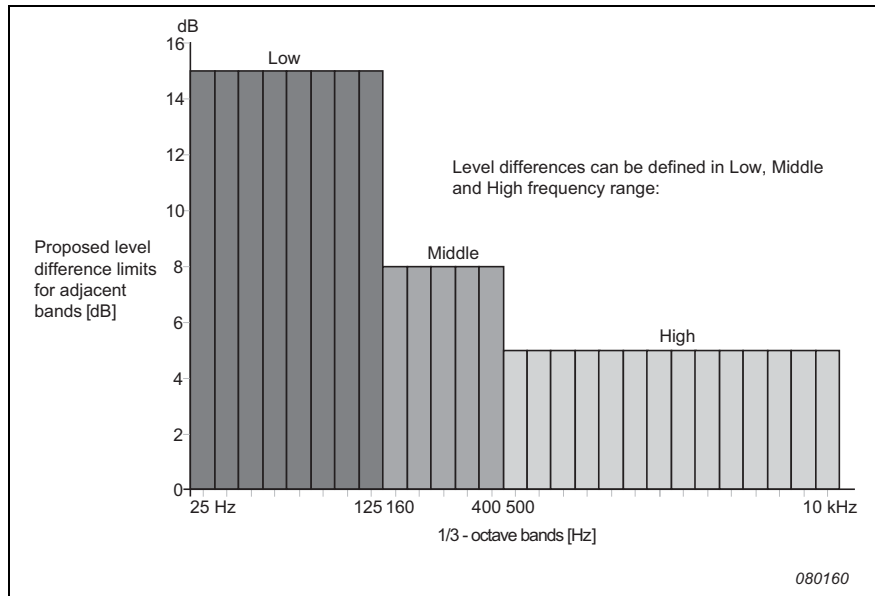

The proposed frequency ranges and level differences between adjacent bands are:

- **Low frequency range:** includes the 1/3-octave bands from 25 Hz to 125 Hz with a level difference for a detected tone greater than 15 dB
- **Middle frequency range:** includes the 1/3-octave bands from 160 Hz to 400 Hz with a level difference for a detected tone greater than 8 dB
- **High frequency range:** includes the 1/3-octave bands from 500 Hz to 10 kHz with a level difference for a detected tone greater than 5 dB

With BZ-7231 software, frequency ranges and the limit for the level differences in low, middle and high range can be set by the user.

Tone assessment is carried out for all the measured frequency bands (including those below 25 Hz and above 10 kHz). The level difference limit is extrapolated from the low and high range to cover the complete measurement range.

If tones are detected outside the range from 25 Hz to 10 kHz the quality indicator (yellow smiley) indicates “Tone out of ISO range detected”.

ISO 1996-2, Annex D does not specify the size of the adjustment. In the default setting of the BZ-7231, Brüel & Kjær has chosen to set the value to 5 dB.

### Calculating the Level Difference Between one Band and the Adjacent Bands


BZ-7231 software calculates the level difference between a 1/3-octave band and two adjacent 1/3-octave bands with lower levels. The difference is calculated between the band in the middle and the highest of the adjacent bands.

# 15.3 Tone Assessment according to Italian Law

Tone Assessment in Italy is performed on normal 1/3-octave spectra but with an option to use narrow bands (such as FFT), in case of doubt.

The method described in the Italian “Decreto 16 marzo 1998” states that the 1/3-octave  $L_{ZFmin}$  spectrum is used for evaluation of tones in noise. The analysis must be performed in the frequency range from 20 Hz to 20 kHz and a tone is present if the level of a band is more than 5 dB higher than the levels in the adjacent bands. The adjustment  $K_t$ , which should be added to the measured  $L_{Aeq}$ , will only be applied if the band with the tone touches or exceeds a loudness level contour touched by another frequency value of the spectrum. (Examples of loudness level contours from Evaluator Type 7820/7821 are shown in Fig. 15.2.) The size of the adjustment  $K_t$  is defined as 3 dB.

**Fig. 15.2**  
Example display from  
Evaluator Type 7820/7821  
showing an  $L_{LFmin}$   
spectrum and loudness  
level contours

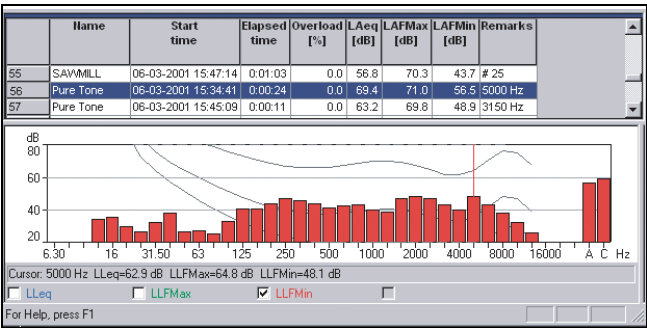


An equal loudness curve is a frequency response curve. Equal loudness curves are the experimental results of presenting pure tones and levels at different frequencies to young people with no hearing impairment. Along a contour line the young, average, normal listener will judge tones presented with different combinations of frequency and dB to be equally loud.


Equal loudness level curves are defined by ISO 226 “Acoustics – Normal equal-loudness-level contours”. The Italian “Decreto 16 marzo 1998” refers to ISO 226 (1987), but the ISO 226 standard has been thoroughly revised in the latest version from 2003. Your Type 2250/2270, with BZ-7231 software installed, uses by default the free-field curves from the 1987 version. But the diffuse-field contours from the ISO 226(1987), as well as the free-field curves from ISO 226(2003) have been implemented and may be selected.

# 15.4 Setting up the Instrument

## 15.4.1 Selecting the Tone Assessment Option


Tap the Main Menu icon  and select **Setup** from the list of options. Under the *Tone Assessment* parameters (on the full list of options) tap the *Tone Assessment* option and set it to *On*, see Fig. 15.3.

**Fig. 15.3**  
Setting Tone Assessment  
option on

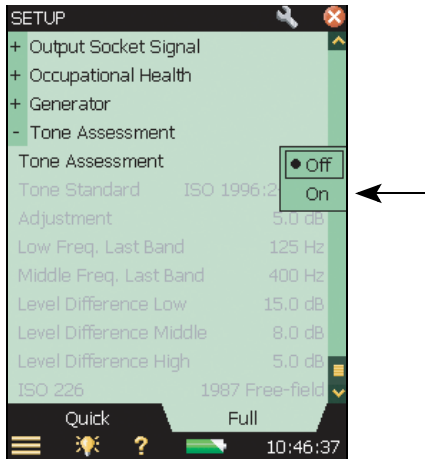

From the Setup menu, select either the *ISO 1996:2-2007* or the Italian Law *DM 16-03-1998* method:

**Fig. 15.4**  
Setting the Tone  
Assessment method

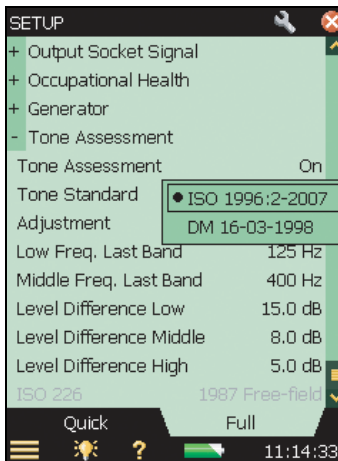

If you select the tone assessment method according to the ISO 1996-2, Annex D standard, you can accept the default setup according to that standard. You can then change the various tone parameters according to your needs (apart from the *ISO 226* parameter which is greyed-out) and proceed directly to the measurement.

If you select the tone assessment method according to Italian Law (i.e., you select *DM 16-03-1998*), then you have accepted the default setup for that standard, and the only parameter you can change is the *ISO 226* parameter. Select one of the diffuse- or free-field contour options available from the parameter drop-down (which appears when you tap the parameter). For more details and for information on how to set up individual tone assessment parameters, see the following section.

## 15.4.2 Setting up a Measurement Manually


### ISO 1996-2, Annex D

When tone assessment according to ISO 1996-2, Annex D is selected, you can set the division between the Low and Middle frequency range, the division between the Middle and High frequency range, and also the limits for the level differences between adjacent bands – see Fig.15.5. (You can also refer to Fig.15.1 for a definition of the frequency ranges and level differences.)

**Fig. 15.5**

*Left: Setting the 'Low Freq. Last Band' parameter*

*Right: Setting the 'Level Difference Low' parameter*

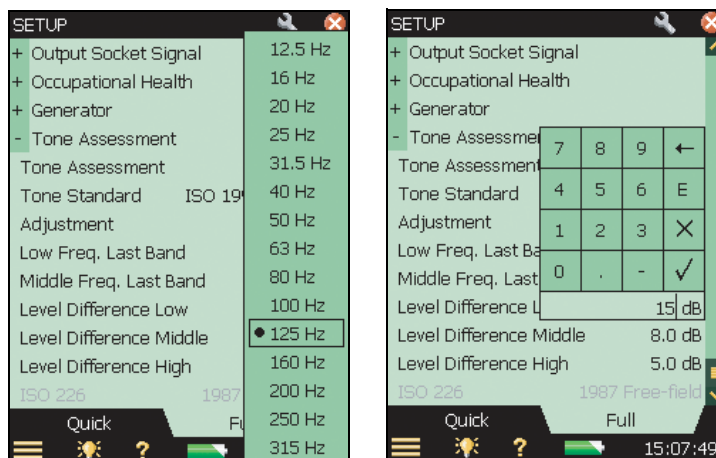

You set the division between the Low/Middle frequency range by selecting the required value for the last (or highest) band in the Low frequency range (from 12.5 Hz to 315 Hz), and set the division between the Middle/High frequency range by selecting the required value for the last (or highest) band in the Middle frequency range (from 160 Hz to 20 kHz).

The ISO method does not state which frequency weighting should be used, so in the default setup, A-weighting is selected. However, this is not described in the ISO method, so no warnings will be generated if you select other frequency weightings.


### Italian Law

When tone assessment according to Italian Law is selected, the analyzed spectrum must be the Z-weighted minimum level measured in each 1/3-octave band,  $L_{ZFmin}$ . The  $L_{ZFmin}$  parameter is automatically selected on the measurement page when you select *DM 16-03-1998*.

The test for loudness contours is set by default to the *1987 Free-field* option of the *ISO 226* contour parameters. You can also select the *1987 Diffuse-field* and *2003 Free-field* options from the *ISO 226* contour parameters, if required. See Fig.15.6.




**Fig. 15.6**  
Setting the loudness  
contour options

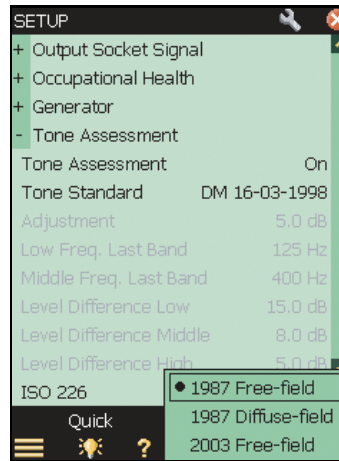

### 15.4.3 Setting up the Measurement using the Default Setup

Select the *Tone* parameter above the spectrum and start the measurement by pressing the **Start/Pause** pushbutton (⏮/⏭). If the selected setup parameters do not comply with the selected tone assessment method, the following pop-up window will be displayed:

**Fig. 15.7**  
Pop-up window for tone  
measurement setup  
check

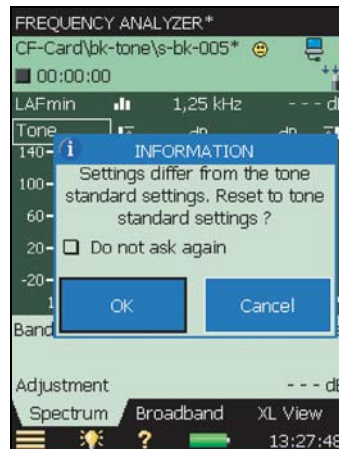

The pop-up window can be de-activated for the rest of the measurement session. To activate it again, you will have to reload the template or restart your instrument. This automatic check is deactivated when the *Tone Assessment* parameter is set to *Off* in the Setup menu.


To reset all the relevant parameters to the default setup, tap the **OK** button. (The default setup includes preset parameters that comply with the selected standard. These are described in Table 15.1.) To measure with the settings you set up manually, tap the **Cancel** button.

**Table 15.1**

Default parameters used  
by the automatic  
measurement setup  
check

Setup Parameter	Default Value
<i>Selected standard: ISO 1996-2, Annex D</i>	
Adjustment	3 dB
Last band in low frequency range	125 Hz
Last band in middle frequency range	400 Hz
Level difference low	15 dB
Level difference middle	8 dB
Level difference high	5 dB
<i>Selected standard: Italian Law (DM 16-03-1998)</i>	
ISO 226	1987 Free-field

**Note 1:** Even if you have set the *Tone Assessment* parameter to *On* (Setup menu), the calculation is not carried out until the *Tone* parameter is selected above the spectrum.

**Note 2:** You may find the Template Explorer (accessed from the Main Menu ) useful to save your own measurement setup.

#### 15.4.4 Sound Recording

If a valid license for the Sound Recording Option BZ-7226 is present, it is possible to record the sound while measuring. (Refer to Chapter 13 for information about the Sound Recording Option.)

**Note:** When Type 2250/2270 recordings are to be used for re-analysis on a PC, be sure to select *Automatic Gain Control* parameter to *Off*, under the *Sound Recording* parameters, and select the *Recording Quality* parameter to *High*.


## 15.5 Measuring

### 15.5.1 Result Display

Tone assessment is not performed until the *Tone* parameter is selected above the spectrum. (This is done by tapping one of the parameter fields in the two lines above the spectrum display and choosing *Tone* from the drop-down menu.) Once selected, tone assessment is carried out on the selected spectrum. The results are updated during the measurement.

**Fig. 15.8**


Selecting the Tone parameter above the spectrum display

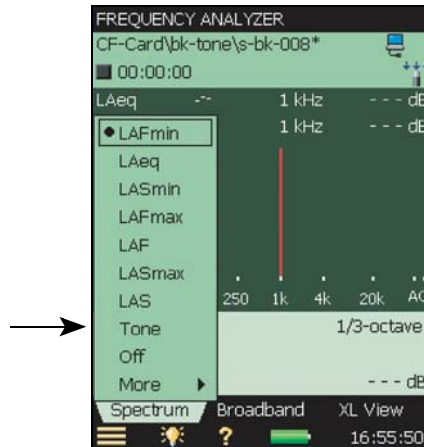

On the results display, a blue marker is set at the top of each detected band with a tone. Differences to the left and right of the frequency band selected by the main cursor are shown (on the left and right) in the tone parameter panel above the spectrum, see Fig. 15.9. The main cursor is moved using either the hard keys or the stylus.

**Fig. 15.9**

The differences to the left and right of the selected frequency band are shown in the tone parameter panel – in this example, there is a 11.4 dB difference to the left and a 3.9 dB difference to the right

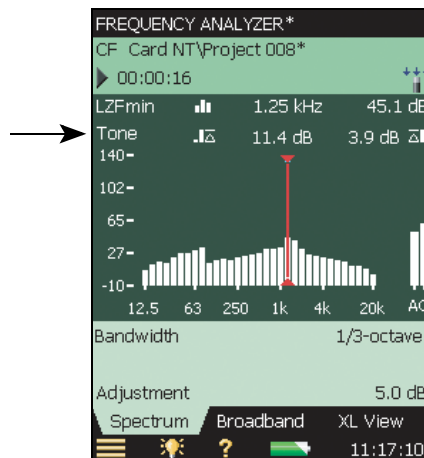

The information shown in value panel can be changed by tapping in the field. From the tone parameters, the adjustment and the selected tone standard can be selected. See Fig. 15.10.

Results from the tone assessment can also be found by tapping on the *Broadband* tab and browsing the Broadband view in a similar way.

**Fig. 15.10**

Changing the information shown in the value panel




## 15.6 Logging Software BZ-7224 Template

The results from the tone assessment can be found in the spectrum view of the logging template. Tone assessment is performed for each logging period, as well as for the total measurement time, see Fig. 15.11.

**Fig. 15.11**

Viewing results on the logging template

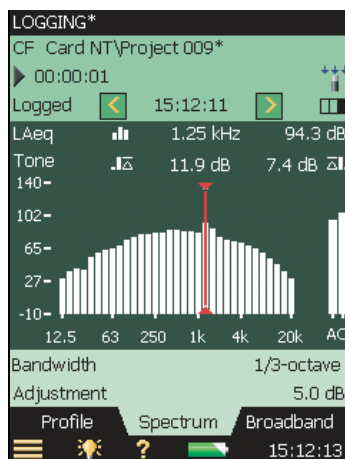


Please find more information about setting up a logging measurement in Chapter 11.

## 15.7 Enhanced Logging Software BZ-7225 Template

The tone parameter can be shown, for both the logging and the report periods, in the spectrum view of the enhanced logging template, see Fig. 15.12.

**Fig. 15.12**  
Viewing results on the  
enhanced logging  
template

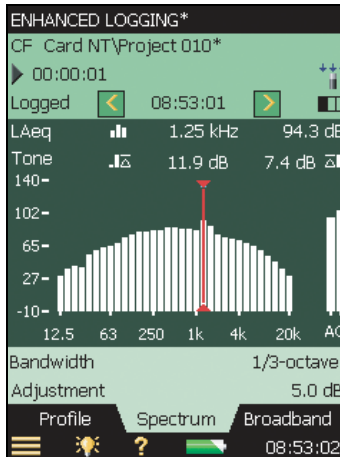


Please find more information about setting up the enhanced logging in Chapter 12.

## 15.8 Status Codes (Smiley's)

When *Tone* is selected on the tone parameter panel, the list of status codes is updated. Tap a smiley to get an explanation of the status code, and for a tip on how to remedy or improve the settings on the instrument, see an example in Fig. 15.13.



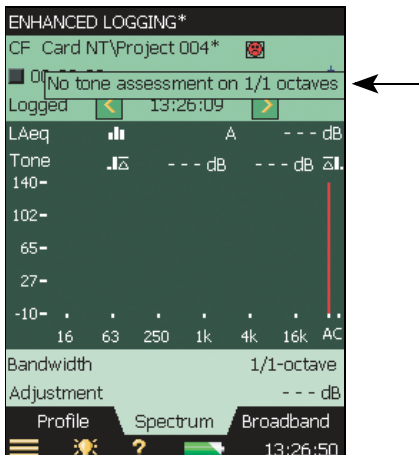






**Fig. 15.13**  
Example of a status code  
explanation



If you have selected 1/1-octave, an accelerometer as transducer, or a Direct input, tone assessment will be performed, but a smiley will be displayed. When you tap the smiley it will advise you to use a microphone.

For an overview of all the remedies associated to the various smileys, please refer to Table 15.2

**Table 15.2** Overview of Smiley Indicators and associated remedies

Smiley	Colour	Explanation	Remedy – Tip for Solution
	Red	No tone assessment on 1/1 octaves	There is no method for assessing tones when the spectrum is analysed in 1/1-octave bands, select 1/3-octave instead
	Red	Analysis on 'Accelerometer'	The analysis is carried out on an accelerometer input, select a microphone
	Red	Spectrum must be $L_{ZFmin}$	When Italian Law is selected the analysed spectrum must be $L_{ZFmin}$
	Red	No tone assessment on inst. parameters	It is not possible to make tone assessments on instantaneous parameters ('Fast' or 'Slow')
	Yellow	Analysis on 'Direct'	The analysis is carried out on a 'Direct' input, select a microphone
	Yellow	Setup different from ISO standard	The ISO is selected and the measurement setup deviates from the proposals in the ISO standard
	Yellow	Min or Max spectrum	When the ISO standard is selected the analyzed spectrum should be $L_{eq}$
	Yellow	Tone freq outside proposed ISO range	In the ISO standard the defined frequency range for tone assessment is from 25 Hz to 10 kHz. A tone is detected outside this frequency range
	Yellow	Tone freq out of proposed DM range	In the standard according to Italian Law the tone assessment must be performed in the range from 20 Hz to 20 kHz. A tone is detected outside this frequency range

**Note:** The ISO method does not specify the weighting filter to be used. The A-weighting filter is selected by default, but all selectable broadband filters may be applied without warnings.

## 15.9 Recalling Saved Measurements

Saved measurements using the **FREQUENCY ANALYZER**, **LOGGING** and **ENHANCED LOGGING** templates can be opened and the Tone Assessment can be applied. Please refer to section 3.4 and section 6.3 for information on how to save and recall measurements, respectively.

# Chapter 16

---

## Specifications

This chapter comprises the specifications that are needed for evaluation of instrument performance characteristics and proper use of the instrument. Some of the applicable sound level meter standards require additional technical documentation, in

particular for pattern evaluation (type approval) purposes, but have no bearing on normal use. The additional technical documentation is given in a separate Brüel & Kjær instruction manual (BE-1712).

## Type 2250/2270 Platform

Specifications apply to Type 2250/2270 fitted with Microphone Type 4189 and Microphone Preamplifier ZC-0032

### SUPPLIED MICROPHONE

**Type 4189:** Prepolarized Free-field ½" Microphone or

**Type 4190:** Free-field ½" Microphone

**Nominal Open-circuit Sensitivity:** 50 mV/Pa (corresponding to

–26 dB re 1 V/Pa) ± 1.5 dB

**Capacitance:** 14 pF (at 250 Hz)

### MICROPHONE PREAMPLIFIER ZC-0032

**Nominal Preamplifier Attenuation:** 0.25 dB

**Connector:** 10-pin LEMO

**Extension Cables:** Up to 100 m in length between the microphone preamplifier and Type 2250/2270, without degradation of the specifications

**Accessory Detection:** Windscreen UA-1650 can be automatically detected when fitted over ZC-0032

### MICROPHONE POLARIZATION VOLTAGE

Selectable between 0 V and 200 V

### SELF-GENERATED NOISE LEVEL

Typical values at 23°C for nominal microphone open-circuit sensitivity:

Weighting	Microphone	Electrical	Total
"A"	14.6 dB	12.4 dB	16.6 dB
"B"	13.4 dB	11.5 dB	15.6 dB
"C"	13.5 dB	12.9 dB	16.2 dB
"Z" 5 Hz–20 kHz	15.3 dB	18.3 dB	20.1 dB
"Z" 3 Hz–20 kHz	15.3 dB	25.5 dB	25.9 dB

### KEYBOARD

**Pushbuttons:** 11 keys with backlight, optimised for measurement control and screen navigation

### ON-OFF BUTTON

**Function:** Press 1 s to turn on; press 1 s to enter standby; press for more than 5 s to switch off

### STATUS INDICATORS

**LEDs:** Red, amber and green

### DISPLAY

**Type:** Transflective back-lit colour touch screen 240 × 320 dot matrix

**Colour Schemes:** Five different – optimised for different usage scenarios (day, night, etc.)

**Backlight:** Adjustable level and on-time

### USER INTERFACE

**Measurement Control:** Using pushbuttons on keyboard

**Setup and Display of Results:** Using stylus on touch screen or pushbuttons on keyboard

**Lock:** Keyboard and touch screen can be locked and unlocked

### USB INTERFACE

USB 1.1 OTG Mini B socket

### MODEM INTERFACE

Hayes compatible GSM or standard analogue modems connected through the Compact Flash slot. Connection to Internet through GPRS/EDGE/HSPA modem connected through the Compact Flash slot. Supports DynDNS for automatic update of IP address of hostname

### COMPACT FLASH SOCKET

For connecting CF memory card, CF modem, CF LAN Interface or CF WLAN Interface

### LAN INTERFACE SOCKET (TYPE 2270 ONLY)

**Connector:** RJ45

**Speed:** 10 Mbps

**Protocol:** TCP/IP

### INPUT SOCKET (2 - TYPE 2270 ONLY)

**Connector:** Triaxial LEMO

**Input Impedance:** ≥ 1 MΩ

**Direct Input:** Max. input voltage: ± 14.14 V<sub>peak</sub>

**CCLD Input:** Max. input voltage: ± 7.07 V<sub>peak</sub>

**CCLD Current/voltage:** 4 mA/25 V

### TRIGGER SOCKET

**Connector:** Triaxial LEMO

**Max. Input Voltage:** ± 20 V<sub>peak</sub>

**Input Impedance:** > 47 kΩ

**Precision:** ± 0.1 V

### OUTPUT SOCKET

**Connector:** Triaxial LEMO

**Max. Peak Output Level:** ± 4.46 V

**Output Impedance:** 50 Ω

### HEADPHONE SOCKET

**Connector:** 3.5 mm Minijack stereo socket

**Max. Peak Output Level:** ± 1.4 V

**Output Impedance:** 32 Ω in each channel

### MICROPHONE FOR COMMENTARY

Microphone, which utilises Automatic Gain Control (AGC), is incorporated in underside of instrument. Used to create voice annotations for attaching to measurements



**CAMERA (TYPE 2270 ONLY)**

Camera with fixed focus and automatic exposure is incorporated in underside of instrument.

Used to create image annotations for attaching to measurements

**Image Size:** 640 x 480 pixels

**Viewfinder size:** 212 x 160 pixels

**Format:** jpg with exif information

**EXTERNAL DC POWER SUPPLY REQUIREMENTS**

Used to charge the battery pack in the instrument

**Voltage:** 8 – 24 V DC, ripple voltage < 20 mV

Current Requirement: min. 1.5 A

**Power Consumption:** < 2.5 W, without battery charging, < 10 W when charging

**Cable Connector:** LEMO Type FFA.00, positive at centre pin

**EXTERNAL AC MAIN SUPPLY ADAPTOR**

**Part No.:** ZG-0426

**Supply Voltage:** 100 – 120/200 – 240 VAC; 47 – 63 Hz

**Connector:** 2-pin IEC 320

**BATTERY PACK**

**Part No.:** QB-0061 Rechargeable Li-Ion battery

**Voltage:** 3.7 V

**Capacity:** 4800 mAh nominal

**Typical Operating Time:** > 8 hours

**Battery Cycle Life:** > 500 complete charge/discharge cycles

**Battery Indicator:** Remaining battery capacity and expected working time may be read out in % and in time

**Battery Fuel Gauge:** The battery is equipped with a built-in fuel gauge, which continuously measures and stores the actual battery capacity in the battery unit

**Charge Time:** In instrument, typically 10 hours from empty at ambient temperatures below 30°C. To protect the battery, charging will be terminated completely at ambient temperatures above 40°C. At 30 to 40°C charging time will be prolonged. With external charger ZG-0444 (optional accessory), typically 5 hours

**Note:** It is not recommended to charge the battery at temperatures below 0°C (32°F) or over 50°C (122°F). Doing this will reduce battery lifetime

**CLOCK**

Back-up battery powered clock. Drift < 0.45 s per 24 hour period

**WARM-UP TIME**

**From Power Off:** < 2 minutes

**From Standby:** < 10 seconds for prepolarized microphones

**TEMPERATURE**

IEC 60068–2–1 & IEC 60068–2–2: Environmental Testing. Cold and Dry Heat.

**Operating Temperature:** –10 to + 50°C (14 to 122°F), < 0.1 dB

**Storage Temperature:** –25 to +70°C (–13 to +158°F)

**HUMIDITY**

IEC 60068–2–78: Damp Heat: 90% RH (non-condensing at 40°C (104°F)).

**Effect of Humidity:** < 0.1 dB for 0% < RH < 90% (at 40°C (104°F) and 1 kHz)

**MECHANICAL**

Environmental Protection: IP44

Non-operating:

IEC 60068–2–6: Vibration: 0.3 mm, 20 m/s<sup>2</sup>, 10 – 500 Hz

IEC 60068–2–27: Shock: 1000 m/s<sup>2</sup>

IEC 60068–2–29: Bump: 4000 bumps at 400 m/s<sup>2</sup>

**WEIGHT AND DIMENSIONS**

650 g (23 oz.) including rechargeable battery

300 × 93 × 50 mm (11.8 × 3.7 × 1.9") including preamplifier and microphone

**USERS**

Multi-user concept with login. Users can have their own settings with jobs and projects totally independent of other users

**PREFERENCES**

Date, Time and Number formats can be specified per user

**LANGUAGE**

User Interface in Catalan, Chinese (People's Republic of China), Chinese (Taiwan), Croatian, Czech, Danish, English, Flemish, French, German, Hungarian, Japanese, Italian, Korean, Polish, Portuguese, Romanian, Serbian, Slovenian, Spanish, Swedish and Turkish

**HELP**

Concise context-sensitive help in Chinese (People's Republic of China), English, French, German, Italian, Japanese, Korean, Polish, Portuguese, Romanian, Serbian, Slovenian and Spanish

**UPDATE OF SOFTWARE**

Update to any version using BZ-5503 through USB or update to SW21 – latest version through Internet

**WEB PAGE**

Connect to the instrument using an Internet Browser supporting Java scripts. The connection is password protected

**Two levels of protection:**

- Guest level: for viewing only
- Administrator level: for viewing and full control of the instrument

## Software Specifications – Sound Level Meter Software BZ-7222

Conforms with the following National and International Standards:

- IEC 61672 –1 (2002–05) Class 1
- IEC 60651 (1979) plus Amendment 1 (1993–02) and Amendment 2 (2000–10), Type 1
- IEC 60804 (2000–10), Type 1
- DIN 45657 (1997–07)
- ANSI S1.4–1983 plus ANSI S1.4A–1985 Amendment, Type 1
- ANSI S1.43–1997, Type 1

**Note:** The International IEC Standards are adopted as European standards by CENELEC. When this happens, the letters IEC are replaced with EN and the number is retained. Type 2250/2270 also conforms to these EN Standards

### CHANNELS (Type 2270 only)

All measurements are made from either Ch.1 or Ch.2

### TRANSDUCERS

Transducers are described in a transducer database with information on Serial Number, Nominal Sensitivity, Polarization Voltage, Free-field Type, CCLD required, Capacitance and additional information.

The analogue hardware is set up automatically in accordance with the selected transducer

### CORRECTION FILTERS

For microphone Types 4189, 4190, 4191, 4193, 4950, 4952 and 4184-A, BZ-7222 is able to correct the frequency response to compensate for sound field and accessories:

**Sound Field:** Free-field or Diffuse-field (for Types 4952 and 4184-A only: 0° (Top) reference direction and 90° (Side) reference direction)

**Accessories** (Types 4189 and 4190 only): None, Windscreen UA-1650 or Outdoor Microphone Kit UA-1404

**Accessories** (Types 4191 and 4193 only): None or Windscreen UA-1650

**Accessories** (Type 4950 only): None or Windscreen UA-0237

For Accelerometer Types 4397-A, 4513, 4513-001, 4513-002, 4514, 4514-001, 4514-002, 8341, 8324 and 6233C-10 the lower frequency limit will be optimized to match the specifications for the accelerometer

### DETECTORS

**Parallel Detectors** on every measurement:

**A- or B-weighted** (switchable) broadband detector channel with three exponential time weightings (Fast, Slow, Impulse), one linearly averaging detector and one peak detector

**C- or Z-weighted** (switchable) as for A- or B-weighted  
**Overload Detector:** Monitors the overload outputs of all the frequency weighted channels

### MEASUREMENTS

X = frequency weightings A or B

Y = frequency weightings C or Z

V = frequency weightings A, B, C or Z

U = time weightings F or S

Q = exchange rate 4, 5 or 6 dB

N = number between 0.1 and 99.9

For Storage

Full statistics

### For Display and Storage

Start Time	Stop Time	Overload %
Elapsed Time	L <sub>Xeq</sub>	L <sub>Yeq</sub>
L <sub>XE</sub>	L <sub>YE</sub>	L <sub>Ceq</sub> -L <sub>Aeq</sub>
L <sub>XSmax</sub>	L <sub>XFmax</sub>	L <sub>XImax</sub>
L <sub>YSmax</sub>	L <sub>YFmax</sub>	L <sub>YImax</sub>
L <sub>XSmin</sub>	L <sub>XFmin</sub>	L <sub>XImin</sub>
L <sub>YSmin</sub>	L <sub>YFmin</sub>	L <sub>YImin</sub>
L <sub>Xleq</sub>	L <sub>Yleq</sub>	L <sub>Aleq</sub> -L <sub>Aeq</sub>
L <sub>AFTeq</sub>	L <sub>AFTeq</sub> -L <sub>Aeq</sub>	Time Remaining
L <sub>ep,d</sub>	L <sub>ep,dv</sub>	E
Dose	Proj. Dose	L <sub>vpeak</sub>
#VPeaks (>NNNdB)	#VPeaks (>137dB)	#VPeaks (>135dB)
T <sub>vpeak</sub>	L <sub>avUQ</sub>	TWA
TWAv	DoseUQ	Proj. DoseUQ

### Only for Display as Numbers or Quasi-analogue Bars

L <sub>XS</sub>	L <sub>XF</sub>	L <sub>XI</sub>
L <sub>YS</sub>	L <sub>YF</sub>	L <sub>YI</sub>
L <sub>XS(SPL)</sub>	L <sub>XF(SPL)</sub>	L <sub>XI(SPL)</sub>
L <sub>YS(SPL)</sub>	L <sub>YF(SPL)</sub>	L <sub>YI(SPL)</sub>
L <sub>XN1</sub> or L <sub>XUN1</sub>	L <sub>XN2</sub> or L <sub>XUN2</sub>	L <sub>XN3</sub> or L <sub>XUN3</sub>
L <sub>XN4</sub> or L <sub>XUN4</sub>	L <sub>XN5</sub> or L <sub>XUN5</sub>	L <sub>XN6</sub> or L <sub>XUN6</sub>
L <sub>XN7</sub> or L <sub>XUN7</sub>	L <sub>Vpeak,1s</sub>	Trig. Input Voltage
Std.Dev.		

### MEASURING RANGES

When using Microphone Type 4189:

**Dynamic Range:** From typical noise floor to max. level for a 1 kHz pure tone signal, A-weighted: 16.6 to 140 dB

**Primary Indicator Range:** In accordance with IEC 60651, A-weighted: 23.5 dB to 122.3 dB

**Linearity Range:** In accordance with IEC 60804, A-weighted: 21.4 dB to 140.8 dB

**Linear Operating Range:** In accordance with IEC 61672, A-weighted: 1 kHz: 24.8 dB to 139.7 dB  
**Peak C Range:** In accordance with IEC 61672, 1 kHz: 42.3 dB to 142.7 dB

### SAMPLING FOR STATISTICS

The Statistics can be based on either  $L_{XF}$ ,  $L_{XS}$  or  $L_{Xeq}$ :

- Statistics  $L_{XFN1-7}$  or  $L_{XSN1-7}$  are based on sampling  $L_{XF}$  or  $L_{XS}$ , resp., every 10 ms into 0.2 dB wide classes over 130 dB
- Statistics  $L_{XN1-7}$  are based on sampling  $L_{Xeq}$  every second into 0.2 dB wide classes over 130 dB

Full distribution saved with measurement

The Std.Dev. (Standard Deviation) parameter is calculated from the statistics

### MEASUREMENT DISPLAYS

**SLM:** Measurement data displayed as numbers of various sizes and one quasi-analogue bar  
Measured data are displayed as dB values, housekeeping data as numbers in relevant format.  
Instantaneous measurement  $L_{XF}$  is displayed as a quasi-analogue bar

### MEASUREMENT CONTROL

**Manual:** Manually controlled single measurement

**Automatic:** Pre-set measurement time from 1 s to 24 hours in 1 s steps

**Manual Controls:** Reset, Start, Pause, Back-erase, Continue and Store the measurement manually

**Auto-start:** A total of 10 timers allow set up of measurement start times up to a month in advance. Each timer can be repeated. Measurements are automatically stored when completed

### BACK-ERASE

The last 5 s of data can be erased without resetting the measurement

### MEASUREMENT STATUS

**On Screen:** Information such as overload and running/paused are displayed on screen as icons

**Traffic Lights:** Red, yellow and green LEDs show measurement status and instantaneous overload as follows:

- Yellow LED flash every 5 s = stopped, ready to measure
- Green LED flashing slowly = awaiting calibration signal
- Green LED on constantly = measuring
- Yellow LED flashing slowly = paused, measurement not stored
- Red LED flashing quickly = intermittent overload, calibration failed

### CALIBRATION

Initial calibration is stored for comparison with later calibrations

**Acoustic:** Using Sound Calibrator Type 4231 or custom calibrator. The calibration process automatically detects the calibration level when Sound Calibrator Type 4231 is used

**Electrical:** Uses internally generated electrical signal combined with a typed-in value of microphone sensitivity

**Calibration History:** Up to 20 of the last calibrations made are listed and can be viewed on the instrument

### SIGNAL MONITORING

The input signal can be monitored using an earphone/headphones connected to the headphone socket, or it can be fed to the output socket

**Output Signal:** Input conditioned; A-, B-, C- or Z-weighted

Gain Adjustment: -60 dB to 60 dB

$L_{XF}$  output (every ms) as a DC voltage between 0 V and 4 V.

DC output for calibration purposes: 0 dB ~ 0 V and 200 dB ~ 4 V

**Headphone Signal:** Input signal can be monitored using this socket with headphones/earphones

Gain Adjustment: -60 dB to 60 dB

### VOICE ANNOTATIONS

Voice annotations can be attached to measurements so that verbal comments can be stored together with the measurement

**Playback:** Playback of voice annotations can be listened to using an earphone/headphones connected to the headphone socket

Gain Adjustment: -60 dB to 0 dB

### TEXT ANNOTATIONS

Text annotations can be attached to measurements so that written comments can be stored with the measurement

### IMAGE ANNOTATIONS (TYPE 2270 ONLY)

Image annotations can be attached to measurements. Images can be viewed on the screen.

### DATA MANAGEMENT

**Metadata:** Upto 10 Metadata annotations can be set per project (text from keyboard or text from pick list, number from keyboard or auto generated number)

**Project Template:** Defines the display and measurement setups. Setups can be locked and password protected

**Project:** Measurement data stored with the Project Template

**Job:** Projects are organised in Jobs

Explorer facilities for easy management of data (copy, cut, paste, delete, rename, view data, open project, create job, set default project name)

**NOTIFICATIONS**

Sends an SMS or e-mail if an alarm condition is fulfilled.

**Alarm Conditions:**

- Disk Space below set value

- Trig. Input Voltage below set value
- Internal Battery enters set state
- Change in Measurement State
- Reboot of instrument

---

**Software Specifications – Frequency Analysis Software BZ-7223**


---

The specifications for BZ-7223 include the specifications for Sound Level Meter Software BZ-7222. BZ-7223 adds:

**STANDARDS**

Conforms with the following National and International Standards:

- IEC 61260 (1995–07) plus Amendment 1 (2001– 09), 1/1-octave Bands and 1/3-octave Bands, Class 0
- ANSI S1.11–1986, 1/1-octave Bands and 1/3-octave Bands, Order 3, Type 0–C
- ANSI S1.11– 2004, 1/1-octave Bands and 1/3-octave Bands, Class 0

**CHANNELS (TYPE 2270 ONLY)**

All measurements are made from either Ch. 1 or Ch. 2

**CENTRE FREQUENCIES**

**1/1-octave Band Centre Frequencies:** 8 Hz to 16 kHz

**1/3-octave Band Centre Frequencies:** 6.3 Hz to 20 kHz

**MEASUREMENTS**

X = frequency weightings A, B, C or Z , Y = time weightings F or S

Data for Storage

Full Spectral Statistics

**Spectra for Display and Storage**

$L_{Xeq}$	$L_{XSmax}$	$L_{XFmax}$
$L_{XSmin}$	$L_{XFmin}$	

**Spectra for Display Only**

$L_{XS}$	$L_{XF}$	$L_{XYN1}$
$L_{XYN2}$	$L_{XYN3}$	$L_{XYN4}$
$L_{XYN5}$	$L_{XYN6}$	$L_{XYN7}$

**Single Values**

SIL	PSIL	SIL3
$L_{Xeq}(f1-f2)^a$		
NR	NR Decisive Band	
RC	RC Classification	
NCB	NCB Classification	
NC	NC Decisive Band	
Loudness	Loudness Level	

a. where f1 and f2 are frequency bands in the spectrum.

**MEASURING RANGES**

When using Microphone Type 4189:

**Dynamic Range:** From typical noise floor to max.

level for a pure tone signal at 1 kHz 1/3-octave: 1.1 to 140 dB

**Linear Operating Range:** In accordance with IEC 61260, 1/3-octave:  $\leq 20.5$  dB to 140 dB

**SAMPLING FOR OCTAVE OR 1/3-OCTAVE STATISTICS**

X = frequency weightings A or B

The Statistics can be based on either  $L_{XF}$  or  $L_{XS}$ :

- Statistics  $L_{XFN1-7}$  or  $L_{XSN1-7}$  are based on sampling  $L_{XF}$  or  $L_{XS}$ , respectively, every T ms into 1 dB wide classes over 150 dB;

T = 100 for frequency range set to 12.5 – 20 kHz

T = 200 for frequency range set to 6.3 – 20 kHz

Full distribution can be saved with measurement

**MEASUREMENT DISPLAYS**

**Spectrum:** One or two spectra superimposed + A/B and C/Z broadband bars

**Table:** One or two spectra in tabular form

**Y-axis:** Range: 5, 10, 20, 40, 60, 80, 100, 120, 140 or 160 dB. Auto zoom or auto scale available

**Cursor:** Readout of selected band

**INTERNAL GENERATOR**

Built-in pseudo-random noise generator

**Spectrum:** Selectable between Pink and White

**Crest Factor:**

**Pink Noise:** 4.4 (13 dB)

**White Noise:** 3.6 (11 dB)

**Bandwidth:** Selectable:

- **Lower Limit:** 50 Hz (1/3-oct.) or 63 Hz (oct.)
- **Upper Limit:** 10 kHz (1/3-oct.) or 8 kHz (oct.)

**Output Level:** Independent of bandwidth

- **Max.:** 1 Vrms (0 dB)

- **Gain Adjustment:** -60 to 0 dB

When bandwidth is changed, the level for all bands is automatically adjusted to comply with the set output level

**Correction Filters** for sound sources Type 4292, Type 4295 and Type 4296: Flat or Optimum

**Repetition Period:** 175 s

**Output Connector:** Output Socket

### EXTERNAL GENERATOR

Selectable as alternative to Internal Generator

To control external noise generator, set:

- **Levels:** 0 V (Generator off), 4.5 V (Generator on)
- **Rise-time and Fall-time:** 10  $\mu$ s

The noise generator is turned on and off automatically during the measurement

**Escape Time:** 0 to 60 s

**Build-up Time:** 1 to 10 s

The generator can be turned on and off manually for checking equipment and sound levels

---

## Software Specifications – Logging Software BZ-7224

---

The specifications for BZ-7224 include the specifications for Sound Level Meter Software BZ-7222. BZ-7224 adds:

### MEASUREMENTS

**Logging:** Measurement data logged at pre-set periods into files on external SD- or CF-cards

**Logging Period:** From 1 s to 24 hours with 1 s resolution

**Fast Logging:**  $L_{AF}$ ,  $L_{AS}$  and  $L_{Aeq}$  can be logged every 100 ms, irrespective of logging period

**Broadband Data Stored at each Logging Interval:**

All, or up to 10 selectable broadband data incl. Trig. Input Voltage

**Broadband Statistics Stored at each Logging Interval:**

Full distribution, or none

**Spectrum Data Stored at each Logging Interval:** All, or up to 3 selectable spectra (license for BZ-7223 required)

**Spectral Statistics Stored at each Logging Interval:**

Full distribution, or none (license for BZ-7223 required)

**Logging Time:** From 1 second to 31 days with 1 s resolution

**Measurement Total:** For the logging time, in parallel with logging: All broadband data, statistics and spectra (license for BZ-7223 required)

### MARKERS

One data exclusion marker and four user-definable markers for on-line marking of sound categories heard during the measurement

Events can be set manually

### TRIGGERS

Markers can be set and sound recordings can be started (license for BZ-7226 required) when a broadband level is above or below a specified level

### ANNOTATIONS

On-line annotations with spoken comments, written notes or images (Type 2270 only)

### CIC (CHARGE INJECTION CALIBRATION)

Injects an internally generated electrical signal in parallel with the microphone diaphragm. A manual CIC can be performed whenever there is no measurement in progress

An automatic CIC can be performed at the start and end of a logging measurement

### MEASUREMENT DISPLAYS

**Profile:** Graphical display of selectable measurement data versus time. Fast display of next or previous marker, Profile Overview of entire measurement

**Y-axis:** Range: 5, 10, 20, 40, 60, 80, 100, 120, 140 or 160 dB. Auto zoom or auto scale available

**X-axis:** Scroll facilities

**Cursor:** Readout of measurement data at selected time

### NOTIFICATIONS

**Alarm Conditions** (in addition to those specified for BZ-7222):

- CIC failed
- Trigger Level exceeded

---

## Software Specifications – Enhanced Logging Software BZ-7225

---

The specifications for BZ-7225 include the specifications for Logging Software BZ-7224, BZ-7225 adds:

### MEASUREMENTS

**For Display and Storage**

$L_{dn}$ ,  $L_{den}$ ,  $L_{day}$ ,  $L_{evening}$  and  $L_{night}$

Selectable Day, Evening and Night periods and penalties

**Periodic Reports:** Measurement data logged at a pre-set report period into files on external SD- or CF-cards

**Report Period:** From 1 min to 24 hours with 1 min resolution

**Broadband Data and Statistics Stored at each Reporting Interval:** All

**Spectrum Data Stored at each Reporting Interval:** All (license for BZ-7223 required)

**Spectral Statistics Stored at each Reporting Interval:** Full distribution, or none (license for BZ-7223 required)

**Logging Time:** From 1 second to 31 days with 1 s resolution or Continuous

Data are saved in separate projects for every 24 hrs of logging – at a user-defined time of day

Automatic reboot and resume of operation in case of power failure

## TRIGGERS

### Timer Trigger

For periodically starting a sound recording (license for BZ-7226 required)

### Level Triggers

Markers can be set and sound recordings can be started (license for BZ-7226 required) when a broadband or frequency band level is above or below a specified level. Hold off time between triggers can be set. You can specify up to four independent Level Triggers to be active at four different times during the day.

### CIC (CHARGE INJECTION CALIBRATION)

Injects an internally generated electrical signal in parallel with the microphone diaphragm. A manual CIC can be performed whenever there is no measurement in progress

An automatic CIC can be performed at the start and end of a logging measurement. The CIC can be set to occur up to 4 times in each 24 hour period

**CIC Duration:** 10 s

---

## Software Specifications – Sound Recording Option BZ-7226

---

Sound Recording Option BZ-7226 is enabled with a separate license. It works with all the software for Type 2250/2270: Sound Level Meter, Frequency Analysis, Logging Software, Enhanced Logging Software and Reverberation Time Software  
Sound Recording requires a CF- or SD-Card for data storage

### RECORDED SIGNAL

A-, B-, C- or Z-weighted signal from the measurement transducer

### AUTOMATIC GAIN CONTROL

The average level of the signal is kept within a 40 dB range, or the gain can be fixed

### SAMPLING RATE AND PRE-RECORDING

Sound is buffered for the pre-recording of sound. This allows the beginning of events to be recorded even if they are only detected later.

Sampling Rate (kHz)	Maximum Pre-recording (s)	Sound Quality	Memory (KB/s)
8	100	Low	16
16	50	Fair	32
24	30	Medium	48
48	10	High	96

### FUNCTIONS WITH BZ-7222 AND BZ-7223

**Manual Control of Recording:** Recording can be manually started and stopped during a measurement using a pushbutton or an external signal

**Automatic Control of Recording:** Start of recording when measurement is started. Minimum and Maximum recording time can be preset

### FUNCTIONS WITH BZ-7224 AND BZ-7225

**Manual Control of Recording (using Manual Event or Back-erase pushbutton, or an external signal):**

Recording during all of the event, or for preset minimum and maximum duration. A Sound marker is set while recording. Selectable pre- and post-recording time

**Manual Control of Recording (using touch screen):**

Recording for the selected time period (subject to the limitations of the pre-recording buffer). A Sound marker is set for the selected time period

**Automatic Control of Recording:** An event can be triggered when a broadband level is above or below a specified level. Recording during all of the event or for preset minimum and maximum duration. Selectable pre- and post-recording time

### FUNCTIONS WITH BZ-7227

**Automatic Control of Recording:** Start of recording when measurement is started

**PLAYBACK**

Playback of sound recordings can be listened to using the earphone/headphones connected to the headphone socket

**RECORDING FORMAT**

The recording format is 16-bit wave files (extension .wav) attached to the data in the project, easily played-back afterwards on a PC using Type 7815, 7820 or 7825. Calibration information is stored in the wav file, allowing PULSE to analyse the recordings

---

**Software Specifications – Reverberation Time Software BZ-7227**


---

Conforms with the relevant parts of the following:

- IEC 61672 –1 (2002–05) Class 1
- IEC 60651 (1979) plus Amendment 1 (1993–02) and Amendment 2 (2000–10), Type 1
- ANSI S1.4–1983 plus ANSI S1.4A–1985 Amendment, Type 1
- IEC 61260 (1995–07) plus Amendment 1 (2001–09), 1/1-octave Bands and 1/3-octave Bands, Class 0
- ANSI S1.11–1986, 1/1-octave Bands and 1/3-octave Bands, Order 3, Type 0–C
- ANSI S1.11–2004, 1/1-octave Bands and 1/3-octave Bands, Class 0
- ISO 140
- ISO 3382
- ISO 354

**CORRECTION FILTERS**

For Microphone Types 4189, 4190, 4191, 4193, 4950, 4952 and 4184-A, BZ-7227 is able to correct the frequency response to compensate for sound field and accessories

**Broadband Measurements****DETECTORS**

**A- and C-weighted** broadband detectors with F exponential time weighting

**Overload Detector:** Monitors the overload outputs of all the frequency weighted channels

**MEASUREMENTS**

$L_{AF}$  and  $L_{CF}$  for Display as Numbers or Quasi-analogue Bars

**MEASURING RANGES**

When using Microphone Type 4189:

**Dynamic Range:** From typical noise floor to max. level for a 1 kHz pure tone signal, A-weighted: 16.6 to 140 dB

**Primary Indicator Range:** In accordance with IEC 60651, A-weighted: 23.5 dB to 122.3 dB

**Linear Operating Range:** In accordance with IEC 61672, A-weighted: 1 kHz 24.8 dB to 139.7 dB

**Frequency Analysis****CENTRE FREQUENCIES**

**1/1-octave Band Centre Frequencies:** 63 Hz to 8 kHz

**1/3-octave Band Centre Frequencies:** 50 Hz to 10 kHz

**MEASUREMENTS**

$L_{ZF}$  spectrum for display only

$L_{Zeq}$  spectra sampled at 5 ms intervals

**MEASURING RANGES**

When using Microphone Type 4189:

**Dynamic Range:** From typical noise floor to max. level for a pure tone signal at 1 kHz 1/3-octave: 1.1 to 140 dB

**Linear Operating Range:** In accordance with IEC 61260, 1/3-octave:  $\leq 20.5$  dB to 140 dB

**Internal Generator**

Built-in pseudo-random noise generator

**Spectrum:** Selectable Pink or White

**Crest Factor:**

**Pink noise:** 4.4 (13 dB)

**White noise:** 3.6 (11 dB)

**Bandwidth:** Follows measurement frequency range

**Lower Limit:** 50 Hz (1/3-oct.) or 63 Hz (oct.)

**Upper Limit:** 10 kHz (1/3-oct.) or 8 kHz (oct.)

**Output Level:** Independent of bandwidth

**Max.:**  $1 V_{rms}$  (0 dB)

**Gain Adjustment:** –60 to 0 dB

When bandwidth is changed, the level for all bands is automatically adjusted to comply with the set output level

**Correction Filters** for sound sources Type 4292, Type 4295 and Type 4296: Flat or Optimum

**Turn-on time and Turn-off Time:** Equivalent to  $RT = 70$  ms

**Repetition Period:** 175 s

**Output Connector:** Output Socket

**Control:** See Measurement Control

**External Generator**

Selectable as alternative to Internal Generator

For controlling external noise generator

**Levels:** 0 V (Generator off), 4.5 V (Generator on)

**Rise-time and Fall-time:** 10  $\mu$ s

**Control:** See Measurement Control

## Reverberation Time

EDT, T20 and T30 in octave or 1/3-octave bands

**Decays:** Measured and stored using averaging time of 5 ms

**Evaluation Range:** 0 to –10 dB for EDT, –5 to –25 dB for T20 and –5 to –35 dB for T30

**Measurement Time:** Automatic selection of measurement time for the decays based on the actual reverberation time of the room

**Maximum Measurement Time:** from 2 to 30 s

**Averaging:** EDT, T20 and T30 measurements can be averaged (arithmetic averaging or ensemble averaging)

**EDT, T20 and T30 Calculation:** From slope in evaluation range

**Slope Estimation:** Least squares approximation

**Quality Indicators:** Quality Indicators with status information like Overload, Curvature in %, etc.;

extensive list of Status information

Quality Indicators are available on reverberation time spectra for each frequency band, and as overall quality indicators for each measurement position and for the total project (room)

**Reverberation Time Range:** Max. 50 s, min. 0.1 – 0.7 s, depending on bandwidth and centre frequency

**Wide Band Reverberation Time:** The arithmetic average of the Reverberation Time within a selectable frequency range is calculated

## Measurement Displays

### OVERVIEW MAP

Map of Source and Receiver positions with reverberation time readout for a selectable frequency band on each measurement position together with quality indicator.

**Organisation of Source and Receiver Positions:** measure at all receiver positions for each source or measure in a number of positions (1 to 10) for each source

Source and Receiver positions can be added, moved or deleted

### OVERVIEW TABLE

Table of measurement positions with reverberation time readout for selectable frequency band on each position together with quality indicator.

Positions can be included/excluded from Room average

## SOUND LEVEL SPECTRUM

LZF spectrum plus A and C broadband bars

**Y-axis:** Range: 5, 10, 20, 40, 60, 80, 100, 120, 140 or 160 dB. Auto zoom or auto scale available

**Cursor:** Readout of selected band

Quality indicator for each frequency band

## REVERBERATION TIME SPECTRUM

One or two spectra can be displayed

**Y-axis:** Range: 0.5, 1, 2, 5, 10 or 20 s. Auto zoom available

**Cursor:** Readout of selected band

Quality Indicator for each frequency band

## REVERBERATION TIME SPECTRUM TABLE

One or two spectra can be displayed in tabular form

## DECAY

Decay curve for a position or the room average available for each frequency band

Display of evaluation range and regression line

Readout of Curvature in %

**Y-axis:** Range: 5, 10, 20, 40, 60, 80, 100, 120, 140 or 160 dB. Auto zoom or auto scale available

## MEASUREMENT CONTROL

**Measurement Sequence:** Supports measuring:

- at all receiver positions before using another source
- at a receiver position for all sources before measuring at a new position
- at subsequent receiver positions without source information, or
- at manually selected source and receiver positions

During measurement, the instantaneous sound level spectrum is displayed. After measurement, the reverberation time is displayed

**Interrupted Noise Excitation:** Measurements are started manually and can be automatically stored on completion of measurement.

The noise generator is turned on and off automatically

**Escape Time:** 0 to 60 s

**Build-up Time:** 1 to 10 s

**Number of Decays per Measurement:** 1 to 100, ensemble averaged into one decay

The generator can be turned on and off manually for checking equipment and sound levels

**Impulse Excitation:** Manual start of first measurement. When level (say from starter pistol) exceeds the user-selected trigger level, the decay is recorded and backwards integration performed (Schroeder method). The trigger can then be armed automatically for measuring at the next position

**Sound Recording:** Recording of the Z-weighted measured signal can be done at each position

Sound Recording requires a CF- or SD-Card for data storage



Sound Recording requires license for Sound Recording Option BZ-7226

## Measurement Status

**On Screen:** Information such as *overload*, *awaiting trigger* and *running/paused* are displayed on screen as icons

**Traffic Light:** Red, yellow and green LEDs show measurement status and instantaneous overload as follows:

- Yellow LED flashing every 5 s = stopped, ready to measure
- Green LED flashing slowly = awaiting trigger or calibration signal
- Green LED on constantly = measuring
- Yellow LED flashing slowly = paused, measurement not stored
- Red LED flashing quickly = intermittent overload, calibration failed

## Calibration

Initial calibration is stored for comparison with later calibrations

**Acoustic:** Using Sound Calibrator Type 4231 or custom calibrator. The calibration process automatically detects the calibration level when Sound Calibrator Type 4231 is used

**Electrical:** Uses internally generated electrical signal combined with a typed-in value of microphone sensitivity

**Calibration History:** Up to 20 of the last calibrations made are listed and can be viewed on the instrument

## Signal Monitoring

Input signal A, C or Z-weighted can be monitored using an earphone/headphones connected to the headphone socket

**Headphone Signal:** Input signal can be monitored using this socket with headphones/earphones

**Gain Adjustment:** –60 dB to 60 dB

## Voice Annotations

Voice annotations can be attached to the Reverberation Time Project, to Sources, to Receivers and to measurements at each Position

**Playback:** Playback of voice annotations or sound recordings can be listened to using earphone/headphones connected to the headphone socket

**Gain Adjustment:** –60 dB to 0 dB

## Text & Image Annotations

Text and image (Type 2270 only) annotations can be attached to the Reverberation Time Project, to Sources, to Receivers and to measurements at each Position

## Data Management

**Project Template:** Defines the display and measurement setups

**Project:** Measurement data for all positions defined in a room are stored with the Project Template

**Job:** Projects are organised in Jobs Explorer facilities for easy management of data (copy, cut, paste, delete, rename, view data, open project, create job, set default project name)

**Note:** For specifications and details on Type 7831 and Type 7830, please refer to Product Data BP 1691

---

## Software Specifications – Tone Assessment Option BZ-7231

---

### LICENSE

Tone Assessment Option BZ-7231 is enabled with a separate license and can be used with the FFT template (BZ-7230) or with 1/3-octave and logging template (BZ-7223, BZ-7224 and BZ-7225)

### FFT Based Tone Assessment (Together with BZ-7230 Only)

#### STANDARD

Tone assessment is based on the measured FFT spectrum in accordance with 'ISO 1996:2007 Acoustics – Description, assessment and measurement of environmental noise – part 2: Determination of environmental noise levels. Annex C

(informative) Objective method for assessing the audibility of tones in noise – Reference method'

#### SPECTRA ASSESSED

Any displayed sound FFT spectrum (FFT, Ref or MAX) may be assessed

Assessment is made as post-processing, i.e., when measurement is paused or stopped

#### SETUP ACCORDING TO STANDARD

Setups in violation of the standard are indicated as such on the display, you may then accept to apply the default setup

Tone assessment will be made if possible, in spite of standard violations

**Tone Seek Criterion:** 0.1 to 4.0 dB in 0.1 dB steps

**TONE AT CURSOR**

A sinusoidal tone is available at the Headphone output, to help confirm identified tones

**Frequency:** the frequency is selected by the Main cursor

**Gain:** –70 dB to +10 dB

**Options:** The generated tone can be mixed with the input signal

**TONE ASSESSMENT CURSOR**

All tones found are indicated in the display.

The Tone cursor is initially placed at the most prominent tone, and can then be stepped through the tones found

You can also use the Main cursor to step through the tones

**RESULTS**

Results are displayed in the Tone panel and in the Value panel

They are not saved with the measurement

**All Tones:** Frequency, Tone level  $L_{pti}$ , Masking noise level  $L_{pn}$ , Audibility  $\Delta L_{ta}$ , Critical Band CB

**Most Prominent Tone:** Tone Level  $L_{pt}$ , Adjustment  $K_t$

**QUALITY INDICATORS**

On the display, a quality indicator (smiley) will indicate that a hint is available for tone assessment quality.

Click on the indicator to see the hint

**1/3-octave Based Tone Assessment  
(Together with BZ-7223/24/25 Only)**

Tone assessment is based on the measured 1/3-octave spectrum in accordance with either the international 'ISO 1996:2007 Acoustics – Description, assessment and measurement of environmental noise – part 2: Determination of environmental noise levels. Annex D (informative) Objective method for assessing the audibility of tones in noise – Simplified method' or the Italian law 'DM 16-03-1998: Ministero dell'ambiente, Decreto 16 marzo 1998'

**SPECTRA ASSESSED**

The displayed 1/3-octave spectrum ( $L_{eq}$ ,  $L_{max}$  or  $L_{min}$ ) may be assessed. Assessment is made as post-processing, i.e., when measurement is paused or stopped

**SETUP ACCORDING TO STANDARD**

Setups in violation of the standard are indicated as such on the display. You can then accept to apply the default setup. Tone assessment will be made if possible, in spite of standard violations. For tone assessment according to ISO 1996-2, Annex D, you can set the division between the Low and Middle frequency range, the division between the Middle and High frequency range, and the limits for the level differences between adjacent bands.

For tone assessment according to DM 16-03-1998, the tones are tested against loudness contours. Select between ISO 226: 1987 Free-field, 1987 Diffuse-field and 2003 Free-field

**RESULTS**

Tones are indicated above the spectrum when *Tone* is selected as spectrum parameter. The resulting adjustment can be viewed on the Value panel. It is not saved with the measurement

**QUALITY INDICATORS**

On the display, a quality indicator (smiley) will indicate that a hint is available for tone assessment quality.

Click on the indicator to see the hint

---

**Software Specifications – Utility Software for Hand-held Analyzers BZ-5503**

---

BZ-5503 is included with Type 2250/2270 for easy synchronisation of setups and data between PC and Type 2250/2270. BZ-5503 is supplied on DVD BZ-5298

**ON-LINE DISPLAY OF TYPE 2250/2270 DATA**

Measurements on Type 2250/2270 can be controlled from the PC and displayed on-line with the PC, using the same user interface on the PC as on Type 2250/2270

**DATA MANAGEMENT**

**Explorer:** Facilities for easy management of Instruments, Users, Jobs, Projects and Project Templates (copy, cut, paste, delete, rename, create)

**Data Viewer:** View measurement data (content of projects)

**Template Editor:** Editor for changing setups in Project Templates

**Synchronisation:** Project Templates and Projects for a specific user can be synchronised between PC and Type 2250/2270

**USERS**

Users of Type 2250/2270 can be created or deleted

**EXPORT FACILITIES**

**Excel:** Projects (or user specified parts) can be exported to Microsoft® Excel

**Type 7810/12/15/16/20/25/30/31:** Projects can be exported to Predictor Type 7810, Lima Type 7812, Noise Explorer Type 7815, Acoustic Determinator Type 7816, Evaluator Type 7820, Protector Type 7825 or Qualifier (Light) Type 7830 (7831)

**TYPE 2250/2270 SOFTWARE UPGRADES AND LICENSES**

The utility software controls Type 2250/2270 software upgrades and licensing of the Type 2250/2270 applications

**INTERFACE TO TYPE 2250/2270**

USB ver. 1.1 or Hayes compatible GSM or standard analogue modem

**LICENCE MOVER**

To move a license from one analyzer to another use BZ-5503, together with the License Mover VP-0647: see Section 9.3 for details

**PC REQUIREMENT**

**Operating System:** Windows® 7, Vista® or XP (all in 32 bit or 64 bit versions), Microsoft®.NET 3.5

**Recommended PC:** Pentium® III (or equivalent) processor, 2048 Mbyte RAM, SVGA graphics display/adaptor, sound card, DVD drive, mouse, USB, Windows® 7

---

**Ordering Information**

---

**SOFTWARE MODULES AVAILABLE SEPARATELY**

BZ-7223	Frequency Analysis Software
BZ-7224	Logging Software
BZ-7225	Enhanced Logging Software
BZ-7225-UPG	Upgrade from Logging Software BZ-7224 to Enhanced Logging Software BZ-7225 (does not include memory card)
BZ-7226	Sound Recording Option
BZ-7227	Reverberation Time Software
BZ-7229	Dual-Channel Building Acoustics Software (Type 2270 only)
BZ-7228	Building Acoustics Software
BZ-7230	FFT Software
BZ-7231	Tone Assessment Option

**COMPONENTS INCLUDED WITH TYPE 2250/2270 HAND-HELD ANALYZER**

Type 4189	1/2" Prepolarized Free-field Microphone
or	
Type 4190	1/2" Free-field Microphone
ZC-0032	Microphone Preamplifier
AO-1476	USB Standard A to USB Mini B Interface Cable, 1.8 m (6 ft)
BZ-5298	Environmental Software, including BZ-5503 Utility Software for Hand-held Analyzers
UA-1650	90 mm dia. Windscreen with AutoDetect
UA-1651	Tripod Extension for Hand-held Analyzer
UA-1673	Adaptor for Standard Tripod Mount
DH-0696	Wrist Strap
KE-0440	Travel Bag
KE-0441	Protective Cover
FB-0679	Hinged Cover (Type 2250 only)
FB-0699	Hinged Cover (Type 2270 only)
HT-0015	Earphones
UA-1654	5 Extra Styli
QB-0061	Battery Pack
ZG-0426	Mains Power Supply

### COMPONENTS INCLUDED WITH LOGGING SOFTWARE BZ-7224 AND ENHANCED LOGGING SOFTWARE BZ-7225

Memory Card for Hand-held Analyzers. **Note:** the upgrade from Logging Software BZ-7224 to Enhanced Logging Software BZ-7225 (BZ-7225-UPG) does not include memory card

### ACCESSORIES AND COMPONENTS AVAILABLE SEPARATELY

#### ANALYZER

ZG-0444 Charger for QB-0061 Battery Pack

#### CALIBRATION

Type 4231 Sound Calibrator (fits in KE-0440)  
 Type 4226 Multifunction Acoustic Calibrator  
 Type 4228 Pistonphone  
 2250 CAI Accredited Initial Calibration of Type 2250  
 2250 CAF Accredited Calibration of Type 2250  
 2250 CTF Traceable Calibration of Type 2250  
 2250 TCF Conformance Test of Type 2250, with certificate  
 2270 CAI Accredited Initial Calibration of Type 2270  
 2270 CAF Accredited Calibration of Type 2270  
 2270 CTF Traceable Calibration of Type 2270  
 2270 TCF Conformance Test of Type 2270, with certificate

#### MEASURING

Type 3592 Outdoor Measuring Gear (see Product Data BP 1744)  
 AO-0440-D-015 Signal cable, LEMO to BNC, 1.5 m (5 ft)  
 AO-0441-D-030 Microphone Extension Cable, 10-pin LEMO, 3 m (10 ft)  
 AO-0441-D-100 Microphone Extension Cable, 10-pin LEMO, 10 m (33 ft)  
 AO-0646 Sound Cable, LEMO to Minijack, 1.5 m (5 ft)  
 AO-0697-D-030 Microphone Extension Cable, 10-pin LEMO, length 3m (10 ft)  
 AO-0697-D-100 Microphone Extension Cable, 10-pin LEMO, length 10 m (33 ft)  
 AO-0727-D-015 Signal cable, LEMO to BNC Female, length 1.5 m (5 ft)

JP-1041 Dual 10-pole Adaptor  
 UA-0587 Tripod  
 UA-0801 Small Tripod  
 UA-1317 Microphone Holder  
 UA-1404 Outdoor Microphone Kit  
 UA-1672 AutoDetect Insert for UA-1650  
 UL-1009 SD Memory Card for Hand-held Analyzers  
 UL-1013 CF Memory Card for Hand-held Analyzers  
 UL-1017 SDHC Memory Card for Hand-held Analyzers

### MEASURING WITH REVERBERATION TIME SOFTWARE BZ-7227

Type 2734-A Power Amplifier  
 Type 2734-B Power Amplifier with built-in  
 UL-0256 Wireless Audio System  
 Type 4292 OmniPower Sound Source  
 KE-0449 Flight Case for Type 4292  
 KE-0364 TripodCarrying Case for Type 4292  
 Type 4224 Sound Source  
 Type 4295 Omnidirectional Sound Source  
 KE-0392 Carrying Case for Type 4295  
 AO-0523-D-100 Cable from Type 2250/2270 to Power Amplifier, 10 m (33 ft.)  
 AO-0524-D-100 Cable from Type 2250/2270 to Type 4224, 10 m (33 ft.)  
 AQ-0673 Cable from Power Amplifier to sound source, 10 m (33 ft.)  
 UA-1476 Wireless Transmission Kit  
 Type 7831 Qualifier Light  
 Type 7830 Qualifier  
**Note:** For sound sources, please see separate Product Data BP 1689

### INTERFACING

Type 7815 Noise Explorer – data viewing software  
 Type 7820 Evaluator – data viewing and calculation software  
 Type 7825 Protector – software for calculation of Personal Noise Exposure  
 UL-1016 10/100 Ethernet CF Card  
 UL-1019 CF WLAN Card for Hand-held Analyzers

## Service Products

with Certificate (No measurement data included)



### HARDWARE MAINTENANCE:

2250-EW1	Extended Warranty, one year extension
2250-REF	Hand-held Analyzer Type 2250 – Repair including Conformance Test with Certificate (No measurement data included)
2270-EW1	Extended Warranty, one year extension
2270-REF	Hand-held Analyzer Type 2270 – Repair including Conformance Test

### ACCREDITED CALIBRATION:

2250-CAI	Initial Accredited Calibration, Hand-Held Analyzer Type 2250
2250-CAF	Accredited Calibration, Hand-Held Analyzer Type 2250
2270-CAI	Initial Accredited Calibration, Hand-Held Analyzer Type 2270
2270-CAF	Accredited Calibration, Hand-Held Analyzer Type 2270

## Compliance with Standards

 	CE-mark indicates compliance with the EMC Directive and Low Voltage Directive. C-Tick mark indicates compliance with the EMC requirements of Australia and New Zealand.
<b>Safety</b>	EN/IEC 61010–1, ANSI/UL 61010–1 and CSA C22.2 No.1010.1: Safety requirements for electrical equipment for measurement, control and laboratory use.
<b>EMC Emission</b>	EN/IEC 61000–6–3: Generic emission standard for residential, commercial and light industrial environments. CISPR 22: Radio disturbance characteristics of information technology equipment. Class B Limits. FCC Rules, Part 15: Complies with the limits for a Class B digital device. IEC 61672–1, IEC 61260, IEC 60651 and IEC 60804: Instrumentation standards. Complies with Canadian standard ICES–001
<b>EMC Immunity</b>	EN/IEC 61000–6–2: Generic standard – Immunity for industrial environments. EN/IEC 61326: Electrical equipment for measurement, control and laboratory use – EMC requirements. IEC 61672–1, IEC 61260, IEC 60651 and IEC 60804: Instrumentation standards



# Appendix A

## Setup Parameters

This appendix describes all the setup parameters included in a template.

### A.1 Input (for Type 2250)

**Table A.1** *Input parameters (Type 2250)*

Parameter	Values	Comment
<i>Input</i>	<i>Top Socket</i> <i>Rear Socket</i>	Determines whether the input is taken from the top socket or the rear socket ('Input' on connector panel). Connect your transducer to this socket <b>Note:</b> <i>Sound Field</i> and <i>Windscreen</i> corrections can be added to both the <i>Top Socket</i> and the <i>Rear Socket</i> ( <i>Input</i> parameters). However, be careful that you don't add a 'double' correction - for instance, if you have recorded the signal from the Output socket on a tape recorder, and later want to re-analyse the recording via the Rear Input. In this case you should set <i>Microphone Type</i> to <i>Unknown</i> on the <b>Transducer</b> menu for the used transducer, when using Rear Input
<i>Sound Field Correction</i>	<i>Free-field</i> <i>Diffuse-field</i>	Select a correction matching the sound field of your measurements. i.e., you can make correct measurements in a diffuse-field using a Type 4189 or Type 4190 free-field microphone, by selecting <i>Diffuse-field</i> correction. Even free-field correction of a free-field microphone will enhance the overall frequency response of the system. Generally, ISO requires free-field conditions and ANSI requires diffuse-field conditions. Check your local standards for the setting you require. No correction is made for unknown transducers

**Table A.1** Input parameters (Type 2250)

Parameter	Values	Comment
<i>Loudness</i>	<i>Free-field</i> <i>Diffuse-field</i> <i>Auto</i>	Determines whether Loudness and Loudness Level are calculated based on Free-field or Diffuse-field conditions. Set to <i>Auto</i> to follow the setting of Sound Field Correction. For an unknown microphone type, you can set Loudness to the condition matching your request.

For outdoor measurements, it is often necessary to mount a windscreen on the microphone to reduce the measured wind noise. This has, however, a small impact on the overall frequency response of the analyzer. To compensate for this, use the built-in windscreen correction.

**Table A.2** Input parameters, with windscreen correction

Parameter	Values	Comment
<i>Windscreen Auto Detect</i>	<i>On</i> <i>Off</i>	Automatic detection of UA-1650 windscreen when mounted on the ZC-0032 microphone preamplifier. The preamplifier should be connected to the top socket, if necessary using a microphone extension cable. This parameter is available for microphone types using ZC-0032 only
<i>Windscreen Correction</i>	<i>None</i> <i>UA-1650</i> <i>UA-1404</i>	If <i>Windscreen Auto Detect</i> is set to <i>Off</i> , you can manually select a windscreen correction suitable for the windscreen in use. Correction is automatically made for the windscreen on Types 4952 and 4184-A. No correction is made for unknown transducers



**Table A.2** (Cont.) Input parameters, with windscreen correction

Parameter	Values	Comment
<i>Extended Low Frequency<sup>a</sup></i>	<i>On</i> <i>Off</i>	<p>Use this parameter to extend the low frequency of the broadband measurements and the frequency analysis. However, be aware that the measurements will be more sensitive to very low frequency noise such as wind noise.</p> <p><b>Extended Low Frequency Off:</b>  Broadband Z-weighting: 6.3 Hz to 22.4 kHz (–2 dB limits)  Frequency analysis<sup>b</sup>:  1/1-octave: 16 Hz – 16 kHz  1/3-octave: 12.5 Hz – 20 kHz</p> <p><b>Extended Low Frequency On:</b>  Broadband Z-weighting (using Type 4189 or 4190 microphone): 4.2 Hz to 22.4 kHz (–2 dB limits)  Broadband Z-weighting (without microphone): approx. 1 Hz to 22.4 kHz (–2 dB limits)  Frequency analysis<sup>b</sup>:  1/1-octave: 8 Hz – 16 kHz  1/3-octave: 6.3 Hz – 20 kHz</p>
<i>Trigger Input<sup>a</sup></i>	<i>None</i>  <i>MATRON Handswitch</i>  <i>Voltage Level</i>  <i>Voltage for Monitoring</i>	<p>This parameter should be set to match the equipment connected to the Trigger Input Socket on the connector panel of the analyzer.</p> <p>Set it to <i>None</i>, if not used.</p> <p>Set <i>Trigger Input</i> to <i>MATRON Handswitch</i> if the analyzer is being used in the MATRON system. This setting should also be used if you want to use the handswitch ZH-0680 for manually triggering sound recordings. <b>Note:</b> This can only be used together with instruments with serial numbers above 2479652</p> <p>Set Trigger input to <i>Voltage Level</i> if you want to control sound recording by a voltage level generated by external equipment. The Voltage Level should generate at least 2 V for On and less than 1 V for Off. The duration of the steady level should be at least 1 s, so it can be recognised by the analyzer.</p> <p>Set Trigger Input to <i>Voltage for Monitoring</i> if you want to monitor the voltage at this input. This setting can be used together with Notifications - see Section 8.4 This setting cannot be combined with <i>MATRON Handswitch</i> or <i>Voltage Level</i>.</p>

a. Not available in Reverberation Time Software BZ-7227.

b. Requires Frequency Analysis Software BZ-7223.

## A.2 Input (for Type 2270)

**Table A.3** Input parameters (Type 2270)

Parameter	Values	Comment
<i>Input Channel</i>	<i>Ch. 1</i> <i>Ch. 2</i>	Determines whether Input Ch. 1 or Input Ch. 2 is used for the measurement
<i>Loudness</i>	<i>Free-field</i> <i>Diffuse-field</i> <i>Auto</i>	Determines whether Loudness and Loudness Level are calculated based on Free-field or Diffuse-field conditions. Set to <i>Auto</i> to follow the setting of Sound Field Correction. For an unknown microphone type, you can set Loudness to the condition matching your request.
<i>Extended Low Frequency<sup>a</sup></i>	<i>On</i> <i>Off</i>	Use this parameter to extend the low frequency of the broadband measurements and the frequency analysis. However, be aware that the measurements will be more sensitive to very low frequency noise such as wind noise. Extended Low Frequency Off: Broadband Z-weighting: 6.3 Hz to 22.4 kHz (–2 dB limits) Frequency analysis <sup>b</sup> : 1/1-octave: 16 Hz – 16 kHz 1/3-octave: 12.5 Hz – 20 kHz Extended Low Frequency On: Broadband Z-weighting (using Type 4189 or 4190 microphone): 4.2 Hz to 22.4 kHz (–2 dB limits) Broadband Z-weighting (without microphone): approx. 1 Hz to 22.4 kHz (–2 dB limits) Frequency analysis <sup>b</sup> : 1/1-octave: 8 Hz – 16 kHz 1/3-octave: 6.3 Hz – 20 kHz

**Table A.3** Input parameters (Type 2270)

Parameter	Values	Comment
Trigger Input. <sup>a</sup>	<p><i>none</i></p> <p><i>MATRON Handswitch</i></p> <p><i>Voltage Level</i></p> <p><i>Voltage for Monitoring</i></p>	<p>This parameter should be set to match the equipment connected to the Trigger Input Socket on the connector panel of the analyzer. Set it to None, if not used.</p> <p>Set Trigger Input to MATRON Handswitch if the analyzer is being used in the MATRON system. This setting should also be used if you want to use the handswitch ZH-0680 for manually triggering sound recordings. <b>Note:</b> This can only be used together with instruments with serial numbers above 2479652</p> <p>Set Trigger input to Voltage Level if you want to control sound recording by a voltage level generated by external equipment. The Voltage Level should generate at least 2 V for On and less than 1 V for Off. The duration of the steady level should be at least 1 s, so it can be recognised by the analyzer</p> <p>Set Trigger Input to <i>Voltage for Monitoring</i> if you want to monitor the voltage at this input. This setting can be used together with Notifications - see Section 8.4. This setting cannot be combined with MATRON Handswitch or Voltage Level.</p>

a. Not available in Reverberation Time Software BZ-7227

b. Requires Frequency Analysis Software BZ-7223

## A.3 Input Ch. 1 (for Type 2270)

**Table A.4** Input Ch. 1 parameters (Type 2270)

Parameter	Values	Comment
Input	<p><i>Top Socket</i></p> <p><i>Rear Socket</i></p>	<p>Determines whether the input is taken from the top socket or the rear socket ('Input' on connector panel). Connect your transducer to this socket</p> <p>Note: Sound Field and Windscreen corrections can be added to both the Top Socket and the Rear Socket (Input parameters). However, be careful that you don't add a 'double' correction – for instance, if you have recorded the signal from the Output socket on a tape recorder, and later want to re-analyse the recording via the Rear Input. In this case you should set Microphone Type to Unknown on the Transducer menu for the used transducer, when using Rear Input</p>

**Table A.4** Input Ch. 1 parameters (Type 2270)

Parameter	Values	Comment
Sound Field Correction	Free-field Diffuse-field	Select a correction matching the sound field of your measurements. i.e., you can make correct measurements in a diffuse-field using a Type 4189 or 4190 free-field microphone, by selecting Diffuse-field correction. Even free-field correction of a free-field microphone will enhance the overall frequency response of the system. Generally, ISO requires free-field conditions and ANSI requires diffuse-field conditions. Check your local standards for the setting you require. No correction is made for unknown transducers
Windscreen Auto Detect	On Off	Automatic detection of UA-1650 windscreen when mounted on the ZC-0032 microphone preamplifier. The preamplifier should be connected to the top socket, if necessary using a microphone extension cable. This parameter is available for microphone types using ZC-0032 only
Windscreen Correction	None UA-1650 UA-1404	If Windscreen Auto Detect is set to Off, you can manually select a windscreen correction suitable for the windscreen in use. Correction is automatically made for the windscreen on Types 4952 and 4184-A. No correction is made for unknown transducers

## A.4 Input Ch. 2 (for Type 2270)

**Table A.5** Input Ch. 2 parameters (Type 2270)

Parameter	Values	Comment
Input	Top Socket Rear Socket	Determines whether the input is taken from the top socket or the rear socket ('Input' on connector panel). Connect your transducer to this socket Note: Sound Field and Windscreen corrections can be added to both the Top Socket and the Rear Socket (Input parameters). However, be careful that you don't add a 'double' correction – for instance, if you have recorded the signal from the Output socket on a tape recorder, and later want to re-analyse the recording via the Rear Input. In this case you should set Microphone Type to Unknown on the Transducer menu for the used transducer, when using Rear Input

**Table A.5** Input Ch. 2 parameters (Type 2270)

Parameter	Values	Comment
<i>Sound Field Correction</i>	<i>Free-field</i> <i>Diffuse-field</i>	Select a correction matching the sound field of your measurements. i.e., you can make correct measurements in a diffuse-field using a Type 4189 or 4190 free-field microphone, by selecting Diffuse-field correction. Even free-field correction of a free-field microphone will enhance the overall frequency response of the system. Generally, ISO requires free-field conditions and ANSI requires diffuse-field conditions. Check your local standards for the setting you require. No correction is made for unknown transducers
<i>Windscreen Auto Detect</i>	<i>On</i> <i>Off</i>	Automatic detection of UA-1650 windscreen when mounted on the ZC-0032 microphone preamplifier. The preamplifier should be connected to the top socket, if necessary using a microphone extension cable. This parameter is available for microphone types using ZC-0032 only
<i>Windscreen Correction</i>	<i>None</i> <i>UA-1650</i> <i>UA-1404</i>	If Windscreen Auto Detect is set to Off, you can manually select a windscreen correction suitable for the windscreen in use. Correction is automatically made for the windscreen on Types 4952 and 4184-A. No correction is made for unknown transducers

## A.5 Frequency Weightings

**Table A.6** Frequency weighting parameters<sup>a</sup>

Parameter	Values	Comment
<i>Broadband (excl. Peak)</i>	<i>AC</i> <i>AZ</i> <i>BC</i> <i>BZ</i>	All broadband parameters (except $L_{\text{peak}}$ ) are measured simultaneously with two different frequency weightings – select the weightings here
<i>Broadband Peak</i>	<i>X</i> <i>C</i> <i>Z</i>	One broadband peak parameter $L_{\text{peak}}$ is measured, select the frequency weighting here. <b>Note:</b> X = frequency weighting A or B. 'A' requires that the <i>Broadband (excl. Peak)</i> parameter is set to AC or AZ. 'B' requires that the <i>Broadband (excl. Peak)</i> parameter is set to BC or BZ

**Table A.6** Frequency weighting parameters<sup>a</sup>

Parameter	Values	Comment
<i>Spectrum<sup>b</sup></i>	X C Z	The frequency analysis (1/1-octave or 1/3-octave) will be frequency weighted in accordance with this parameter <b>Note:</b> X = frequency weighting A or B. 'A' requires that the <i>Broadband (excl. Peak)</i> parameter is set to AC or AZ. 'B' requires that the <i>Broadband (excl. Peak)</i> parameter is set to BC or BZ

a. Not available in Reverberation Time Software BZ-7227.

b. Requires Frequency Analysis Software BZ-7223.

## A.6 Bandwidth

**Table A.7** Bandwidth parameters

Parameter	Values	Comment
<i>Bandwidth<sup>a</sup></i>	1/1-octave 1/3-octave	Bandwidth of frequency analysis
<i>Bottom F. for Special Leq<sup>b</sup></i>	6.3 Hz to Top Frequency	1/1-octave: 8 Hz – 16 kHz 1/3-octave: 6.3 Hz – 20 kHz <b>Note:</b> The lower limit of the parameter depends on <i>Extended Low Frequency</i>
<i>Top Freq. for Special Leq<sup>b</sup></i>	Bottom Frequency to 20 kHz	1/1-octave: 8 Hz – 16 kHz 1/3-octave: 6.3 Hz – 20 kHz

a. Requires Frequency Analysis Software BZ-7223 or Reverberation Time Software BZ-7227.

b. For BZ-7223, BZ-7224 and BZ-7225 only.

## A.7 Statistics

**Table A.8** Statistics parameters<sup>a</sup>

Parameter	Values	Comment
<i>Broadband Statistics based on</i>	$L_{Xeq}$ $L_{XF}$ $L_{XS}$	The broadband statistics are based on sampling the broadband parameter $L_{XF}$ or $L_{XS}$ each 10 ms or $L_{Xeq}$ each second. <b>Note:</b> X = frequency weighting A or B. 'A' requires that the <i>Broadband (excl. Peak)</i> parameter is set to AC or AZ. 'B' requires that the <i>Broadband (excl. Peak)</i> parameter is set to BC or BZ

**Table A.8** (Cont.) Statistics parameters<sup>a</sup>

Parameter	Values	Comment
<i>Spectral Statistics based on</i> <sup>b</sup>	<i>LXF</i> <i>LXS</i>	The statistics are based on sampling the instantaneous spectrum every 100 ms (200 ms for <i>Extended Low Frequency</i> set to <i>On</i> ). The time weighting for the spectrum is either F or S. The frequency weighting X is determined by the <i>Frequency Weighting, Spectrum</i> parameter
<i>Percentile N1</i>	<i>0.1 to 99.9</i>	User-defined percentile level where the value of $L_{XN1}$ is exceeded for N1% of the elapsed time
<i>Percentile N2</i>	<i>0.1 to 99.9</i>	User-defined percentile level where the value of $L_{XN2}$ is exceeded for N2% of the elapsed time
<i>Percentile N3</i>	<i>0.1 to 99.9</i>	User-defined percentile level where the value of $L_{XN3}$ is exceeded for N3% of the elapsed time
<i>Percentile N4</i>	<i>0.1 to 99.9</i>	User-defined percentile level where the value of $L_{XN4}$ is exceeded for N4% of the elapsed time
<i>Percentile N5</i>	<i>0.1 to 99.9</i>	User-defined percentile level where the value of $L_{XN5}$ is exceeded for N5% of the elapsed time
<i>Percentile N6</i>	<i>0.1 to 99.9</i>	User-defined percentile level where the value of $L_{XN6}$ is exceeded for N6% of the elapsed time
<i>Percentile N7</i>	<i>0.1 to 99.9</i>	User-defined percentile level where the value of $L_{XN7}$ is exceeded for N7% of the elapsed time

a. Not available for Reverberation Time Software BZ-7227.

b. Requires Frequency Analysis Software BZ-7223.

The percentile levels N1 to N7 are common to broadband and spectral statistics, and can be changed after the measurement has been done.

## A.8 Measurement Control – for BZ-7222 to BZ-7225

**Table A.9** Measurement Control parameters – for BZ-7222 to BZ-7225

Parameter	Values	Comment
<i>Measurement Mode</i> <sup>a</sup>	<i>Manual</i> <i>Automatic</i>	Determines whether the measurement is under <i>Manual</i> control (fully controlled by the <b>Reset</b> and <b>Start/Pause</b> pushbuttons), or <i>Automatic</i> control (start of measurement controlled by the <b>Reset</b> and <b>Start/Pause</b> pushbuttons, end of measurement automatically controlled by the instrument when preset time has elapsed)
<i>Preset Time</i> <sup>a</sup>	<i>00:00:01 to 24:00:00</i>	Fixes the duration of a measurement from start to automatic stop (in hours, minutes and seconds). Any pauses made during the measurement via the <b>Start/Pause</b> pushbutton are not counted in the preset time

**Table A.9** (Cont.) Measurement Control parameters – for BZ-7222 to BZ-7225

Parameter	Values	Comment
Save Project Data at <sup>b</sup>	00:00:00 to 23:59:59	Determines the time for automatic save of the project and start of a new project.
Continuous Logging <sup>b</sup>	On Off	Determines whether the logging will run continuously, or for a time set by <i>Preset Logging Time</i>
Preset Logging Time <sup>c</sup>	0.00:00:01 to 31.00:00:00	Fixes the duration of a measurement from start to automatic stop (in days, hours, minutes and seconds)
Logging Period <sup>c</sup>	00:00:01 to 24:00:00	Sets the period of the logging (in hours, minutes and seconds)
Report Period <sup>b</sup>	00:01:00 to 24:00:00	Sets the period of the reports (in hours and minutes)
Full Spectral Stat. for Reports <sup>b</sup>	Yes No	Determines whether the full spectral statistics are logged in the report or not
Synchronize with Clock <sup>c</sup>	Yes No	Select Yes to synchronise the logging and reporting intervals with whole minutes or hours, e.g., if Logging Period is set to 00:01:00 (1 minute) and Report Period is set to 01:00:00 and you start the measurement at 8:12:33, then the first logging interval will be from 8:12:33 to 8:12:59 (27 seconds), the second will be from 8:13:00 to 8:13:59 (60 seconds), etc., and the first Report interval will be from 8:12:33 to 8:59:59 (48 min and 27 seconds), the second will be from 9:00:00 to 9:59:59 (1 hour), etc. Select No if you want every logging and reporting interval to be exactly the specified Logging Period
Charge Injection Calibration <sup>c</sup>	On Off	Set to <i>On</i> for making a CIC at the start and end of Logging. An Exclude marker is set on the profile and <i>Total</i> parameters are not updated during the CIC
Daily CIC <sup>b</sup>	None Once, Twice, Three times, Four times	Determines whether a Charge Injection Calibration is performed one to four times a day or not. An Exclude marker is set on the profile and <i>Periodic Reports</i> and <i>Total</i> parameters are not updated during the calibration. The results are saved together with the <i>Total</i> parameters
First Check <sup>b</sup>	00:00:00 to 23:59:59	Set time of day for first CIC check
Second Check <sup>b</sup>	00:00:00 to 23:59:59	Set time of day for second CIC check
Third Check <sup>b</sup>	00:00:00 to 23:59:59	Set time of day for third CIC check



**Table A.9** (Cont.) Measurement Control parameters – for BZ-7222 to BZ-7225

Parameter	Values	Comment
<i>Fourth Check</i> <sup>b</sup>	00:00:00 to 23:59:59	Set time of day for fourth CIC check <b>Note:</b> The Check times must be separated from each other by at least one minute. They should also differ by at least one minute from the time set in the <i>Save Project Data</i> at parameter

a. For Sound Level Meter (BZ-7222) and Frequency Analyzer (BZ-7223) templates only.

b. For Enhanced Logging (BZ-7225) templates only.

c. For Logging (BZ-7224) and Enhanced Logging (BZ-7225) templates only.

## A.9 Measurement Control – for Reverberation Time Software BZ-7227

**Table A.10** Measurement Control parameters – for Reverberation Time Software BZ-7227

Parameter	Values	Comment
<i>Map Based Measurement</i>	No Yes	If <i>Map Based Measurement</i> = Yes you can define the source positions and receiver positions graphically on a map – otherwise the measurements are just numbered from position number one ( <i>Pos. 1</i> ) onwards
<i>Meas. All Pos. for Each Source</i>	No Yes	Parameter only available if <i>Map Based Measurement</i> = Yes. Set to Yes for measuring all positions for each source position. Set to No for measuring a specific number of receiver positions per source position
<i>No. of Positions per Source</i>	1 to 10	Parameter only available if <i>Meas. All Pos. for Each Source</i> = No Set number of receiver positions you want to measure per source
<i>Increment</i>	<i>Sources First</i> <i>Receivers First</i> <i>Manual</i>	Parameter only available if <i>Map Based Measurement</i> = Yes. Allows you to select the quickest method of measurement, when positioning your analyzer in relation to source and receiver positions. (Typically, <i>Sources First</i> is best for Impulsive Excitation and <i>Receivers First</i> is best for Interrupted Noise excitation)
<i>Automatic Save</i>	No Yes	Set to Yes to automatically save the decay after each measurement

**Table A.10** (Cont.) Measurement Control parameters – for Reverberation Time Software BZ-7227

Parameter	Values	Comment
<i>Max. Decay Time</i>	1 to 30 s	Sets the maximum duration of the decay measurement. If the decay finishes in a shorter time, decay measurement stops automatically <b>Note:</b> If you set <i>Max. Decay Time</i> above 20 s, then the measurement will not stop before this time has elapsed.
<i>Excitation</i>	<i>Impulsive</i> <i>Interrupted Noise</i>	Select <i>Impulsive</i> to excite the room with an impulse. The analyzer triggers on the impulse, measures the impulse as a sequence of spectra with 5 ms intervals, and finally backwardly integrates the measurements to decay curves. Select <i>Interrupted Noise</i> to excite the room with noise, interrupt the noise and measure the decays – all controlled by the analyzer
<i>Number of Decays</i>	1 to 99	Parameter only available if <i>Excitation</i> = <i>Interrupted Noise</i> . Specify the number of decays to be measured automatically and averaged together per position
<i>Trigger Level</i>	0 to 200 dB	Parameter only available if <i>Excitation</i> = <i>Impulsive</i> . Specify the trigger level for the sound level in any frequency band – the measurement starts as soon as this level is exceeded. The measurement has a pre-trigger of 1 s
<i>Trigger Repeat</i>	<i>Off</i> <i>On</i>	Set to <i>On</i> to start a new measurement automatically, after saving the previous measurement (and after fulfilling the trigger conditions). Parameter only available if <i>Excitation</i> = <i>Impulsive</i> and <i>Automatic Save</i> = <i>Yes</i>

## A.10 Logged Broadband (100 ms)

**Table A.11** Logged Broadband (100 ms) parameters<sup>a</sup>

Parameter	Values	Comment
$L_{Aeq}$	<i>On</i> <i>Off</i>	Select <i>On</i> to log $L_{Aeq}$ (with an elapsed time of 100 ms and a logging period of 100 ms) <b>Note:</b> Logging $L_{Aeq}$ every 100 ms requires <i>Broadband (excl. Peak)</i> parameter set to <i>AC</i> or <i>AZ</i>
$L_{AF}$	<i>On</i> <i>Off</i>	Select <i>On</i> for logging of $L_{AF}$ every 100 ms <b>Note:</b> Logging $L_{AF}$ every 100 ms requires <i>Broadband (excl. Peak)</i> parameter set to <i>AC</i> or <i>AZ</i>

**Table A.11** (Cont.) *Logged Broadband (100 ms) parameters<sup>a</sup>*

Parameter	Values	Comment
$L_{AS}$	<i>On</i> <i>Off</i>	Select <i>On</i> for logging of $L_{AS}$ every 100 ms <b>Note:</b> Logging $L_{AS}$ every 100 ms requires <i>Broadband (excl. Peak)</i> parameter set to <i>AC</i> or <i>AZ</i>

a. For Logging (BZ-7224) and Enhanced Logging (BZ-7225) templates only.

## A.11 Logged Broadband

**Table A.12** *Logged Broadband parameters<sup>a</sup>*

Parameter	Values	Comment
<i>Full Statistics</i>	<i>Yes</i> <i>No</i>	Determines whether the full broadband statistics are logged or not
<i>Broadband Parameters</i>	<i>All</i> <i>Selected</i>	Determines whether all broadband parameters are logged or a selected part is logged (up to 10 parameters)

**Table A.12** *Logged Broadband parameters<sup>a</sup>*

Parameter	Values	Comment
Parameter 1 to Parameter 10	$L_{Xeq}$ $L_{Yeq}$ $L_{Ceq}-L_{Aeq}$ $L_{XE}$ $L_{YE}$ $L_{Vpeak}$ $L_{XFmax}$ $L_{XSmax}$ $L_{XImax}$ $L_{YFmax}$ $L_{YSmax}$ $L_{YImax}$ $L_{XFmin}$ $L_{XSmin}$ $L_{XImin}$ $L_{YFmin}$ $L_{YSmin}$ $L_{YImin}$ $L_{Xleq}$ $L_{Yleq}$ $L_{Aleq}-L_{Aeq}$ $L_{AFTeq}$ $L_{AFTeq}-L_{Aeq}$ $L_{avUQ}$ $SIL$ $PSIL$ $SIL3$ $L_{Weq}(f1-f2)$ $Overload$  $Trig. Input Voltage$	<p>This parameter can be set if Broadband Parameters = <i>Selected</i>.</p> <p>X = frequency weightings A or B (controlled by <b>Setup</b> – <i>Frequency Weightings</i> – <i>Broadband (excl. Peak)</i> parameter).</p> <p>Y = frequency weightings C or Z (controlled by <b>Setup</b> – <i>Frequency Weightings</i> – <i>Broadband (excl. Peak)</i> parameter).</p> <p>V = frequency weightings A, B, C or Z (controlled by <b>Setup</b> – <i>Frequency Weightings</i> – <i>Broadband Peak</i> parameter)</p> <p>U = time weightings F or S (controlled by <b>Setup</b> – <i>Occupational Health</i> – <i>Time Weighting for Lav</i> parameter)</p> <p>Q = exchange rate 4, 5 or 6 dB (controlled by <b>Setup</b> – <i>Occupational Health</i> – <i>Exchange Rate for Lav</i> parameter)</p> <p>W = frequency weightings A, B, C or Z (controlled by <b>Setup</b> – <i>Frequency Weightings</i> – <i>Spectrum</i> parameter)</p> <p>f1 = Bottom frequency band (controlled by <b>Setup</b> – <i>Bandwidth</i> – <i>Bottom F. for Special Leq</i>)</p> <p>f2 = Top frequency band (controlled by <b>Setup</b> – <i>Bandwidth</i> – <i>Top Freq. for Special Leq</i>)</p>

a. For Logging (BZ-7224) and Enhanced Logging (BZ-7225) templates only.

## A.12 Logged Spectrum

**Table A.13** *Logged Spectrum parameters<sup>a</sup>*

Parameter	Values	Comment
Full Spectral Statistics	Yes No	Determines whether the full spectral statistics are logged or not



**Table A.13** *Logged Spectrum parameters<sup>a</sup>*

Parameter	Values	Comment
<i>Spectrum Parameters</i>	<i>All</i> <i>Selected</i> <i>None</i>	Determines whether all spectrum parameters are logged, a selected part of the parameters are logged (up to 3 parameters) or none are logged
<i>Spectrum 1 to Spectrum 3</i>	$L_{Xeq}$ $L_{XFmax}$ $L_{XSmax}$ $L_{XFmin}$ $L_{XSmin}$ <i>Off</i>	These parameters can be set if Spectrum Parameters = Selected  X = frequency weightings A, B, C or Z (controlled by <b>Setup</b> – <i>Frequency Weightings</i> – <i>Spectrum</i> parameter)

a. For Logging (BZ-7224) and Enhanced Logging (BZ-7225) templates only, requires Frequency Analysis Software BZ-7223.

## A.13 Markers

**Table A.14** *Markers<sup>a</sup>*

Parameter	Values	Comment
<i>Marker 1</i>	<i>Text string</i>	Default set to 'Exclude'. This marker can be set using the stylus in the profile or the <b>Back-erase</b>  pushbutton during a measurement
<i>Marker 2</i>	<i>Text string</i>	Default set to 'Manual'. This marker can be set using the stylus in the profile or the <b>Manual Event</b>  pushbutton during a measurement
<i>Marker 3</i>	<i>Text string</i>	Default set to 'Level'. This marker can be set using the stylus in the profile, or if the conditions for the Level Trigger are met during a measurement
<i>Marker 4 and Marker 5</i>	<i>Text string</i>	These markers can be set using the stylus in the profile display
<i>Marker 6</i>	<i>Text String</i>	Default set to 'Sound'. This marker is set if a sound recording is made during a measurement
<i>Pre-marker Time</i>	<i>0 to 5 s</i>	Specifies number of seconds marker 1, marker 2 or marker 3 will be set ahead of the point where the <b>Back-erase</b> or the <b>Manual Event</b> pushbuttons are pressed or the level trigger conditions are fulfilled

a. For Logging (BZ-7224) and Enhanced Logging (BZ-7225) templates only.

## A.14 Level Trigger

**Table A.15** Level Trigger parameters<sup>a</sup>

Parameter	Values	Comment
<i>Level Trigger Control</i>	<i>On</i> <i>Off</i>	Set to <i>On</i> for setting Marker 3 (Level) when the <i>Trigger Parameter</i> fulfils the Level Trigger conditions (see below). The conditions are checked every second. Sound Recording <sup>b</sup> can also be controlled by these settings, see <b>Setup – Sound Recording – Recording Control</b>
<i>Start Slope</i>	<i>Rising</i> <i>Falling</i>	Set to <i>Rising</i> to start when level goes above <i>Start Level</i> (and then stop when level goes below <i>Stop Level</i> ). Set to <i>Falling</i> to start when level goes below <i>Start Level</i> (and stop when level goes above <i>Stop Level</i> )
<i>Start Level</i>	–100 to 200 dB	Start trigger conditions are fulfilled, when level crosses <i>Start Level</i> (in accordance with <i>Start Slope</i> ) for at least <i>Start Duration</i> seconds – set <i>Start Level</i> here
<i>Start Duration</i>	0 to 15 s	Start trigger conditions are fulfilled, when level crosses <i>Start Level</i> (in accordance with <i>Start Slope</i> ) for at least <i>Start Duration</i> seconds – set <i>Start Duration</i> here
<i>Stop Level</i>	–100 to 200 dB	Stop trigger conditions are fulfilled, when level crosses <i>Stop Level</i> (in accordance with <i>Start Slope</i> ) for at least <i>Stop Duration</i> seconds – set <i>Stop Level</i> here
<i>Stop Duration</i>	0 to 15 s	Stop trigger conditions are fulfilled, when level crosses <i>Stop Level</i> (in accordance with <i>Start Slope</i> ) for at least <i>Stop Duration</i> seconds – set <i>Stop Duration</i> here

**Table A.15** (Cont.) Level Trigger parameters<sup>a</sup>

Parameter	Values	Comment
Trigger Parameter	$L_{Xeq}$ $L_{Yeq}$ $L_{Vpeak}$ $L_{XFmax}$ $L_{XSmax}$ $L_{XImax}$ $L_{YFmax}$ $L_{YSmax}$ $L_{YImax}$ $L_{XFmin}$ $L_{XSmin}$ $L_{XImin}$ $L_{YFmin}$ $L_{YSmin}$ $L_{YImin}$ $L_{XF(SPL)}$ $L_{XS(SPL)}$ $L_{XI(SPL)}$ $L_{YF(SPL)}$ $L_{YS(SPL)}$ $L_{YI(SPL)}$ $L_{avUQ}$	<p>Select which parameter to monitor for the level trigger. The parameter is based on 1 second measurements and checked every second regardless of the logging period and logged parameters</p> <p>X = frequency weightings A or B (controlled by <b>Setup</b> – Frequency Weightings – Broadband (excl. Peak) parameter).</p> <p>Y = frequency weightings C or Z (controlled by <b>Setup</b> – Frequency Weightings – Broadband (excl. Peak) parameter).</p> <p>V = frequency weightings A, B, C or Z (controlled by <b>Setup</b> – Frequency Weightings – Broadband Peak parameter)</p> <p>U = time weightings F or S (controlled by <b>Setup</b> – Occupational Health – Time Weighting for Lav parameter)</p> <p>Q = exchange rate 4, 5 or 6 dB (controlled by <b>Setup</b> – Occupational Health – Exchange Rate for Lav parameter)</p>

a. For Logging (BZ-7224) templates only.

b. Requires license for Sound recording BZ-7226.

## A.15 Triggers

**Table A.16** Trigger parameters<sup>a</sup>

Parameter	Values	Comment
<b>Timer Trigger</b>		
Trigger	On Off	<p>Set to <i>On</i> to periodically generate a <i>Timer Event</i>.</p> <p><b>Note:</b> Set <i>Sound Recording</i>, <i>Recording Control</i> to <i>Timer Event</i> or <i>All Events</i></p>
Timer Period	00:01:00 to 12:00:00	The sound recording is triggered with <i>Timer Period</i> intervals
Synchronize with Clock	Yes, No	<p>Select <i>Yes</i> to synch. the start of sound recordings with whole minutes or hours. Select <i>No</i> if you want the first sound recording <i>Timer Period</i> after start</p>

**Table A.16** (Cont.) Trigger parameters<sup>a</sup>

Parameter	Values	Comment
<i>Duration</i>	00:00:01 to 01:00:00	Specifies the duration of the trigger for the sound recording. <b>Note:</b> The total time of the sound recording will be Pre-recording Time + Duration + Post-recording Time
<b>Level Trigger 1<sup>bc</sup></b>		
<i>Trigger</i>	On Off	Set to <i>On</i> for setting Marker 3 (Level) when the <i>Trigger Parameter</i> fulfils the Level Trigger conditions (see below). The conditions are checked every second. Sound Recordings <sup>c</sup> can also be controlled by these settings, see <b>Setup</b> , <i>Sound Recording</i> , <i>Recording Control</i>
<i>Start Time</i>	00:00:00 to 23:59:59	<i>Start Time</i> defines when the level trigger is enabled. Triggering is limited to the enabled time
<i>Stop Time</i>	00:00:00 to 23:59:59	<i>Stop Time</i> defines when the level trigger is disabled. Triggering is limited to the enabled time
<i>Hold Off</i>	00:00:00 to 01:00:00	<i>Hold Off</i> specifies a time after a level trigger, where level triggering is disabled. Can be useful in reducing the number of triggers
<i>Start Slope</i>	Rising Falling	Set to <i>Rising</i> to start when level goes above <i>Start Level</i> (and then stop when level goes below <i>Stop Level</i> ). Set to <i>Falling</i> to start when level goes below <i>Start Level</i> (and stop when level goes above <i>Stop Level</i> )
<i>Start Level</i>	–100 to 200 dB	Start trigger conditions are fulfilled when level crosses <i>Start Level</i> (in accordance with <i>Start Slope</i> ) for at least <i>Start Duration</i> seconds – set <i>Start Level</i> here
<i>Start Duration</i>	0 to 15 s	Start trigger conditions are fulfilled when level crosses <i>Start Level</i> (in accordance with <i>Start Slope</i> ) for at least <i>Start Duration</i> seconds – set <i>Start Duration</i> here
<i>Stop Level</i>	–100 to 200 dB	Stop trigger conditions are fulfilled when level crosses <i>Stop Level</i> (in accordance with <i>Start Slope</i> ) for at least <i>Stop Duration</i> seconds – set <i>Stop Level</i> here



**Table A.16** (Cont.) Trigger parameters<sup>a</sup>

Parameter	Values	Comment
Stop Duration	0 to 15 s	Stop trigger conditions are fulfilled when level crosses <i>Stop Level</i> (in accordance with <i>Start Slope</i> ) for at least <i>Stop Duration</i> seconds – set <i>Stop Duration</i> here
Trigger Parameter	$L_{Xeq}$ $L_{Yeq}$ $L_{Vpeak}$ $L_{XFmax}$ $L_{XSmax}$ $L_{XImax}$ $L_{YFmax}$ $L_{YSmax}$ $L_{YImax}$ $L_{XFmin}$ $L_{XSmin}$ $L_{XImin}$ $L_{YFmin}$ $L_{YSmin}$ $L_{YImin}$ $L_{XF(SPL)}$ $L_{XS(SPL)}$ $L_{XI(SPL)}$ $L_{YF(SPL)}$ $L_{YS(SPL)}$ $L_{YI(SPL)}$ $L_{avUQ}$ $L_{Weq}(f1-f2)$	<p>Select which parameter to monitor for the level trigger. The parameter is based on 1 second measurements and checked every second regardless of the logging period and logged parameters</p> <p>X = frequency weightings A or B (controlled by <b>Setup</b> – <i>Frequency Weightings</i> – <i>Broadband (excl. Peak)</i> parameter)</p> <p>Y = frequency weightings C or Z (controlled by <b>Setup</b> – <i>Frequency Weightings</i> – <i>Broadband (excl. Peak)</i> parameter)</p> <p>V = frequency weightings A, B, C or Z (controlled by <b>Setup</b> – <i>Frequency Weightings</i> – <i>Broadband Peak</i> parameter)</p> <p>U = time weightings F or S (controlled by <b>Setup</b> – <i>Occupational Health</i> – <i>Time Weighting for Lav</i> parameter)</p> <p>Q = exchange rate 4, 5 or 6 dB (controlled by <b>Setup</b> – <i>Occupational Health</i> – <i>Exchange Rate for Lav</i> parameter)</p> <p>W = frequency weightings A, B, C or Z (controlled by <b>Setup</b> – <i>Frequency Weightings</i> – <i>Spectrum</i> parameter)</p> <p>f1 = Lower freq. range (controlled by <b>Setup</b> – <i>Bandwidth</i> – <i>Bottom F. for Special Leq</i>)</p> <p>f2 = Upper freq. range (controlled by <b>Setup</b> – <i>Bandwidth</i> – <i>Top Freq. for Special Leq</i>)</p>
<b>Level Trigger 2:</b> Exactly the same parameters as Level Trigger 1		
<b>Level Trigger 3:</b> Exactly the same parameters as Level Trigger 1		
<b>Level Trigger 4:</b> Exactly the same parameters as Level Trigger 1		

a. For Enhanced Logging (BZ-7225) templates only.

b. Up to four individual trigger settings can be set for non-overlapping time periods of the day.

c. Requires license for Sound recording BZ-7226.

## A.16 Sound Recording

**Table A.17** Sound Recording parameters<sup>a</sup>

Parameter	Values	Comment
Recording Control	Off	Determines how recording of the measured signal is controlled
	Automatic	Set to <i>Automatic</i> to start the recording when the measurement is started and record throughout the measurement, only limited by the <i>Maximum Duration</i>
	Manual Event	Set to <i>Manual Event</i> to start recording manually while measuring when the <b>Manual Event</b> pushbutton is pressed, and record until pressing the pushbutton again, however, take <i>Maximum</i> and <i>Minimum Duration</i> into account
	Exclude Event <sup>b</sup>	Set to <i>Exclude Event</i> to start recording manually while measuring when the <b>Back-erase</b> pushbutton is pressed, and record until pressing the pushbutton again, however, take <i>Maximum</i> and <i>Minimum Duration</i> into account
	External Event	Set to <i>External Event</i> to start recording using external equipment connected to the Trigger Input Socket
	Level Trigger Event <sup>b</sup>	Set to <i>Level Trigger Event</i> to record while the level trigger conditions are fulfilled, however, take <i>Maximum</i> and <i>Minimum Duration</i> into account
	Timer Event <sup>c</sup>	Set to <i>Timer Event</i> (BZ-7225 only) to record while the timer trigger conditions are fulfilled, however, take <i>Maximum</i> and <i>Minimum Duration</i> into account
	All Events <sup>b</sup>	Set to <i>All Events</i> to record while any of the events above are active, however, take <i>Maximum</i> and <i>Minimum Duration</i> into account
	Image Event	If you don't want to record the input signal, then set <i>Recording Control</i> to <i>Off</i> , to economise on power For Reverberation Time Software BZ-7227 the values are limited to <i>Off</i> and <i>Automatic</i> . Set to <i>Automatic</i> to make sound recordings during the measurements Set to <i>Image Event</i> (Type 2270 only) to make a recording of 1 s + Pre-recording Time + Post-recording Time

**Table A.17** (Cont.) Sound Recording parameters<sup>a</sup>

Parameter	Values	Comment																				
Recording Quality	Low Fair Medium High	<p>This setup determines the quality of the recording by adjusting the sampling rate. The amount of space required for the recording on the memory card will depend on the selected quality:</p> <table><tr><td>Quality</td><td>Sampling freq.</td><td>Upper freq.</td><td>Memory</td></tr><tr><td>Low</td><td>8 kHz</td><td>3 kHz</td><td>16 KB/s</td></tr><tr><td>Fair</td><td>16 kHz</td><td>6 kHz</td><td>32 KB/s</td></tr><tr><td>Medium</td><td>24 kHz</td><td>10 kHz</td><td>48 KB/s</td></tr><tr><td>High</td><td>48 kHz</td><td>20 kHz</td><td>96 KB/s</td></tr></table>	Quality	Sampling freq.	Upper freq.	Memory	Low	8 kHz	3 kHz	16 KB/s	Fair	16 kHz	6 kHz	32 KB/s	Medium	24 kHz	10 kHz	48 KB/s	High	48 kHz	20 kHz	96 KB/s
Quality	Sampling freq.	Upper freq.	Memory																			
Low	8 kHz	3 kHz	16 KB/s																			
Fair	16 kHz	6 kHz	32 KB/s																			
Medium	24 kHz	10 kHz	48 KB/s																			
High	48 kHz	20 kHz	96 KB/s																			
Recorded Signal <sup>b</sup>	Input X-weighted Input C-weighted Input Z-weighted	<p>Use this parameter to select the frequency weighting of the recorded signal</p> <p><b>Note 1:</b> The frequency weighting of the recorded signal can be selected independently of the frequency weighting of the measurement, the signal at the output socket and the signal at the earphone socket</p> <p><b>Note 2:</b> X = frequency weighting A or B. 'A' requires that the <i>Broadband (excl. Peak)</i> parameter is set to AC or AZ. 'B' requires that the <i>Broadband (excl. Peak)</i> parameter is set to BC or BZ</p>																				
Automatic Gain Control <sup>b</sup>	On  Off	<p>To ease identification of sound sources, the gain can be automatically adjusted to keep the average level within a 40 dB range. When playing back the recorded signal, you will then hear clearly the whole signal content, whether the level has been 20 dB or 140 dB. Set <i>Automatic Gain Control</i> to <i>On</i> to convert the recorded signal.</p> <p>Set <i>Automatic Gain Control</i> to <i>Off</i> for recording the signal with a fixed gain – then set <i>Peak Recording Level</i> to fit the signal</p> <p><b>Note:</b> If the sound contains very high levels at low frequency, then a fixed gain is recommended</p>																				

**Table A.17** (Cont.) Sound Recording parameters<sup>a</sup>

Parameter	Values	Comment										
<i>Peak Recording Level</i>	140 dB 130 dB 120 dB 110 dB 100 dB 90 dB 80 dB 70 dB	<p>The recorded signal is stored as a 16-bit wave file, which has a dynamic range of up to 96 dB. When playing back on the analyzer, the dynamic range of the output is approx. 75 dB. When playing back on a PC it might be even lower. Set <i>Peak Recording Level</i> to fit the signal.</p> <p>The values for <i>Peak Recording Level</i> take the sensitivity of the attached transducer into account. The values shown in the list here are nominal values for a Type 4189 or 4190 microphone.</p> <p><b>Hint:</b> Monitor the <math>L_{\text{peak}}</math> value during a trial measurement before selecting the <i>Peak Recording Level</i></p>										
<i>Pre-recording Time</i> <sup>b</sup>	0 to 110 s	<p>Recording is started the <i>Pre-recording Time</i> before the trigger conditions are fulfilled (e.g., 5 s means the recording will be started 5 s before you hit the <b>Manual Event</b> pushbutton). This is possible because the recording is done continuously in an internal buffer, ready to be saved as a wave file. The <i>Pre-recording Time</i> is limited by this buffer size and the <i>Recording Quality</i>:</p> <table><tr><td><u>Quality</u></td><td><u>Pre-recording Time limit</u></td></tr><tr><td>Low</td><td>110 s</td></tr><tr><td>Fair</td><td>50s</td></tr><tr><td>Medium</td><td>30s</td></tr><tr><td>High</td><td>10s</td></tr></table>	<u>Quality</u>	<u>Pre-recording Time limit</u>	Low	110 s	Fair	50s	Medium	30s	High	10s
<u>Quality</u>	<u>Pre-recording Time limit</u>											
Low	110 s											
Fair	50s											
Medium	30s											
High	10s											
<i>Post-recording Time</i> <sup>b</sup>	0 to 300 s	Use this parameter to specify how much extra you want to be recorded after the trigger conditions are no longer fulfilled										
<i>Duration Limit</i> <sup>b</sup>	On Off	Use this parameter to enable the <i>Minimum Duration</i> and <i>Maximum Duration</i> parameters for overruling the duration of the sound recording determined by the trigger condition parameters										
<i>Minimum Duration</i> <sup>b</sup>	00:00:00 to 01:00:00	<p>When <i>Duration Limit</i> is <i>On</i>, then <i>Minimum Duration</i> will determine the minimum recording time regardless of the trigger conditions</p> <p>The total record length will then (as a minimum) be the sum of <i>Minimum Duration</i>, <i>Pre-recording Time</i> and <i>Post-recording Time</i></p>										

**Table A.17** (Cont.) Sound Recording parameters<sup>a</sup>

Parameter	Values	Comment
<i>Maximum Duration</i> <sup>b</sup>	00:00:00 to 01:00:00	When <i>Duration Limit</i> is On, then <i>Maximum Duration</i> will determine the maximum recording time regardless of the trigger conditions. The total record length will then (as a maximum) be the sum of <i>Maximum Duration</i> , <i>Pre-recording Time</i> and <i>Post-recording Time</i> . <b>Note:</b> If <i>Maximum Duration</i> = 00:00:00, then it is disabled and doesn't limit the duration

a. Requires license for Sound Recording Option BZ-7226.

b. For Logging (BZ-7224) and Enhanced Logging (BZ-7225) templates only.

c. For Enhanced Logging (BZ-7225) templates only.

## A.17 Output Socket Signal

**Table A.18** Output Socket Signal parameters<sup>a</sup>

Parameter	Values	Comment
<i>Source</i>	Off <i>Input X-weighted</i> <i>Input C-weighted</i> <i>Input Z-weighted</i> <i>L<sub>XF</sub></i> <i>DC Voltage</i> <i>Generator</i>	Output to the Output socket on the connector panel. Select between <i>Off</i> and the input signal for monitoring purposes. The <i>L<sub>AF</sub></i> setting will output the X-weighted sound level as a voltage between 0 V and 4 V. Use the <i>DC Voltage</i> parameter to calibrate the connected equipment by setting the <i>DC Output</i> . Use <i>Generator</i> parameter to output the signal specified by the <i>Generator</i> settings. <b>Note 1:</b> If you do not want to output the signal, then select <i>Off</i> to economise the power. <b>Note 2:</b> X = frequency weighting A or B. 'A' requires that the <i>Broadband (excl. Peak)</i> parameter is set to AC or AZ. 'B' requires that the <i>Broadband (excl. Peak)</i> parameter is set to BC or BZ. <b>Note 3:</b> The <i>Generator</i> setting is only available for Frequency Analysis templates
<i>DC Output (20 mV/dB)</i>	0.0 to 200.0 dB	<i>Source</i> = <i>DC Voltage</i> will output: 0 V for <i>DC Output</i> = 0 dB and 4 V for <i>DC Output</i> = 200 dB

**Table A.18** (Cont.) Output Socket Signal parameters<sup>a</sup>

Parameter	Values	Comment
Output Gain Input	–60.0 dB to 60.0 dB	Output gain of the input signal. Key in a gain value (0.1 dB resolution) for the input signal. Use '@' to assign the new value for immediate response at the output – or use the up/down navigation keys to increment/decrement the value in steps of 1 dB. <b>Note:</b> 0 dB means 1 V output for 1 V input.

a. Not available for Reverberation Time Software BZ-7227.

## A.18 L<sub>den</sub> Periods

**Table A.19** L<sub>den</sub> Periods parameters<sup>a</sup>

Parameter	Values	Comment
Day Start	00:00:00 to 23:59:59	Determines the start of the day period for the L <sub>day</sub> calculation
Evening Start	00:00:00 to 23:59:59	Determines the start of the evening period for the L <sub>evening</sub> calculation
Night Start	00:00:00 to 23:59:59	Determines the start of the night period for the L <sub>night</sub> calculation
Evening Penalty	0 to 20 dB	The Evening Penalty will be added to L <sub>evening</sub> when calculating L <sub>den</sub>
Night Penalty	0 to 20 dB	The Night Penalty will be added to L <sub>night</sub> when calculating L <sub>den</sub>

a. For Enhanced Logging (BZ-7225) templates only.

**Note:** If *Evening Start* is set between *Night Start* and *Day Start*, then the L<sub>evening</sub> parameter will be undefined.

## A.19 Occupational Health

**Table A.20** Occupational Health Parameters<sup>a</sup>

Parameter	Values	Comment
Exposure Time	00:01:00 to 1.00:00:00	Set the <i>Exposure Time</i> to the actual time that you are exposed to noise during a workday. Used for calculation of L <sub>ep,d</sub> and L <sub>ep,d,v</sub> . <b>Note:</b> <i>Exposure Time</i> can be changed after the measurement has been done

**Table A.20** (Cont.) Occupational Health Parameters<sup>a</sup>

Parameter	Values	Comment
<i>Reference Time</i>	00:01:00 to 5.00:00:00	Set the <i>Reference Time</i> as required for calculation of Sound Exposure Level or Time Weighted Average with a reference time other than 8 hours. Used for calculation of $L_{ep,d,v}$ and $TWA_v$
<i>Threshold Level</i>	0 to 140 dB	Any sound levels below the threshold value do not contribute to the Dose measurement data. The time resolution for this calculation is 1 s for calculation of Dose and ProjDose – and 10 ms for calculation of TWA, $TWA_v$ , DoseUQ and ProjDoseUQ. Used for calculation of Dose, ProjDose, TWA, $TWA_v$ , DoseUQ, ProjDoseUQ. U = <i>Time Weighting for Lav</i> : F or S Q = <i>Exchange Rate for Lav</i> : 4, 5 or 6 dB
<i>Criterion Level</i>	0 to 140 dB	<i>Criterion Level</i> is the sound level allowed for an 8-hour period and would yield a 100% dose. The criterion level must be set according to the legislation with which you will have to comply. Used for calculation of Dose, ProjDose, DoseUQ, ProjDoseUQ. U = <i>Time Weighting for Lav</i> : F or S Q = <i>Exchange Rate for Lav</i> : 4, 5 or 6 dB
<i>PeaksOver Level</i>	0 to 200 dB	Any peak levels that exceed the level set here will be counted. Used for calculation of #XPeaks(>NNNdB) X = A, B, C or Z, set by <b>Setup – Input – Broadband Peak</b> , NNN is the <i>PeaksOver Level</i> <b>Note:</b> Two other peak counters are preset to count peaks over 135 dB and 137 dB, respectively
<i>Exchange Rate for Lav</i>	4 dB 5 dB 6 dB	The increase in noise level that corresponds to a doubling of the noise level is determined by <i>Exchange Rate for Lav</i> . Set <i>Exchange Rate for Lav</i> as required by your local standards. Used for calculation of LavUQ, TWA, $TWA_v$ , DoseUQ, ProjDoseUQ. U = <i>Time Weighting for Lav</i> : F or S Q = <i>Exchange Rate for Lav</i> : 4, 5 or 6 dB <b>Note:</b> TWA and $TWA_v$ requires U = S and Q = 5

**Table A.20** (Cont.) Occupational Health Parameters<sup>a</sup>

Parameter	Values	Comment
Time Weighting for Lav	F S	Lav will be time weighted in accordance with this parameter. Used for calculation of LavUQ, TWA, TWA <sub>v</sub> , DoseUQ, ProjDoseUQ. U = Time Weighting for Lav: F or S Q = Exchange Rate for Lav: 4, 5 or 6 dB <b>Note:</b> TWA and TWA <sub>v</sub> requires U = S and Q = 5

a. Not available for Reverberation Time Software BZ-7227.

## A.20 Generator

**Table A.21** Generator Parameters<sup>a</sup>

Parameter	Values	Comment
Generator Type	Internal External	Set to <i>Internal</i> to use the internal noise generator as specified below. Set to <i>External</i> to switch an external generator on/off using a logic signal: On = 4.5 V; Off = 0 V. The generator signal appears at the Output Socket. <b>Note 1:</b> For Reverberation Time Software BZ-7227, set <i>Measurement Control, Excitation = Interrupted Noise</i> to enable the generator parameters. <b>Note 2:</b> For Frequency Analysis Software BZ-7223, set <i>Output Socket Signal, Source = Generator</i> to enable the generator parameters
Noise Type	Pink White	The type of noise from the internal generator. The bandwidth of the noise will be adjusted to the frequency range from <i>Bottom Frequency</i> to <i>Top Frequency</i>
Level [re. 1 V]	–60.0 to 0.0 dB	This sets the internal noise generator attenuation in dB, referenced to 1 V. This level stays at the set level irrespective of the frequency range



**Table A.21** (Cont.) Generator Parameters<sup>a</sup>

Parameter	Values	Comment
<i>Sound Source</i>	<i>Unknown</i> <i>Type 4292 Optimum</i> <i>Type 4295 Optimum</i> <i>Type 4296 Optimum</i> <i>Type 4292 Flat</i> <i>Type 4295 Flat</i> <i>Type 4296 Flat</i>	<p>This setting optimises the frequency response of the internal generator output to the connected sound source. The 'Flat' setting optimises the output for a flat power response, the 'Optimum' setting optimises the power difference between adjacent 1/1- or 1/3-octave bands, while maintaining a 'boost' at low frequencies.</p> <p>Select a type matching your sound source: Type 4292 or 4296 OmniPower Sound Source, or Type 4295 OmniSource Sound Source. Select <i>Unknown</i> if you are using another sound source, or don't want to correct the frequency response</p>
<i>Escape Time</i>	0 to 60 s	Set the <i>Escape Time</i> to allow the operator to leave the room before the generator is turned on and the measurement starts
<i>Build-up Time</i>	1 to 20 s	Set the <i>Build-up Time</i> to allow the sound pressure in the room to settle after the sound source is switched on
<i>Bottom Frequency</i> <sup>b</sup>	50 Hz to <i>Top Frequency</i>	1/1-octave: 63 Hz – 8 kHz 1/3-octave: 50 Hz – 10 kHz <b>Note:</b> The settings of <i>Bottom</i> and <i>Top Frequency</i> control the bandwidth of the noise from the internal noise generator
<i>Top Frequency</i> <sup>b</sup>	<i>Bottom Frequency</i> to 10 kHz	1/1-octave: 63 Hz – 8 kHz 1/3-octave: 50 Hz – 10 kHz

a. Available for Frequency Analysis Software BZ-7223 and Reverberation Time Software BZ-7227 only.

b. Available for Frequency Analysis Software BZ-7223 only.

## A.21 Post-processing

**Table A.22** Post-processing Parameters<sup>a</sup>

Parameter	Values	Comment
<i>Ensemble Averaging</i>	No Yes	Set to <i>Yes</i> to average each of the position decays into an average decay (called the ensemble average or Room average). The averaged decays of the room can then be displayed in the Decay View. T30 Room, T20 Room and EDT Room will be calculated from the Room average. Set to <i>No</i> for no ensemble averaging. There will be no decays available for the room. T30 Room, T20 Room and EDT Room will be calculated as averages of the T30, T20 and EDT resp. for all the positions <sup>b</sup>
<i>Wide Band RT Bottom</i>	<i>50 Hz to Wide Band RT Top</i>	1/1-octave: 63 Hz – 8 kHz 1/3-octave: 50 Hz – 10 kHz The settings of <i>Wide Band RT Bottom</i> and <i>Wide Band RT Top</i> control the range of frequency bands used in the averaging of the wide band parameters available below the Spectrum and Decay graphs. <b>Example:</b> Set <i>Wide Band RT Bottom</i> to 100 Hz and <i>Top</i> to 2 kHz, then the average of the frequency bands from 100 Hz to 2 kHz will be calculated for the current position as: <ul style="list-style-type: none"> <li>• T30 (100 Hz – 2 kHz)</li> <li>• T20 (100 Hz – 2 kHz)</li> <li>• EDT (100 Hz – 2 kHz)</li> </ul> and for the Room as: <ul style="list-style-type: none"> <li>• T30 Room (100 Hz – 2 kHz)</li> <li>• T20 Room (100 Hz – 2 kHz)</li> <li>• EDT Room (100 Hz – 2 kHz)</li> </ul>
<i>Wide Band RT Top</i>	<i>Wide Band RT Bottom to 10 kHz</i>	1/1-octave: 63 Hz – 8 kHz 1/3-octave: 50 Hz – 10 kHz

a. Requires Reverberation Time Software BZ-7227.

## A.22 Tone Assessment

**Table A.23** *Tone Assessment Parameters<sup>a</sup>*

Parameter	Values	Comment
<i>Tone Assessment</i>	<i>On</i> <i>Off</i>	Set <i>Tone Assessment</i> to <i>On</i> to enable tone assessment functionality, then select the <i>Tone</i> parameter above the spectrum to display the results
<i>Tone Standard</i>	<i>ISO 1996:2-2007</i> <i>DM 16-03-1998</i>	Set the <i>Tone Standard</i> in accordance with your requirements:  <b>ISO 1996:2-2007, Annex D</b> is the objective method for assessing the audibility of tones in noise – simplified method. This method uses 1/3-octave spectra  <b>DM 16-03-1998</b> assesses tone using 1/3-octave spectra according to Italian Law: Ministero dell'Ambiente, Decreto 16 marzo 1998
<i>Adjustment</i>	<i>0.0 to 20 dB</i>	This is the adjustment you should add to $L_{Aeq}$ if audible tones are found in the spectrum. The resulting adjustment can be read below the spectrum <b>Note:</b> the adjustment is fixed to 5 dB in the DM 16-03-1998 standard
<i>Low Freq. Last Band</i>	<i>12.5 Hz to 315 Hz</i>	Set the frequency for the last band of the low frequency range of the assessment. Default is 125 Hz The low frequency range is from the lowest measured frequency band to the value of the <i>Low Freq. Last Band</i> parameter <b>Note:</b> Only available if <i>Tone Standard</i> parameter is set to <i>ISO 1996:2-2007</i>
<i>Middle Freq. Last Band</i>	<i>160 Hz to 20 kHz</i>	Set the frequency for the last band of the middle frequency range of the assessment. Default is 400 Hz The middle frequency range is from one band higher than the <i>Low Freq. Last Band</i> parameter to the value of the <i>Middle Freq. Last Band</i> parameter <b>Note:</b> Only available if <i>Tone Standard</i> parameter is set to <i>ISO 1996:2-2007</i>

**Table A.23** Tone Assessment Parameters<sup>a</sup>

Parameter	Values	Comment
<i>Level Difference Low</i>	<i>0.1 to 100.0 dB</i>	Set the required level difference for detecting a tone in the low frequency range. Default is 15 dB <b>Note:</b> Only available if <i>Tone Standard</i> parameter is set to <i>ISO 1996:2-2007</i>
<i>Level Difference Middle</i>	<i>0.1 to 100.0 dB</i>	Set the required level difference for detecting a tone in the middle frequency range. Default is 8 dB <b>Note:</b> Only available if <i>Tone Standard</i> parameter is set to <i>ISO 1996:2-2007</i>
<i>Level Difference High</i>	<i>0.1 to 100.0 dB</i>	Set the required level difference for detecting a tone in the high frequency range. Default is 5 dB <b>Note:</b> Only available if <i>Tone Standard</i> parameter is set to <i>ISO 1996:2-2007</i>
<i>ISO 226</i>	<i>1987 Free-field 1987 Diffuse-field 2003 Free-field</i>	The tone is checked against levels in other frequency bands using normal equal loudness level contours defined by ISO 226. Select here which version of the standard to use <b>Note:</b> Only available if <i>Tone Standard</i> parameter is set to <i>DM 16-03-1998</i>

a. Requires Tone Assessment Option BZ-7231.

# Appendix B

## Measurement Parameters

This appendix describes the measurement parameters. They are measured in accordance with the setup parameters.

Please refer to the Glossary in Appendix E for a description of the parameters.

The following letters are substituted in the parameters that follow to represent the wide range of frequency weightings, time weightings and percentile levels available:

V = frequency weightings A, B, C or Z (controlled by **Setup** – *Frequency Weightings – Broadband Peak* parameter)

X = frequency weightings A or B (controlled by **Setup** – *Frequency Weightings – Broadband (excl. Peak)* parameter)

Y = frequency weightings C or Z (controlled by **Setup** – *Frequency Weightings – Broadband (excl. Peak)* parameter)

W = frequency weightings A, B, C or Z (controlled by **Setup** – *Frequency Weightings – Spectrum* parameter)

U = time weightings F or S (controlled by **Setup** – *Statistics – Spectral Statistics based on* parameter)

R = time weightings F or S (controlled by **Setup** – *Occupational Health – Time Weighting for Lav* parameter)

Q = exchange rate 4, 5 or 6 dB (controlled by **Setup** – *Occupational Health – Exchange Rate* parameter)

N = number between 0.1 and 99.9 (controlled by **Setup** – *Statistics – Percentile N parameter*)

## B.1 Total Measurement

### B.1.1 For Sound Level Meter Software BZ-7222, Frequency Analysis Software BZ-7223, Logging Software BZ-7224 and Enhanced Logging Software BZ-7225

The following parameters are measured within the Elapsed Time:

Equivalent Continuous Sound Levels

- $L_{Xeq}$
- $L_{Yeq}$
- $L_{Ceq}-L_{Aeq}$

Sound Exposure Level

- $L_{XE}$
- $L_{YE}$

Peak Sound Level

- $L_{Vpeak}$
- $T_{Vpeak}$

Maximum Time-weighted Sound Levels

- $L_{XFmax}$
- $L_{XSmax}$
- $L_{XImax}$
- $L_{YFmax}$
- $L_{YSmax}$
- $L_{YImax}$

Minimum Time-weighted Sound Levels

- $L_{XFmin}$
- $L_{XSmin}$
- $L_{XImin}$
- $L_{YFmin}$
- $L_{YSmin}$
- $L_{YImin}$

ISO/EU Occupational Health Parameters

- $L_{ep,d}$
- $L_{ep,d,v}$
- $E$
- Dose
- ProjDose
- #VPeaks (>xxx dB)

- #VPeaks (>137 dB)
- #VPeaks (>135 dB)

#### US Occupational Health Parameters

- $L_{avRQ}$
- TWA
- $TWA_v$
- DoseRQ
- ProjDoseRQ

#### General Parameters

- Overload in %
- Start time
- Stop Time
- Elapsed Time (excl. pauses)
- Time Remaining (for the current measurement, taking available diskspace into account)

#### Special Parameters

- $L_{XIeq}$  (also called  $L_{XIIm}$ )
- $L_{YIeq}$
- $L_{AIeq}-L_{Aeq}$
- $L_{AFTeq}$  (also called  $L_{AFIm5}$ )
- $L_{AFTeq}-L_{Aeq}$
- SIL (average of  $L_{Zeq}$  octave band levels: 500 Hz, 1000 Hz, 2000 Hz and 4000 Hz)<sup>a</sup>
- PSIL (average of  $L_{Zeq}$  octave band levels: 500 Hz, 1000 Hz and 2000 Hz)<sup>a</sup>
- SIL3 (average of  $L_{Zeq}$  octave band levels: 1000 Hz, 2000 Hz and 4000 Hz)<sup>a</sup>
- $L_{Weq}(f1-f2)$  (average of power values for  $L_{Weq}$  frequency bands from f1 Hz to f2 Hz)<sup>a</sup>

#### Noise Indicators<sup>b</sup>

- $L_{day}$
- $L_{evening}$
- $L_{night}$
- $L_{den}$
- $L_{dn}$

#### Statistics to Calculate Percentile Levels and Std.Dev.

#### Spectrum Parameters<sup>c</sup>

- $L_{Weq}$
- $L_{WFmax}$

---

a. These parameters require license for BZ-7223 and measurement of spectra.  
b. These parameters are available for Enhanced Logging BZ-7225 only.  
c. These parameters require license for BZ-7223 and measurement of spectra.

- $L_{WSmax}$
- $L_{WFmin}$
- $L_{WSmin}$

Statistics to Calculate Percentile Levels as Spectra<sup>a</sup>

CIC Results

- CIC 1 Result<sup>b</sup>
- CIC 1 Dev. from Reference<sup>b</sup>
- CIC 2 Result<sup>b</sup>
- CIC 2 Dev. from Reference<sup>b</sup>
- CIC 3 Result<sup>c</sup>
- CIC 3 Dev. from Reference<sup>c</sup>
- CIC 4 Result<sup>c</sup>
- CIC 4 Dev. from Reference<sup>c</sup>

## B.2 Periodic Reports

### B.2.1 For Enhanced Logging Software BZ-7225

Parameters measured within a Periodic Report interval:

Equivalent Continuous Sound Levels

- $L_{Xeq}$
- $L_{Yeq}$
- $L_{Ceq}-L_{Aeq}$

Sound Exposure Level

- $L_{XE}$
- $L_{YE}$

Peak Sound Level

- $L_{Vpeak}$
- $T_{Vpeak}$

Maximum Time-weighted Sound Levels

- $L_{XFmax}$
- $L_{XSmax}$
- $L_{XImax}$
- $L_{YFmax}$

---

a. These parameters require license for BZ-7223 and measurement of spectra.  
 b. These parameters are available for Logging BZ-7224 and Enhanced Logging BZ-7225 only.  
 c. These parameters are available for Enhanced Logging BZ-7225 only.



- $L_{YSmax}$
- $L_{YImax}$

#### Minimum Time-weighted Sound Levels

- $L_{XFmin}$
- $L_{XSmin}$
- $L_{XImin}$
- $L_{YFmin}$
- $L_{YSmin}$
- $L_{YImin}$

#### ISO/EU Occupational Health Parameters

- $L_{ep,d}$
- $L_{ep,d,v}$
- $E$
- Dose
- ProjDose
- #VPeaks (>xxx dB)
- #VPeaks (>137 dB)
- #VPeaks (>135 dB)

#### US Occupational Health Parameters

- $L_{avRQ}$
- TWA
- $TWA_v$
- DoseRQ
- ProjDoseRQ

#### General Parameters

- Overload in %
- Start time
- Stop Time
- Elapsed Time (excl. pauses)

#### Special Parameters

- $L_{XIeq}$  (also called  $L_{XIIm}$ )
- $L_{YIeq}$
- $L_{AIeq}-L_{Aeq}$
- $L_{AFTeq}$  (also called  $L_{AFIm5}$ )
- $L_{AFTeq}-L_{Aeq}$
- SIL (average of  $L_{Zeq}$  octave band levels: 500 Hz, 1000 Hz, 2000 Hz and 4000 Hz)<sup>a</sup>
- PSIL (average of  $L_{Zeq}$  octave band levels: 500 Hz, 1000 Hz and 2000 Hz)<sup>a</sup>

- SIL3 (average of  $L_{Zeq}$  octave band levels: 1000 Hz, 2000 Hz and 4000 Hz)<sup>a</sup>
- $L_{Weq}(f1-f2)$  (average of power values for  $L_{Weq}$  frequency bands from f1 Hz to f2 Hz)<sup>a</sup>

Statistics to Calculate Percentile Levels and Std.Dev.

Spectrum Parameters<sup>a</sup>

- $L_{Weq}$
- $L_{WFmax}$
- $L_{WSmax}$
- $L_{WFmin}$
- $L_{WSmin}$

The Statistics can be logged in Periodic Reports to Calculate Percentile Levels as spectra<sup>a</sup>.

## B.3 Logged Measurement

### B.3.1 For Logging Software BZ-7224 and Enhanced Logging Software BZ-7225

Parameters measured within a logging interval – up to ten (or all) of the following parameters can be logged:

Equivalent Continuous Sound Levels

- $L_{Xeq}$
- $L_{Yeq}$
- $L_{Ceq}-L_{Aeq}$

Sound Exposure Level

- $L_{XE}$
- $L_{YE}$

Peak Sound Level:

- $L_{Vpeak}$

Maximum Time-weighted Sound Levels

- $L_{XFmax}$
- $L_{XSmax}$
- $L_{XImax}$
- $L_{YFmax}$
- $L_{YSmax}$
- $L_{YImax}$

Minimum Time-weighted Sound Levels

---

a. These parameters require license for BZ-7223 and measurement of spectra.

- $L_{XFmin}$
- $L_{XSmin}$
- $L_{XImin}$
- $L_{YFmin}$
- $L_{YSmin}$
- $L_{YImin}$

#### US Occupational Health Parameters

- $L_{avRQ}$

#### Special Parameters

- $L_{XIeq}$  (also called  $L_{XIIm}$ )
- $L_{YIeq}$
- $L_{AIEq}$ - $L_{Aeq}$
- $L_{AFTeq}$  (also called  $L_{AFIm5}$ )
- $L_{AFTeq}$ - $L_{Aeq}$
- SIL (average of  $L_{Zeq}$  octave band levels: 500 Hz, 1000 Hz, 2000 Hz and 4000 Hz)<sup>a</sup>
- PSIL (average of  $L_{Zeq}$  octave band levels: 500 Hz, 1000 Hz and 2000 Hz)<sup>a</sup>
- SIL3 (average of  $L_{Zeq}$  octave band levels: 1000 Hz, 2000 Hz and 4000 Hz)<sup>a</sup>
- $L_{Weq}(f1-f2)$  (average of power values for  $L_{Weq}$  frequency bands from f1 Hz to f2 Hz)<sup>a</sup>

Voltage updated at approx. 5 s intervals and logged with Logging Period intervals

- Trig. Input Voltage (requires Trigger Input is set to *Voltage for Monitoring*)

The following parameters are available per set of logged parameters

- Overload in %
- Start time
- Stop Time
- Elapsed Time (excl. pauses)

The Statistics can be logged to calculate Percentile Levels and Std.Dev. per logging interval.

Up to three (or all) of the following Spectrum parameters can be logged and displayed on the spectrum display<sup>a</sup>

- $L_{Weq}$
- $L_{WFmax}$
- $L_{WSmax}$
- $L_{WFmin}$
- $L_{WSmin}$

The Statistics can be logged in Periodic Reports to Calculate Percentile Levels as spectra<sup>a</sup>.

---

a. These parameters require license for BZ-7223 and measurement of spectra.

## B.4 Logged (100 ms) Measurement

### B.4.1 For Logging Software BZ-7224 and Enhanced Logging Software BZ-7225

The following Broadband parameters can be logged every 100 ms

- $L_{Aeq}$
- $L_{AF}$
- $L_{AS}$

## B.5 Instantaneous Measured Parameters (available at any time)

Instantaneous Time-weighted Sound Levels

- $L_{XF}$
- $L_{XS}$
- $L_{XI}$
- $L_{YF}$
- $L_{YS}$
- $L_{YI}$

Sound Pressure Levels (maximum time-weighted sound levels once per second)

- $L_{XF(SPL)}$
- $L_{XS(SPL)}$
- $L_{XI(SPL)}$
- $L_{YF(SPL)}$
- $L_{YS(SPL)}$
- $L_{YI(SPL)}$

Peak Sound Levels (maximum peak sound level once per second)

- $L_{Vpeak,1s}$

Voltage updated at approx. 5 s intervals

- Trig. Input Voltage (requires Trigger Input is set to *Voltage for Monitoring*)

Instantaneous Measured Spectra:<sup>a</sup>

- $L_{WF}$
- $L_{WS}$

---

a. These parameters require license for BZ-7223 and measurement of spectra.

### B.5.1 Processed Parameters for Display Only

If Statistics are available, then Std.Dev. and 7 percentile levels can be calculated and displayed: *LXN1* or *LXUN1* to *LXN7* or *LXUN7*.

If spectral statistics are available, then 7 percentile levels as spectra can be calculated and displayed: *LWUN1* to *LWUN7*.

If  $L_{Weq}$  spectrum is available, then NC, NC Decisive Band, NR, NR Decisive Band, RC, RC Classification, NCB, NCB Classification can be calculated and displayed.

If  $L_{Weq}$  1/3-octave spectrum is available, then Loudness and Loudness Level can be calculated and displayed.

### B.5.2 Relationship Between Setup and Measurement Parameters

The measurement parameters are measured in accordance with the setup parameters. The following tables describe the relationship between the setup and measurement parameters:

**Table B.1** General Parameters

Parameter	LXeq	LXE	LXleq	LAFTeq	LVpeak	TVpeak	LXYmax	LXYmin
Sound Field Correction	•	•	•	•	•	•	•	•
Windscreen Correction	•	•	•	•	•	•	•	•
Extended Low Frequency	•	•	•	•	•	•	•	•
Broadband (excl. Peak)	•	•	•	A			•	•
Broadband Peak					•	•		

**Table B.2** Noise Indicators and Statistics

Parameter	$L_{day}$	$L_{evening}$	$L_{night}$	$L_{den}$	$L_{dn}$	LXYN
Sound Field Correction	•	•	•	•	•	•
Windscreen Correction	•	•	•	•	•	•
Extended Low Frequency	•	•	•	•	•	•
Broadband (excl. Peak)	A	A	A	A	A	•

**Table B.2** (Cont.) Noise Indicators and Statistics

Parameter	L <sub>day</sub>	L <sub>evening</sub>	L <sub>night</sub>	L <sub>den</sub>	L <sub>dn</sub>	LXYN
Broadband Statistics based on						•
Percentile N%						•
Day Start	•		•	•		
Evening Start	•	•		•		
Night Start		•	•	•		
Evening Penalty				•		
Night Penalty				•		

**Table B.3** Occupational Health Parameters

Parameter	L <sub>ep,d</sub>	L <sub>ep,d,v</sub>	E	Dose	ProjDose	#VPeaks (>NNNdB)	LavRQ	TWA	TWA <sub>v</sub>	Dose-RQ	Proj-DoseRQ
Sound Field Correction	•	•	•	•	•	•	•	•	•	•	•
Wind-screen Correction	•	•	•	•	•	•	•	•	•	•	•
Extended Low Frequency	•	•	•	•	•	•	•	•	•	•	•
Broadband (excl. Peak)	A	A	A	A	A		A	A	A	A	A
Broadband Peak						•					
Exposure Time	•	•									
Reference Time		•							•		
Threshold Level				•	•			•	•	•	•

**Table B.3** Occupational Health Parameters

Parameter	$L_{ep,d}$	$L_{ep,d,v}$	E	Dose	ProjDose	#VPeaks (>NNNdB)	LavRQ	TWA	TWA <sub>v</sub>	Dose- RQ	Proj- DoseRQ
Criterion Level				•	•					•	•
Peaks-Over Level						•					
Exchange Rate for Lav							•	5	5	•	•
Time Weighting for Lav							•	S	S	•	•

## B.6 Reverberation Time Measurement

### B.6.1 For Reverberation Time Software BZ-7227

The following parameters are measured or calculated at each position:

#### Decays

- Reverberation Decays (for each frequency band from *Bottom Frequency* to *Top Frequency*) based on sampling  $L_{Zeq}$  spectra at 5 ms intervals

#### Spectra

- T30 Spectrum
- T20 Spectrum
- EDT Spectrum

#### Single Number Values

- T30 (*Wide Band RT Bottom – Wide Band RT Top*)
- T20 (*Wide Band RT Bottom – Wide Band RT Top*)
- EDT (*Wide Band RT Bottom – Wide Band RT Top*)

The following parameters are calculated for the room as an average of all positions:

#### Decays

- Ensemble Averaged Reverberation Decays (for each frequency band from *Bottom Frequency* to *Top Frequency*)

#### Spectra

- T30 Spectrum
- T20 Spectrum

- EDT Spectrum

**Single Number Values**

- T30 (*Wide Band RT Bottom – Wide Band RT Top*)
- T20 (*Wide Band RT Bottom – Wide Band RT Top*)
- EDT (*Wide Band RT Bottom – Wide Band RT Top*)

Quality Indicators are given for each frequency band, in each reverberation time spectrum, and for each reverberation time spectrum.

**Instantaneous Measured Parameters (available at any time)**

Instantaneous Time-weighted Sound Levels:

- $L_{AF}$
- $L_{CF}$

Instantaneous Measured Spectra:

- $L_{ZF}$



# Appendix C

## Instrument Parameters

This appendix describes the parameters that are common to all users of the instrument.

### C.1 Current Transducer

**Table C.1** *Current Transducer parameters*

Parameter	Values	Comment
<i>Transducer Used</i> (i.e., connected to <i>Top Socket</i> ) (Ch. 1 for Type 2270)	Name and serial number of transducer	This parameter selects which transducer is connected to the <i>Top Socket</i> (displayed in <b>Setup – Input</b> (Type 2250) or <b>Setup – Input Ch. 1</b> (Type 2270) and at the top of <b>Transducers</b> database)
<i>Transducer Used</i> (i.e., connected to <i>Top Socket</i> ) (Ch. 2 for Type 2270)	Name and serial number of transducer	Type 2270 only. This parameter selects which transducer is connected to the <i>Top Socket</i> Ch. 2 (displayed in <b>Setup – Input Ch. 2</b> and at the top of <b>Transducers</b> database)
<i>Transducer Used</i> (i.e., connected to <i>Rear Socket</i> ) (Ch. 1 for Type 2270)	Name and serial number of transducer	Type 2270 only. This parameter selects which transducer is connected to the <i>Top Socket</i> Ch. 1 (displayed in <b>Setup – Input Ch. 1</b> and at the top of <b>Transducers</b> database)

**Table C.1** Current Transducer parameters

Parameter	Values	Comment
<i>Transducer Used</i> (i.e., connected to <i>Rear Socket</i> ) (Ch. 2 for Type 2270)	Name and serial number of transducer	This parameter selects which transducer is used at <i>Rear Socket</i> (displayed in <b>Setup – Input</b> (Type 2250) or <b>Setup – Input Ch. 2</b> (Type 2270) and at the top of <b>Transducers</b> database)
<i>Input</i> (no text is displayed)	<i>Top Socket</i> <i>Rear Socket</i>	Determines whether the input is taken from the top socket, or the rear socket ('Input' on connector panel). Connect your transducer to this socket. This parameter is displayed in <b>Setup – Input</b> and on the second line of the <b>Transducers</b> database

## C.2 Transducer Database

The Transducer Database consists of a Transducer Setup and a Calibration History – one set per transducer.

### C.2.1 Transducer Setup

**Table C.2** Transducer Setup parameters

Parameter	Values	Comment
<i>Serial No.</i>	Text string	Insert unique ID for transducer
<i>Name</i>	Text string	Insert name of transducer to display together with serial number
<i>Description</i>	Text string	Insert description of transducer
<i>Preamplifier ID No.</i>	Text string	Document the preamplifier here
(Transducer) <i>Family</i>	<i>Microphone</i>	(Transducer) <i>Family</i> is set to <i>Microphone</i> in this version of the software

**Table C.2** (Cont.) Transducer Setup parameters

Parameter	Values	Comment
<i>Microphone Type</i>	4189 4190 4191 4193 4950 4952 0° 4952 90° 4184-A 0° 4184-A 90° Unknown	If microphone is a known type, then the rest of the parameters of the transducer are set automatically. <i>Sound Field Correction</i> and <i>Windscreen Correction</i> are possible for known microphone types only. <b>Note:</b> Microphone Types 4952 and 4184-A can be used with 0° reference direction or 90° reference direction. For unknown microphone types, set the rest of the parameters – no corrections can be made for unknown types <b>Note:</b> If you are unsure which microphone to use, please refer to Overview of Type 2250/2270 Microphones, which gives an overview of the microphones, where they can be used and their specifications
<i>Nominal Sensitivity</i>	Double	Set automatically for known type, otherwise set the nominal sensitivity of the microphone in mV/Pa
<i>Sensitivity Unit</i>	mV/Pa	Can only be mV/Pa
<i>Polarization Voltage</i>	Yes No	Set to <i>No</i> if microphone is prepolarized, otherwise set to <i>Yes</i> for polarization voltage of 200 V ( <i>Top Socket</i> only). Set automatically for known <i>Microphone Type</i>
<i>Free-field Type</i>	Yes No	Set to <i>Yes</i> for Free-field types, otherwise set to <i>No</i> . Set automatically for known <i>Microphone type</i>
<i>Capacitance</i>	Double	Insert capacitance of microphone in pF. Set automatically for known <i>Microphone type</i>
<i>CCLD</i>	Yes No	Set to <i>Yes</i> for CCLD (Constant Current Line Drive) transducers, otherwise set to <i>No</i> . Set automatically for known <i>Microphone Type</i> . <b>Note:</b> Set Input to <i>Rear Socket</i> . The CCLD input at the Rear socket will automatically be enabled when selecting a transducer requiring CCLD input

## C.2.2 Calibration History

**Table C.3** Calibration History parameters

Parameter	Values	Comment
1. Calibration date & Time	YYYY-MM-DD hh:mm:ss	Initial
1. Sensitivity	Double	Initial mV/Pa
1. Preamplifier ID No.	Text string	Initial
1. User	Text string	Initial
1. Input	Top Socket, Rear Socket	Initial
1. Calibration Type	External, Internal	Initial
1. Calibrator Serial No.	Text string	Initial
1. Comment	Text string	Initial
1. Analyzer Serial No.	Text string	Initial
2. Calibration date & Time	YYYY-MM-DD hh:mm:ss	
2. Sensitivity	Double	
2. Preamplifier ID No.	Text string	
2. User	Text string	
2. Input	Top Socket, Rear Socket	
2. Calibration Type	External, Internal	
2. Calibrator Serial No.	Text string	
2. Comment	Text string	
2. Analyzer Serial No.	Text string	
:	:	:
N. Calibration date & Time	YYYY-MM-DD hh:mm:ss	Current
N. Sensitivity	Double	Current
N. Preamplifier ID No.	Text string	Current
N. User	Text string	Current
N. Input	Top Socket, Rear Socket	Current
N. Calibration Type	External, Internal	Current
N. Calibrator Serial No.	Text string	Current
N. Comment	Text string	Current
N. Analyzer Serial No.	Text string	Current

## C.3 Calibration Setup

**Table C.4** Calibration Setup parameters

Parameter	Values	Comment
(Sound Level) <i>Calibrator</i>	4231 Custom	Select which calibrator to use
<i>Calibration Level</i> (for Custom Sound Level Calibrator)	0.00 to 200.00 dB re 20 µPa	Set calibration level for custom calibrator
Serial No. for 4231	Text string	Serial number will be documented in calibration history
Serial No. for Custom Sound Level Calibrator	Text string	Serial number will be documented in calibration history
(Acceleration) <i>Calibrator</i>	4294 Custom	Select which calibrator to use
<i>Calibration Level</i> (for custom Acceleration Calibrator)	0 to 1000 m/s <sup>2</sup>	Set calibration level for custom calibrator. <b>Note:</b> When displaying acceleration levels as dB the reference will be 1 µm/s <sup>2</sup>
Serial No. for 4294	Text string	Serial number will be documented in calibration history
Serial No. for Custom Acceleration Calibrator	Text string	Serial number will be documented in calibration history
Calibration Level (for Direct Input)	0 to 1000 V	Set calibration level for Direct Input <b>Note:</b> When displaying voltage levels as dB the reference will be 1 µV
Serial No. for Direct Input Calibrator	Text string	Serial number will be documented in calibration history

## C.4 Type 2250/2270 Microphones

**Table C.5** Overview of Type 2250/2270 Microphones

Micro-phone	Application	Optimised For	Dynamic Range <sup>a</sup>	Free-field ±1 dB Frequency Range	Free-field ±2 dB Frequency Range
4184-A	Weatherproof 200 V	Free-field 0° or 90° and Diffuse-field	28.8 – 150 dB(A)	3.6 Hz – 15.0 kHz <sup>b</sup> 6.6 Hz – 22.4 kHz	2.5 Hz – 16.5 kHz <sup>b</sup> 5.6 Hz – 22.4 kHz
4189	Standard Prepolarized	Free-field and Diffuse-field	16.6 – 140 dB(A)	6.8 Hz – 22.4 kHz <sup>b</sup> 7.8 Hz – 22.4 kHz	4.2 Hz – 22.4 kHz <sup>b</sup> 6.3 Hz – 22.4 kHz

**Table C.5** (Cont.) Overview of Type 2250/2270 Microphones

Microphone	Application	Optimised For	Dynamic Range <sup>a</sup>	Free-field ±1 dB Frequency Range	Free-field ±2 dB Frequency Range
4190	Standard 200 V	Free-field and Diffuse-field	16.5 – 140 dB(A)	4.0 Hz – 22.4 kHz <sup>b</sup> 6.7 Hz – 22.4 kHz	2.6 Hz – 22.4 kHz <sup>b</sup> 5.7 Hz – 22.4 kHz
4191	High Levels 200 V	Free-field and Diffuse-field	25.6 – 152 dB(A)	3.6 Hz – 22.4 kHz <sup>b</sup> 6.6 Hz – 22.4 kHz	2.5 Hz – 22.4 kHz <sup>b</sup> 5.6 Hz – 22.4 kHz
4193	Low Frequencies	Low Frequencies	23.2 – 152 dB(A) 44.6 – 152 dB(Z) <sup>b</sup>	0.56 Hz – 22.4 kHz <sup>b</sup> 6.3 Hz – 22.4 kHz	0.45 Hz – 22.4 kHz <sup>b</sup> 5.5 Hz – 22.4 kHz
4950	Standard Prepolarized	Free-field and Diffuse-field	16.4 – 140 dB(A)	4.3 Hz – 19.0 kHz <sup>b</sup> 6.3 Hz – 19.0 kHz	3.2 Hz – 20.0 kHz <sup>b</sup> 5.6 Hz – 20.0 kHz
4952	Outdoor Prepolarized	Free-field 0° or 90° and Diffuse-field	20.0 – 141 dB(A)	4.3 Hz – 14.0 kHz <sup>b</sup> 6.3 Hz – 14.0 kHz	3.2 Hz – 14.5 kHz <sup>b</sup> 5.6 Hz – 14.5 kHz

a. From the typical total inherent noise level for the microphone and Type 2250/2270, to the overload limit for a sinusoidal signal at 1 kHz.

b. Type 2250/2270 *Extended Low Frequency* set to *On*.

Detailed specifications for the analyzer together with the different microphones are available. Please contact your local Brüel & Kjær representative if you need more information.

The analyzer has correction filters to optimise the frequency response of each microphone. The relevant filter is automatically applied when you select the microphone for input, be it via the top socket, or the rear input socket.

#### **Note for Microphone Type 4193:**

Microphone Type 4193 is delivered with the UC-0211 Adaptor. Do not use UC-0211 together with the analyzer. The adaptor can be used together with other equipment to extend the low frequency range, but when using Microphone Type 4193 together with the analyzer the correction filters are used to do the job. This results in a better dynamic range specification. Using the Adaptor together with the analyzer results in a corrupted low-frequency response and a reduced sensitivity of approximately 16 dB

# Appendix D

## Preferences

This appendix describes the unique set of parameters that can be set for each user on the instrument.


### D.1 Display Settings

**Table D.1** *Display Settings*

Parameter	Values	Comment
<i>Colour Scheme</i>	Arcade Alhambra Indoor Outdoor Night	Select between five colour schemes, one optimised for outdoor use in bright conditions and one optimised for very dark conditions

For each colour scheme select the optimum choice of brightness for the traffic light and whether the backlight for the pushbuttons should be on or off. In addition, you can also change the number of decimal places on your dB results readout.

Parameter	Values	Comment
<i>Traffic Light Brightness</i>	Off Low Normal High	
<i>Key Backlight</i>	Off On	

Parameter	Values	Comment
Backlight Brightness	Minimum Level 2 Level 3 Level 4 Level 5 Maximum	Select backlight brightness using the backlight icon  at the bottom of the screen. Maximum level uses the most power
Number of Decimal Places	1 2	Select how many decimal places you want in the dB results readout, 1 or 2. <b>Note:</b> The setting is for display only and has no effect on the measurement precision or resolution

## D.2 Power Settings

**Table D.2** Power Settings

Parameter	Values	Comment
Turn off Backlight	After 10 sec. After 30 sec. After 1 min. After 2 min. After 5 min. Never	Select optimum value for full backlight on (brightness determined by Backlight Brightness)
Turn off Backlight Dim	After 1 min. After 2 min. After 5 min. After 10 min. After 30 min. Never	Select optimum value for <i>Backlight Dim</i> period running after the <i>Backlight On</i> period has elapsed. The Backlight Brightness will be at Minimum in the dim period. When <i>Backlight Dim</i> period has elapsed, the backlight is switched off
Standby	After 1 min. After 2 min. After 5 min. After 10 min. After 30 min. Never	Select optimum value for 'on' period before the instrument is set automatically to standby

**Note:** If the instrument is externally powered, then the settings will be ignored.



## D.3 Regional Settings

**Table D.3** Regional Settings

Parameter	Values	Comment
<i>Decimal Point</i>	. ,	Select your preferred decimal point
<i>Date separator</i>	- / .	Select your preferred date separator
<i>Date Format</i>	yyyy-MM-dd HH:mm:ss dd-MM-yyyy HH:mm:ss MM-dd-yyyy HH:mm:ss yy-MM-dd hh:mm:ss XX dd-MM-yy hh:mm:ss XX MM-dd-yy hh:mm:ss XX	Select your preferred date format: HH = 24 hour, hh = 12 hour, XX = AM or PM
<i>Time Zone</i>	GMT-12 GMT GMT+13	Select the time zone of your region
<i>Language</i>	English, ...	A number of different languages are available for your the analyzer. Select your preferred language – if it is not in the list, then it might be available for installation using BZ-5503
<i>Keyboard</i>	United Kingdom, ...	33 different keyboards. Select your preferred keyboard

## D.4 Storage Settings

**Table D.4** Storage Settings

Parameter	Values	Comment
<i>Auto-naming of Projects</i>	Yes No	Select Yes for automatically naming projects from the start date of the project as Year, Month, Date in the format YYMMDD, (e.g., 051112 as 2005, November 12th) or No for using the name defined in the <i>Project Name Prefix</i> parameter
<i>Project Name Prefix</i>	Text string	Prefix for automatically generated project name. Maximum 8 characters

## D.5 Headphone Settings

**Table D.5** Headphone Settings

Parameter	Values	Comment
<i>Listen to signal</i>	No Input X-weighted Input C-weighted Input Z-weighted	<p>In addition to the commentary annotations, you can listen to the input signal for monitoring purposes.</p> <p>Select one of the A-weighted, B-weighted, C-weighted or Z-weighted signals.</p> <p><b>Note 1:</b> The frequency weighting of the signal you listen to can be selected independently of the frequency weighting of the measurement, the signal at the output socket and the signal used for sound recording</p> <p><b>Note 2:</b> X = frequency weighting A or B. 'A' requires that the <i>Broadband (excl. Peak)</i> parameter is set to AC or AZ. 'B' requires that the <i>Broadband (excl. Peak)</i> parameter is set to BC or BZ</p>
<i>Automatic Gain Control</i>	On Off	<p>To ease identification of sound sources, the gain can be automatically adjusted to keep the average level within a 40 dB range. When playing back the recorded signal, you will then hear clearly the whole signal content, whether the level has been 20 dB or 140 dB.</p> <p>Set <i>Automatic Gain Control</i> to <i>On</i> to convert the signal at the headphone output.</p> <p>Set <i>Automatic Gain Control</i> to <i>Off</i> for listening to the signal with a fixed gain</p>

Parameter	Values	Comment
<i>Gain for Meas.Signal</i>	– 80.0 dB to 60.0 dB for Automatic Gain Control set to Off  – 60.0 dB to 0.0 dB for Automatic Gain Control set to On	Key in a gain value (0.1 dB resolution) for the measurement input signal. Use '@' to assign the new value for immediate response at the output – or use the up/down navigation keys to increment/decrement the value in steps of 1 dB. <b>Note:</b> 0 dB means 1 V output for 1 V input ( <i>Automatic Gain Control</i> set to <i>Off</i> )
<i>Gain for Annotations</i>	– 94.5 dB to 0.0 dB	Key in a gain value (1.5 dB resolution) for the commentary annotations. Use '@' to assign the new value for immediate response at the output – or use the up/down navigation keys to increment/decrement the value in steps of 1.5 dB

## D.6 Users

**Table D.6** *Users*

Parameter	Values	Comment
<i>Multi User</i>	Disabled Enabled	Set to <i>Enabled</i> to enable the Multi-user facility, set to <i>Disabled</i> if you are the only user

## D.7 Printer Settings

**Table D.7** Printer Settings

Parameter	Values	Comment
<i>Printer Used</i>	None MPS PCL PCL Inkjet PCL Laser	Select <i>None</i> if you don't have a printer connected to the analyzer. Select <i>MPS</i> for a Mobile Pro Spectrum thermal printer from AM-TECH. Select <i>PCL</i> for a printer accepting PCL printer language. Select <i>PCL Inkjet</i> for an inkjet printer accepting PCL language. Select <i>PCL Laser</i> for a laser printer accepting PCL language. See Chapter 8 for more details
<i>Top Margin</i>	0.0 to 20.0 cm	Use <i>Top Margin</i> to position the print on the paper
<i>Left Margin</i>	0.0 to 20.0 cm	Use <i>Left Margin</i> to position the print on the paper
<i>Width</i>	1.0 to 15.0 cm	Use <i>Width</i> to set the size of the print
<i>Height</i>	1.4 to 20.0 cm	Use <i>Height</i> to set the size of the print

## D.8 Modem/DynDNS Settings

**Table D.8** Modem/DynDNS Settings

Parameter	Values	Comment
<i>Modem</i>	Disabled Auto Answer GPRS/EDGE/HSPA Dialup	Set to <i>Disabled</i> if you don't have a modem connected - or when you physically connect or disconnect the modem. Set to <i>Auto Answer</i> if you have a analogue (PSTN) , a GSM or a GPRS/EDGE/HSPA modem connected to the Compact Flash socket and you want to dial up the instrument for connection by using BZ-5503. Set to <i>GPRS/EDGE/HSPA Dialup</i> if you have a <i>GPRS/EDGE/HSPA</i> modem connected to the Compact Flash socket and you want the instrument to be connected to the Internet. See Chapters 7 and 8 for more details

Parameter	Values	Comment
<i>Extra Init.</i>	<string of characters>	If your modem needs extra commands for initialization, they can be defined in Extra Init.
<b>Dialup Networking</b>		
<i>APN</i>	<string of characters>	Access Point Name is an identifier required by the Network Operator. Examples are 'Internet', 'public' and 'www.vodafone.de'. Please consult your network operator
<i>User Name</i>	<string of characters>	Set User Name as required by your network operator. Typically this can be left empty
<i>Password</i>	<string of characters>	Set Password as required by your network operator. Typically this can be left empty
<i>Domain</i>	<string of characters>	Set Domain as required by your network operator. Typically this can be left empty
<b>DynDNS</b>		
<i>Active</i>	No Yes	Set to Yes to make the update of IP-address at DynDNS.com active. Set to No if you don't use this service.
<i>Hostname</i>	<string of characters>	Set the Hostname defined in your account at DynDNS.com
<i>User Name</i>	<string of characters>	Set the User Name for your account at DynDNS.com.
<i>Password</i>	<string of characters>	Set the Password for your account at DynDNS.com. The password will be displayed until you press Enter, then it will be replaced by '****'

## D.9 Network Settings

**Table D.9** Network Settings

Parameter	Values	Comment
<i>Location</i>	Up to 20 characters	Use <i>Location</i> to specify a text identifying the analyzer or location of the analyzer. The Location will be displayed on the PC together with the serial number of the analyzer when browsing for analyzers in BZ-5503, and when connected using the on-line display
<i>Network Connection</i>	None,  CF Socket,  LAN Socket	Set to <i>None</i> if no Ethernet CF Card is present in CF Socket (Type 2250 only)  Set to <i>CF Socket</i> if Ethernet CF Card is present in CF Socket  Set to <i>LAN Socket</i> if you want to use the built-in LAN Socket (Type 2270 only)
<i>Set IP Address</i>	Automatically, Manually	Set to Automatically to obtain an IP address from a DHCP server - if no server available, then a Link-local address will be set  Set to Manually to set the IP address, Subnet Mask and Default Gateway manually
<i>IP Address</i>	xxx.xxx.xxx.xxx	The IP address of the instrument  Selectable if Set IP Address = Manually
<i>Subnet Mask</i>	xxx.xxx.xxx.xxx	The Subnet Mask combined with the IP address identifies the network segment the analyzer is on  Selectable if Set IP Address = Manually
<i>Default Gateway</i>	xxx.xxx.xxx.xxx	Address to a gateway for routing to another network  Selectable if Set IP Address = Manually
<i>Set DNS</i>	Automatically, Manually	Set to Automatically to automatically obtain the DNS Set to Manually to set the DNS
<i>Preferred DNS</i>	xxx.xxx.xxx.xxx	The IP address of the primary DNS server

Parameter	Values	Comment
<i>Alternate DNS</i>	xxx.xxx.xxx.xxx	The IP address of the secondary DNS server
<i>Name</i>	Up to 32 characters	Name (SSID) of network you want to connect to. Update the name either by entering a name directly, or by tapping on the Available Networks and selecting a name from the list
<i>Security</i>	Open Shared WPA PSK WPA2 PSK	Select security as required by the network Open and Shared are for WEP (Wired Equivalent Privacy) Infrastructure mode WPA PSK is for WPA (Wi-Fi Protected Access) with Pre-shared Key (also called Personal mode) WPA2 PSK – WPA2 is an enhanced version of WPA
<i>Encryption</i>	None WEP Enabled AES Enabled TKIP Enabled	Select Encryption as required by the network None is for Open security WEP Enabled is for Open and Shared security. AES and TKIP Enabled are for WPA PSK and WPA2 PSK
<i>Encryption Key</i>	Up to 32 characters	Insert the encryption key required by the network. The key will be displayed until you press <i>Enter</i> , then it will be replaced by '****'

## D.10 Notification Settings

**Table D.10** Notification settings

Parameter	Values	Comment
Notification	Disabled, E-mail, SMS	Set to <i>Disabled</i> to disable notifications. Set to <i>E-mail</i> to send notifications as e-mail when an alarm occurs. Set to <i>SMS</i> to send notifications as SMS when an alarm occurs. See Section 8.4 for the list of alarm types
<b>Alarm Settings</b>		
Internal Battery	High, Low, Critical	A notification is sent, if internal battery enters the set state

Parameter	Values	Comment
Trigger Input Voltage	–20.0 V to +20.0 V	A notification is sent, if voltage level at trigger input drops to or below this setting. <b>Note:</b> This alarm requires Setup, Input, Trigger Input is set to Voltage for Monitoring
Disk Space	0 % to 100 %	A notification is sent, if free disk space drops to or below this setting
Level Trigger Events	Disabled Enabled	A notification is sent, if Level Trigger (specified in Setup, Level Trigger in Logging or in Setup, Triggers in Enh. Logging) is exceeded
<b>E-Mail</b>		
To	<string of characters>	The e-mail address of the recipient of the e-mail. Example: recipient@gmail.com
SMTP	<string of characters>	Name of SMTP (Simple Mail Transfer Protocol) Server. *) Examples: gmail: smtp.gmail.com hotmail: smtp.live.com
SMTP Port	0 to 65535	Port used by SMTP Server. *) Typically this is 25, but for gmail and hotmail it is 587
SSL/TLS	No, Yes	Secure Socket Layer/Transport Layer Security. Set to Yes if required by e-mail provider *), otherwise No. SSL/TLS is required by gmail and hotmail
Account	<string of characters>	The account is typically the e-mail address of the e-mail used for sending the e-mail. *) Examples: myaddress@gmail.com myaddress@hotmail.com
User Name	<string of characters>	The User Name is typically the e-mail address of the e-mail used for sending the e-mail. *) Examples: myaddress@gmail.com myaddress@hotmail.com If the e-mail account is part of a domain, then it might be necessary to specify the domain as part of the user name Example: Domain\UserName
Password	<string of characters>	Insert the password required for the account. *) The password will be displayed until you press <Enter>, then it will be replaced by ****



Parameter	Values	Comment
<b>SMS</b>		
Active	No, Yes	Set to <i>Yes</i> to activate the first phone number, otherwise set to <i>No</i>
Name	<string of characters>	Name identifying first phone number
Phone Number	Number	The number of the first SMS recipient
Active	No, Yes	Set to <i>Yes</i> to activate the second phone number, otherwise set to <i>No</i>
Name	<string of characters>	Name identifying second phone number
Phone Number	Number	The number of the second SMS recipient

\*) Please consult your e-mail provider

## D.11 Web Server Settings

**Table D.11** Web Server Settings Parameters

Parameter	Values	Comment
<i>Web Server</i>	Disabled Enabled	Set Web Server to <i>Enabled</i> to enable display and control of the analyzer on a web page - see Section 7.4. Set to <i>Disabled</i> to disable the web server functionality
<i>User Name</i>	<string of characters>	Define the user name required for full access to the web page, i.e., view and control of the instrument. Default: admin
<i>Password</i>	<string of characters>	Define the password required for full access to the web page. The password will be displayed until you press <Enter>, then it will be replaced by '****'. Default: admin
<i>Guest Login Required</i>	Yes No	Set to <i>Yes</i> to require user name and password for login to the guest web page. Set to <i>No</i> for free access to the guest web page.
<i>Guest User Name</i>	<string of characters>	Define the user name required for limited access to the web page, i.e. view of the instrument only Default: guest

Parameter	Values	Comment
<i>Guest Password</i>	<string of characters>	Define the password required for limited access to the web page. The password will be displayed until you press <Enter>, then it will be replaced by '****' Default: guest

**Note:** The web server parameters are common to all users of the instrument.

## D.12 Image Settings (Type 2270 only)

**Table D.12** *Image Settings (Type 2270 only)*

Parameter	Values	Comment
<i>Image Control</i>	View Finder Manual Event	Set to View Finder to use the View Finder together with the Manual Event key to capture an image. The image can then be saved or rejected after capture  Set to Manual Event to capture and save the image each time you press the Manual Event key


# Appendix E

---

## Glossary

<b>A-weighting filter:</b>	Frequency weighting corresponding approximately to the 40 dB equal loudness curve, that is to say, the human ear's response at low to medium sound levels. It is by far the most commonly applied frequency weighting and is used for all levels of sound.
<b>B-weighting filter:</b>	Frequency weighting corresponding approximately to the 70 dB equal loudness curve, that is to say, the human ear's response at medium sound levels.
<b>C-weighting filter:</b>	Frequency weighting corresponding to the 100 dB equal loudness curve, that is to say, the human ear's response at fairly high sound levels. Mainly used when assessing peak values of high sound pressure levels.
<b>Criterion Level:</b>	Criterion Level is the maximum averaged sound level allowed for an 8-hour period. Used for calculation of Dose, ProjDose, DoseUQ and ProjDoseUQ, where U = F or S and Q = 4, 5 or 6 dB.
<b>Decibel (dB):</b>	The measurement unit for expressing the relative intensity of sound. A direct application of linear scales (in Pa) to the measurement of sound pressure leads to large and unwieldy numbers. As the ear responds logarithmically rather than linearly to stimuli, it is more practical to express acoustic parameters as a logarithmic ratio of the measured value to a reference value. This logarithmic ratio is called a decibel or dB. The advantage of using dB can be clearly seen in the below illustration. Here, the linear scale with its large numbers is converted into a manageable scale from 0 dB at the threshold of hearing (20 $\mu$ Pa) to 130 dB at the threshold of pain (~100 Pa).

Our hearing covers a surprisingly wide range of sound pressures – a ratio of over a million to one. The dB scale makes the numbers manageable

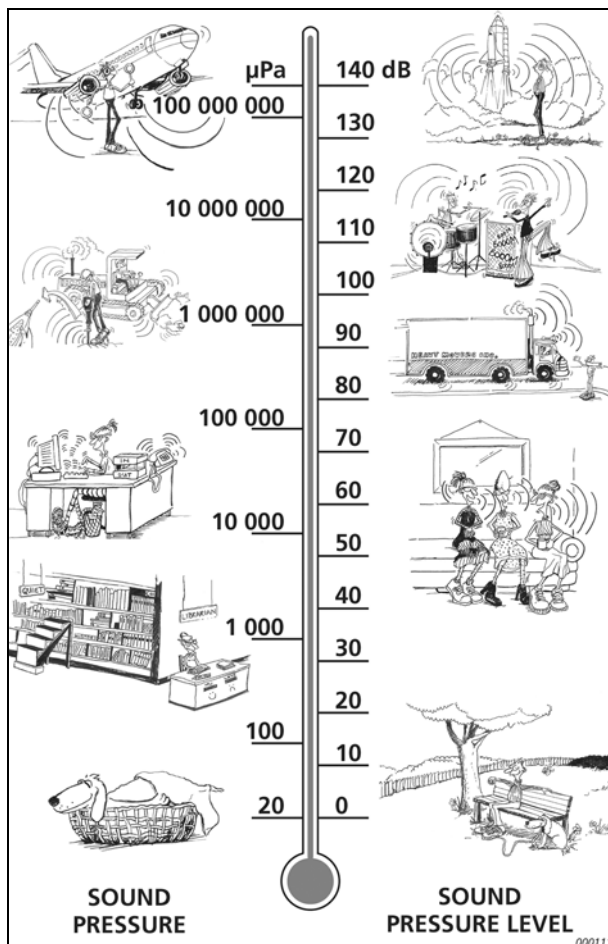

#### Dose, ProjDose:

The Noise Dose is the equivalent averaged A-weighted Noise Level (taking the Threshold Level into account) using Exchange Rate = 3 for an 8 hour period (reference duration) relative to the maximum allowed (the Criterion Level) – expressed in percentage.


**Example:** If the Criterion Level is 85 dB and a person is exposed to a constant sound pressure level of 85 dB for 8 hours, then the Dose is 100%. A constant level 88 dB results in a Dose of 200% and a constant level of 82 dB results in a dose of 50%.

The Projected Dose is the Noise Dose based on measurement duration less than 8 hours, assuming the sound level for the remaining time stays the same.

<b>DoseUQ, ProjDoseUQ:</b>	<p>The Noise Dose is the averaged A-weighted Noise Level (taking the Threshold Level into account) with Time Weighting U = F or S and Exchange Rate Q = 4, 5 or 6 for an 8 hour period (reference duration) relative to the maximum allowed (the Criterion Level) – expressed in percentage.</p> <p><b>Example:</b> If the Criterion Level is 90 dB and a person is exposed to a constant average sound level of 90 dB for 8 hours with Time Weighting S and Exchange Rate 5, then the DoseS5 is 100%. A constant level 95 dB results in a DoseS5 of 200% and a constant level of 85 dB results in a doseS5 of 50%.</p> <p>The Projected DoseS5 is the Noise DoseS5 based on measurement duration less than 8 hours, assuming the sound level for the remaining time stays the same.</p>
<b>E:</b>	<p>Sound Exposure is the energy of the A-weighted sound calculated over the measurement time. The unit is Pa<sup>2</sup>h.</p>
<b>Exchange Rate:</b>	<p>Exchange Rate is the increase in noise level that corresponds to a doubling of the noise level. The Exchange Rate is used for calculation of L<sub>avUQ</sub>, TWA, TWA<sub>v</sub>, DoseUQ and ProjDoseUQ, where U = F or S and Q = Exchange Rate: 4, 5 or 6 dB.</p> <p><b>Note:</b> L<sub>Aeq</sub> is always based on an Exchange Rate = 3.</p>
<b>Exposure Time:</b>	<p>Exposure Time is the actual time that a person is exposed to noise during a workday. Used for calculation of L<sub>ep,d</sub> and L<sub>ep,d,v</sub>.</p>
<b>‘F’, ‘S’ or ‘I’ time weighting:</b>	<p>A time weighting (sometimes called a ‘time constant’) defines how the exponential averaging in root-mean-square (RMS) measurement is done. It defines how the heavily fluctuating sound pressure variations are smoothed or averaged to allow useful readings. The standards define three time weightings: F (Fast), S (Slow) and I (Impulse). Most measurements are carried out using the ‘F’ time weighting, which uses a 125 ms time constant.</p>
<b>Frequency:</b>	<p>The number of pressure variations per second. Frequency is measured in hertz (Hz). The normal hearing for a healthy young person ranges from approximately 20 Hz to 20000 Hz (20 kHz).</p>
<b>Frequency weighting:</b>	<p>Our hearing is less sensitive at very low and very high frequencies. In order to account for this, weighting filters can be applied when measuring sound. The most commonly used weighting is the ‘A-weighting’, which approximates the human ear’s response to low – medium noise levels.</p>

### Frequency weighting (cont.):

A 'C-weighting' curve is also used, particularly when evaluating very loud or low-frequency sounds.

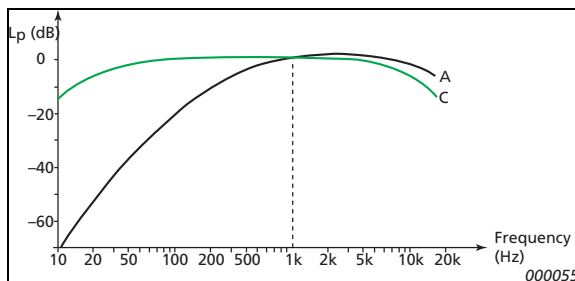

### $L_{AE}$ :

Sound Exposure Level – sometimes abbreviated SEL and sometimes called Single Event Level, is the Sound Exposure expressed as a level. The letter 'A' denotes that the A-weighting has been included.

### $L_{Aeq}$ :

A widely used noise parameter that calculates a constant level of noise with the same energy content as the varying acoustic noise signal being measured. The letter 'A' denotes that the A-weighting has been included and 'eq' indicates that an equivalent level has been calculated. Hence,  $L_{Aeq}$  is the A-weighted equivalent continuous noise level.

### $L_{AF}$ :

The instantaneous time-weighted sound level,  $L_p$ , is available at any time. 'A' denotes that the A-frequency weighting is used. 'F' denotes that the Fast time-weighting is used.

### $L_{AFmax}$ :

Maximum time-weighted sound level measured with A-frequency weighting and Fast time weighting. It is the highest level of environmental noise occurring during the measurement time. It is often used in conjunction with another noise parameter (for example  $L_{Aeq}$ ) to ensure a single noise event does not exceed a limit.

### $L_{AFmin}$ :

Minimum time-weighted sound level measured with A-frequency weighting and Fast time weighting. It is the lowest level of environmental noise occurring during the measurement time (time resolution is 1 s).

### $L_{AF90.0}$ :

The noise level exceeded for 90% of the measurement period with A-frequency weighting and Fast time weighting. The level is based on statistical analysis of a parameter (LAF or LAS) sampled at 10 ms intervals into 0.2 dB wide classes. The percentage is user-definable.

An analysis of the statistical distributions of sound levels is a useful tool when assessing noise. The analysis not only provides useful information about the variability of noise levels, but is also prominent in many standards as the basis for assessing background noise. For example,  $L_{AF90}$  is used as an indicator of background noise levels while  $L_{AF10}$  or  $L_{AF5}$  are sometimes used to indicate the level of noise events.

$L_{A90.0}$ :	The noise level exceeded for 90% of the measurement period with A-frequency weighting. The level is based on statistical analysis of $L_{Aeq}$ sampled at 1 s intervals into 0.2 dB wide classes. The percentage is user-definable.
$L_{AF(SPL)}$ :	The Sound Pressure Level (maximum time-weighted sound level during the latest second) is available at any time. 'A' denotes that the A frequency weighting is used. 'F' denotes that the Fast time-weighting is used.
$L_{AFTeq}$ :	Taktmaximal Mittelungspegel as defined by DIN 45641. $L_{AFTeq}$ has also been called $L_{AFm5}$ or $L_{ATm5F}$ .
$L_{avUQ}$ :	Average Sound Level with Time Weighting U = F or S and Exchange Rate Q = 4, 5 or 6. This is a widely used occupational health noise parameter in the USA, corresponding to the $L_{Aeq}$ used otherwise.
$L_{Cpeak}$ :	Maximum peak sound level during a measurement. 'C' denotes that the C frequency weighting is used. Used for assessing possible damages to human hearing caused by very high short-duration noise levels.
$L_{Cpeak,1s}$ :	Maximum peak sound level during the latest second – is available at any time. 'C' denotes that the C frequency weighting is used. Used for monitoring the peak levels.
$L_{den}$ , $L_{day}$ , $L_{evening}$ , $L_{night}$ , $L_n$ :	<p>Noise Indicators for describing the annoyance due to exposure to environmental noise.</p> <p><math>L_{den}</math> (day-evening-night noise indicator), <math>L_{day}</math> (day-noise indicator), <math>L_{evening}</math> (evening-noise indicator) and <math>L_{night}</math> (night-noise indicator) are defined by the European Union. They are based on <math>L_{Aeq}</math> over different periods: <math>L_{day}</math> over the day period from 7:00 to 19:00, <math>L_{evening}</math> over the evening period from 19:00 to 23:00, <math>L_{night}</math> over the night period from 23:00 to 7:00 and <math>L_{den}</math> over the whole day with a penalty of 5 dB(A) for the evening period and a penalty of 10 dB(A) for the night period.</p> <p><math>L_{dn}</math> (day-night level) is defined by the Environmental Protection Agency (EPA) in the USA as a descriptor of noise level based on <math>L_{Aeq}</math> over the whole day with a penalty of 10 dB(A) for night time noise (from 22:00 to 7.00).</p>
$L_{ep,d}$ :	<p>The Daily Noise Exposure Level is the average A-weighted noise exposure level for a nominal 8-hour working day. <math>L_{ep,d}</math> is also known as <math>L_{EX,8h}</math>. <math>L_{ep,d}</math> is calculated from the measured <math>L_{AE}</math>, the setting of Exposure Time and a Reference time of 8 h. Used for assessing the noise exposed to a worker during a working day – in accordance with ISO standards.</p> <p>The European Noise at Work Directive 2003/10/EC defines the following limit and action values:</p> <p>Exposure Limit Value: 87 dB</p> <p>Upper Exposure Action Value: 85 dB</p> <p>Lower Exposure Action Value: 80 dB.</p>

<b><math>L_{ep,d,v}</math>:</b>	The Daily Noise Exposure Level for a user-defined reference period. $L_{ep,d,v}$ is calculated from the measured $L_{AE}$ and the settings of Exposure Time and Reference Time. Used, for example, for calculating a Weekly Noise Exposure Level, by setting the Reference Time to 40 h.
<b>Loudness, Loudness Level:</b>	Loudness is the subjective judgement of intensity of a sound by humans. Loudness depends upon the sound pressure and frequency of the stimulus and whether the sound field is diffuse- or free-field. The unit is the Sone. Loudness Level = $10 \cdot \log_2(\text{Loudness}) + 40$ . The unit is the Phone. The Zwicker method of calculation of stationary loudness based on 1/3-octave measurements is described in ISO 532 -1975, Method B.
<b>#CPeaks(&gt;140dB):</b>	The number of 1 s peak sound levels over 140 dB. 'C' denotes that the C frequency weighting is used. Three peak counters are available – one with a user-definable value (set to 140 dB by default), one with 137 dB and one with 135 dB value. Used for assessing possible damage to human hearing caused by very high, short-duration, noise levels. The European Noise at Work Directive 2003/10/EC defines the following limit and action values: Limit Value: 140 dB corresponding to 200 Pa Upper Action Value: 137 dB corresponding to 140 Pa Lower Action Value: 135 dB corresponding to 112 Pa.
<b>NC, NC Decisive Band:</b>	Noise Criteria is used to rate steady-state continuous noise in a room from all types of equipment, including fans, mixing boxes, diffusers, etc. The rating is determined from 1/1-octave $L_{Zeq}$ spectra compared with NC curves (based on equal loudness curves). The NC rating is the value of the highest NC curve 'touched' by the measured spectrum. The Decisive Band is the frequency band 'touching' the NC curve. Defined by ASHRAE (American Society of Heating, Refrigerating and Air-Conditioning Engineers)
<b>NCB, NCB Classification, Rumble, Hiss, RV:</b>	Balanced Noise Criteria is a refinement of NC. The rating is determined by the SIL value and gets the Classification (R) for Rumble, if the spectrum is rich in low frequency sound (16 Hz to 500 Hz), the Classification (H) for Hiss, if the spectrum is rich in high frequency sound (1 kHz to 8 kHz), or the Classification (RV) for Vibration and Rattle if the spectrum at low frequencies (16 Hz to 63 Hz) is likely to produce audible rattling in lightweight building elements. The details of the NCB rating are defined in ANSI S12.2-1995
<b>NR, NR Decisive Band:</b>	Noise Rating rates noise levels at public or private indoor areas. The rating is determined from 1/1-octave $L_{Zeq}$ spectra compared with NR curves (based on equal loudness curves). The NR rating is the value of the highest NR curve 'touched' by the measured spectrum. The Decisive Band is the frequency band 'touching' the NR curve. Defined in ISO R1996(1971)



**Occupational Health Standards:**

Typical Setup Parameter settings for Occupational Health measurements in accordance with various standards:

- OSHA (Occupational Safety and Health Administration) – 29 CFR 1910.95
- MSHA (Mine Safety and Health Administration) – 30 CFR 62.0 UMHPEL
- DOD (Department of Defence) – DoD Instruction 6055.12
- ACGIH (American Conference of Government Industrial Hygienists) – DHHS Pub 98-126
- ISO – UK Noise at Work Regulations SI 1989/1790 amended by SI 1992/2966 and SI 1996/341

See the table below, but please also check your local legislation.

**Table E.1** Occupational Health Setup Parameters and Associated Standards

Setup Parameters	OSHA	MSHA	DOD	ACGIH	ISO
Broadband (excl. Peak)	A	A	A	A	A
Broadband Peak	Z	Z	Z	Z	C
Exposure Time	N/A	N/A	N/A	8:00:00	8:00:00
Reference Time (Preset)	8:00:00	8:00:00	8:00:00	8:00:00	8:00:00
Reference Time (user-definable)	40:00:00	40:00:00	40:00:00	40:00:00	40:00:00
Threshold Level	80	80	80	80	70
Criterion Level	90	90	85	85	85, 90
PeaksOver Level <sup>a</sup>	140	140	140	140	140
Exchange Rate for Lav	5	5	4	N/A	N/A
Weighting for Lav	S	S	S	N/A	N/A

a. This is user-definable – the two other 'PeaksOver Level' parameters are preset to 137 and 135 dB resp.

**Reference Time:**

Reference Time is used for calculation of Sound Exposure Level  $L_{ep,d,v}$  or Time Weighted Average  $TWA_v$  with a reference time other than 8 hours.

**RC, RC Classification, Rumble, Hiss, RV:**

Room Criteria is for rating room noise.

The rating is determined based on the PSIL value and gets the Classification (R) for Rumble, if the spectrum is rich in low frequency sound (16 Hz to 500 Hz), the Classification (H) for Hiss, if the spectrum is rich in high frequency sound (1 kHz to 4 kHz), the Classification (N) for Neutral if it is not (R) or (H), or the Classification (RV) for Vibration and Rattle if the spectrum at low frequencies (16 Hz to 63 Hz) is likely to produce audible rattling in lightweight building elements.

The rating is defined in ANSI S12.2-1995

<b>SIL, PSIL, SIL3:</b>	<p>SIL (Speech Interference Level) is the arithmetic average of the 500 Hz, 1 kHz, 2 kHz and 4 kHz octave band levels.</p> <p>PSIL (Preferred Speech Interference Level) is the arithmetic average of the 500 Hz, 1 kHz and 2 kHz octave band levels.</p> <p>Used for evaluating the interference of noise upon speech communication.</p> <p>SIL3 (Speech Interference Level based on highest 3 octaves) is the arithmetic average of the 1 kHz, 2 kHz and 4 kHz octave band levels.</p> <p><b>Note:</b> Though SIL, PSIL and SIL3 are defined for octave band levels they are also calculated for 1/3-octave band levels by summing the power values in the three bands within each octave before doing the averaging.</p>
<b>Sound:</b>	<p>Any pressure variation that the human ear can detect. Just like dominoes, a wave motion is set off when an element sets the nearest particle of air into motion. This motion gradually spreads to adjacent air particles further away from the source. Depending on the medium, sound extends and affects a greater area (propagates) at different speeds. In air, sound propagates at a speed of approximately 340 m/s. In liquids and solids, the propagation velocity is greater – 1500 m/s in water and 5000 m/s in steel.</p>
<b>Sound level or sound pressure level:</b>	<p>The level in decibels of the pressure variation of a sound. See also <b>decibel</b>.</p>
<b>Std.Dev.</b>	<p>The Std.Dev. is calculated as the Standard Deviation of the noise samples used for statistics. This is either <math>L_{AF}</math> or <math>L_{AS}</math> sampled every 10 ms, or <math>L_{Aeq}</math> sampled every second.</p>
<b>T<sub>Cpeak</sub>:</b>	<p>The time when the peak sound level occurred. 'C' denotes that the C frequency weighting is used.</p>
<b>Threshold Level:</b>	<p>Any sound levels below the threshold level do not contribute to the Dose measurement data. For example, if you set the threshold level to 80, any sound levels below 80 dB are not taking into consideration by the instrument, when it calculates doses and time weighted averages.</p> <p>Used for calculation of Dose, ProjDose, TWA, TWA<sub>v</sub>, DoseSQ, ProjDoseSQ.</p>
<b>TWA:</b>	<p>The Time Weighted Average is the average A-weighted sound level for a nominal 8-hour working day with Time Weighting S and Exchange Rate 5. TWA is calculated from the measured LavS5 (taking Threshold Level into account) and a Reference time of 8 h. Mainly used in the USA for assessing the noise exposure for a worker during a working day.</p>
<b>TWA<sub>v</sub>:</b>	<p>The Time Weighted Average for a user-defined reference period. TWA<sub>v</sub> is calculated from the measured LavS5 (taking Threshold Level into account) and the Reference Time. Used, for example, for calculating a Weekly Time Averaged Level by setting the Reference Time to 40 h.</p>
<b>Z-weighting:</b>	<p>'Zero' frequency weighting is without any frequency weighting, that is, equivalent to Linear, LIN or FLAT.</p>

# Index

---

## Symbols

#CPeaks(>140dB) ..... 250

## Numerics

1/1- or 1/3-octave Frequency Analysis ..... 101  
 4184-A ..... 172, 177  
 4189 ..... 32, 172, 177, 229  
 4190 ..... 172, 177  
 4191 ..... 172, 177, 229  
 4193 ..... 172, 177, 229  
 4950 ..... 172, 177  
 4952 ..... 172, 177, 229

## A

Accept Pushbutton ..... 5  
 Accredited/Traceable Calibration ..... 33  
 Acoustic Calibration ..... 27  
 Adaptor for Standard Tripod ..... 6  
 Add Image to Current Measurement ..... 44  
 Add Note to Current Measurement ..... 44  
 Adding Comments on Profiles ..... 118  
 Adding Notes on Profiles ..... 118  
 Advanced use of the Analyzer  
   Tips and Tricks ..... 67  
 Alhambra Colour Scheme ..... 68  
 Alternative Measurement Method ..... 12  
 Analyzer  
   Assembling the Analyzer ..... 11  
 Annotating a Project ..... 112  
 Annotating Projects and Positions  
   in Reverberation Time Software ..... 143  
 Annotating Sound Categories ..... 117  
 Annotations ..... 23, 59  
   Inserting Annotations Using Explorer ..... 60  
   Inserting Using Explorer ..... 60  
   Viewing or Listening To ..... 59  
 Applications  
   How to Update/Upgrade Them ..... 89  
 Arcade Colour Scheme ..... 68  
 Assembling your Analyzer ..... 3

Auxiliary Parameters  
   in Reverberation Time Software ..... 148  
 Averaging Time ..... 46  
 A-weighting ..... 37  
 A-weighting filter ..... 245

## B

Back-erase Pushbutton ..... 5, 48  
 Backlight Icon ..... 47  
 Bandwidth Parameters ..... 192  
 Basic Principles when using the Analyzer ..... 41  
 Battery Charge Indicator ..... 8, 93  
 Battery Pack ..... 93  
 Battery Pack QB-0061 ..... 11  
 Battery/power Status Icon ..... 8, 47  
 Bottom F. for Special Leq Parameter ..... 192  
 Broadband Frequency Weighting ..... 20  
 Broadband View ..... 19  
 Built-in Help ..... 40  
 B-weighting filter ..... 245  
 BZ-5503 Utility Software  
   for Hand-held Analyzers ..... 40  
 BZ-7222 Sound Level Meter Software ..... 1, 38  
   BZ-7222 Sound Level Meter Software ..... 38  
 BZ-7223 Frequency Analysis Software ..... 1, 39, 101  
 BZ-7224 Logging Software ..... 1, 107  
 BZ-7224 Logging Software Module ..... 39  
 BZ-7225 Enhanced Logging Software ..... 1, 121  
 BZ-7225 Enhanced Logging Software Module ..... 39  
 BZ-7226 Sound Recording Option ..... 1, 16, 39, 127  
 BZ-7227 Reverberation Time Software ..... 1, 40, 137  
 BZ-7231 Tone Assessment Option ..... 1, 16, 40, 157

## C

Calculating the Level Difference Between  
   One Band and the Adjacent Bands ..... 159  
 Calibration ..... 27  
   Acoustic ..... 27  
   Electrical ..... 30  
   History ..... 30

History Parameter .....	230	Copying Jobs/Projects .....	57
Manual .....	30	Cover	
Screen .....	44	Hinged.....	6
Settings .....	29	Criterion Level.....	245
Standard.....	28	Current Transducer Parameter .....	227
Vibration .....	30	C-weighting .....	37
Calibration Interval .....	34	C-weighting filter .....	245
Calibration Reminder.....	33	<b>D</b>	
Calibration Reminder Tab .....	33	Daily CIC Parameter .....	194
Calibration Setup.....	231	Daily Noise Exposure Levels ( $L_{ep,d}$ ) or ( $L_{EX,8h}$ ).....	38
Calibrator		Data Management .....	55
Sound Level .....	27	Data Viewer .....	22
Camera.....	6	Decay Graphs in Reverberation Time Software .....	148
Care, Cleaning and Storage.....	97	Decay Tab in Reverberation Time Software .....	148
Central View Area .....	47	Decibel (dB) .....	245
CF Cards .....	8	Decimal Places	
Character Keyboard .....	51	Number of.....	68, 234
Charge Injection Calibration .....	27, 34, 111, 124	Default Measurement Job/Path	
CIC .....	109	Selecting .....	57
Charge Injection Calibration Parameter .....	194	Definition of Frequency Ranges.....	35, 159
Charging the Battery for the First Time .....	11	Definition of Reverberation Time .....	137
CIC .....	27, 34, 111, 124	Deleting Jobs/Projects .....	57
CIC Ratio .....	34, 35	Description of Inputs/Outputs.....	6
CIC Ref. Date.....	35	Description of Jobs and Projects .....	55
CIC Reference Ratio .....	35	Disconnecting	
CIC Result 1 .....	111, 124	Preamplifier and Measurement Microphone.....	12
CIC Result 2 .....	111	Display	
CIC Result 4 .....	124	Locking.....	54
CIC Results .....	218	Display Colour Schemes.....	68
CIC Theory .....	34	Display Screen.....	5, 45
Cleaning the Instrument .....	97	Display Settings .....	67, 68
Clock Display.....	47	Display Settings Parameter .....	233
Cold Start .....	17	Display Settings Screen.....	68
Colour Schemes.....	68	Displaying Noise Indicators.....	125
Commentary.....	59	Displaying the Frequency Analysis Results .....	102
Commentary Icon .....	46	Displaying the Results	
Commentary Pushbutton.....	5, 23	in Reverberation Time Software .....	144
Comments		Document your Measurement.....	22
Adding on Profiles .....	118	Dose.....	246
Compact Flash (CF) Cards		DoseUQ .....	247
Slot for .....	8	Dual.....	6
Compliance with Standards.....	183	Dual 10-pole Adaptor JP-1041 .....	6
Connecting		Duration Parameter.....	202
Preamplifier and Measurement Microphone .....	12	<b>E</b>	
Connecting a Microphone Extension Cable .....	13	Earphone Socket .....	7
Connector		Economising On Power. ....	72
triaxial LEMO.....	7	Editing Annotations on Profiles .....	118
Connector Panel of Type 2270.....	7	Elapsed Time .....	46
Continuous Logging Parameter.....	122	Enhanced Logging Measurement Screen.....	124
Controlling		Enhanced Logging Project Template.....	16
Measurements .....	47	Enhanced Logging Software BZ-7225 Template ....	167
the Frequency Analysis Measurement.....	102	Enhanced Logging Software Module BZ-7225 .....	39
the Reverberation Time Measurement.....	143		
Conventions Used in this Manual.....	1		

Equivalent Continuous Sound Level.....	37	How to Manage the Project Templates .....	53
Equivalent Continuous Sound Level ( $L_{Aeq}$ ) .....	38	How to Move a License .....	92
Exchange Rate .....	247	How to Update/Upgrade Applications .....	89
Exclude Marker.....	116	How to Use this Manual .....	1
Explorer Screen .....	43	Beginners .....	2
Exposure Time.....	247	Experienced Users .....	2
Extended Low Frequency Parameter .....	187		
Extended Microphone.....	12	<b>I</b>	
External Power Socket .....	8	Icon	
<b>F</b>		Backlight.....	47
f1 Parameter .....	203	Battery/power Status .....	47
f2 Parameter .....	203	Commentary.....	46
Fast Time Weighting.....	37	Help .....	40, 47
FB-0679 Hinged Cover .....	6	Loudspeaker.....	23
First Check Parameter .....	194	Main Menu.....	47
Fourth Check Parameter .....	195	No Windscreen Fitted.....	46
Frequency.....	247	Overload.....	46
Frequency Analysis		Paperclip .....	23, 46
1/1- or 1/3-octave.....	101	Pause .....	46
Displaying the Results.....	102	Power Supply Connected.....	47
Frequency Analysis Project Template .....	16	Running.....	46
Frequency Analysis Software BZ-7223 .....	39, 101	Stopped.....	46
Frequency Weighting.....	37, 247, 248	Text .....	23
Frequency Weighting Parameters .....	191	Windscreen Fitted/Diffuse Field .....	46
Frequency Weightings .....	20	Windscreen Fitted/Free-field .....	46
Full Spectral Stat.		IEC 61672-1 standard.....	11
for Reports Parameter .....	194	Image	
<b>G</b>		Adding to Current Measurement .....	44
General Parameters .....	217	Image Settings (Type 2270 only) .....	244
Generator		Image to Current Measurement .....	24
Setting Up.....	102	Impulse Time Weighting.....	37
Generator Parameters .....	210	Impulse Trigger Parameter.....	197
Glossary.....	245	Impulsive Excitation Method	
<b>H</b>		Reverberation Time.....	140
Hand-held Analyzer .....	38	Impulsive Method .....	142
Handling the Instrument.....	97	Indicator	
Handswitch .....	187	Status .....	5
Hardware Overview .....	10	Indoor Colour Scheme .....	68
Hardware Setup .....	10	Initial Sound Level Meter Screen .....	17
Hardware Version .....	40	Input .....	8, 185
Headphone Settings .....	71	Input 1 .....	8
Headphone Settings Parameter .....	236	Input Ch.2.....	8
Help .....	40	Input for Microphone .....	6
Help Icon.....	40, 47	Input Parameters	
High Frequency Range.....	159	Input Channel 1 for Type 2270.....	189
High Speed USB and LAN Interfaces.....	6	Input Parameters for Type 2250.....	185
Hinged Cover FB-0679.....	6	Input Parameters for Type 2270.....	188, 189
Hiss.....	250, 251	Input Channel 2 for Type 2270.....	190
Hold Off Parameter .....	123, 202	Inserting Annotations Using Explorer .....	60
How Do We Measure Reverberation Time? .....	138	Installing, Updating and Upgrading Applications.....	89
How to Change Parameter Values .....	49	Instantaneous	
How to Install New Applications.....	89	Time-weighted Sound Levels ( $L_{AF}$ ) .....	39, 222
		Instantaneous Measured Parameters .....	39, 222
		Instantaneous Measured Spectra .....	222
		Instantaneous Peak Sound Levels ( $L_{Cpeak,1s}$ ) .....	39

Instantaneous Sound Pressure Level .....	222
Instrument Components .....	3
Instrument Parameters .....	227
Internal Battery Pack .....	6
Interrupted Noise Method .....	142
Reverberation Time .....	138
Introduction .....	1
Introduction to Reverberation Time .....	137
ISO 1996-2, Annex D	
Tone Assessment Calculations .....	158
ISO/EU Occupational Health Parameters .....	216, 219

## J

Jobs .....	55
JP-1041 Dual 10-pole Adaptor .....	6

## L

L <sub>A90.0</sub> .....	249
L <sub>AE</sub> .....	248
L <sub>Aeq</sub> .....	38, 248
L <sub>AF</sub> .....	248
L <sub>AF(SPL)</sub> .....	249
L <sub>AF90.0</sub> .....	248
L <sub>AFmax</sub> .....	248
L <sub>AFmin</sub> .....	248
L <sub>AFTeq</sub> .....	249
LAN Interface .....	6
LAN Socket .....	9
Last Calibration Date .....	33
L <sub>avUQ</sub> .....	249
L <sub>Cpeak</sub> .....	249
L <sub>Cpeak,1s</sub> .....	249
L <sub>day</sub> .....	249
L <sub>den</sub> .....	249
L <sub>den</sub> Periods .....	208
L <sub>ep,d</sub> .....	249
L <sub>ep,d,v</sub> .....	250
L <sub>eq</sub> .....	37
Level Average	
with Exchange Rates 4, 5 or 6 (L <sub>avS5</sub> ) .....	38
Level Trigger 1 Parameters .....	202
Level Trigger 2 Parameters .....	203
Level Trigger 3 Parameters .....	203
Level Trigger 4 Parameters .....	203
Level Trigger Parameters .....	200
Level Triggers Parameter .....	123
L <sub>evening</sub> .....	249
Licenses	
How to Move Them .....	92
Listening to Annotations .....	59
L <sub>n</sub> .....	249
L <sub>night</sub> .....	249
Locking the Pushbuttons and Display .....	54
Logged Broadband (100 ms) Parameters .....	196
Logged Broadband Parameters .....	197

Logged Measurement Parameters	
Broadband Parameters .....	222
Equivalent Continuous Sound Levels .....	220
For Enhanced Logging Software BZ-7225/220, 222	
For Logging Software BZ-7224 .....	220, 222
Maximum Time-weighted Sound Levels .....	220
Minimum Time-weighted Sound Levels .....	220
Parameters Available Per Logging Interval .....	221
Parameters to be Logged and	
Displayed on Spectrum Display .....	221
Sound Exposure Level .....	220
Special Parameters .....	221
Logged Spectrum Parameters .....	198
Logging .....	107
Logging and Enhanced Logging Software .....	129
Logging Period Parameter .....	194
Logging Project Template .....	16
Logging Software BZ-7224 .....	107
Logging Software BZ-7224 Template .....	166
Logging Software Module BZ-7224 .....	39
Loudness .....	105, 186, 188, 250
Loudness Level .....	105, 250
Loudness Parameter .....	186, 188
Loudspeaker Icon .....	23
Low Frequency Parameter .....	187
Low Frequency Range .....	159
L <sub>Weq</sub> .....	220, 221, 223
L <sub>Weq</sub> (f1-f2) .....	198, 220, 221
LWUN1 Parameter .....	223
LWUN7 Parameter .....	223
L <sub>xE</sub> .....	198
L <sub>xeq</sub> (f1-f2) .....	105, 123
LXN1 Parameter .....	223
LXN7 Parameter .....	223
LXUN1 Parameter .....	223
LXUN7 Parameter .....	223
L <sub>YE</sub> .....	198
L <sub>Ze</sub> .....	105

## M

Main Menu Icon .....	5, 47
Making a Measurement .....	16
Making Good Measurements .....	11
Making your First Measurement .....	15
Manual Event Marker .....	116
Manual Event Pushbutton .....	4
Map Based Measurement Parameter .....	195
Maps in Reverberation Time Software .....	150
Markers .....	116, 199, 204
Marking Sound Categories .....	115
Maximum Time-weighted Sound Levels	
(L <sub>AFmax</sub> ) .....	38
Measurement	
Documenting .....	22
Making your First .....	15

Saving.....	21	Navigation Pushbuttons .....	5
Measurement Control Parameters		Navigation Pushbuttons and Stylus	
for BZ-7222 to BZ-7225 .....	193	Use of .....	48
for Reverberation Time Software BZ-7227 .....	195	NC .....	105, 250
Measurement Feedback in the Status Field .....	19	NC Decisive Band .....	250
Measurement Microphone .....	4	NC Decisive Band Parameter .....	223
Connecting .....	12	NC Parameter .....	223
Disconnecting .....	12	NCB.....	105, 250
Mounting the .....	11	NCB Classification.....	250
Placing the .....	11	NCB Classification Parameter .....	223
Measurement Mode .....	20	NCB Parameter .....	223
Measurement Mode Parameter .....	193	Network Settings .....	77, 240
Measurement Parameters .....	215	Parameters.....	78
Measurements		New Applications	
Preparing them .....	80	How to Install Them.....	89
Recalling .....	57	Next Calibration Date .....	33
with Graphical Position Management .....	150	Night Colour Scheme .....	68
Measuring for Convenience.....	14	No Windscreen Fitted/Diffuse Field Icon .....	46
Measuring Tone Assessment .....	164	No Windscreen Fitted/Free-field Icon .....	46
Metadata .....	59, 60, 84, 85, 86, 173	Noise Curve .....	105
Microphone		Noise Dose (Dose, DoseS5) .....	38
Measurement.....	4	Noise Indicators.....	217
Secondary .....	5	Noise Parameters.....	105
Type 4189.....	6	Nominal Sensitivity .....	32
Microphone Extension Cable.....	6	Note.....	23
Connecting .....	13	Notes .....	60
Microphone for commentary .....	5	Adding on Profiles .....	118
Microphone Input .....	6	Adding to Current Measurement .....	44
Microphone Settings .....	32	Notes Screen.....	85
Microphone Type .....	32	Notification settings .....	241
Microphone Type Parameter .....	229	NR .....	105, 250
Microphones		NR Decisive Band .....	250
Connecting Two Microphones .....	13	NR Decisive Band Parameter .....	223
Type 2250/2270.....	231	NR Parameter .....	223
Mid Frequency Range .....	159	Number Keyboard .....	50
Minijack Earphone Socket .....	7	Number of Decimal Places.....	68, 234
Minimum Time-weighted Sound Levels.....	216	Number of Peaks (#CPeaks(>140 dB)) .....	38
(L <sub>AFmin</sub> ) .....	38		
Modem Settings.....	73, 244	<b>O</b>	
Modem/DynDNS Settings.....	238	Occupational Health Parameters .....	208
Mounting the Analyzer		Occupational Health Standards.....	251
Onto the Tripod Extension Stem and Tripod .....	12	On-screen Feedback.....	48
Mounting the Measurement Microphone .....	11	Operating Mode.....	17
Mounting the Microphone		Ordering Information .....	181
On the Microphone Holder and Tripod .....	13	Organising Measurements .....	55
Mounting the Outdoor Microphone Kit .....	13	Outdoor Colour Scheme.....	68
Mounting the Windscreen .....	12	Outdoor Microphone Kit	
Mounting Thread for Wrist strap .....	6	Mounting.....	13
Moving Jobs/Projects.....	57	Output Socket.....	7
Multi-user Facility .....	72	Output Socket Signal Parameters .....	207
		Overload Icon .....	46
<b>N</b>		Overload Parameter .....	198
Navigating in Jobs .....	56	Overview of Multi-user Facility .....	72
Navigation Principles		Overview of Options Available	
Star Navigation Concept.....	41	During a Typical	

Enhanced Logging Task .....	106, 122, 154
During a Typical Logging Task .....	108
Overview of Quality Indicators .....	106, 154, 168
Overview of Smiley Indicators .....	168
and Associated Remedies .....	168
Overview of Smileys .....	106
Overview of Type 2250/2270 Microphones .....	231
Overview Tab in Reverberation Time Software .....	144

## P

Paperclip Icon .....	23, 46
Parameters in Network Settings .....	78
Pasting Jobs/Projects .....	57
Pause Icon .....	46
PC Icon .....	
Icon PC .....	46
Peak Sound Levels .....	222
Peak Sound Levels ( $L_{Cpeak}$ ) .....	38
Percentile Levels ( $L_{AF90.0}$ ) .....	38
Performing a Manual CIC Calibration .....	35
Periodic Report Parameters .....	
Equivalent Continuous Sound Level .....	218
General Parameters .....	219
Maximum Time-weighted Sound Levels .....	218
Minimum Time-weighted Sound Levels .....	219
Peak Sound Level .....	218
Sound Exposure Level ( $L_{AE}$ ) .....	218
Special Parameters .....	219
Spectrum Parameters .....	220
Periodic Reports .....	121, 218
Placing the Measurement Microphone .....	11
Point and Shoot .....	15
Polarization Voltage .....	32
Polarization Voltage Parameter .....	229
Post-processing and Reporting .....	63
Post-processing Parameters .....	212, 213
Power Off .....	25
Power Settings .....	68
Power Settings Parameter .....	234
Power Settings Screen .....	69
Power Supply Connected Icon .....	8, 47
Power-on Pushbutton .....	5
Preamplifier .....	4
Connecting .....	12
Disconnecting .....	12
Preferences .....	233
Preferences Screen .....	44, 67
Preparing your Measurements .....	80
Printer Setting Parameters .....	240
Printer Settings .....	238
Profile View .....	112, 114, 124
ProjDose .....	246
ProjDoseUQ .....	247
Project Name .....	55
Project Template .....	16

Enhanced Logging .....	16
Frequency Analysis .....	16
Logging .....	16
Sound Level Meter .....	16
Project Template Bar .....	46
Projects .....	55
PSIL .....	105, 198, 252
Pushbutton Usage .....	50
Pushbuttons .....	
Accept .....	5
Back-erase .....	5, 48
Commentary .....	5, 23
Locking .....	54
Manual Event .....	4
Navigation .....	5
Power-on .....	5
Reset .....	47
Reset Measurement .....	5
Save .....	21, 48
Start/Pause .....	5, 18, 48
Store .....	5

## Q

Quality Indicators in .....	
Reverberation Time Software .....	154
Quick Start Guide .....	15

## R

RC .....	105, 251
RC Classification .....	251
RC Classification Parameter .....	223
RC Parameter .....	223
Rear Socket .....	32, 92, 185, 228
Recalibration of Battery Charge Indicator .....	93
Recalling Measurements .....	57
Recalling Saved Measurements .....	168
Recording Sound .....	112
Reference Time .....	251
Regional Settings .....	70
Regional Settings Parameter .....	235
Regional Settings Screen .....	70
Reminder Pop-up .....	34, 36
Repair .....	97
Report Period Parameter .....	122, 194
Reset Button .....	8
Reset Measurement Pushbutton .....	5
Reset Options .....	94
Reset Pushbutton .....	47
Result Display .....	
Tone Assessment .....	164
Result Selector .....	124
Re-using Setups from Projects .....	59
Reverberation Time .....	16
Impulsive Excitation Method .....	140
Interrupted Noise Method .....	138



Reverberation Time Definition .....	137	Shortcut Bar .....	47
Reverberation Time Introduction .....	137	SIL .....	105, 198, 252
Reverberation Time Project Template .....	16	SIL3 .....	105, 198, 252
Reverberation Time Software		SLM - Sound Level Meter .....	37
Decay Tab .....	148	Slot for Compact Flash (CF) Cards .....	8
Overview Tab .....	144	Slot for Secure Digital (SD) Cards .....	9
Spectrum Tab .....	146	Slow Time Weighting .....	37
Reverberation Time Software BZ-7227 .....	40	Small Tripod .....	12
Rumble .....	250, 251	Smiley's	
Running Icon .....	46	Tone Assessment .....	167
RV .....	250, 251	Smileys .....	106
<b>S</b>		Software Version .....	40
Save Project Data at Parameter .....	122	Sound .....	252
Save Pushbutton .....	21, 48	Sound Calibrator .....	27, 28
Save your Measurement .....	21	Sound Category .....	115
Saved Measurement		Sound Exposure (E) .....	38
Viewing .....	21	Sound Exposure Level ( $L_{AE}$ ) .....	38
Saving and Recalling Results		Sound Field Correction .....	185
with Reverberation Time Software .....	155	Sound Level .....	252
Saving Frequency Analysis Results .....	106	Sound Level Calibration .....	27
Saving Your Measurement .....	57	Sound Level Meter (SLM) .....	37
Screen		Sound Level Meter Project Template .....	15, 16, 17
Display .....	5, 45	Setting .....	17
SD Cards .....	9	Sound Level Meter Screen	
SDHC Memory Card .....	9	Initial .....	17
Second Check Parameter .....	194	Sound Level Meter Software BZ-7222 .....	38
Secondary Microphone .....	5	Sound Pressure Level .....	39, 252
Secure Digital (SD) Cards		Sound Recording .....	127, 143, 164
Slot for .....	9	Sound Recording Option BZ-7226 .....	16, 39, 127
Secure Digital High Capacity Memory Card .....	9	Sound Recording Parameters .....	204
Selecting Default Measurement Job/Path .....	57	Special Parameters .....	217
Selecting the Tone Assessment Option .....	160	Specifications .....	169
Service Agreement .....	98	1/3-octave Based Tone Assessment	
Service and Repair .....	97	(Together with BZ-7223/24/25 Only) .....	180
Set the Sound Level Meter Project Template .....	17	2250 Enhanced Logging Software BZ-7225 .....	175
Setting up a Tone Assessment Measurement		2250 Frequency Analysis Software BZ-7223 .....	174
using the Default Setup .....	163	2250 Logging Software BZ-7224 .....	175
Setting up a Tone Assessment Measurement Manually		2250 Reverberation Time Software BZ-7227 .....	177
ISO 1996-2, Annex D .....	162	2250 Sound Level Meter Software BZ-7222 .....	172
Italian Law .....	162	FFT Based Tone Assessment	
Setting up the Analyzer .....	37	(Together with BZ-7230 Only) .....	179
Setting up the Generator .....	102	Sound Recording Option BZ-7226 .....	176
Setting up the Instrument		Tone Assessment Option BZ-7231 .....	179
for Enhanced Logging .....	122	Type 2250/2270 Platform .....	170
for Frequency Analysis .....	101	Utility Software,	
for Logging .....	108	Hand-held Analyzers BZ-5503 .....	180
for Reverberation Time Measurements .....	141	Spectrum Graphs in	
for use with Frequency Analyzer		Reverberation Time Software .....	146
Project Template .....	127	Spectrum View .....	103
for use with Sound Level Meter Template .....	127	SpectrumTab in Reverberation Time Software .....	146
Setting up the Instrument for		Standard Calibration .....	28
Tone Assessment .....	160	Standards .....	11
Setup Parameters .....	185	Standby Mode .....	16, 68, 69
Setup Screen .....	43	Star Navigation Concept .....	41
		Start Duration Parameter .....	202

Start Level Parameter .....	202
Start Slope Parameter .....	202
Start Time Parameter .....	202
Start/Pause Pushbutton .....	5, 18, 48
Statistics Parameter .....	192, 197
Statistics to Calculate Percentile Levels .....	217, 220
Status Codes	
Tone Assessment .....	167
Status Field .....	46, 113
Status Field in Reverberation Time Software .....	144
Status Indicator .....	5
Stop Duration Parameter .....	203
Stop Level Parameter .....	202
Stop Time Parameter .....	202
Stopped Icon .....	46
Storage Settings Parameter .....	70, 235, 236
Storage Settings Screen .....	71
Store Pushbutton .....	5
Storing the Instrument .....	97
Stylus .....	5
Stylus Usage .....	50
Switching Off .....	25
Switching On .....	16
Synchronize with Clock Parameter .....	201

## T

Tables in Reverberation Time Software .....	145
$T_{Cpeak}$ .....	252
Template .....	16
Template Explorer .....	45
Text Icon .....	23
Theory of CIC .....	34
Third Check Parameter .....	194
Threshold Level .....	252
Time for Peak Sound Levels ( $T_{Cpeak}$ ) .....	38
Time Weighted Average (TWA) .....	38
Time Weightings .....	37, 247
Timed Measured Parameters .....	38
Timer Event Parameter .....	204
Timer Period Parameter .....	201
Timer setup .....	45, 87
Timer Trigger Parameter .....	123
Tone Assessment	
According to ISO 1996-2, Annex D .....	158
According to Italian Law .....	160
Measuring .....	164
Result Display .....	164
Smiley's .....	167
Status Codes .....	167
Tone Assessment Option BZ-7231 .....	16, 40, 157
1/3-octave Method .....	157
Top Freq. for Special Leq Parameter .....	192
Top Socket .....	5, 6
Total Measurement Parameters	
Equivalent Continuous Sound Level .....	216

For Enhanced Logging Software BZ-7225 .....	216
For Frequency Analysis Software BZ-7223 .....	216
For Logging Software BZ-7224 .....	216
For Sound Level Meter Software BZ-7222 .....	216
Maximum Time-weighted Sound Levels .....	216
Peak Sound Level .....	216
Sound Exposure Level ( $L_{AE}$ ) .....	216
Spectrum Parameters .....	217
Statistics to Calculate Percentile Levels	
as spectra .....	218
Total Parameter .....	111, 124
Touch Screen .....	94
Traffic Light .....	48
Transducer Database .....	31
Transducer Parameters .....	228
Transducer Setup .....	228
Transducers Screen .....	44
Transferring Data to Your PC .....	61
triaxial LEMO connector .....	7
Trigger Input .....	7
Trigger Parameter .....	201, 202, 203
Trigger Parameters .....	201
Triggers Parameter .....	123
Tripod Adaptor UA-1673 .....	6
Tripod Extension Stem .....	12
Tripod Mounting Thread .....	5
Tripod UA-0587 .....	12
Troubleshooting .....	92
Battery Pack .....	93
Recalibration of Battery Charge Indicator .....	93
Reset Options .....	94
SD and CF Cards .....	93
Touch Screen .....	94
Turn Off Backlight .....	68
Turn Off Backlight Dim .....	68
TWA .....	252
$TWA_v$ .....	252
Type 2250	
Input Parameters .....	185
Type 2250 Hand-held Analyzer .....	1
Type 2250/2270 Microphones .....	231
Type 2270	
Camera .....	6
Connecting Two Microphones .....	13
High Speed USB and LAN Interfaces .....	6
Image Settings .....	244
Input Parameters .....	188
Input Parameters Channel 1 .....	189
Input Parameters for Channel 1 .....	189
Input Parameters for Channel 2 .....	190
Type 2270 Hand-held Analyzer .....	1
Type 4189 Microphone .....	6

## U

UA-1673 Adaptor for Standard Tripod .....	6
---	---

US Occupational Health Parameters....	217, 219, 221
USB Interface .....	6
USB interface.....	76
USB Interface Socket .....	6
Use of	
Pushbuttons for Controlling Measurements.....	47
Stylus and Navigation Pushbuttons .....	48
Users Parameter.....	237
Utility Software	
for Hand-held Analyzers BZ-5503 .....	40

## V

Version of Hardware and Software .....	40
View and Control Instrument Web Page.....	66
View Instrument Web Page .....	65
Viewer .....	57
Viewing Data.....	57
Viewing or Listening to Annotations.....	59
Viewing the Saved Measurement .....	21

## W

Warm Start.....	17
-----------------	----

Web Page for Viewing and Control .....	66
Web Server Settings Parameters.....	243
Welcome .....	1
What is a Project Template? .....	16
What is a Sound Level Meter? .....	37
What is the Hand-held Analyzer? .....	38
What is Utility Software	
for Hand-held Analyzers BZ-5503? .....	40
Windscreen	
Mounting.....	12
Windscreen Correction Parameter .....	186
Windscreen Fitted/Diffuse Field Icon.....	46
Windscreen Fitted/Free-field Icon .....	46
Wrist Strap Mounting Thread .....	6

## X

XL View .....	19
---------------	----

## Z

Z-weighting.....	37
------------------	----





---

HEADQUARTERS: Brüel & Kjær Sound & Vibration Measurement A/S · DK-2850 Nærum · Denmark  
Telephone: +45 7741 2000 · Fax: +45 4580 1405 · [www.bksv.com](http://www.bksv.com) · [info@bksv.com](mailto:info@bksv.com)

Local representatives and service organisations worldwide

