USER'S MANUAL

7" CAR BACK-VIEW TFT-LCD MONITOR



Please read this Manual thoroughly before using product and keep it well for future reference

7" MP5 Rearview Monitor

I. Appearance Function



- 1. power switch
- 2. V1/V2/MP5
- 3. Simulation
- 4. Menu

- 5. Simulation
- 6. Remote window
- 7. SP/MMC/MS Card
- 8. USI interfaces

Composite key function---form

Number	AV1/AV2.tete	MP5state	MP5state
3	Simulation volume-	choose turn down	
4	Menu	Enter/menu	back(long presses)
5	Simulation volume+	Choose turn right	

Above did not specify" long presses" signs are normal operation

II.Method of line



III. Main parameter and function

*Screen size:7" (16: 9)

*Resolution: 480 (W) *RGB*234 (H)

*System: PAL/NTSC (Auto)

*Power: DC12V

*power consumation:6W

*Video:dual video input, it automatically appears
On Blue screen when there is no video signal


*MP5state read SD/MMC/MS Card or USB

(Support formait include: MPEG1/2/4, MP3, WMA, JPEG, BMP, GIP, TIFF, AVI, RM, RMVB)

- *FM launch:menu enter into FM, send should send the video signal out to different Frequency (87.2-88.7MHz)
- *Rear watching: when reverse the car the rearview image appears onto the screen autoralically
- *Operation style:remot control and keystroke

9 Back

IV.Remote

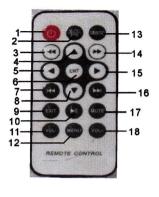

l power switch	10 Player/Pause	
2 V1/V2/MP5 switch	11 Volume-/Simulation -	
3 Fast reverse	12 Menu	
4 UP	13 Set	
5 Left	14 Fast forward	
6 Enter	15 Right	
7 Last one	16 next one	
8 Down	17 Mute	

18 Volume+/Simulation+

V.MP5 operating instruction



Figure 1

Figure 2



- 1. By v1/2 switch button to switch to the MP5 status, MP5 interface As Figure 1, USB r SP Play Will appear on the USB or SD 2. Using a remote control oconfirm (ENT) button or panel on the menu (M) button to enter the SB or SD, The player interface, in Figure 2. 3. Enter submenu to cnoole your favorite program by pressing direction button On remote control or imulation+/-button on machine panel. And enter play machine by pressing (ENT) button on remote control or (M) button on machine Panel
- 4. You can choose varous function button on play window by pressing direction Button on remote control or simulation+/-button on machne panel, when it's playing picture, audio or video. (you have to keep pushingV1/V2change burron for a white to make function buttons show up, when it's playing picture or video), you can active the function button by pressing(ENT) button on remote control or (M) button on machine panel.

5. After entering player, pressing exit button on remote control or keep pressing (M) button on machine panel to exit player. Continue last operation or back to last menu, go directly to the main window.

- * Our products is a kind ofbuilt in speaker, another kind is to radio equipment by FM audio transmitter. We have adjusted the FM transmitter frequency to 87.5 MHz before ship it out. if you want to change frequency, go to the menu and adjust it. Through the launch FM radio equipment required to use control the volume.
- ●Our products can support many kinds of pictures and audio vieo format, but
- for some video which can not play, you can change the format before play
- it.Relevant for-mat changing tool you can download it from our company
- website(www.dinghangdianzi.com)