

User manual





03-2013





Fax: 0031-43-3632922 Email: info@rema.eu

www.rema.eu





DELIVERY

A. Fixed portal crane , type PKVA , consisting of several parts :

- 1. right leg with two wheels mounted
- 2. left leg with two wheels mounted
- 3. 1 top beam, with CE nameplate capacity and sticker with the bolt holes in the required bolts, nuts and lock washer for assembly .
- 4. 2 uprights.

B. Electrical

if applicable, electrical equipment and the installation instructions of this installation are supplied seperately in a box.

2. INSTALLATION INSTRUCTIONS

Before starting the installation it must be checked for completeness.

Care should be taken that the correct or supplied mounting bolts are used for mounting properly. These bolts must be tightened to the torque specified in the DIN regulations. Before taking the gantry crane in use it must be checked for completeness and correct installation.

3. MAINTENANCE INSTRUCTIONS

Our cranes are virtually maintenance free.

However, one has the bolts regularly to check for completeness and torque (at least 1 time a year) and certified by an expert according to the gazette Labour P115. Tap at least 1 time per year.

4. OPERATING INSTRUCTIONS

In case of using the crane's maximum load: **DO NOT EXCEED**.

- One should , perform without the permission of the manufacturer, no changes or welding on the gantry crane, if this does happen, all liabilities in relation to the manufacturer or supplier expire.
- One can only operate the gantry if one is adequately instructed and have read the operating instructions carefully.

Note: These instructions are specific to the gantry crane . When used in conjunction with a hoist or other tool , one should need to consult the necessary additional information on this subject.











www.rema.eu