

Apple Cooker Pot

Part No. 38251EX
Revised June 1996

Instruction Manual

Model #4008EX and Model #4016EX





 **GOLD MEDAL**®


FUNFOOD EQUIPMENT & SUPPLIES


Cincinnati, OH 45241-4807 USA


SAFETY PRECAUTIONS

	⚠ CAUTION
	This equipment is designed and sold for commercial use only. This equipment is not to be used by the consumer in home use. Do not allow direct contact of this equipment by the public when used in food service locations. Only personnel trained and experienced in the equipment operation may operate this equipment. Carefully read all installation instructions before operating the equipment.

	⚠ WARNING
	Always wear safety glasses when servicing this equipment.

	⚠ WARNING
	NEVER put your fingers or any object into the heating area. We do NOT assume any liability for injury due to careless handling or operation of this equipment.

	⚠ WARNING
	Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment.


	⚠ DANGER
	Machine must be properly grounded to prevent electrical shock to personnel. Do NOT immerse the equipment in water. Always unplug the equipment before cleaning or servicing.

NOTE

The information, specifications and illustrations contained in this manual represent the latest data available at time of publication. Right is reserved to make changes as required at the discretion of Gold Medal Products Company without notice.

ELECTRICAL REQUIREMENTS

Model No.	Voltage	Amperage	Cycles
4008	120	12.5	60
4016	120	15.0	60



⚠ DANGER

Machine must be properly grounded to prevent shock in case of electrical problems.

COOKING INSTRUCTIONS

MODEL #4008

1. Plug unit into a 120 Volt outlet.
2. Mix one package of Gold Medal REDDY APPLE MIX (Catalog #4146) and 6 ounces of water into the apple cooker pot. Stir the mix until it is completely saturated with water.
3. Turn the knob clockwise to the setting marked "HIGH". It should fall into position when engaged.
4. Insert a Gold Medal Thermometer (Catalog #4300) into the mixture.

⚠ WARNING



Be careful, apple solution is extremely hot and can cause severe burns.

5. Stir the mixture occasionally until the mix begins to boil rapidly. Once the candy boils rapidly no mixing will be necessary. Now you can begin to prepare your apples using Gold Medal candy apple sticks by inserting the sticks into the top of the apple. **NOTE:** Apples must be dry and room temperature for candy to stick properly.
6. In about 20 minutes the candy mixture will reach 290 degrees F, turn the unit "OFF" once this temperature is reached.
7. Using oven mitts or pot holders carefully lift the Reddy Apple pot out of the well and tilt it under the clip.

COOKING INSTRUCTIONS

MODEL #4016

1. Plug unit into an appropriate 120 or 230 Volt outlet.
2. Mix two packages of Gold Medal REDDY APPLE MIX (Catalog #4146) and 12 ounces of water into the apple cooker pot. Stir the mix until it is completely saturated with water. Or use Gold Medal's APPL-EZ, following instruction on the bag.
3. Turn the knob clockwise to the setting marked "HIGH". It should fall into position when engaged.
4. Insert a Gold Medal Thermometer (Catalog #4300) into the mixture.




5. Stir the mixture occasionally until the mix begins to boil rapidly. Once the candy boils rapidly no mixing will be necessary until candy reaches 290 degrees F. Now you can begin to prepare your apples using Gold Medal candy apple sticks by inserting the sticks into the top of the apple.


NOTE:


Apples must be dry and room temperature for candy to stick properly.

6. In about 20 minutes the candy mixture will reach 290 degrees F, turn the unit "OFF" once this temperature is reached.
7. Holding the prepared apples by the stick, dip into candy mixture twisting until completely covered. Place coated apples onto a clean flat surface. Do not let apples touch one another or they will stick together. Once you are finished dipping your apples, pour the remainder of mix onto a flat cookie sheet so it can hardened and broken into pieces.
8. Using oven mitts or pot holders return the Apple Cooker pot into the well.
9. Pour approximately 2 cups of water in the Apple Cooker pot. Cover the pot with the Steam-n-clean lid and turn the unit to "HI". Allow the water to boil so the steam will clean the inside of the pot.
10. Turn unit "OFF". Using oven mitts or pot holders empty the pot.

MAINTENANCE INSTRUCTIONS

	⚠ CAUTION
	<p>THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.</p>

	⚠ WARNING
	<p>Adequate eye protection must be used when servicing this equipment to prevent the possibility of injury.</p>

	⚠ DANGER
	<p>Do NOT immerse the equipment in water. Unplug your machine before servicing.</p>

HEAT ELEMENT AND HEAT CONTROL REPLACEMENT

1. Remove Apple Cooker pot from the unit. Turn unit upside down, be careful not to bend the clip on the side.
2. Remove the (9) screws that secure the bottom plate to the cabinet.
3. Carefully place the insulation cover to the side, away from any food products.
4. Disconnect wire from heat element and/or heat control.
5. Loosen the (2) nuts from the element, pay close attention to the placement of all parts for correct re-assembly.
6. Replace with new element installing all pieces correctly.
7. Replace new heat control by removing knob and losing nut.
8. Refer to wiring diagram for proper wiring of unit.
9. Replace insulation so that cabinet will remain cool during cooking.

ORDERING SPARE PARTS


1. Identify the desired part by checking it against the photos, illustrations, and/or the parts list.
2. When ordering, please include part number, part name, and quantity desired.
3. Please include your model name and machine serial number (located on the machine nameplate) with your order.
4. Address all parts orders to:

Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807

or, place orders at:

(513) 769-7676
Fax: (513) 3769-8500
E-mail: goldme19@eos.net


REDDY APPLE COOKER ASSEMBLY

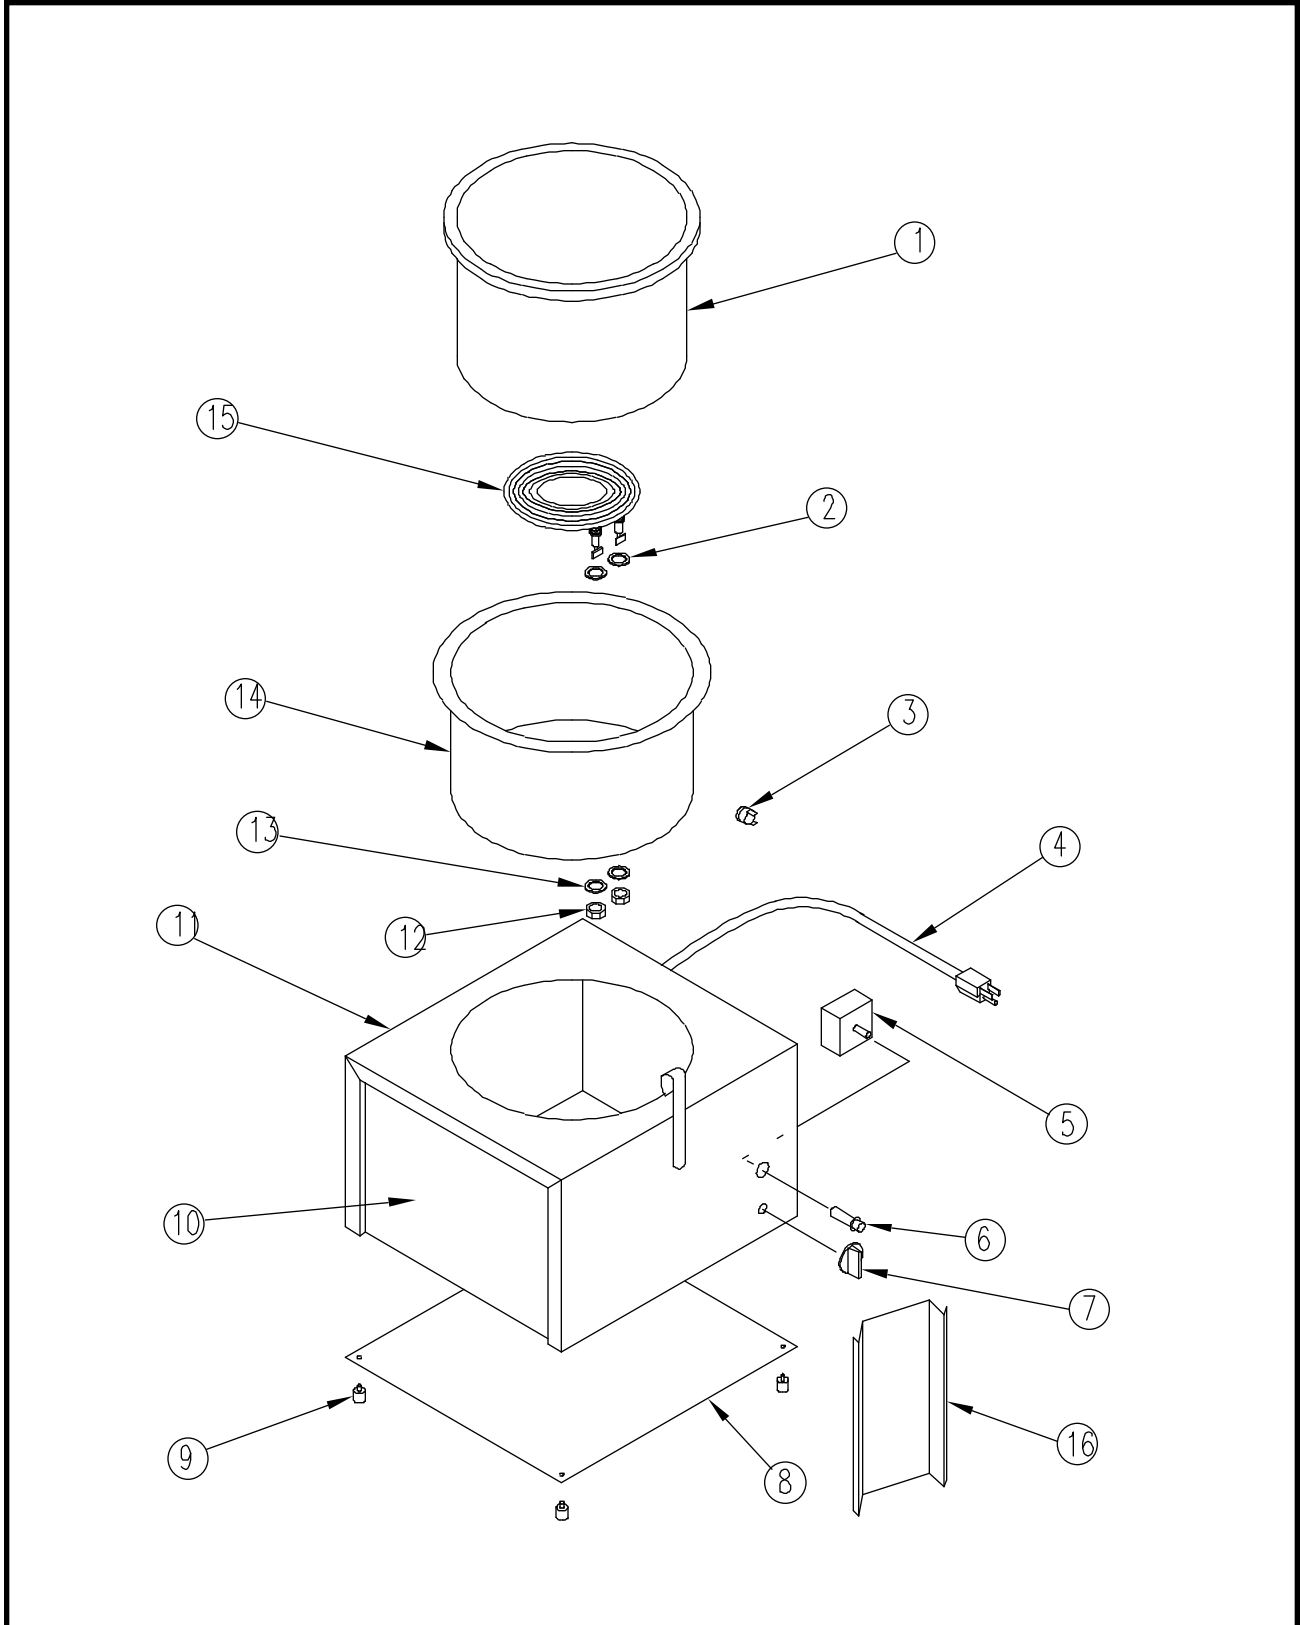

PARTS LIST - REDDY APPLE COOKER ASSEMBLY

Item No.	Model 4008	Model 4016	Description
	Part No.	Part No.	
1	38236	38236	Pot, Apple Cooker
2	n/a	n/a	Copper Washer, Supplied w/ Element
3	38109	38109	High Limit Thermostat
4	87085	87085	Lead-in Cord, 120 Volt
5	87048	87048	Heat Control, 120 Volt
6	41033	41033	Pilot Light, 120 Volt
7	87049	87049	Knob, Heat Control
8	38176	38176	Bottom Plate
9	87247	87247	Rubber Feet (4)
10	38202	38202	Front Panel, Removable
11	38256	38256	Welded Cabinet
12	n/a	n/a	Nut, Supplied w/ Element
13	n/a	n/a	Steel Washer, Supplied w/ Element
14	38253	n/a	Well Body
15	38235	n/a	1500 Watt Heat Element, 120 Volt
	n/a	38310	1800 Watt Heat Element, 120 Volt
16	n/a	38312	Heat Deflector
PARTS NOT SHOWN			
	38220	38220	Blanket Insulation
	38188	38188	Bottom Insulation
	38314	38314	Steam-n-clean Lid
	38261	38261	Shipping Carton

ELECTRICAL SCHEMATIC

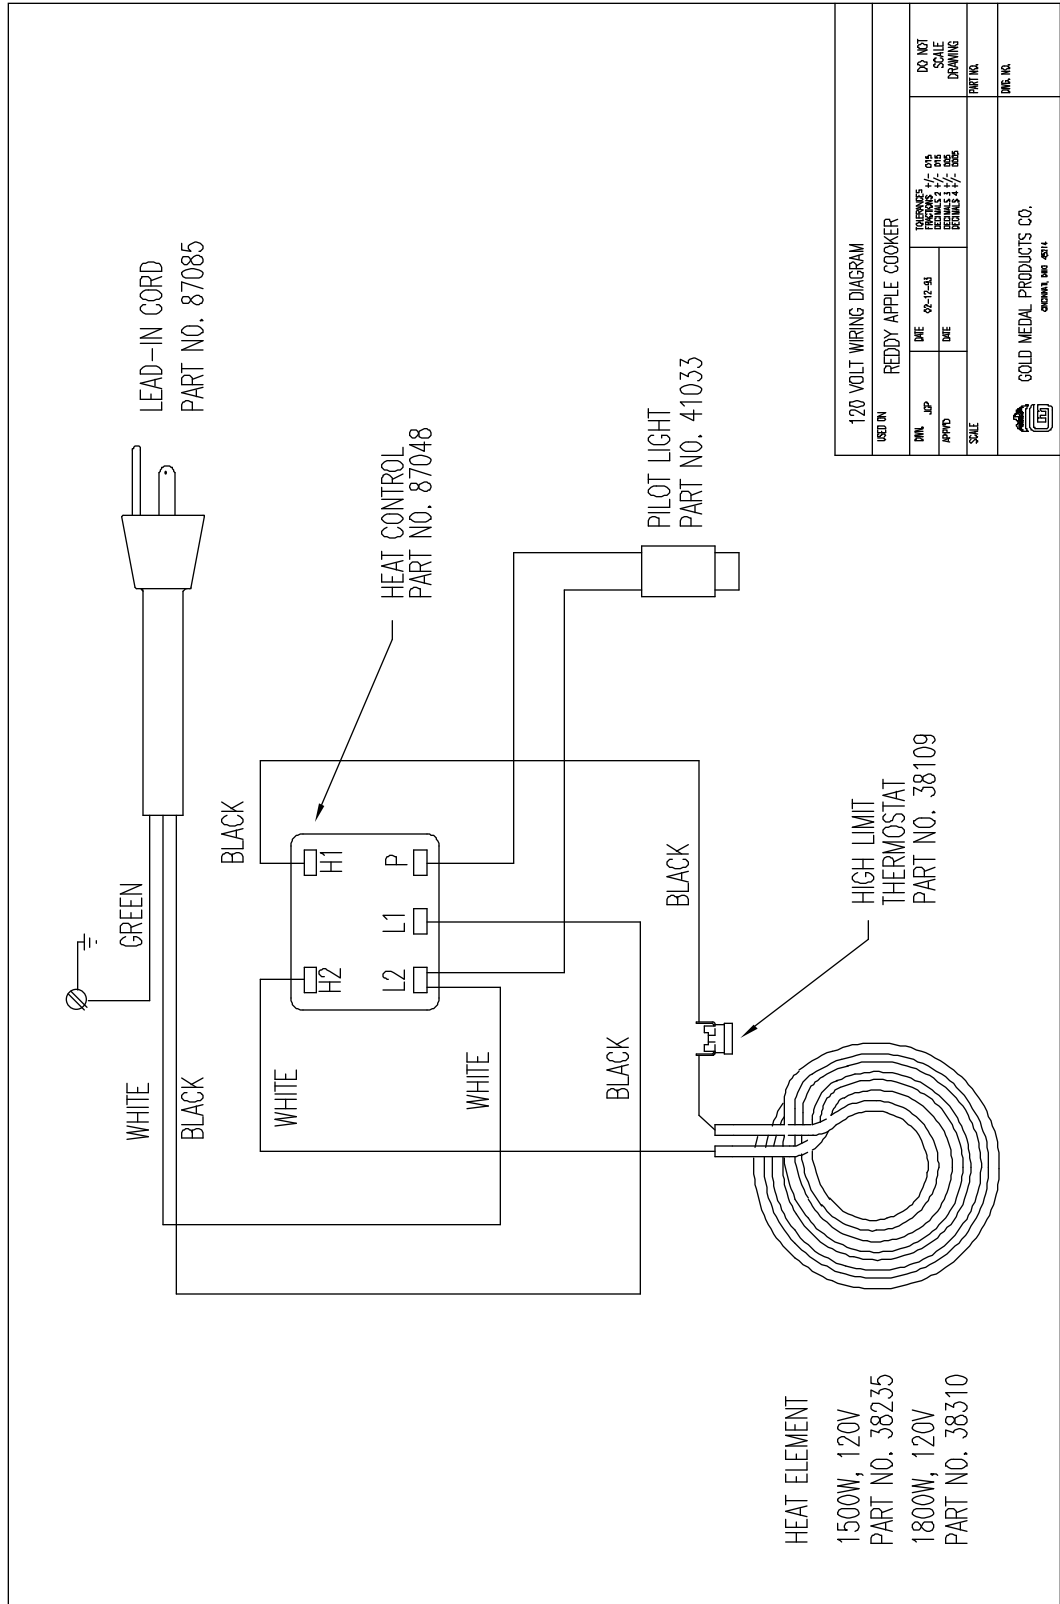

WARRANTY

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of six (6) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-428-2676 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL PRODUCTS COMPANY
10700 Medallion Drive
Cincinnati, OH 45241-4807 USA