

ORDERING REPLACEMENT PARTS

To order replacement parts, contact the ICON Health & Fitness, Ltd. office, or write:

ICON Health & Fitness, Ltd.
Customer Service Department
Unit 4
Revie Road Industrial Estate
Revie Road
Beeston
Leeds, LS118JG
UK

Tel:

08457 089 009

Outside the UK: 0 (044) 113 387 7133
Fax: 0 (044) 113 387 7125

To help us assist you, please be prepared to give the following information:


- the MODEL NUMBER of the product (WLEVEX14920)
- the NAME of the product (WESLO® PURSUIT 202 exercise cycle)
- the SERIAL NUMBER of the product (see the front cover of this manual)
- the KEY NUMBER and DESCRIPTION of the part(s) (see page 14)

WESLO is a registered trademark of ICON Health & Fitness, Inc.

WESLO PURSUIT 202

MAGNETEX DRIVE

Model No. WLEVEX14920
Serial No. _____

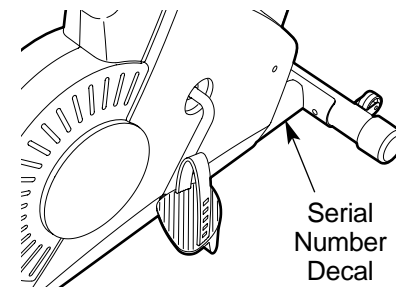

QUESTIONS?

As a manufacturer, we are committed to providing complete customer satisfaction. If you have questions, or if there are missing parts, please call:

08457 089 009


Or write:
ICON Health & Fitness, Ltd.
Customer Service Department
Unit 4
Revie Road Industrial Estate
Revie Road
Beeston
Leeds, LS118JG
UK

email: csuk@iconeurope.com

⚠ CAUTION

Read all precautions and instructions in this manual before using this equipment. Keep this manual for future reference.

USER'S MANUAL

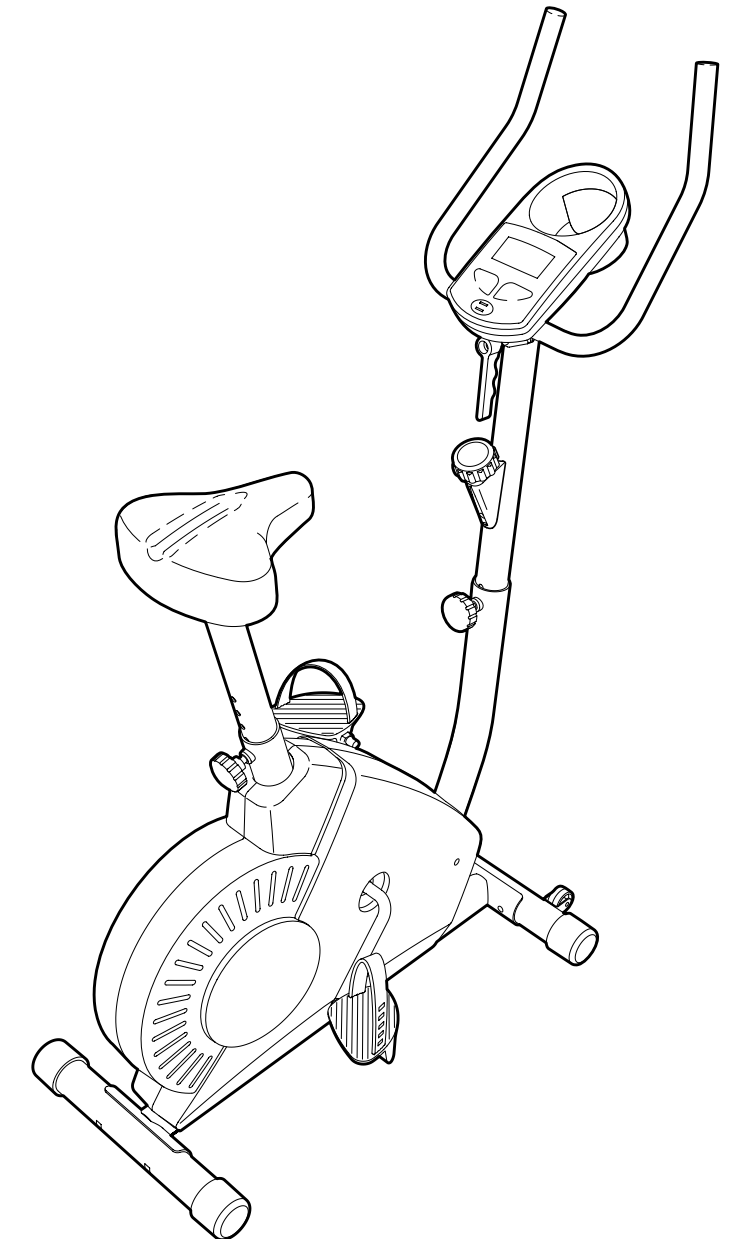


Visit our website at
www.iconeurope.com

TABLE OF CONTENTS

IMPORTANT PRECAUTIONS	2
BEFORE YOU BEGIN	3
ASSEMBLY	4
HOW TO OPERATE THE EXERCISE CYCLE	8
MAINTENANCE AND TROUBLESHOOTING	11
CONDITIONING GUIDELINES	12
PART LIST	14
EXPLODED DRAWING	15
ORDERING REPLACEMENT PARTS	Back Cover

EXPLODED DRAWING—Model No. WLEVEX14920

R1002A

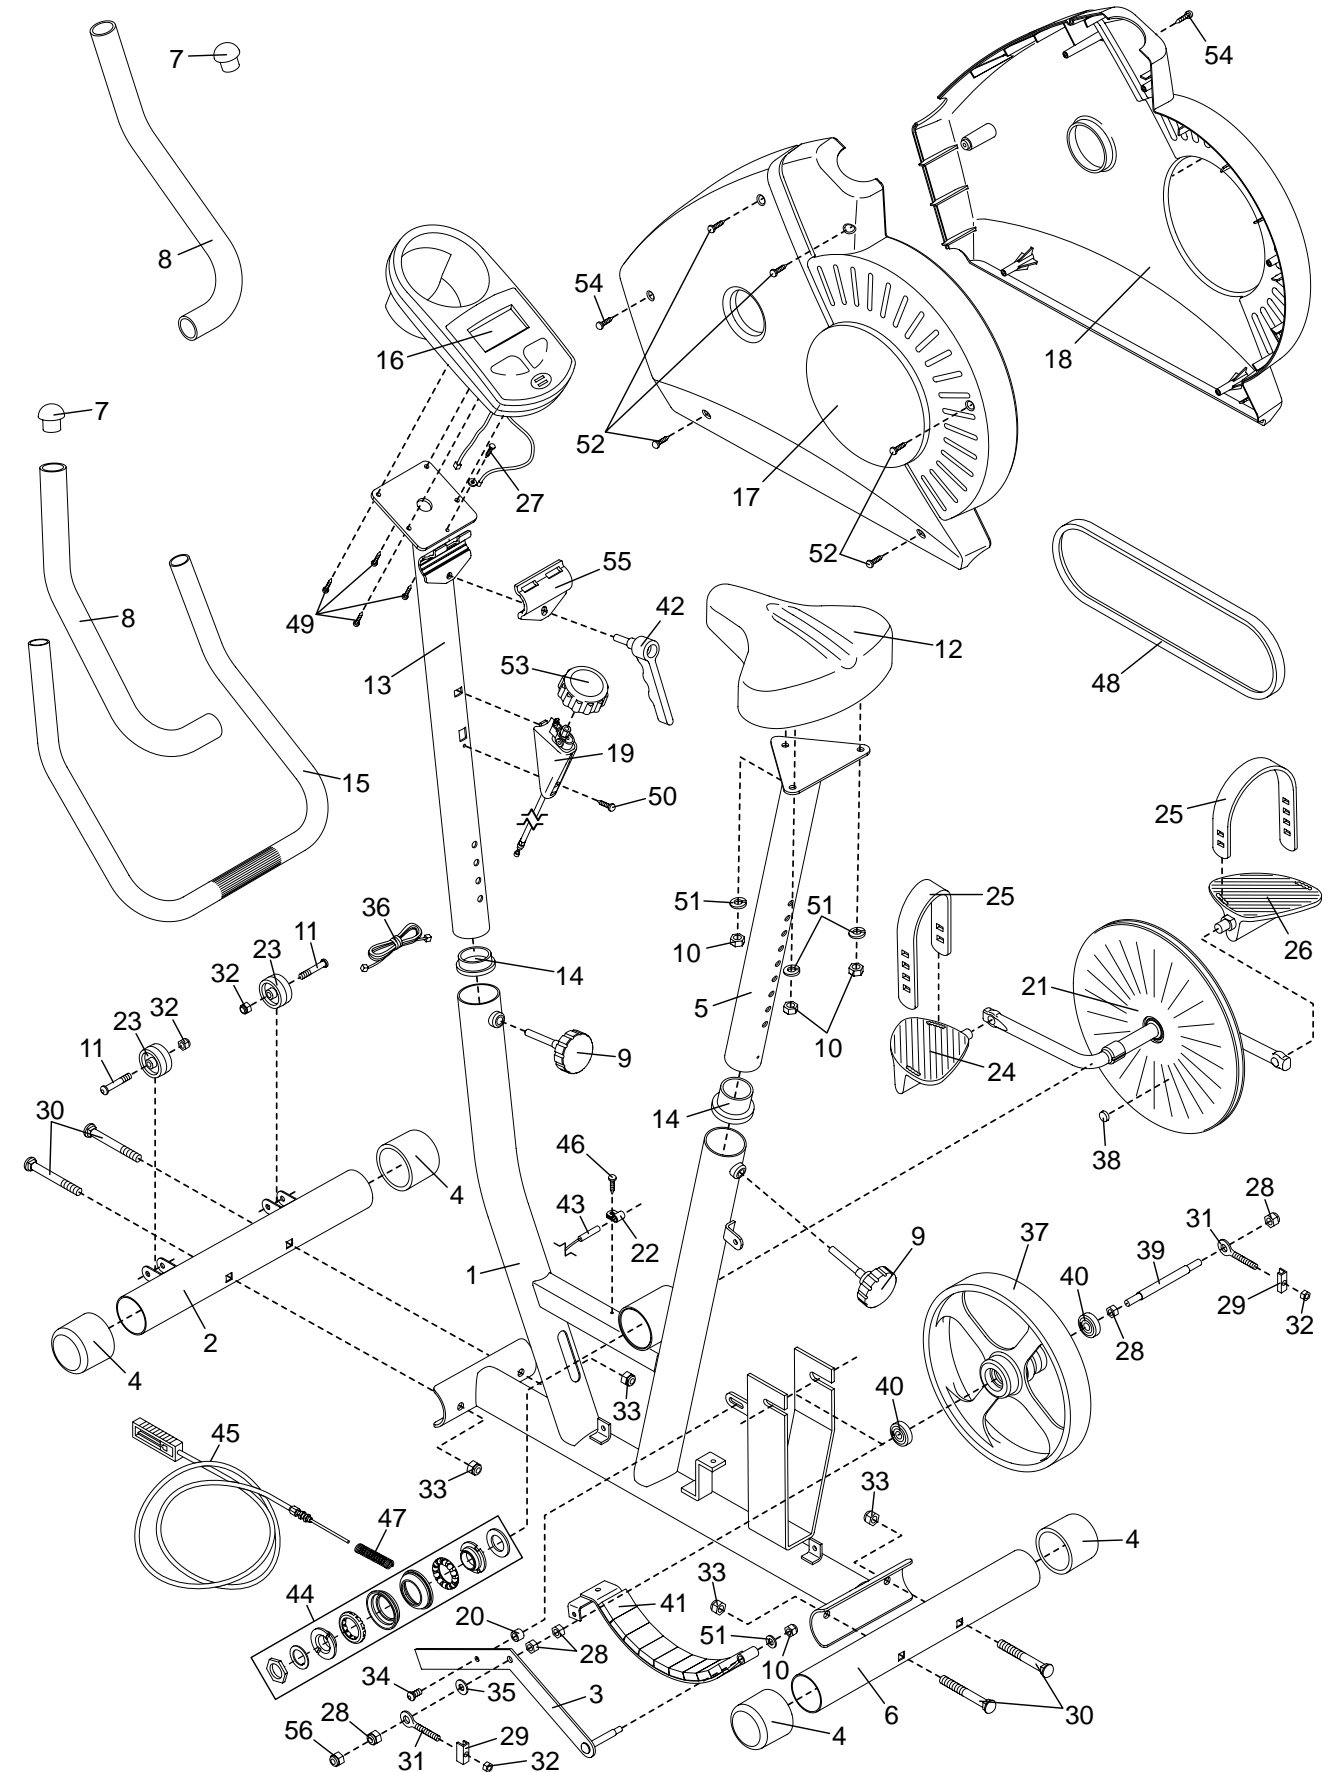

IMPORTANT PRECAUTIONS

⚠ WARNING: To reduce the risk of serious injury, read the following important precautions before using the exercise cycle.

- | | |
|---|---|
| <ol style="list-style-type: none"> 1. Read all instructions in this manual before using the exercise cycle. Use the exercise cycle only as described in this manual. 2. It is the responsibility of the owner to ensure that all users of the exercise cycle are adequately informed of all precautions. 3. Use the exercise cycle indoors on a level surface. Keep the exercise cycle away from moisture and dust. Place a mat under the exercise cycle to protect the floor. 4. Inspect and properly tighten all parts regularly. Replace any worn parts immediately. 5. Keep children under the age of 12 and pets away from the exercise cycle at all times. 6. Wear appropriate clothing when exercising; do not wear loose clothing that could become caught on the exercise cycle. Always wear | <ol style="list-style-type: none"> athletic shoes for foot protection. 7. The exercise cycle should not be used by persons weighing more than 115 kg (250 lbs.). 8. Always keep your back straight whilst using the exercise cycle; do not arch your back. 9. If you feel pain or dizziness whilst exercising, stop immediately and cool down. 10. The pulse sensor is not a medical device. Various factors, including the user's movement, may affect the accuracy of heart rate readings. The pulse sensor is intended only as an exercise aid in determining heart rate trends in general. 11. The exercise cycle is intended for home use only. Do not use the exercise cycle in a commercial, rental, or institutional setting. |
|---|---|

⚠ WARNING: Before beginning this or any exercise program, consult your physician. This is especially important for persons over the age of 35 or persons with pre-existing health problems. Read all instructions before using. ICON assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

PART LIST—Model No. WLEVEX14920

R1002A

Key No.	Qty.	Description	Key No.	Qty.	Description
1	1	Frame	30	4	3/8" x 78mm Carriage Bolt
2	1	Front Stabiliser	31	2	Eyebolt
3	1	"C" Magnet Bracket	32	4	M6 Nylon Locknut
4	4	Stabiliser Endcap	33	4	3/8" Nylon Locknut
5	1	Seat Post	34	1	M8 x 15mm Button Screw
6	1	Rear Stabiliser	35	1	M10 Flat Washer
7	2	Handlebar Endcap	36	1	Upper Wire
8	2	Foam Grip	37	1	Flywheel
9	2	Adjustment Knob	38	1	Magnet
10	4	M8 Nylon Locknut	39	1	Flywheel Axle
11	2	M6 x 32mm Bolt	40	2	Flywheel Bearing
12	1	Seat	41	1	"C" Magnet
13	1	Upright	42	1	Adjustment Handle
14	2	Frame Bushing	43	1	Reed Switch/Wire
15	1	Handlebar	44	1	Crank Bearing Set
16	1	Console	45	1	Lower Cable
17	1	Left Side Shield	46	1	M4 x 12mm Screw
18	1	Right Side Shield	47	1	Return Spring
19	1	Resistance Control/Cable	48	1	Drive Belt
20	1	M8 x 5mm Spacer	49	4	M5 x 12mm Screw
21	1	Crank/Pulley	50	1	M5 x 20mm Screw
22	1	Reed Switch Clamp	51	4	M8 Flat Washer
23	2	Wheel	52	5	M4 x 25mm Screw
24	1	Left Pedal	53	1	Resistance Knob
25	2	Pedal Strap	54	2	M4 x 19mm Screw
26	1	Right Pedal	55	1	Handlebar Clamp
27	1	Ground Screw	56	1	3/8" Axle Nut
28	5	3/8" Jam Nut	#	1	User's Manual
29	2	U-bracket	#	2	Assembly Wrench

Note: "#" indicates a non-illustrated part. Specifications are subject to change without notice. See the back cover of this manual for information about ordering replacement parts.


BEFORE YOU BEGIN

Congratulations for selecting the new WESLO® PURSUIT 202 exercise cycle. Cycling is one of the most effective exercises for increasing cardiovascular fitness, building endurance, and toning the body. The PURSUIT 202 exercise cycle offers a selection of features designed to let you enjoy this healthful exercise in the convenience and privacy of your home.

For your benefit, read this manual carefully before you use the exercise cycle. If you have questions


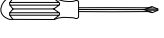

after reading this manual, please call our Customer Service Department at **08457 089 009**. To help us assist you, please note the product model number and serial number before calling. The model number is WLEVEX14920. The serial number can be found on a decal attached to the exercise cycle (see the front cover of this manual for the location of the decal).

Before reading further, please familiarise yourself with the parts that are labeled in the drawing below.

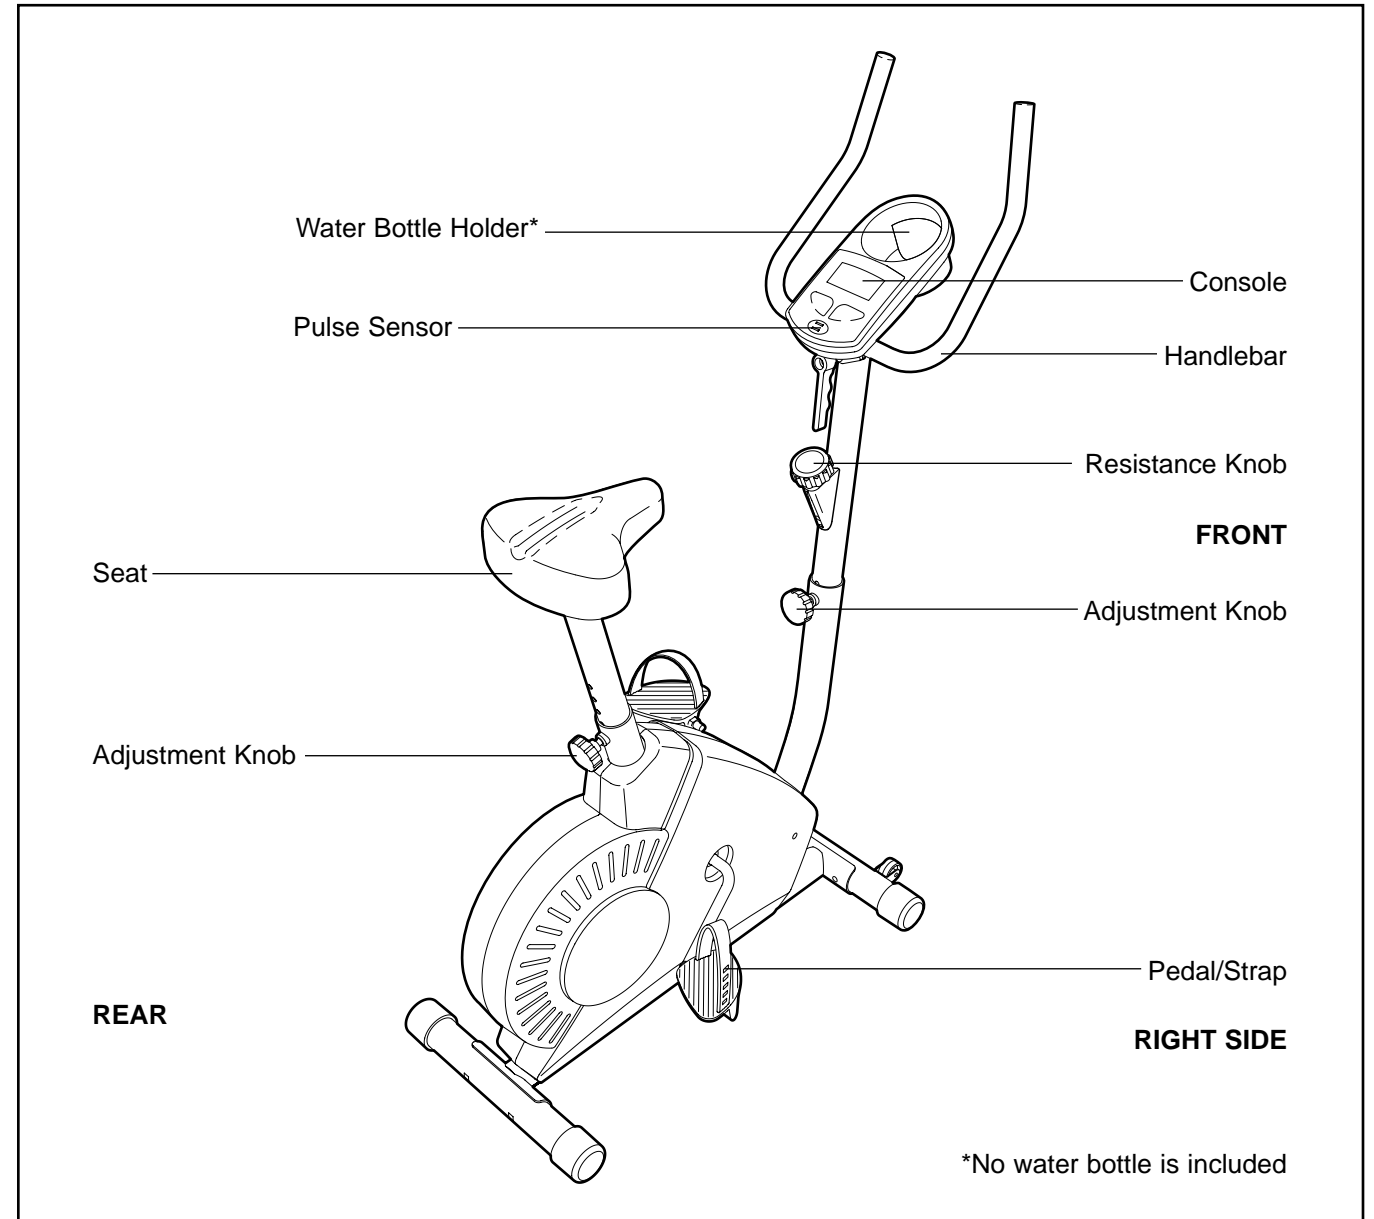


ASSEMBLY


Assembly requires two persons. Place all parts of the exercise cycle in a cleared area and remove the packing materials. Do not dispose of the packing materials until assembly is completed.

Assembly requires the included tools and your own adjustable spanner , **Phillips screwdriver** , **and pliers** .


Use the part drawings below to identify the small parts used in assembly. The number in parenthesis below each drawing refers to the key number of the part, from the PART LIST on page 14. The second number refers to the quantity needed for assembly. **Note: Some small parts may have been pre-attached for shipping. If a part is not in the parts bag, check to see if it has been pre-attached.**

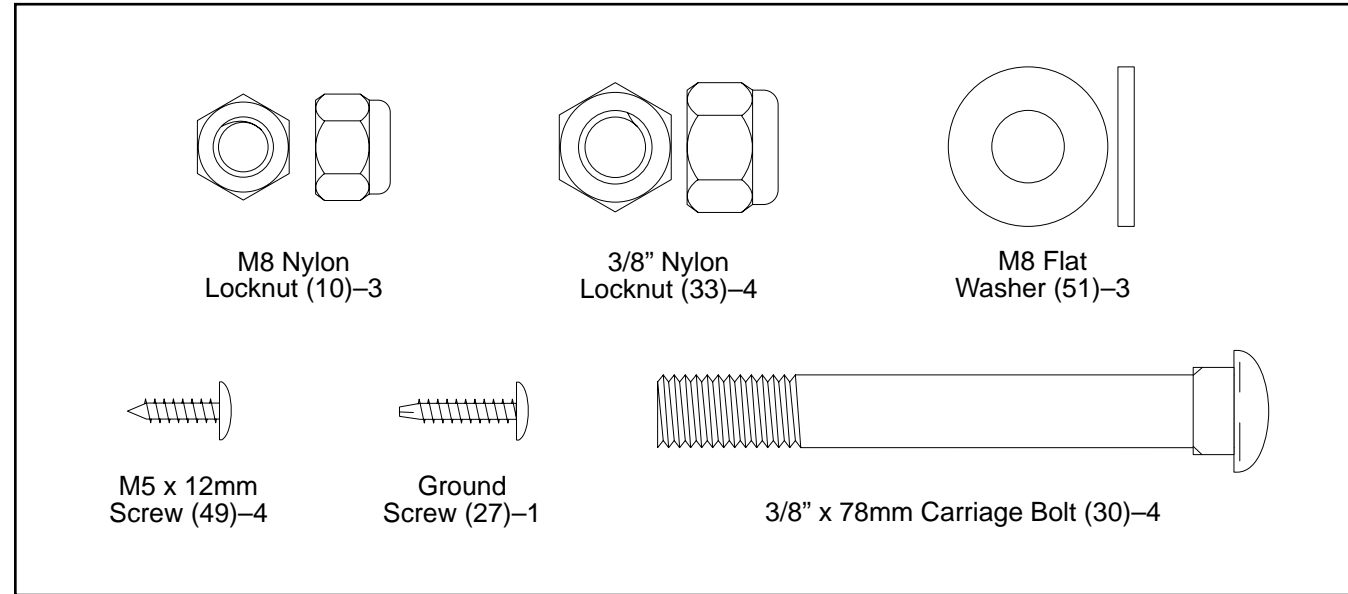

1. Set the Front Stabiliser (2) in front of the Frame (1), with the Wheels (23) on the side shown. Whilst another person lifts the front of the Frame, attach the Front Stabiliser with two 3/8" x 78mm Carriage Bolts (30) and two 3/8" Nylon Locknuts (33). **Make sure that the Front Stabiliser is turned so the Wheels are not touching the floor.**

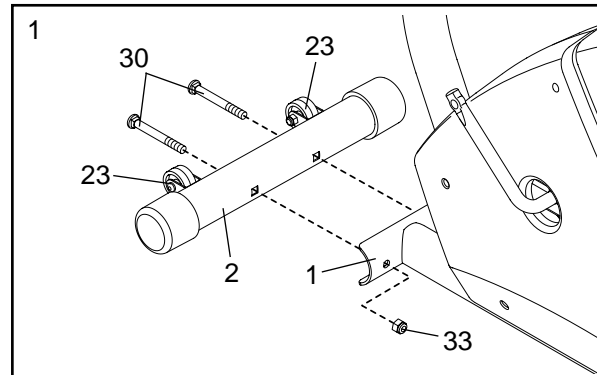

2. Whilst another person lifts the rear of the Frame (1), attach the Rear Stabiliser (6) with two 3/8" x 78mm Carriage Bolts (30) and two 3/8" Nylon Locknuts (33).

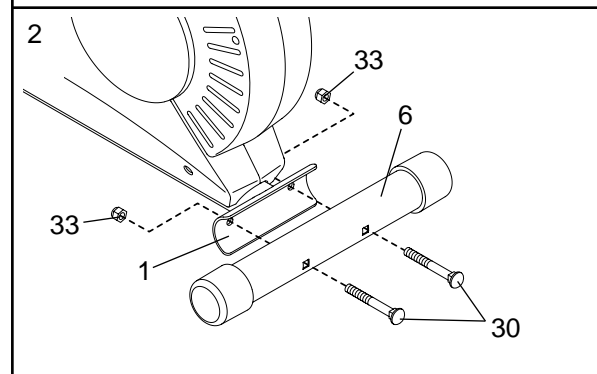


SUGGESTED STRETCHES

The correct form for several basic stretches is shown at the right. Move slowly as you stretch—never bounce.

1. Toe Touch Stretch

Stand with your knees bent slightly and slowly bend forward from your hips. Allow your back and shoulders to relax as you reach down toward your toes as far as possible. Hold for 15 counts, then relax. Repeat 3 times. Stretches: Hamstrings, back of knees and back.

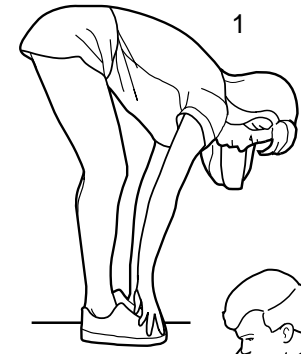


2. Hamstring Stretch

Sit with one leg extended. Bring the sole of the opposite foot toward you and rest it against the inner thigh of your extended leg. Reach toward your toes as far as possible. Hold for 15 counts, then relax. Repeat 3 times for each leg. Stretches: Hamstrings, lower back and groin.



3. Calf/Achilles Stretch

With one leg in front of the other, reach forward and place your hands against a wall. Keep your back leg straight and your back foot flat on the floor. Bend your front leg, lean forward and move your hips toward the wall. Hold for 15 counts, then relax. Repeat 3 times for each leg. To cause further stretching of the achilles tendons, bend your back leg as well. Stretches: Calves, achilles tendons and ankles.

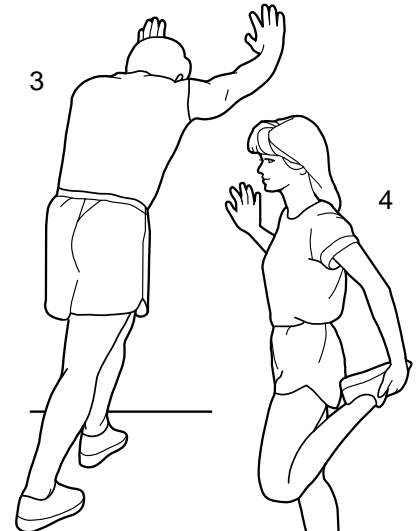

4. Quadriceps Stretch

With one hand against a wall for balance, reach back and grasp one foot with your other hand. Bring your heel as close to your buttocks as possible. Hold for 15 counts, then relax. Repeat 3 times for each leg. Stretches: Quadriceps and hip muscles.



5. Inner Thigh Stretch

Sit with the soles of your feet together and your knees outward. Pull your feet toward your groin area as far as possible. Hold for 15 counts, then relax. Repeat 3 times. Stretches: Quadriceps and hip muscles.



CONDITIONING GUIDELINES

The following guidelines will help you to plan your exercise program. Remember that proper nutrition and adequate rest are essential for successful results.

⚠️ WARNING:

- Before beginning this or any exercise program, consult your physician. This is especially important for persons over the age of 35 or persons with pre-existing health problems.
- The pulse sensor is not a medical device. Various factors may affect the accuracy of heart rate readings. The pulse sensor is intended only as an exercise aid in determining heart rate trends in general.

EXERCISE INTENSITY

Whether your goal is to burn fat or to strengthen your cardiovascular system, the key to achieving the desired results is to exercise with the proper intensity. The proper intensity level can be found by using your heart rate as a guide. The chart below shows recommended heart rates for fat burning, maximum fat burning, and cardiovascular (aerobic) exercise.

165	155	145	140	130	125	115	♥
145	138	130	125	118	110	103	♥
125	120	115	110	105	95	90	♥
20	30	40	50	60	70	80	

To find the proper heart rate for you, first find your age near the bottom of the chart (ages are rounded off to the nearest ten years). Next, find the three numbers above your age. The three numbers are your "training zone." The lowest number is the recommended heart rate for fat burning; the middle number is the recommended heart rate for maximum fat burning; the highest number is the recommended heart rate for aerobic exercise.

Fat Burning

To burn fat effectively, you must exercise at a relatively low intensity level for a sustained period of time.

During the first few minutes of exercise, your body uses easily accessible *carbohydrate* calories for energy. Only after the first few minutes of exercise does your body begin to use stored *fat* calories for energy. If your goal is to burn fat, adjust the intensity of your exercise until your heart rate is near the lowest number in your training zone as you exercise. For maximum fat burning, adjust the intensity of your exercise until your heart rate is near the middle number in your training zone as you exercise.

Aerobic Exercise

If your goal is to strengthen your cardiovascular system, your exercise must be "aerobic." Aerobic exercise is activity that requires large amounts of oxygen for prolonged periods of time. This increases the demand on the heart to pump blood to the muscles, and on the lungs to oxygenate the blood. For aerobic exercise, adjust the intensity of your exercise until your heart rate is near the highest number in your training zone.

WORKOUT GUIDELINES

Each workout should include the following three parts:

A warm-up, consisting of 5 to 10 minutes of stretching and light exercise. A proper warm-up increases your body temperature, heart rate, and circulation in preparation for exercise.

Training zone exercise, consisting of 20 to 30 minutes of exercising with your heart rate in your training zone. Note: During the first few weeks of your exercise program, do not keep your heart rate in your training zone for longer than 20 minutes.

A cool-down, with 5 to 10 minutes of stretching. This will increase the flexibility of your muscles and will help to prevent post-exercise problems.

EXERCISE FREQUENCY

To maintain or improve your condition, plan three workouts each week, with at least one day of rest between workouts. After a few months of regular exercise, you may complete up to five workouts each week, if desired. Remember, the key to success is make exercise a regular and enjoyable part of your everyday life.


3. Whilst another person holds the Upright (13) in the position shown, connect the Upper Wire (36) to the Reed Switch Wire (43). Cut and remove the zip tie holding the Reed Switch Wire to the Frame (1). Next, connect the Resistance Cable (19) to the Lower Cable (45) in the following way:

- See drawing A. Press the small cylinder on the end of the Resistance Cable (19) into the hole in the connector on the Lower Cable (45). Pull the Resistance Cable up and slide it into the slot in the top of the connector.
- See drawing B. Turn the Resistance Cable (19) until it is aligned with the slot in the connector, and press the Resistance Cable down into the connector. The Resistance Cable will lock into place.


Carefully pull the excess Upper Wire (36) out of the top of the Upright (13), push the excess Cable (19, 45) down into the Frame (1), and insert the Upright into the Frame. **Be careful to avoid pinching the Wires and Cables.** Next, align one of the adjustment holes in the Upright with the indicated hole in the Frame. Insert the Adjustment Knob (9) into the Frame and the Upright, and turn the Knob clockwise until it is tight. **Make sure that the Knob is inserted through one of the adjustment holes in the Upright.**

4. Slide the two slots in the Handlebar Clamp (55) onto the two indicated tabs on the Upright (13). Lift the bottom of the Handlebar Clamp away from the Upright. Insert the Handlebar (15) between the Handlebar Clamp and the Upright. Centre the Handlebar and rotate it to the desired position.


Tighten the Adjustment Handle (42) onto the Upright (13). Note: The adjustment handle works like a spanner. Turn the Handle counterclockwise, pull it away from the Upright, turn it clockwise, push it toward the upright, and then turn it counterclockwise again.

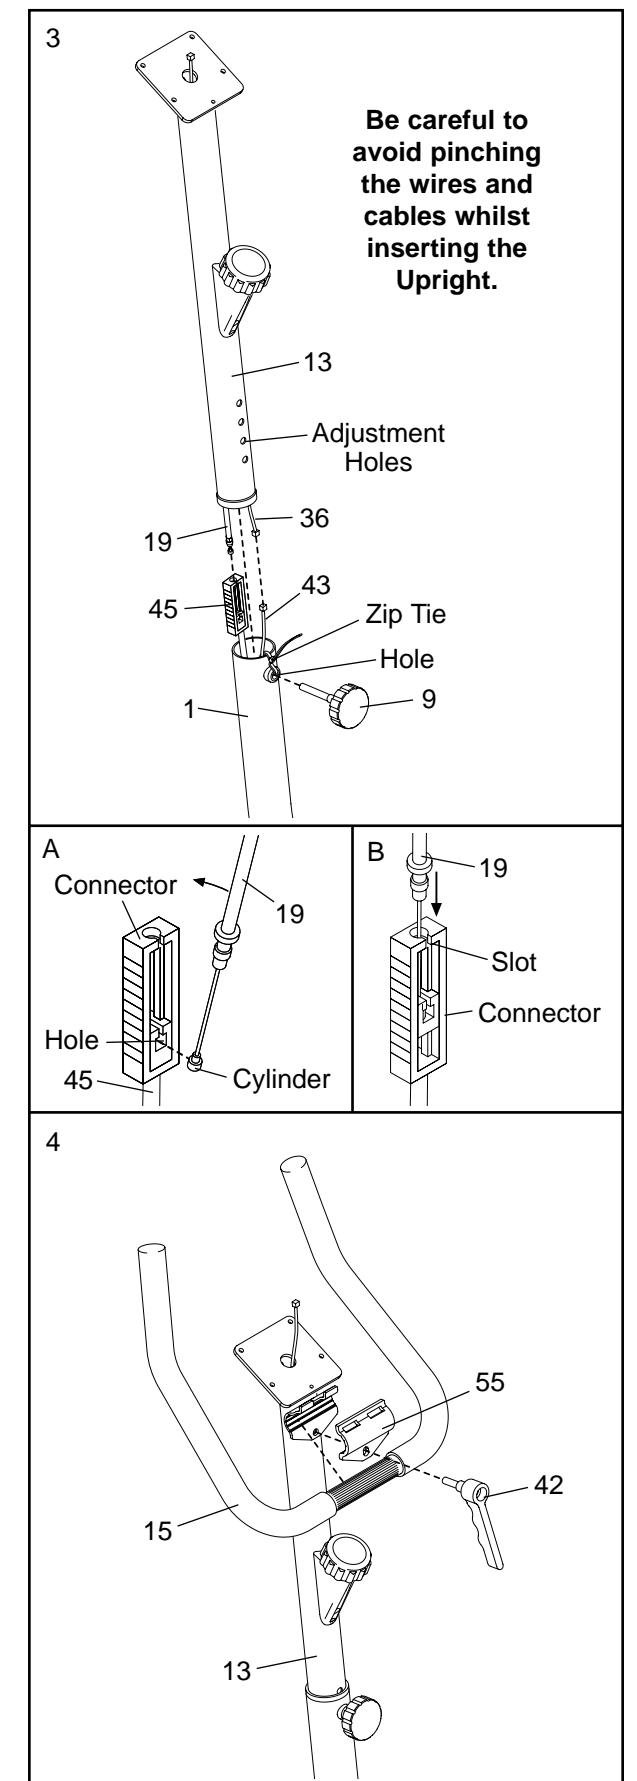


5. The Console (16) requires three 1.5V AA batteries; alkaline batteries are recommended. Insert three batteries into the Console. **Make sure that the batteries are oriented as shown by the markings inside the Console.**

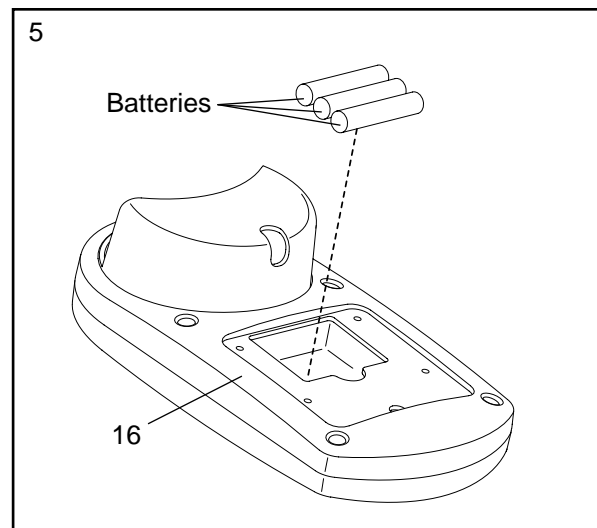

6. Hold the Console (16) near the Upright (13). Connect the ground wire to the Upright with the Ground Screw (27). Connect the console wire to the Upper Wire (36). Insert the excess console wire down into the Upright. Move the Console toward the Upright, at the same time inserting the excess ground wire up into the hole in the underside of the Console. Continue until all of the excess ground wire is inside of the Console. Attach the Console to the Upright with four M5 x 12mm Screws (49). **Be careful to avoid pinching the wires.**

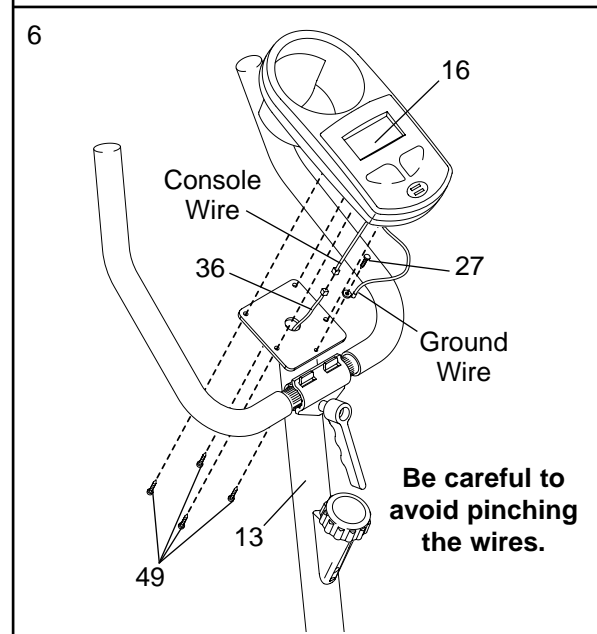

7. Attach the Seat (12) to the Seat Post (5) with three M8 Flat Washers (51) and three M8 Nylon Locknuts (10). Note: The Flat Washers and Nylon Locknuts may be preattached to the underside of the Seat.

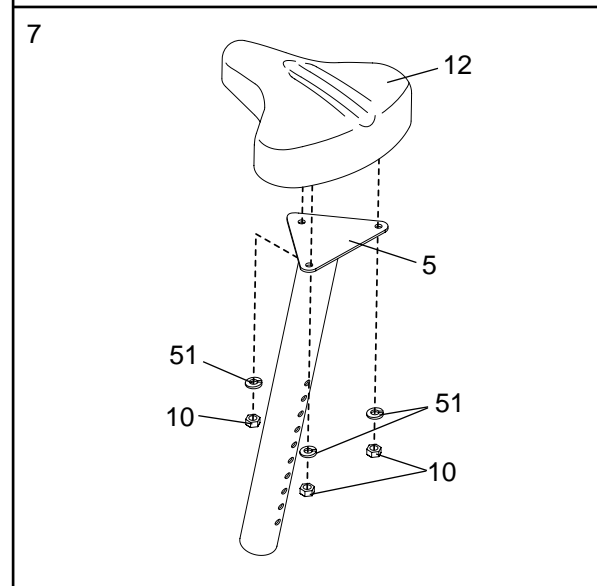

MAINTENANCE AND TROUBLESHOOTING

Inspect and tighten all parts of the exercise cycle regularly. Replace any worn parts immediately.

To clean the exercise cycle, use a damp cloth and a small amount of mild detergent. **Important: To avoid damage to the console, keep liquids away from the console and keep the console out of direct sunlight.**


BATTERY REPLACEMENT

If the console display becomes dim, the batteries should be replaced; most console problems are the result of low batteries. To replace the batteries, refer to step 6 on page 6 and remove the console from the upright. Next, refer to step 5 and insert three batteries into the console. Reattach the console to the upright, being careful not to pinch the wires.


HOW TO ADJUST THE REED SWITCH

If the console does not display correct feedback, the reed switch should be adjusted. In order to adjust the reed switch, the left side shield must be removed.

Turn the Crank (21) to the position shown. Using an adjustable spanner, turn the Left Pedal (24) clockwise and remove it. Next, remove the five M4 x 25mm Screws (52) and the M4 x 19mm Screw (54) from the Left Side Shield (17). Carefully remove the Left Side Shield.

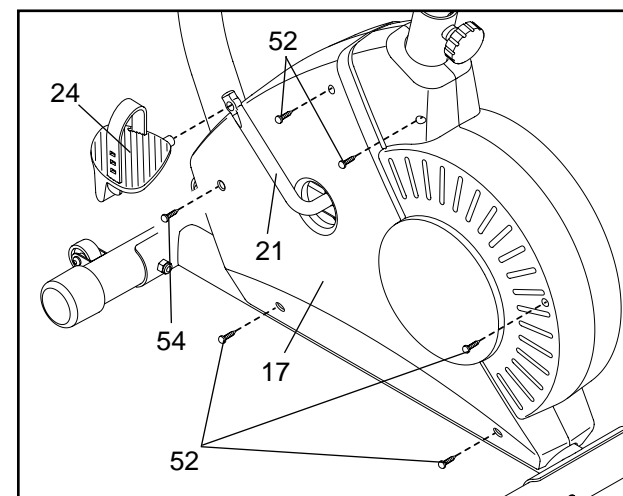


Next, locate the Reed Switch (43). Turn the Crank (21) until the Magnet (38) is aligned with the Reed Switch. Loosen, but do not remove, the M4 x 12mm Screw (46). Slide the Reed Switch slightly closer to or away from the Magnet. Retighten the Screw. Turn the Crank for a moment. Repeat until the console displays correct feedback. When the Reed Switch is correctly adjusted, reattach the left side shield and the left pedal.

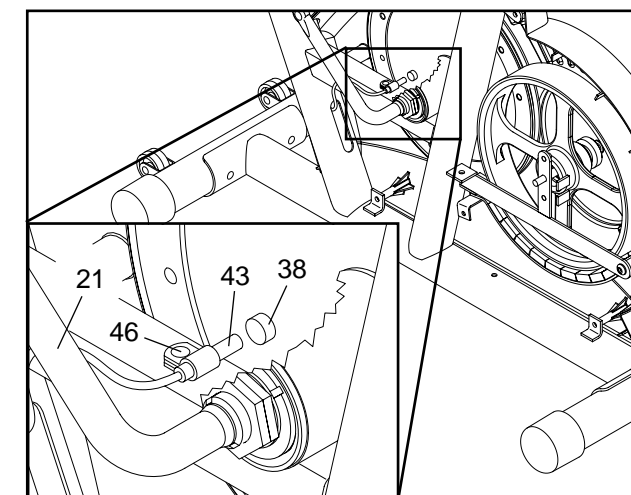

PULSE SENSOR TROUBLESHOOTING

Refer to step 4 on page 10.


To cancel the scan mode, press the Mode button. The mode bar below the scan symbol will disappear. The upper section of the display will then show only the elapsed time, and the lower left section of the display will show only the number of calories you have burned. Press the Mode button again. The upper section of the display will then show only the distance pedaled, and the lower left section of the display will show only the number of fat calories you have burned. To select the scan mode again, press the Mode button repeatedly until a mode bar appears below the scan symbol.

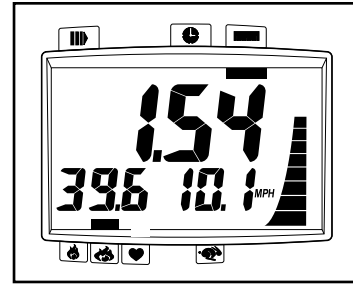

To reset the display, press the On/Reset button. **Note: The console can show speed and distance in either miles or kilometers. To change the unit of measurement, hold down the On/Reset button for about six seconds. When the batteries are replaced, it may be necessary to reselect the desired unit of measurement.**

4 Measure your heart rate, if desired.

To measure your heart rate, stop pedaling and place your thumb on the pulse sensor as shown. **Do not press too hard, or the circulation in your thumb will be restricted and your**

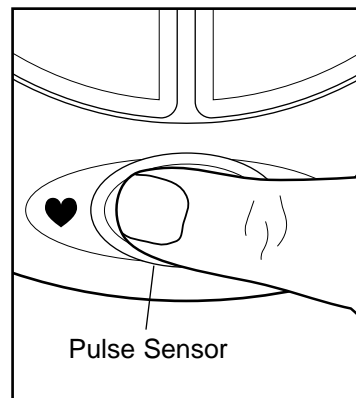

pulse will not be detected. After a few seconds, the heart-shaped indicator in the display will flash **steadily**, two dashes will appear, and then your heart rate will be shown. Hold your thumb on the pulse sensor for about 15 seconds for the most accurate reading.

If the displayed heart rate appears to be too high or too low, or if your heart rate is not displayed, lift your thumb off the pulse sensor for a few seconds. Then, place your thumb on the pulse sensor as described above.


Make sure you are applying the proper amount of pressure to the pulse sensor. Try the pulse sensor several times until you become familiar with it. Remember to sit still whilst measuring your heart rate.

⚠ WARNING: The pulse sensor is not a medical device. Various factors may affect the accuracy of heart rate readings. The pulse sensor is intended only as an exercise aid in determining heart rate trends in general.


5 When you are finished exercising, the console will automatically turn off after a few minutes.

If the pedals are not moved and the console buttons are not pressed for a few minutes, **the console will automatically turn off to conserve the batteries.**

8. Turn the indicated Adjustment Knob (9) counterclockwise and remove it. Insert the Seat Post (5) into the Frame (1). Align one of the adjustment holes in the Seat Post with the indicated hole in the Frame. Insert the Adjustment Knob into the Frame and the Seat Post, and turn the Knob clockwise until it is tight. **Make sure that the Knob is inserted through one of the adjustment holes in the Seat Post.**

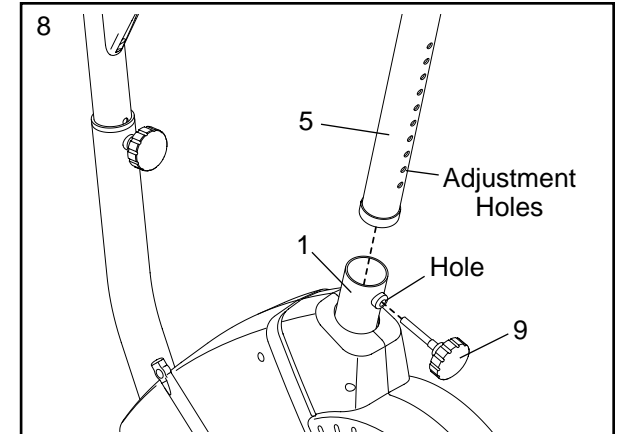

9. Identify the Left Pedal (24), which is marked with an "L." Using an adjustable spanner, **firmly tighten** the Left Pedal *counterclockwise* into the left arm of the Crank (21). Tighten the Right Pedal (not shown) *clockwise* into the right arm of the Crank. **Important: Tighten both Pedals as firmly as possible. After using the exercise cycle for one week, retighten the Pedals. For best performance, the Pedals must be kept tightened.**

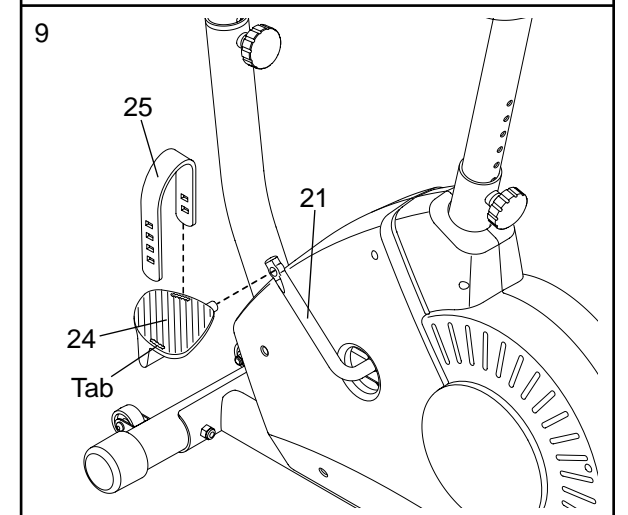


Adjust the left Pedal Strap (25) to the desired position, and press the end of the Pedal Strap onto the tab on the Left Pedal (24). Adjust the right Pedal Strap (not shown) in the same way.

10. **Make sure that all parts are properly tightened before you use the exercise cycle.** Note: After assembly is completed, some extra parts may be left over. Place a mat beneath the exercise cycle to protect the floor.

HOW TO OPERATE THE EXERCISE CYCLE


HOW TO ADJUST THE SEAT POST

For effective exercise, the seat should be at the proper height. As you pedal, there should be a slight bend in your knees when the pedals are in the lowest position. To adjust the height of the seat, first turn the indicated knob counterclockwise and remove it. Next, slide the seat post up or down and align one of the adjustment holes in the seat post with the indicated hole in the Frame. Insert the knob into the frame and the seat post, and turn the knob clockwise until it is tight. **Make sure that the knob is inserted through one of the adjustment holes in the seat post.**

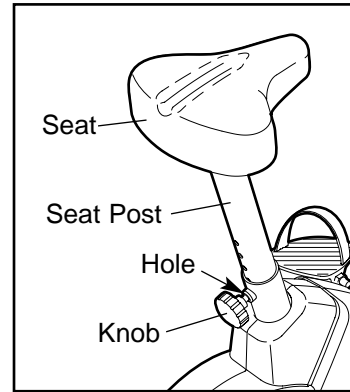


HOW TO ADJUST THE PEDALING RESISTANCE

To increase the resistance of the pedals, turn the resistance knob clockwise; to decrease the resistance, turn the knob counterclockwise. **Important: Stop turning the knob when turning becomes difficult, or damage may result.**

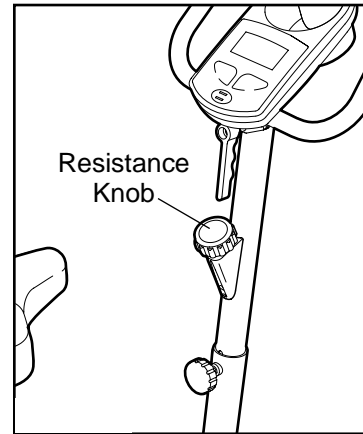


HOW TO ADJUST THE HANDLEBAR

The handlebar can be adjusted to the position that is the most comfortable for you. To adjust the handlebar, first turn the adjustment handle counterclockwise to loosen it. (Note: The adjustment handle works like a spanner. Turn the handle counterclockwise, pull it away from the handlebar, turn it clockwise, push it toward the handlebar, and then turn it counterclockwise. Repeat this procedure until the handlebar is loose.) Rotate the handlebar up or down to the desired position, and then turn the handle clockwise until it is tight.

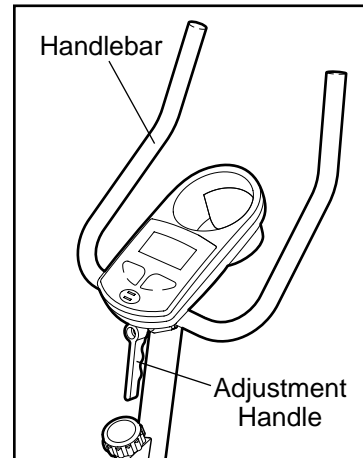


HOW TO ADJUST THE UPRIGHT

The upright can be adjusted to the height that is the most comfortable for you. To adjust the upright, first turn the indicated knob counterclockwise and remove it. Next, slide the upright up or down and align one of the adjustment holes in the upright with the indicated hole in the frame. Insert the knob into the frame and the upright, and turn the knob clockwise until it is tight. **Make sure that the knob is inserted through one of the adjustment holes in the upright.**

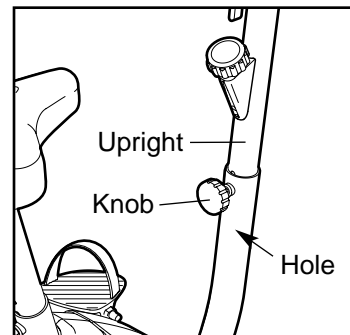


HOW TO ADJUST THE PEDAL STRAPS

To adjust the pedal straps, first pull the ends of the straps off the tabs on the pedals. Adjust the straps to the desired position, and press the ends of the straps back onto the tabs.

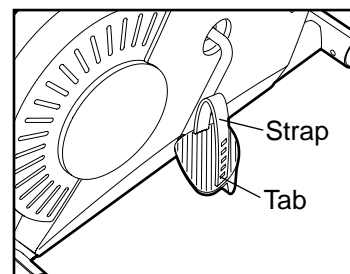

FEATURES OF THE CONSOLE

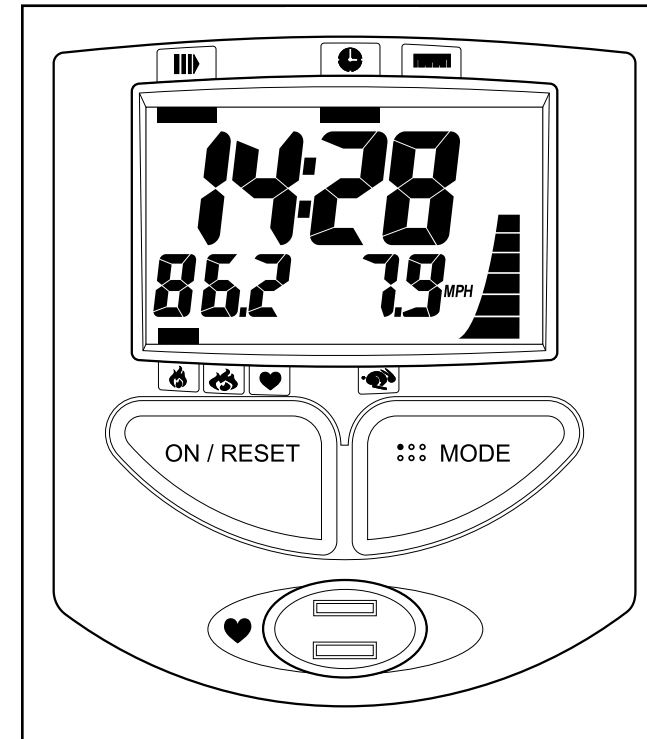


The easy-to-use console is designed to help you get the most from your workouts. As you exercise, the console will display the following modes:

- Time—This mode displays the elapsed time. Note: If you stop pedaling, the time will begin to flash.
- Distance—This mode displays the distance that you have pedaled.
- Calories—This mode displays the approximate number of calories you have burned.
- Fat calories—This mode displays the approximate number of fat calories you have burned (see FAT BURNING on page 12).
- Heart rate—This mode displays your heart rate when you use the pulse sensor.
- Speed—This mode displays your pedaling speed.
- Scan—When this mode is selected, the upper section of the display will show both the speed mode and the distance mode, and the lower left section of the display will show the calories mode and the fat calories mode.

HOW TO USE THE MANUAL MODE

- 1 Turn on the console.**
To turn on the console, press the On/Reset button or begin pedaling. Note: If there is a sheet of clear plastic on the console, remove it.
- 2 Begin pedaling and adjust the resistance of the exercise cycle.**
As you exercise, adjust the resistance of the exercise cycle as desired by turning the resistance knob.
- 3 Follow your progress with the display.**

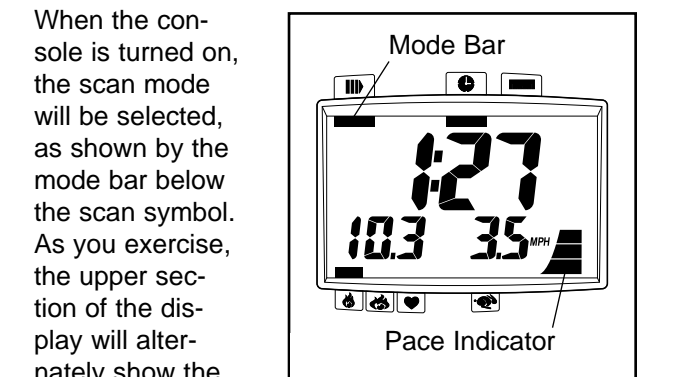

When the console is turned on, the scan mode will be selected, as shown by the mode bar below the scan symbol. As you exercise, the upper section of the display will alternately show the elapsed time and the distance that you have pedaled; the lower left section of the display will alternately show the number of calories you have burned and the number of fat calories you have burned; and the lower right section will show your pedaling speed.

In addition, the pace indicator on the right side of the display will provide a visual representation of your pedaling pace. As you increase or decrease your pace, the indicator will increase or decrease in height.