




7" COLOR TFT VIDEO DOOR PHONE —INDOOR MONITOR

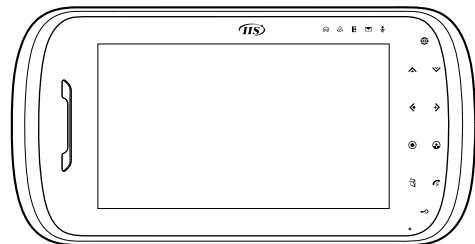

- S704C-T
- S704C-T-W80
- S704C-T-W200

TOP WAY INTELLIGENT SCIENCE & TECHNOLOGY CO.,LTD.
Sino-American Joint Venture

www.iis-home.com

CE FC UL PCF R&TTE RoHS 
ISO9001 ISO14001 OHSAS18001



Products introduction	4
Feature and parts	5
Menu function	7
Operation	13
Special function	29
Introduction for color image memory	31
Operation of W80 color image memory	32
Operation of W200 color image memory	34
Instruction of voice status	41
Operation for OSD menu	42
Troubles shooting guide	45
Specifications	46

Products introduction

Thank you for purchasing our product of building intercom system series. Please read the instructions carefully and follow the directions before installing the products. Any problem of the products, please inquire your supplier.

General features

  
- High-definition digital screen (800 * 480 pixel)
- 16:9 widescreen design, enrich your vision
- Touch button
- 2PCS outdoor units & 4PCS CCTV cameras connectable
- Color image memory: Built in 80pcs or equip with SD card which could be expand to 16G for option
- Intercom and call transfer between indoor monitor (support max. to 4 monitors)
- Message function
- Voice and video record function (for S704C-T-W200 only)
- DIY music & shortcut key selectable
- Pedal control and 2nd door calling function (optional)
- Relay output to control relevant devices like light, bell etc. (optional)
- OSD menu: Sound and image full adjustment, language selection
- Call voice adjustment with no bother (mute) option
- Monitoring, talking & door release



* **IIS** reserves the right to change or modify design, features functions and specifications without any prior notice for the improvement and promotion of products' quality. Please refer to the real products.

12071101



Feature and parts

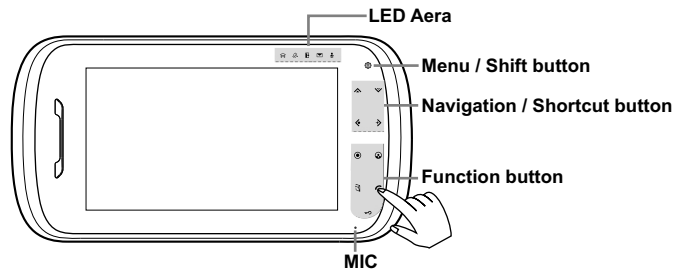

Navigation/Shortcut button	LED area	Function button
▲ → UP	🏠 → 2nd door calling LED	📞 → Intercom
▼ → DOWN	🔕 → No bother LED	📺 → Monitor outdoor / CCTV camera
← → LEFT	🏠 → Away LED	📠 → Extension switch
→ → RIGHT	✉ → Home message LED	🗣 → Talk / Stop
	📄 → Message record / play LED	🔓 → Unlock

Remark


1. During operation, please touch the center of button as the picture show.
2. To avoid operation invalid, don't wear anything in your hand, such as glove.

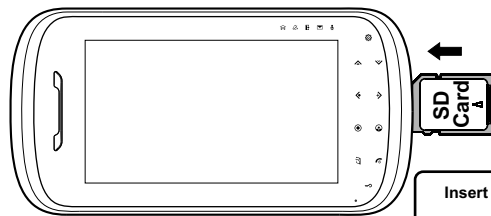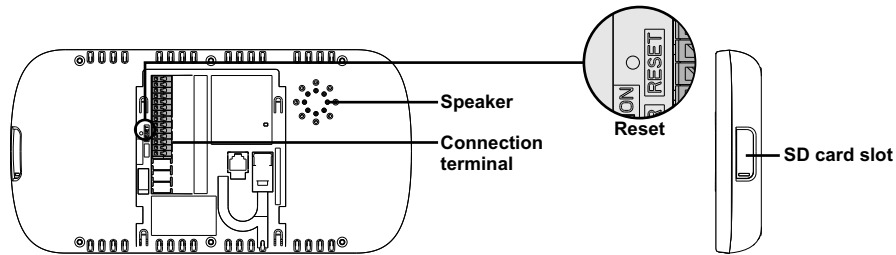

Insert SD card: insert the SD card to the slot according to the picture indicated position.
 Take out SD card: push the SD card by hand, it will be pulled out automatically.

Menu operation

1. Enter into the main menu: Hold till the unit sound DI
2. Exit the main menu: Touch or
3. Select the item: Touch or
4. From main menu to sub menu: Touch
5. From sub menu return to main menu: Touch
6. Exit the sub menu: Touch
7. Function setup: Touch

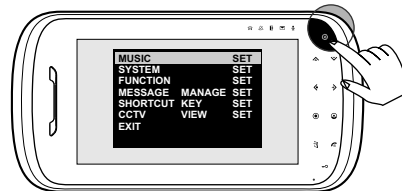

Enter into main menu:

Touch and hold , after the unit sound DI, enter into setup interface.

 
Exit main menu:

Touch / to exit.

Menu function

Music setup interface:

Under main menu interface, touch / to enter into music setup interface.



MUSIC CH1	Door 1 ring select
MUSIC CH2	Door 2 ring select
RING TIME	Ring time setup
RING VOLUME	Ring volume setup
RETURN	Return to main menu
EXIT	Exit

Enter into main menu interface:

Enter into next menu / operation: /

Operation confirm: /

Return to last menu:

Exit menu:

Direction key: / / /

Example: select music for Door 2


Under main menu interface, touch / to enter into music setup interface. Touch to choose "MUSIC CH2" item, then touch / to choose the music you need and confirm. Return to main menu by touching then / . You can touch to back to main menu interface. Or touch to exit menu and back to standby mode.

Menu function

System setup:

Under main menu interface, touch , then touch / to enter into System setup interface.

PEDAL CONTROL	Turn on/off
2nd DOOR CALL	Turn on/off
VIDEO MODE	JPG/AVI
CCTV MODE	CCTV monitor mode select
ROOM NO. SET	Room number select
RETURN	Back to main menu
EXIT	Exit

 


If the screen display "please set up on the main unit", means this function is forbidden to operation in this extension unit, please setup in the main unit.

Function setup:



 
Under main menu interface, touch , then touch / to enter into Function setup interface.

AWAY SET	Turn on/off
MUTE SET	Turn on/off
AUX. SERVICE TIME	Extension switch time setup
RETURN	Back to main menu
EXIT	Exit





Menu function

Message setup:

Under main menu interface, touch , then touch  /  to enter into Message setup interface.




DIY MUSIC	DIY music setup
GUEST MESSAGE	Setup the message for visitor
HOME MESSAGE	Setup the message for family
GUEST MESSAGE OFF	Turn on / off guest message
HOME MESSAGE OFF	Turn on / off home message
RETURN	Back to main menu
EXIT	Exit

DIY music setup/Guest/Home Message:




Under Message menu interface, touch  /  to enter into DIY music setup interface.

PLAY START	Message play
REC START	Message record
STOP	Stop current message operation
DELETE	Delete current message
RETURN	Back to last level menu

   Remark: GUEST MESSAGE is the message which the host record for visitor. It is a remind to visitor.(the operation is valid for S704C-T-W200)






Shortcut key setup:

Under main menu interface, touch , then touch  /  to enter into Shortcut key setup interface.




UP KEY SET	UP key shortcut function setup
DOWN KEY SET	DOWN key shortcut function setup
LEFT KEY SET	LEFT key shortcut function setup
RIGHT KEY SET	RIGHT key shortcut function setup
RETURN	

Shortcut key function select setup:

Under main menu interface, touch , then touch  /  to enter into Shortcut key function select setup interface.




AWAY SET	Away setup
MUTE SET	No bother setup
HOME MESSAGE PLAY	Home message play
HOME MESSAGE SET	Home message turn on
MESSAGE MENU	Enter into message manage interface
PLAY	Play the recorded video
RETURN	Back to last level menu

   Menu function




Menu function

CCTV VIEW SETUP

Under main menu interface, touch , then touch  /  to enter into CCTV camera monitor setup interface.

CCTV CHANNEL	Choose monitor CCTV camera
MONITOR CCTV1	Setup the monitor key default to monitor CCTV1
MONITOR CCTV2	Setup the monitor key default to monitor CCTV2
MONITOR CCTV3	Setup the monitor key default to monitor CCTV3
MONITOR CCTV4	Setup the monitor key default to monitor CCTV4

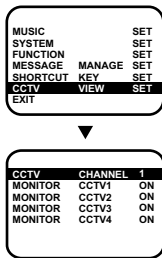


When the setup is OFF: under monitor mode, it will auto pass the outdoor camera or CCTV camera which you have been setup to OFF mode.

When all of the setup is ON:



 
When CCTV2, CCTV3 is OFF, others are ON:




Operation

1. ON/OFF

a. After connecting the power, the unit will enter into standby mode automatically, then all buttons' LED turn on. (Buttons' LED will be off automatically after 1s and power LED light on.)


Under Off mode, touch  button (pic. 1), it will sound DI, means the unit is turning on and under standby mode, power LED on.

b. Under standby mode, touch and hold , till it sounds DI DI, all buttons' LED turn off, means the unit enter into OFF mode.

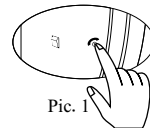


Pic. 1

2. Call remind


When outdoor camera calls in, indoor monitor's screen will display its image automatically, and  LED flashes, meanwhile sound the ring.

3. Talk/Stop

a. Talk (when outdoor camera calls in)

Touch  button (pic. 1) to enter into talk mode, outdoor unit can talk with indoor monitor.


b. Monitor to talk

Under monitor mode, touch  button to enter into talk mode, indoor monitor can talk with the monitored outdoor unit.




C. Standby to talk (Between indoor monitor and Door1)

Under standby mode, touch  button to talk with Door 1.

d. Stop


Under talk mode, touch  button to stop talk and back to standby mode.
Or wait 90s, it will automatically stop.


4. Unlock

- a. Under talk mode, touch  (pic.2) button to open the door.
- b. Under talk mode, unlock pulse time is 3s if you touch  button. If you touch and hold  button, the lock will be on mode till 8s.




5. Monitor outdoor camera and CCTV camera


a. When the system only have 1pc S704C-T indoor monitor

Monitor outdoor camera: Under standby mode, touch  to monitor Door 1, touch again to monitor Door 2. Touch third time to exit.


Remark: if the system doesn't connect second outdoor camera, it will directly exit when you touch  second time.

b. Monitor CCTV camera


Under standby mode, touch and hold  to monitor CCTV 1, touch  each time to monitor different CCTV camera. Touch  to exit.

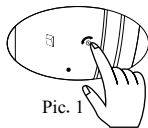

Pic. 1

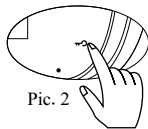

Pic. 2

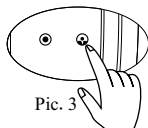


Pic. 3

For example, when you setup CCTV 2 channel as OFF, others ON. The monitor function will be operated between CCTV 1, 2 and 3.

C. Exit

 Under monitor mode, the unit will automatically exit the mode after 90s. .




Remark:

- 1. Setup the CCTV camera you need to monitor under "MAIN MENU – CCTV VIEW SET".
- 2. Please refer to Operation 11 for CCTV mode setup.

6. Music select

Door 1 music setup: after enter into MUSIC SET interface, choose MUSIC CH1, touch ◀ / ▶ to choose the music, and reserve at the same time.

 
Door 2 music setup: after enter into MUSIC SET interface, choose MUSIC CH2, touch ◀ / ▶ to choose the music, and reserve at the same time.



Remark: when the unit don't have the function of message manage, you cannot choose No.12 DIY music.


7. Ring volume adjust

 Enter into MUSIC SET interface , select RING VOLUME item ,then touch ◀ / ▶ to adjust the volume between 1/2/3/4 grade and reserve at the same time. (1 is minimum sound , 4 is loudest sound).




8. Ring time setup

 Enter into MUSIC SET interface, select RING TIME item ,then touch ◀ / ▶ to select ring time between 5s / 10s / 15s / 20s and reserve at the same time.




9. No bother setup / exit

 Enter into FUNCTION SET interface, select MUTE item, then touch ◀ / ▶ to set up. When you choose ON, meanwhile no bother LED light on, means no bother function is under ON mode. When you choose OFF, meanwhile no bother LED turn off , means unit has exited no bother mode




10. AWAY function setup / exit

 Enter into FUNCTION SET interface, select AWAY SET item, then touch / to set up . When you choose ON, meanwhile AWAY LED light on, means AWAY function is under ON mode. When you choose OFF, meanwhile AWAY LED turn off , means unit has exited AWAY mode



11. CCTV MODE setup (suitable for more monitors)

 Enter into SYSTEM SET interface, select CCTV MODE item, then touch / to set up .
 If CCTV MODE set as 1, means the monitor can only monitor CCTV camera which connect to their owns.
 If CCTV MODE set as 2, means the monitor can only monitor CCTV camera which connect to main unit.




Remark: 1. Only main unit can set up CCTV MODE function.

2. If CCTV MODE set as 2, only main unit can connect with CCTV camera, the extension units cannot connect with CCTV camera.

12. 2nd door calling function setup (optional)

 a. Under standby mode, touch and hold button to enter into main menu, select SYSTEM SET item, then touch / to enter into SYSTEM SET interface. After select 2nd DOOR CALL item, touch / to set 2nd door call ON, means 2nd door call function is under ON mode, meanwhile pedal control function turns off automatically.



Remark: This function is default to ON.

1. When the screen is off, press 2nd door's call button, the indoor monitor will sound 2nd door calling ring and LED flashes about 8s, then ring stop, meanwhile LED turns off.
2. When the screen is on, press 2nd door's call button, LED flashes about 8s then turns off.



Outdoor camera calling

 


2nd door calling



13. Pedal control switch for talk (optional)

- a. Under standby mode, touch and hold button to enter into main menu, select SYSTEM SET item, then touch / to enter into SYSTEM SET interface. After select PEDAL CONTROL item, touch / to set pedal control ON, meanwhile 2nd door calling turns off automatically.



Remark: This function is default to OFF.

- b. Under standby mode, step on the pedal control switch to monitor Door 1, step again to monitor Door 2, then step again to back to standby mode.

Under calling mode, step on the pedal control switch to enter into talking mode, step again to back to standby mode.

 
14. Extension ring function

When indoor monitor is under calling or call transfer mode, extension speaker will sound ring .

15. Extension switch time setup

Enter into SYSTEM SET interface, select AUX.SERVICE TIME item, then touch / to set up extension relay trigger time. After setup, when you connect the relevant equipment to this switch.

Touch the button to connect through the equipment. If hold touch, the switch will keep on. (the relay trigger time is default to 3s.)



16. DIY MUSIC record

Enter into MESSAGE MANAG interface, select DIY MUSIC item, then touch / to enter into operation interface. After select REC START item, touch / to enter into operation confirm interface, select “YES”, then touch / , the unit will sound “DI” , meanwhile back to operation interface and record LED turns on, means the unit is starting to record. After finish recording, the unit will sound “DI DI” , meanwhile recording LED turns off .

 


Remark: 1. During recording, pay attention to input ringtone to the MIC position.

2. DIY MUSIC can be recorded up to about 12s.

17. DIY MUSIC play

Enter into MESSAGE MANAGE interface, select DIY MUSIC item, then touch / to enter into operation interface. After select PLAY START item, touch / to play the recorded music, meanwhile PLAY LED lights on. After finish playing, PLAY LED turns off .



18. GUEST MESSAGE record

Enter into MESSAGE MANAG interface, select GUEST MESSAGE item ,then touch / to enter into operation interface. After select REC START item, touch / to enter into operation confirm interface, select “YES”, then touch / , the unit will sound “DI”, meanwhile back to operation interface and record LED turns on, means the unit is starting to record. After finish recording, the unit will sound “DI DI”, meanwhile recording LED turns off.




Remark: GUEST MESSAGE can be recorded up to about 12s. The message is recorded for visitor.

Setup GUEST MESSAGE to ON, when there is a calling, after finish ringing, guest message will be played to outdoor visitors. (Only the message which recorded on the main unit could be heard in outdoor)

19. GUEST MESSAGE play

Enter into MESSAGE MANAGE interface, select GUEST MESSAGE item, then touch / to enter into operation interface. After select PLAY START item, touch / to play the recorded message, meanwhile PLAY LED lights on. After finish playing, PLAY LED turns off .

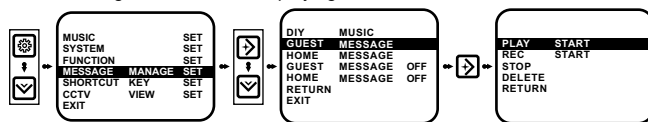

20. HOME MESSAGE record


Enter into MESSAGE MANAGE interface, select HOME MESSAGE item, then touch / to enter into operation interface. After select REC START item, touch / to enter into operation confirm interface, select “YES” , then touch / button ,the unit will sound “DI” , meanwhile back to operation interface and record LED turns on, means the unit is starting to record. After finish recording, the unit will sound “DI DI”, meanwhile recording LED turns off .



Remark: HOME MESSAGE can be recorded up to about 35s. The message is recorded for family member. Setup HOME MESSAGE to ON, the home message LED lights on.

21. HOME MESSAGE play

Enter into MESSAGE MANAGE interface, select HOME MESSAGE item, then touch / to enter into operation interface. After select PLAY START item, touch / to play the recorded message, meanwhile PLAY LED lights on. After finish playing, play LED and home message LED turn off.

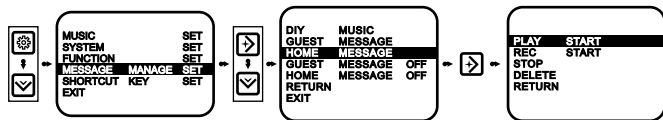

22. Message delete

Enter into MESSAGE MANAGE interface, select item you need delete, then touch / to enter into operation interface. After select DELETE item, touch / to enter into operation confirm interface, select “YES”, then touch / to delete the relevant message.




Remark: If the message is playing or recording now, stop playing or recording then delete.

23. Shortcut key function setup

This function is convenient for users' operation. For example, you want to operate away function. After enter into SHORTCUT KEY SET interface, choose DOWN KEY SET item, then touch / to enter into select interface. After choose AWAY SET item, touch / to setup this item to ON then exit.


Under standby mode, touch and hold , you can setup away mode to on or off.

Other functions' shortcut key is same operation as the above.

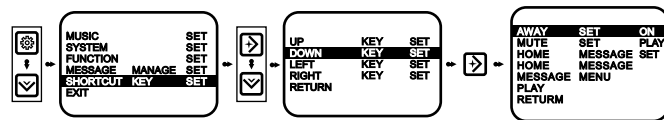



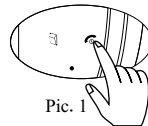


24. Intercom (suitable for more monitors)

- When there are 2 monitors, under standby mode, touch and hold intercom button of monitor A, till the unit sound “DI”, and the screen display the relevant room number. Then touch (pic.1) to call monitor B.






Pic. 1

- b. When there are more than 2 monitors, if monitor A want to call monitor B, touch and hold  of monitor A (pic.4), till the unit sound “DI” , and the screen display the relevant room number. After you see monitor B's room number, then touch  (pic.1) to call monitor B. (For example, monitor B's number is 3. touch and hold  (pic.4) after you see “3” on the number display area, then touch  (pic.1) to call.)

Remark: 1) Each time when you touch  , the screen display the relevant room number, you have 10s to continue the next operation. if you don't

operate anything within 10s, the screen will be off. You need start again.



2) Touch  , you can directly turn off the screen, no need to wait 10s to exit.



- c. During calling, only the be-called monitor could touch  to enter into talking. During talking, the talk LED light, and the top left corner of screen will display “INTERCOM” , means the monitors are under intercom mode.
- d. During calling, both side could stop calling by touching  (pic.1) for 2s.

25. Call transfer (suitable for more monitor)

When outdoor camera calls in, monitor A touch  (pic.1) to start talking. If you need transfer this call to monitor B, operation method is same as intercom.

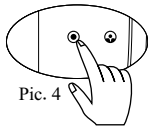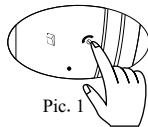After successful transferring, only monitor B will sound ring, others will get into busy mode. (For





example, you need transfer the call to NO. 3 monitor, touch  , when the screen display “3” ,touch  to transfer to No. 3 monitor.)


26. Busy mode (suitable for more monitors)

- When one of monitor is under monitor or talk mode, others will be in busy mode.
- When two monitors are under intercom mode, others will be in busy mode. After call ending, all of the monitors will back to standby mode.

27. Talk volume adjust

During talking, touch  /  to adjust talk volume. The adjustable range is 0-100. Auto reserve after exit.



28. Outdoor call remind

- The monitor under standby, monitor, intercom mode, if there is a calling, both indoor and outdoor units will sound ring.
- When monitor is talking with Door 1, now Door 2 calls in, the monitor will display  , means the other outdoor unit is calling, but no ring sound.

29. Same room number alarm (suitable for more monitors)

If monitor A's room number is same as monitor B, the unit will sound “DI” at intervals. Now you need change a new room number manually. After change, the alarm is still in, you need restart the power.

30. Communication problem alarm (suitable for more monitors)

If the unit sounded “DI DI” every 3s, means there is a communication problem between this monitor and main monitor. Please check the circuit or make sure if the main monitor is turned off. After solving the problem, touch  /  button to connect with outdoor camera, then the alarm will be cancelled automatically. (the monitor will sound communication problem alarm only when the sub monitor do the operation of monitor or talk more then 6 times.)

31. Navigation mode




Each time when you enter into monitor/ talk/ CCTV mode, the navigation button is default to OSD menu, touch  button to switch the button between OSD menu and image memory mode.

32. Button's LED guide



Under standby/ work mode, button's LED light on, if it has no operation on any button, the LED will be turned off automatically. Under LED off mode, you can touch any button to let button's LED light on. Remark: Under LED off mode, you need to light it on first, than do the relevant operation.

 
If the system can work properly, please don't reset or initialize room number, or it will cause the system improperly working.

1. Unit initialization

Under standby mode, insert the tool into the “RESET” hole to touch internal switch, until the unit sound “DI” , means initialization is successful. After reset, the ring of Door 1 is “DINGDONG” , about 20S. ( means No bother,  means Away,  means Review under color image memory mode. CCTV MODE set up 1, HOME MESSAGE and GUEST MESSAGE will be off. EXTENSION SWITCH time is default to 3s. DIY MUSIC, GUEST MESSAGE and HOME MESSAGE history will be deleted.)

2. Manually setup room number

In setup interface, choose ROOM NO. SET, touch  /  to setup. After successfully setup, the screen will display ROOM SET OK. If the room number you setup is the same as other monitor, the system will sound “DI” to alarm.



3. Automatically setup room number

- a. When the system only have 1 monitor, after connection and call from outdoor, room number will be automatically setup.
- b. When the system have 2 monitors, initialize 2 monitors first, then call from outdoor, after both monitors are successfully ringing, stop the call. Then the room number will automatically setup.
- c. When the system have more than 2 monitors, initialize all indoor monitors, then connect the power of main monitor and monitor 2 you need, call from outdoor, after successfully ringing on two monitors, stop the call. Then connect the power of monitor 3 you need, call from outdoor, after successfully ringing on all monitors , stop the call. Do the same operation for monitor 4.

The unit (W80) which with color image memory has the following functions:

1. Photo taken

The unit can take the photo with time information, max to 80pcs (W80 model)

2. Review

The users can review the taken photos under monitor or talk mode

3. Auto-off

During reviewing, if without any operation within 15s, the review function will be turned off automatically.

4. Time information display and edit

When the system under memory mode, the screen will display the time and date information and you can edit the time as well.

5. Away management


When the unit is under Away mode, the system will automatically to take the photos of each calling.

1. Auto/manual taken photos


- Under away mode, when outdoor calls in, the unit will take the photo automatically.
- During the talking between outdoor and indoor unit, touch / to take the photo with time information.

2. Review / Delete taken photos

Under image memory mode, press to enter into picture review mode. (/ to review the last/next one) Press to view the full screen picture, hold to exit. If you want to delete the picture, hold for 3s to delete.

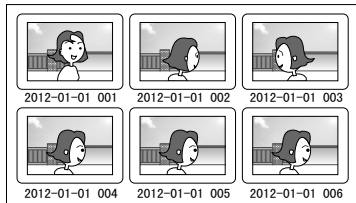**3. Time setup**

Under memory mode, hold till the screen display the below menu. Means return, means time setup, means format memory. Touch / to choose then touch to enter into time setup mode. Now the time become flashing, touch / to adjust setup. To ch to to exit time edit mode.

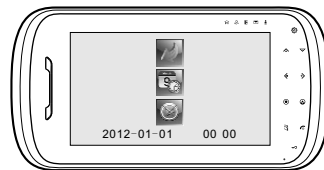**4. Format image memory**

Under memory mode, hold till the screen display the above picture, touch / to choose , then touch , the screen will display / . Touch and to format all the images, touch to exit format mode.




The unit with color image memory has the following function:

1. Color picture



The unit can record and review color picture, the picture could be recorded even after power off.


2. Auto record picture

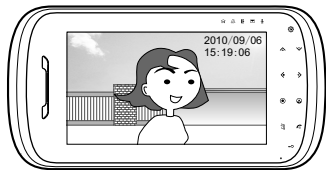Under Away mode, the unit will automatically record one picture with time.





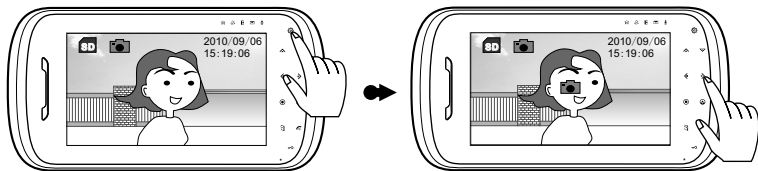


3. Manually picture record

During talk, touch  to switch to image memory mode, then touch  to record one picture with time.




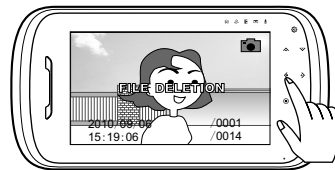
4. Review picture

Under monitor mode, touch  to switch to image memory mode. After the screen display clock, touch  to enter into picture review mode. Touch  to review picture. Under picture reviewing mode, touch  to exit this mode.

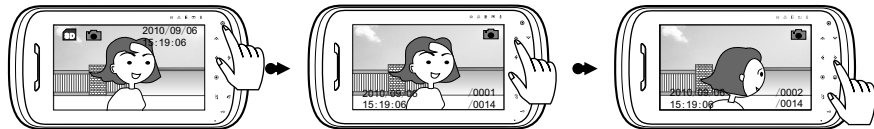

5. Delete picture

Under picture review mode, touch  for 3s to delete current reviewing picture.



6. Color video record function


The unit has the function of video record (with voice) and review, each record could be last 10s with AVI format, the video could be recorded even after power off.

7. Video record

Turn on screen, touch to switch to image memory mode. After the screen display clock, touch to record one video about 10s.

Remark: 1. During record, , , and are invalid.


2. During manually video record, the voice and video could be recorded at the same time only under TALK mode. Under other mode, only video could be recorded.

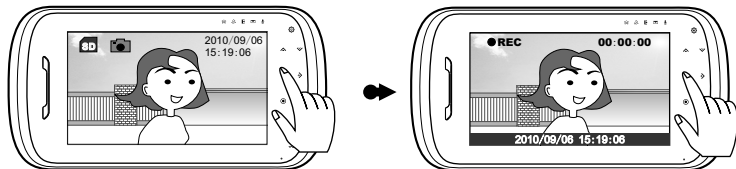





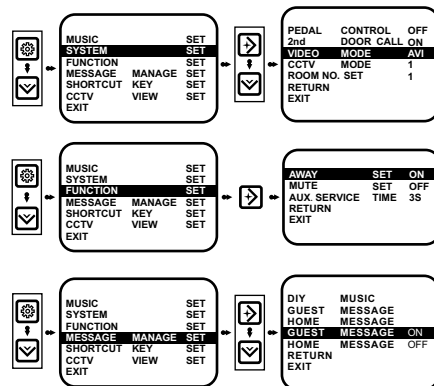

8. Auto video record


Enter into setup interface, after choose VIDEO MODE item, touch / to setup this item to AVI format, then setup AWAY SET or GUEST MESSAGE (under MESSAGE MANAGE SET interface) to ON. When there is a call, after ringing, the unit will sound the GUEST MESSAGE first, after message, the unit will sound DI, and start video recording.

Remark: Only the main unit has the function of video and voice record.





9. Video review

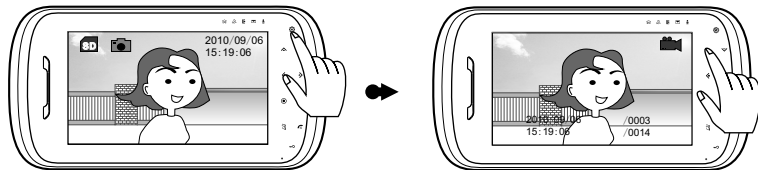
Under monitor mode, touch  to switch to image memory mode. After the screen display clock, touch  to enter into video review mode. Touch  and  button, after the screen display  , means current information is video. Touch  to play video.




Remark: 1. Under video review, navigation buttons are in valid.






2. Under standby mode, hold  to enter into picture or video review mode. (only when  button doesn't set any shortcut function)
3. Under monitor and video review mode, no voice play.

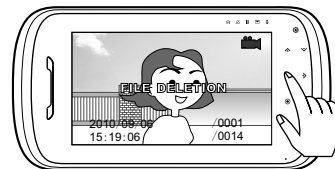10. Delete video

Under video review mode, hold  3s to delete current video. When display FILE DELETION means the video have been delete.





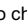


11. Time setup

Under monitor mode, touch  to switch to image memory mode. After the screen display clock, hold  3-4s to enter into setup interface. Touch  and  to choose time setup item, then touch  to enter into time setup mode. During time setup, touch  and  to edit date and time, touch  to confirm and turn to next item. After setup, it will automatically exit.



12. Format image memory and SD card

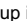Under monitor mode, touch  to switch to image memory mode. After the screen display clock, hold  3-4s to enter into setup interface. Touch  /  to choose format item, touch  to enter into format mode. Touch  /  to choose confirm, touch  to format.










- Remark: 1) For the first time using SD card, please format SD card before operation.
 2) During operation, you cannot take out SD card. After cut off the power, the time information you have setup will be lost within 7 days.
 3) If the unit doesn't have SD card, the screen will display NO SD CARD when you enter into memory interface.






- 4) During using SD card, please format SD card if the picture is abnormal.
 5) The color memory with 2GB SD card is able to save pictures more than 1000pcs or record the video for 10s per time, totally around 80 minutes.

1. Introduction of LED status

-  power LED light on, means the unit is under ON mode.
-  no bother LED light on, means the unit is under no bother mode.
-  away LED light on, means the unit is under away mode.
-  no bothre LED flash, means Door 1 is open circuit.
-  away LED flahs, means Door 2 is open circuit.
-  LED turn red, means the monitor is under voice record mode.
-  LED turn blue, means the monitor is under voice play mode.

2. Introduction of voice status

- a. "Di" at intervals, means two monitor have same room number.
- b. "Di Di" at intervals, means monitor communication problem.
- c. "Du", means the function is forbidden.
- d. "Diii", means the unit has connected through the power.
- e. "Di Di" at intervals and  LED flash, means Door 1 wiring open circuit.
 "Di Di" at intervals and  LED flash, means Door 2 wiring open circuit.

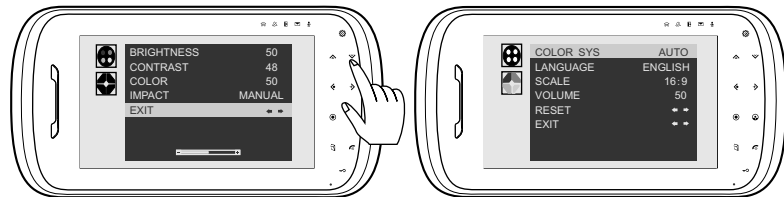

Menu A

Menu B

This menu could adjust talk volume, brightness, contrast, language, etc.

Turn on the screen,, touch to open Menu A, touch to choose the item you need adjust.

After choose EXIT item of Menu A, touch again to open Menu B.

1. Each time enter into monitor / talk/ CCTV mode, the navigation button is default to OSD menu mode. Touch / to adjust the talk volume.

2. Image brightness, contrast and color adjust

Under OSD menu mode, touch to open Menu A, touch again to choose brightness, contrast, color item. Then touch / to adjust.

3. Picture impact adjust

Under OSD menu mode, touch to open Menu A, touch again to choose impact item. Then touch / to adjust between bright, soft, standard and manual.

4. Color system setup

Under OSD menu mode, touch to open Menu B, then touch again to choose color system item. Touch / to choose between AUTO, NTSC and PAL.

5. OSD menu language setup


Under OSD menu mode, touch to open Menu B, then touch again to choose language item. Touch / to choose the language you need.

6. Screen scale setup

Under OSD menu mode, touch to open Menu B, then touch again to choose scale item. Touch / to choose between 16:9 and 4:3.

7. Picture quality reset

Under OSD menu mode, touch to open Menu B, then touch to choose reset item. Touch / to reset the picture quality to factory setting.

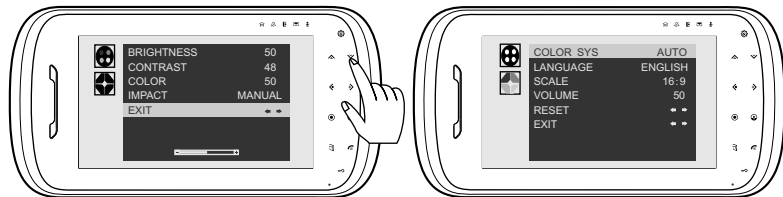

Menu A

Menu B

8. Exit OSD menu

Under OSD menu mode, touch to open Menu B, then touch to choose exit item. Touch / to exit OSD menu.

Problem	Possible reason	Solution
Totally cannot work	The unit haven't connected power. The unit is under OFF mode.	Check if the power is ON. Refer to OPERATION point "1.ON" .
Outdoor unit cannot call	The connection between indoor and outdoor unit is cut. The main monitor is OFF.	Check the connection between indoor and outdoor unit. Refer to OPERATION point "1.ON".
Can not monitor outdoor camera	The connection between indoor and outdoor unit is cut The connection between indoor and outdoor unit is short circuit	Refer SPECIAL FUNCTION point "2. Manually setup room number" to setup the room number again. Check outdoor camera's connection
Indoor monitor sound "DI DI" at intervals (more monitors)	The main monitor is OFF. The connection between this monitor and main monitor is cut.	Refer to OPERATION point "1.ON". Check the connection between this monitor and main monitor
Indoor monitor sound "DI" continuously (more monitors)	There are two monitors have a same room number.	Refer SPECIAL FUNCTION point "2. Manually setup room number" to setup the room number again .
Outdoor camera can not call in, indoor unit can not monitor outdoor and sound "DI DI" at intervals	Main monitor is OFF.	Refer to OPERATION point "a.ON".
Outdoor can hear indoor, but the voice from outdoor is too small	Talk volume is too small.	Refer to OSD menu operation "talk volume adjust", adjust the talk volume to the best quality.

Specifications

Item \ Model	S704C-T	S704C-T-W80	S704C-T-W200	
Screen	7" color TFT			
Power supply	AC100-240V ~50HZ/60HZ 15W or DC13.5V /1.5A			
Connection with extension unit	In series			
Talk	Hands-free			
Power consumption	13.5V, 850mA(max.)	13.5V, 950mA(max.)		
CCTV video input	Typical value 1Vp-p(75 ohm)			
Video output	Typical value 1Vp-p(75 ohm)			
Optional ring tone	Chord ring / Dingdong			
Connection wire length and wire requirement	30m	50m	100m	Remark: In order to make sure the best quality, the wire length from outdoor unit to the last extension unit should be less than 100m.
	RVV4*0.3	RVV4*0.5	RVV4*0.75	
Operation temperature	-10℃ to +55℃			
Optional extension unit	IIS-128C-T、IIS-S700C-T、IIS-S701C-T、S702C-T etc.			
Optional outdoor camera	All of IIS 2-wired outdoor camera			