



Installation and User Manual

Power Analyzer PAN 312





Technical data

Rated input voltage: _____ line to neutral: 185 V to 460 V; line to line: 320 V to 800 V

Rated input current (through CT): _____ 5 A

Type of electrical system: _____ three phase, balanced/unbalanced load, with/without neutral

Power supply: _____ 24-48 V AC/DC -15% +10%, 50-60 Hz

Power consumption: _____ AC: 6 VA
DC: 3.5 W

Output: _____ Serial port RS485, MODBUS communication,
9600 bit/s, 1 start bit, 8 data bit,
no parity, 1 stop bit

Overload protection: _____ continuously 6 A and 120% of rated input voltage;
for 500 ms: 36 A and 200% of rated input voltage

Display menus: _____ total 18 menus

Display refresh time: _____ 700 ms.

Current transformer ratio: _____ 1 to 999

Voltage transformer ratio: _____ 1.0 to 99.9

EMC: _____ emission EN50084-1 (residential class A);
immunity EN61000-6-2 (industrial class A)

Approval: _____ CE and UR

Standard: _____ safety EN61010 – IEC-60664

Connection: _____ screw type; maximum cable cross section: 2.5 mm² (AWG11)

Protection degree: _____ front IP40; terminal IP20

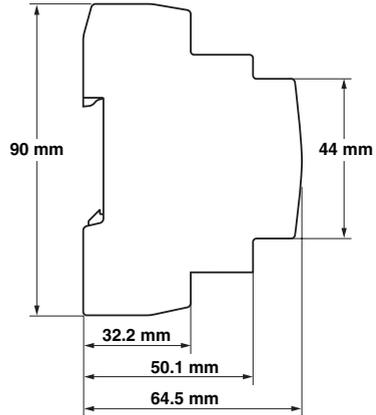
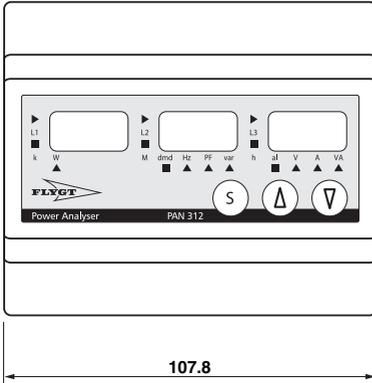
Mounting: _____ DIN-rail

Operating temperature: _____ 0°C to +50°C (32°F to 122°F)


Weight: _____ about 400 g (14.1 oz) incl. packing

Part No. _____ 40 501189

Dimensions



Connection/Electric diagram

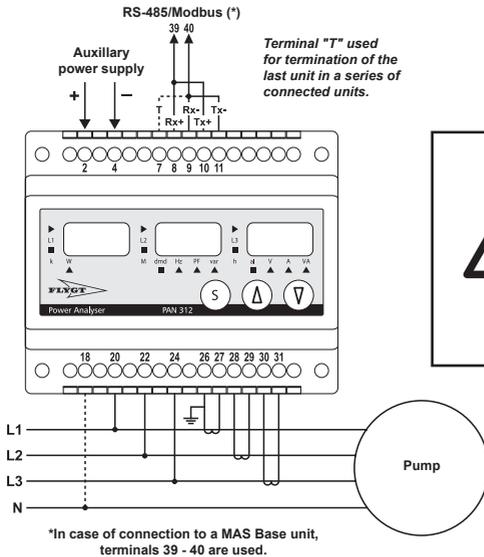



NOTE!

The RS-485/Modbus connection terminals on PAN 312 differ from the old version, PAN 311. Make sure you connect according to the picture.



WARNING

The current input can be connected to the line **ONLY** through current transformer; the connection of the CT's to earth **MUST** be carried out according to the electric diagram shown above; when the CT is connected to earth, a leakage current from 0 to 1.8 mA max is generated depending on input impedance, connection and the line voltage measured by the instrument.

**EN**

Electrical work must only be carried out by a qualified electrician and in accordance with local regulations. During installation, all equipment must be disconnected from the power supply without any possibility of being made live. Terminals 26, 27, 28, 29, 30 and 31 are connected to voltages up to 800 V.

CS

Práce na elektrickém zařízení musí provádět pouze kvalifikovaný elektrikář podle místních předpisů. Během instalace musí být veškeré zařízení odpojeno od napájení bez jakékoliv možnosti, že by se mohlo dostat pod napětí. Svorky 26, 27, 28, 29, 30 a 31 jsou připojeny k napětím až 800 V.

DA

Arbejde på elektriske installationer må kun udføres af en autoriseret elektriker og i overensstemmelse med de lokale forskrifter. Under installationsarbejdet skal al udstyret være koblet fra strømforsyningen uden nogen muligheder for at kunne aktiveres. Stik 26, 27, 28, 29, 30 og 31 er tilsluttet spændinger på op til 800 V.

DE

Arbeiten an der Elektrik sind ausschließlich von einem ausgebildeten Elektriker und gemäß den geltenden Bestimmungen vorzunehmen. Während der Installation ist die Stromversorgung zu allen Geräte zu unterbrechen und jede Möglichkeit auszuschließen, dass diese wieder eingeschaltet wird. Anschlüsse 26, 27, 28, 29, 30 und 31 können mit Spannungen von bis zu 800 V versorgt werden.

EL

Οι ηλεκτρολογικές εργασίες πρέπει να εκτελούνται μόνο από ειδικευμένο ηλεκτρολόγο και σύμφωνα με τους τοπικούς κανονισμούς. Κατά τη διάρκεια της εγκατάστασης, ολόκληρος ο εξοπλισμός πρέπει να είναι αποσυνδεδεμένος από την ηλεκτρική τροφοδοσία, χωρίς να υπάρχει το ενδεχόμενο να τεθεί υπό τάση. Οι ακροδέκτες 26, 27, 28, 29, 30 και 31 συνδέονται σε τάσεις μέχρι και 800 V.

ES

Los trabajos eléctricos deberán encargarse exclusivamente a un electricista cualificado y cumplir la normativa local. Durante la instalación, todo el equipo deberá permanecer desconectado de la alimentación eléctrica de manera que sea imposible que reciba corriente. Los bornes 26, 27, 28, 29, 30 y 31 están conectados a tensiones que pueden llegar a 800 V.

ET

Elektritööd võib teha üksnes kvalifitseeritud elektrimontöör ning tööde teostamisel tuleb järgida kõiki piirkonnas kehtivaid nõudeid. Paigaldamise ajaks tuleb kõik seadmed vooluvõrgust eraldada ning igasugune võimalus nende voolu alla sattumiseks peab olema välistatud. Klemmid 26, 27, 28, 29, 30 ja 31 ühendatakse kuni 800-voldise pingega.

**FI**

Sähkötyöt saa tehdä vain pätevä sähköasentaja, ja niissä on noudatettava paikallisia määräyksiä. Asennustöiden ajaksi laitteet on aina kytkettävä irti sähköverkosta ja huolehdittava, ettei niitä voi vahingossa kytkeä päälle. Liittimet 26, 27, 28, 29, 30 ja 31 liitetään enintään 800 V jännitteeseen.

FR

Les travaux électriques doivent exclusivement être effectués par un électricien professionnel et conformément aux réglementations locales. Pendant l'installation, l'ensemble de l'équipement doit être débranché de l'alimentation électrique et aucune partie ne doit rester sous tension. Les terminaux 26, 27, 28, 29, 30 et 31 sont branchés sur des tensions pouvant atteindre 800 V.

HU

Elektromos munkákat csak szakképzett villamos szakember végezhet, betartva a helyi előírásokat. Telepítés során minden berendezést le kell választani az elektronos hálózatról úgy, hogy az ne legyen visszakapcsolható. A 26, 27, 28, 29, 30 és 31 végberendezések maximum 800 V feszültségre kapcsolódnak.

IT

Le connessioni elettriche vanno effettuate esclusivamente da un elettricista qualificato in conformità alle normative locali. Durante l'installazione, tutta l'apparecchiatura va disconnessa dall'alimentazione di rete senza alcuna possibilità che diventi sede di potenziale elettrico. I terminali 26, 27, 28, 29, 30 e 31 sono connessi a tensioni fino ad 800 V.

LT

Elektros darbus turi atlikti tik kvalifikuotas elektrikas, laikydamasis vietinių taisyklių. Montavimo metu visa įranga turi būti atjungta nuo srovės tiekimo; neturi būti nei menkiausias srovės tiekimo atsinaujinimo galimybės. 26, 27, 28, 29, 30 ir 31 gnybtai prijungiami prie iki 800 V įtampos.

LV

Tikai kvalificēts elektrikis ir tiesīgs veikt elektrības darbus atbilstoši vietējiem noteikumiem. Uzstādīšanas laikā visam aprīkojumam jābūt atvienotam no energoapgādes, izslēdzot jebkādu nejaušas ieslēgšanas varbūtību. Terminālu Nr. 26, 27, 28, 29, 30 un 31 pieslēdz spriegumam līdz 800 V.

NL

Werkzaamheden aan elektrische installaties mogen alleen conform de geldende voorschriften worden uitgevoerd door vakbekwame personen. Tijdens werkzaamheden aan elektrische installaties moet alle apparatuur op een beveiligde wijze spanningsloos zijn. De aansluitingen 26, 27, 28, 29, 30 en 31 zijn aangesloten op een spanning tot 800 V.

**PL**

Prace elektryczne muszą być wykonywane przez wykwalifikowanych elektryków zgodnie z obowiązującymi przepisami. Podczas instalacji sprzęt musi być odłączony od źródła zasilania, tak aby niemożliwe było wystąpienie napięcia na jakimkolwiek elemencie. Złącza 26, 27, 28, 29, 30 i 31 są podłączone do napięcia mogącego osiągać 800 V.

PT

O trabalho eléctrico deve ser realizado por um electricista qualificado em conformidade com os regulamentos locais. Durante a instalação, todo o equipamento deve ser desligado da fonte de alimentação eléctrica sem nenhuma hipótese de activação eléctrica. Os terminais 26, 27, 28, 29, 30 e 31 estão ligados a tensões de 800 V no máximo.

SK

Elektrické práce môže uskutočňovať iba kvalifikovaný elektrikár, pričom v súlade s platnými predpismi. Pri inštalácii sa všetky zariadenia musia odpojiť od napájacieho zdroja. Musí sa vylúčiť akákoľvek možnosť pripojenia napätia. Svorky 26, 27, 28, 29, 30 a 31 sú pripojené na napätia dosahujúce až 800 V.

SL

Električarska dela mora izvesti kvalificiran strokovnjak - električar, v skladu z lokalnimi pravili in zahtevami. Med instalacijo morajo biti vse naprave izključene in ločene od omrežja, ter zavarovane pred nezaželenim vklopom. Priključki 26, 27, 28, 29, 30 in 31 so priključeni na napetost do 800 V.

SE

Elarbeten får endast utföras av en behörig elektriker och i enlighet med gällande lagstiftning. Under installationen måste all utrustning vara bortkopplad från strömförsörjningen och ska inte kunna göras strömförande. Uttagen 26, 27, 28, 29, 30 och 31 är anslutna till spänning på upp till 800 V.



EN

Do not connect the instrument to the output side of a variable frequency drive (between the VFD and the pump) in order to avoid malfunctioning or damage.

CS

Nepřipojujte přístroj k výstupní straně budiče s proměnným kmitočtem (mezi budič a čerpadlo), aby nedošlo k poruše nebo poškození.

DA

For at forhindre fejl eller beskadigelse må instrumentet ikke sluttes til udgangssiden af et variabelt frekvensdrev (mellem VFD'et og pumpen).

DE

Zur Vermeidung von Funktionsstörungen bzw. Beschädigungen darf das Gerät nicht an die Ausgangsseite eines frequenzgestellten Antriebs (zwischen dem Mehrfrequenzmonitor und der Pumpe) angeschlossen werden.

EL

Για την αποφυγή δυσλειτουργίας ή βλάβης, μη συνδέετε το όργανο στην πλευρά εξόδου ενός συστήματος μετάδοσης κίνησης μεταβλητής συχνότητας (μεταξύ του VFD και της αντλίας).

ES

Para evitar que se produzcan fallos de funcionamiento o averías, no conecte el aparato en el lado de la salida de un variador de velocidad (VFD), es decir, entre éste y la bomba.

ET

Töökindluse tagamiseks ja rikete vältimiseks ei tohi seadet ühendada reguleeritava sagedusega ajami väljundahelasse (ajami ja pumba vahele).

FI

Älä liitä laitetta muuttuvataajuuskäytön lähtöpuolelle (käytön ja pumpun välille), jotta järjestelmän toiminta ei häiriinny tai järjestelmä vaurioidu.

FR

Afin d'éviter tout risque de dysfonctionnement ou de dommage, ne branchez pas l'appareil sur le côté sortie d'un système d'entraînement à fréquence variable (VFD) (entre le VFD et la pompe).

HU

A hibás működés és károsodás elkerülése érdekében ne csatlakoztassa a készüléket a változtatható frekvencia-szabályozó kimeneti oldalára (a VFD és a szivattyú közé).

IT

Non connettere lo strumento all'uscita di un'unità a frequenza variabile (fra l'unità a frequenza variabile e la pompa) onde evitare funzionamenti errati o danni.

**LT**

Nejunkite prietaiso prie kintamo dažnio pavaros išvado pusės (tarp kintamo dažnio pavaros ir siurblio), kad išvengtumėte blogo veikimo ar pažeidimų.

LV

Ierīci nedrīkst pievienot mainīgas frekvences pievada izvades pusei (starp mainīgās frekvences pievadu un sūkni), lai izvairītos no ierīces nepareizas darbības vai bojājumiem.

NL

Sluit het apparaat niet aan op de uitgangszijde van een aandrijving met variabele frequentie (tussen de VFD en de pomp) omdat dit storing of schade kan veroorzaken.

PL

Aby uniknąć niewłaściwego działania lub uszkodzenia urządzenia, nie należy go podłączać do wyjścia napędu ze zmienną częstotliwością (między napędem VFD a pompą).

PT

Não ligue o instrumento à saída de uma engrenagem motriz de frequência variável (entre a VFD e a bomba) de forma a evitar mau funcionamento ou avaria.

SK

Nepripájajte prístroj k výstupu pohonu s frekvenčnou reguláciou (medzi VFD a čerpadlo). Takto vylúčíte riziko chybnéj funkcie alebo poškodenia.

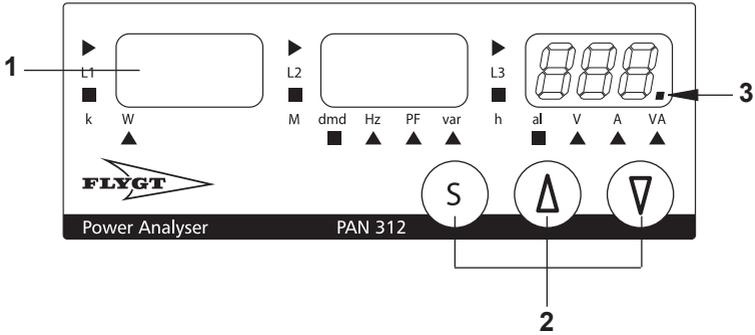
SL

Ne priključujte instrumenta na izhodno stran variabilnega frekvenčnega pogona (med VFD in črpalke), s tem se izognete nepravilnemu delovanju ali poškodbam naprave.

SE

Anslut aldrig instrumentet till utgångssidan på en frekvensomriktare (mellan frekvensomriktaren och pumpen) eftersom det då kan uppstå skador och funktionsfel.

Front panel description



1. Display

LED display with alphanumeric indications to:

- display configuration parameters;
- display all the measured variables.

2. Key pad

To program the configuration parameters and the display of variables.



Key to:

- enter **Setup** mode when in **View** mode
- enter **Editing** mode for a function when in **Setup** mode
- confirm selection or value



Keys to:

- step through view menus
- step through functions in setup menus
- change selection or values when in **Editing** mode

3. Decimal point blinking

When measuring voltage: Phase to phase

When measuring power: Wrong connection

k kilo (1000)

W Active power (Watt)

M Mega (10⁶)

dmd Displayed value is an average formed over 1 - 30 minutes (configurable)

Hz Frequency

PF Power factor

var Reactive power (voltampere reactive)

h hours, used to indicate kWh

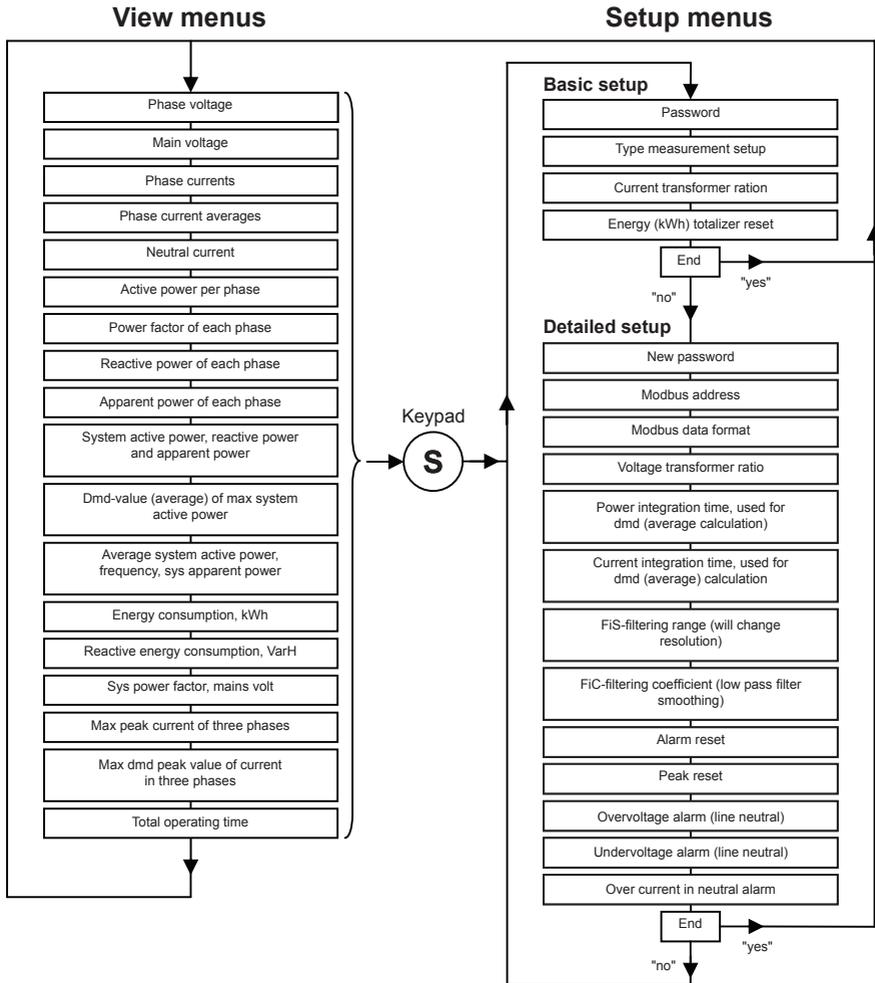
al alarm

V Volt

A Ampere

VA VoltAmpere

Menu structure



The menu structure is divided in two parts; View and Setup

View:

- 18 menus displaying system variables and measures values

Setup:

- Divided in two levels:
 - Basic setup level for setting functions necessary for the PAN 312 to work. Usually enough for use with MAS.
 - Detailed setup level for setting more advanced functions.

Key pad actions - Setup mode



NOTE!

Read the safety precautions and the specification carefully.

Connect wires according to the wiring diagram.

Key pad functions in Setup mode

- Ⓢ ● enter **Setup** mode when in **View** mode
- enter **Editing** mode for a function to change value/selection, "**PrG**" shown in the display
- confirm selections or value

- ▲ ● scroll to the previous function
- in **Editing** mode ("**PrG**" in display) increase parameter value or change selection

- ▼ ● scroll to the next function
- in **Editing** mode ("**PrG**" in display) decrease parameter value or change selection



NOTE!

To accept changes made on the setup functions you must step to the "End" parameter (either function number 5 or number 19) and confirm with the "S" button.

In case no key is pressed for 30 seconds, the display reverts to the View mode and possible parameter settings are lost.

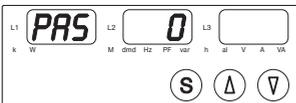
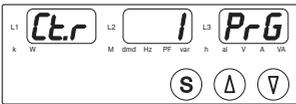
Meaning of the third display in Setup mode



If the third (rightmost) display reads "**r.XX**" (where XX is the program revision number e.g. 01, 02 or 03) or is **empty** (depends on revision number) you are in **Setup** mode but not in **Editing** mode.

To enter **Editing** mode to change the parameter value/selection press '**S**'. The third display now reads "**PrG**".



Basic setup

Set the PAN 312 using the key pad and go through the following steps:






		Default	
0.	Press 'S' to enter Setup mode.		
1.	 	<p>"PAS": If you enter the correct password you access the setup main menu.</p> <p>Enter correct password (default is '0') using ▲ and ▼. Confirm by pressing 'S'.</p>	0
2.	 	<p>"SYS" (System selection). If you want to change system mode press 'S' to enter editing mode "PrG" and choose the correct electrical system with ▲ and ▼. Confirm by pressing 'S'.</p> <p>Press ▼ to go to the next setup function. Press ▲ to go to the previous setup function.</p> <p>"SYS": electrical system selection, choose the correct electrical system.</p> <p>"3P.n": 3-phase unbalanced load with or without neutral.</p> <p>"3P.A": 3-phase ARON.</p> <p>"3P": 3-phase balanced load.</p> <p>"2P": 2-phase</p> <p>"1P": 1-phase</p>	3P.n
3.	 	<p>"Ct.r" (Current transformer ratio). Press 'S' to enter editing mode "PrG" and enter value (1 – 999) using ▲ and ▼. Confirm by pressing 'S'.</p> <p>Example: If the primary of the CT is 300A and the secondary is 5A, the CT ratio is 60 (obtained from the calculation: 300/5).</p> <p>Press ▼ to go to the next setup function. Press ▲ to go to the previous setup function.</p>	1

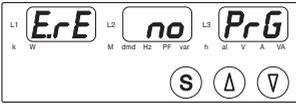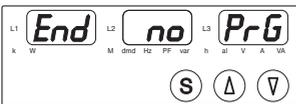		Default	
4.	 	<p>“E.rE” (Reset of energy and hour meters*). If you want to reset the energy and hour meters press ‘S’ to enter editing mode “PrG” and use ▲ and ▼ to select ‘YES’. Confirm by pressing ‘S’</p> <p>Press ▼ to go to the next setup function. Press ▲ to go to the previous setup function.</p>	No
5.	 	<p>“End” (Exit Setup mode).</p> <p>IMPORTANT! Press ‘S’ to confirm new parameters or selections and leave the Setup menu!</p> <p>To enter Detailed Setup use ▲ and ▼ to select ‘no’. Confirm by pressing ‘S’.</p>	Yes

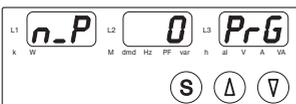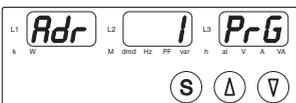Detailed setup



		Default	
6.	 	<p>“n_P” (New password) is shown. If you want to change password, press ‘S’ to enter editing mode “PrG”, then use ▲ and ▼ to change value. Confirm by pressing ‘S’.</p> <p>Press ▼ to go to the next setup function. Press ▲ to go to the previous setup function.</p>	0
7.	 	<p>“Adr” (Instrument serial port Modbus address). Press ‘S’ to enter editing mode “PrG” and enter value (1 – 255) with ▲ or ▼. Confirm with ‘S’.</p> <p>Press ▼ to go to the next setup function. Press ▲ to go to the previous setup function.</p>	255

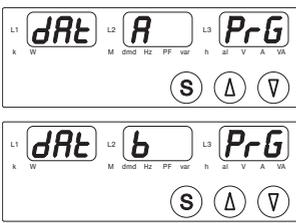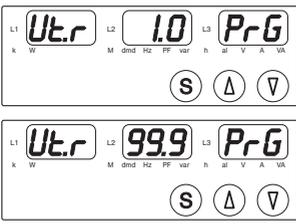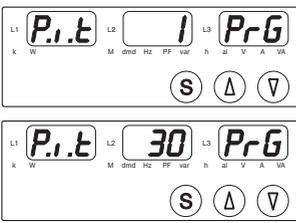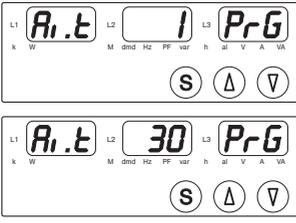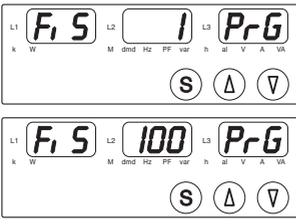*The energy meter is read by the MAS base unit while the hour meter is only an internal meter. Making this reset will reset the MAS energy meter but will not affect the MAS run time meter in any way.

		Default	
8.		<p>“dAt” (Modbus data format). If you want to change the Modbus data format (swap the order of the data flow), press ‘S’ to enter editing mode “PrG”, and use ▲ and ▼ to select wanted format. Confirm by pressing ‘S’.</p> <p>“A”: LSB first, MSB last. “B”: MSB first, LSB last.</p> <p>Press ▼ to go to the next setup function. Press ▲ to go to the previous setup function.</p>	A
9.		<p>“Ut.r” (Voltage transformer ratio). Press ‘S’ to enter editing mode “PrG” and enter value (1.0 to 99.9) using ▲ or ▼ and confirm by pressing ‘S’.</p> <p>Example: If the primary of the VT is 5kV and the secondary is 100V, the VT ratio is 50 (obtained from the calculation: 5000/100).</p> <p>Press ▼ to go to the next setup function. Press ▲ to go to the previous setup function.</p>	1
10.		<p>“P.i.t” (Power integration time), is used to calculate ‘Power dmd’ (Power mean value).</p> <p>Press ‘S’ to enter editing mode “PrG” and enter time over which the average is formed (1 - 30 minutes) with ▲ or ▼ and confirm by pressing ‘S’.</p> <p>Press ▼ to go to the next setup function. Press ▲ to go to the previous setup function.</p>	15
11.		<p>“A.i.t” (Amperage integration time) is used to calculate ‘Thermal current’.</p> <p>Press ‘S’ to enter editing mode “PrG” and enter time over which the average is formed (1 - 30 minutes) with ▲ or ▼ and confirm by pressing ‘S’.</p> <p>Press ▼ to go to the next setup function. Press ▲ to go to the previous setup function.</p>	15
12.		<p>“Fi.s” (Filter range). Press ‘S’ to enter editing mode “PrG” and set the operating range of the digital filter with ▲ or ▼ and confirm by pressing ‘S’. The value is expressed as % of the full scale value.</p> <p>Press ▼ to go to the next setup function. Press ▲ to go to the previous setup function.</p>	2

		Default	
13.	 	<p>"Fi.c" (Filter coefficient). Press 'S' to enter editing mode "PrG" and enter the coefficient value (1 - 16) with ▲ or ▼ and confirm by pressing 'S'. A higher value increases the stability and the settling time of the measurements.</p> <p>Press ▼ to go to the next setup function. Press ▲ to go to the previous setup function.</p>	2
14.	 	<p>"Ar.E" (Alarm reset*). If you want to reset the alarms press 'S' to enter editing mode "PrG" and use ▲ and ▼ to select 'YES'. Confirm by pressing 'S'.</p> <p>Press ▼ to go to the next setup function. Press ▲ to go to the previous setup function.</p>	No
15.	 	<p>"Pr.E" (Peak reset). If you want to reset the Wdmd and Amax press 'S' to enter editing mode "PrG" and use ▲ and ▼ to select 'YES'. Confirm by pressing 'S'.</p> <p>Press ▼ to go to the next setup function. Press ▲ to go to the previous setup function.</p>	No
16.	 	<p>"AL- " (Overvoltage: Line-Neutral*). Press 'S' to enter editing mode "PrG" and set the trip limit with ▲ or ▼. Confirm with 'S'. Voltage exceeding entered value will trigger an alarm (blinking LED: Al).</p> <p>Press ▼ to go to the next setup function. Press ▲ to go to the previous setup function.</p>	0
17.	 	<p>"AL_ " (Undervoltage: Line-Neutral*). Press 'S' to enter editing mode "PrG" and set the trip limit with ▲ or ▼. Confirm by pressing 'S'. Voltage below entered value will trigger an alarm (blinking LED: Al).</p> <p>Press ▼ to go to the next setup function. Press ▲ to go to the previous setup function.</p> <p>Note: If Overvoltage and Undervoltage trip limits are the same, both alarms are disabled.</p>	0

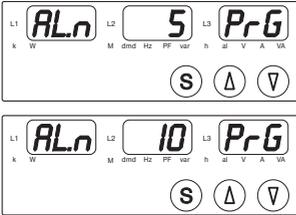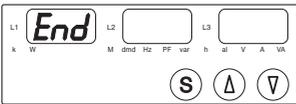*Only internal alarms in the PAN 312. Resetting alarms and setting alarm limits will not affect the MAS alarms in any way.

		Default	
18.		<p>“AL.n” (Overcurrent in the Neutral). Press ‘S’ to setup mode “PrG” and set the trip limit with ▲ or ▼. Confirm by pressing ‘S’.</p> <p>A current through neutral exceeding the trip limit will trigger an alarm (LED: AI). If the ‘AL.n’ value is 0, the neutral current alarm function will be disabled. The alarm status is displayed by a blinking LED.</p> <p>Press ▼ to go to the next setup function. Press ▲ to go to the previous setup function.</p>	0
19.		<p>“End” (Exit Setup mode).</p> <p>IMPORTANT! Press ‘S’ to confirm new parameters or selections and leave the Setup menu!</p> <p>Press ▼ to go to the next setup function. Press ▲ to go to the previous setup function.</p>	

*Only internal alarms in the PAN 312. Resetting alarms and setting alarm limits will not affect the MAS alarms in any way.

Key pad actions - View mode

Key pad functions in View mode

-  • enter **Setup** mode when in **View** mode
-  • scroll to the previous displayed system variable
-  • scroll to the next displayed system variable

Menu 1




System active power (W), system reactive power (var), and system apparent power (VA).

Menu 2



dmd*-value of system active power (W), system frequency (Hz), dmd*-value of apparent power (VA).

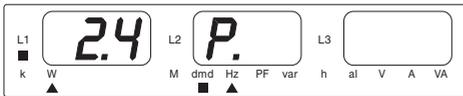Menu 3



dmd*-value of maximum system active power (W).
P = Peak.

Menu 4




Total active energy consumption kWh. The screen value is 29516416.1 kWh.

Menu 5



Total reactive energy consumption varh. The screen value here is 29516432.2 kvarh.

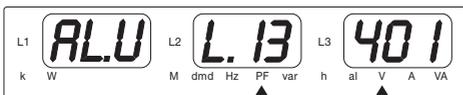
Menu 6



System power factor, Phase to phase voltage. Voltage alarm AL.U is activated only if one of the phase voltages is outside of the set limit.

*dmd = demand means average value during selected integration time from 1 to 30 minutes. dmd is used by electricity suppliers as input for billing.

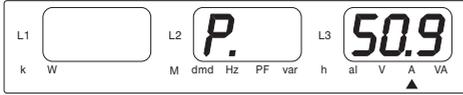Menu 7




Maximum current among the three phases.
P = Peak.

Menu 8



dmd*-value of maximum current among the three phases.

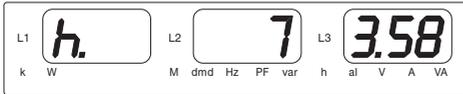Menu 9



Total operating time. The screen here shows 73.58 hours.

Menu 10



Phase voltage (phase to neutral) for each phase.
V L1-N, V L2-N, V L3-N.

Menu 11



Phase to phase voltage. VL12, VL23, VL31.
Decimal points blink.

Menu 12




Phase currents.

Menu 13



dmd*-value of three phase current.

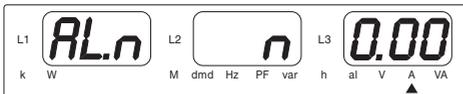Menu 14



Neutral current.
If neutral current alarm is active, "AL.n" is shown.
If neutral current alarm is not active, "n" is shown.

Menu 15



Active power of each phase. WL1, WL2, WL3.
Decimal points blink if power is negative (generated power, or wrong polarity connection of CT).

*dmd = demand means average value during selected integration time from 1 to 30 minutes. dmd is used by electricity suppliers as input for billing.

Menu 16



Power factor of each phase, PF L1, PF L2, PF L3. The example shows a power factor of 0.12, 0.16 and 0.12 for an electric motor.

Menu 17



Reactive power of each phase. var1, var2, var3. Decimal points blink if power is negative (generated power, or wrong polarity connection of CT).

Menu 18



Apparent power (VA) of each phase, VA L1, VA L2, VA L3.

*dmd = demand means average value during selected integration time from 1 to 30 minutes. dmd is used by electricity suppliers as input for billing.

