



HD21D12-940

HD SDI 1080p WDR DNR 12 IR OSD Indoor Dome Camera



USER MANUAL

FEATURES

- SDI 1080p - **1920 x 1080**
- 1/2.9" Sony Exmor
- 4.0mm Fixed Lens
- 0.5 Lux
- 12 IR LED
- IR distance up to 25ft / 7.5m
- 700mA max
- 12V DC




Please read the Manual before attempting to use this product.

Specifications and appearance are subject to change without notice.



HDC-30

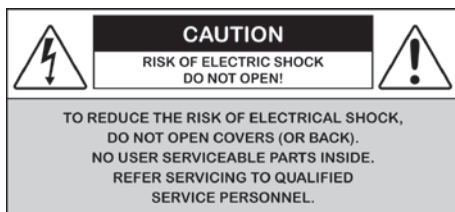

Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems.)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

CAUTION

1. Never point the camera toward the sun

Do not expose the lens directly to the sun or to strong light as this may damage the pick-up device.

2. Handle this camera with care

Avoid any shock or bumping of the camera. Improper handling could damage the camera.

3. Requires a proper operating environment

This camera is designed for indoor use. The allowable temperature range for operation of this camera is between 14°F ~ 122°F / -10°C ~ 50°C.

4. Clean the front face or lens

It is recommended that the surface be cleaned every 3–6 months. Cleaning should be done by using a chamois, a very fine soft cloth, lens tissue, or cotton tipped applicator and ethanol to carefully remove any fingerprint or dust.

5. Check the power source voltage

The power source voltage should be within the specified range. (Camera must meet the specifications). Camera must be connected to a surge protector at all times.

6. Objects and liquid entry

Never push objects of any kind into this camera as this may touch dangerous voltage points of short out parts that could result in a fire or electric shock. Never spill any kind of liquid on the video product.

7. Servicing

Do not attempt to service this video product by yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all service to qualified servicing personnel.

8. Damage requiring service

Unplug this video product from the wall outlet and refer service to qualified servicing personnel under the following conditions:

- When the power supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the video product.
- If the video product has been exposed to rain or water.
- If the video product has been dropped or the cabinet has been damaged.
- When the video product exhibits a distinct change in performance.

LIMITED WARRANTY

OKINA USA products are covered under warranty for one (1) years from the date of purchase. The warranty will automatically be voided if any of the following occurs:

1. Camera sticker is removed

If the camera sticker is removed, we will not be able to confirm any information regarding when and where the product was purchased. We have no other way to verify the purchase record without the serial number on the camera sticker; therefore, it should not be removed.

2. Camera is modified in any way


If the camera is scratched, damaged, or modified in a manner not described in this manual, the warranty will be voided immediately. It is the customer's responsibility to keep the camera in good condition.

3. Video or power cable is cut

The video cable and the power cable should not be tampered with. Cutting or modifying of the cables will result in termination of the warranty.



PACKAGE CONTENTS

1. One (1) HD21D12-940 Camera
2. Two (2) Mounting Screws
3. One (1) User Manual

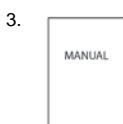


* For any returns, please include all components listed above with original packaging in **Resalable Condition**. **Absolutely No Returns** will be accepted if any component is missing/damaged.

DIMENSIONS (Unit: inches / mm)

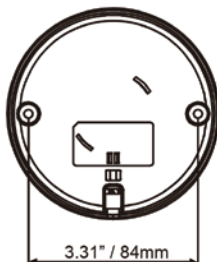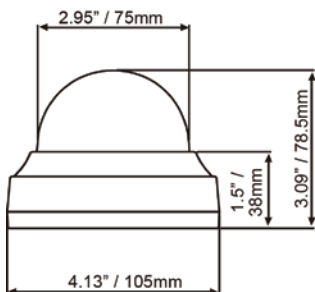

PARTS AND FUNCTIONS

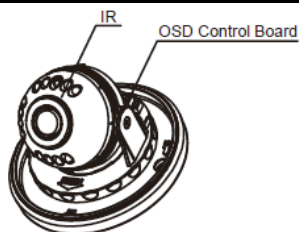

OSD Control Board



IR LED Board



INSTALLATION



BASE ASSY



Screw




Decoration Ring
Dome cover

1. Fix the base housing with the supplied 2pcs of screws on the ceiling or wall.
2. Adjust the camera direction by turning the gimbal bracket.
3. Firmly fix the decoration ring into the base.

3-AXIS

Ceiling Type

Wall Type

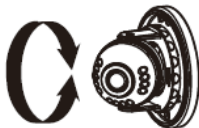

TILT SWIVEL 355°


PAN SWIVEL 355°



Set Camera DIRECTION (3-axis movement)

Set Camera DIRECTION (3-axis movement)

CABLE CONNECTION

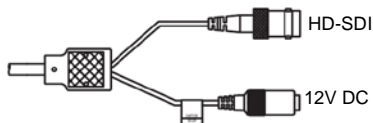

OSD

NOTE: Camera menu is subject to change without prior notice.

MAIN MENU



Functions can be setup using the "Menu Key Command" from the Visca protocol.

The menu consists of the "Main Menu" and "Sub Menu".

The main menu is displayed where 6 camera functions can be selected.


The sub-menu is displayed after selecting a main menu item.

If you want to save the menu, select [SAVE].

If you do not want to save the menu, select [EXIT] then Power off -> on.

If you want to set the menu to default, select [DFLT].

EXPOSURE

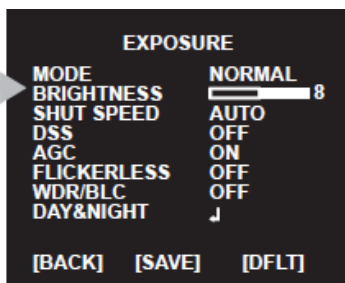

MODE: Select LENS type

NORMAL, DEBLUR


BRIGHTNESS: Adjust brightness level

0(dark) ~ 20(bright) steps

SHUT SPEED: Can be set in AUTO or MANUAL


AUTO / x2, x3, x4,
 1/30(25), 1/60(50), 1/120(100), 1/240, 1/500, 1/1000, 1/2000, 1/4000, 1/8000, 1/16000, 1/30000, 1/60000 sec
 DSS: Select maximum DSS(Digital Slow Shutter)
 OFF / x2, x3, x4
 FLICKERLESS: Select Flickerless mode
 OFF / ON (remove screen flicker)
 AGC: Select Auto Gain Control
 OFF / ON
 WDR/BLC: Select WDR (Wide Dynamic Range) or BLC (Back Light Compensation)
 WDR[⚡]
 LEVEL: Adjust WDR level.
 LOW, MID-LOW, MIDDLE, MID-HIGH, HIGH
**WDR doesn't work in Shutter Manual Mode.*
 BLC[⚡]
 POSITION: Adjust the window position
 SIZE: Adjust the window size
**Can't use WDR and BLC at the same time.*
(When WDR On, BLC is Off. And when BLC is On, WDR is Off)
 DAY&NIGHT: Select Day&Night
 MODE: AUTO / EXT-IN / DAY / NIGHT
 AUTO[⚡] (When using D&N and COLOR model)
 POLARITY: ACTIVE LOW / HIGH
 EXT-IN[⚡] (When using IR-CDS model)
 POLARITY: ACTIVE LOW / HIGH
**To turn on the IR, set the mode to ACTIVE LOW.*
 DELAY: 0 ~ 255 sec
 THRS: 0 ~ 28
 Day↔Night switching level in Auto Mode.
 Switching in lower lux with higher threshold level.
 GAP: LOW, MID-LOW, MIDDLE, MID-HIGH, HIGH
 Margin between Day → Night switching level and Night → Day switching level.
 ANTI-SAT: LED saturation improves. (0~20)
 BURST: OFF / ON

WHITE BALANCE

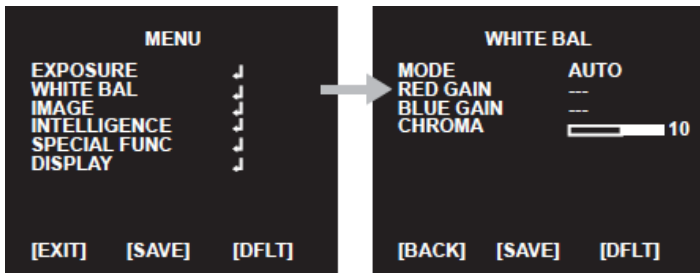


AWB: Select WHITE BALANCE mode
 AUTO / ONE PUSH / MANUAL / INDOOR / OUTDOOR
 AUTO: Automatically adjusts color according to the available lighting.
 ONE PUSH: It is a fixed white balance mode that may be automatically readjusted only by pressing ONE PUSH
 MANUAL[⚡]: Color can be corrected when the user increases or decreases "RED GAIN" or "BLUE GAIN".
 INDOOR: Set color temperature to be Indoor light (3700°K)
 OUTDOOR: Set color temperature to be Outdoor light (5100°K)
 RED GAIN: Adjust R gain value
 0 ~ 20 steps
 BLUE GAIN: Adjust B gain value
 0 ~ 20 steps
 CHROMA: Adjust CHROMA gain value
 0 ~ 20 steps

IMAGE

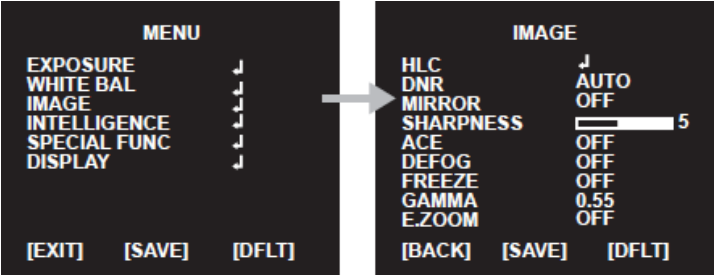

- HLC: Select High Light Compensation.
When extremely bright light is projected to the camera masking is used on the portion to prevent partial saturation on the monitor.
- MODE: OFF / ON / NIGHT
LEVEL: 0 ~ 20 steps
COLOR: 0 ~ 13 steps
- DNR: Select Digital Noise Reduction
AUTO / OFF / LOW / MIDDLE / HIGH
- MIRROR: Select a flip mode
OFF / H / V / H&V
H: You can flip the picture horizontally on the screen
V: You can flip the picture vertically on the screen
H&V : You can flip the picture horizontally & vertically on the screen
- SHARPNESS: Adjust sharpness level
0 ~ 10 steps
- ACE: Select Digital WDR (Wide Dynamic Range)
OFF / LOW / MIDDLE / HIGH
- DEFOG: Carry out defog function
OFF / ON[Ⓜ]
MODE: AUTO / MANUAL
LEVEL: LOW / MIDDLE / HIGH
**Can't use DEFOG and ACE at the same time
(When ACE On, DEFOG is Off. And when DEFOG is On, ACE is Off)*
- FREEZE: Select real or still mode
OFF / ON
- GAMMA: Select GAMMA
0.45 / 0.50 / 0.55 / 0.60 / 0.65
- E.ZOOM
OFF / ON
LIMIT: Max x2 ~ x19, x21, x23, x25, x28, x32
POSITION: Select maximum digital zoom magnification.
**Can't use Digital Zoom when the motion detection is turned on.*

INTELLIGENCE

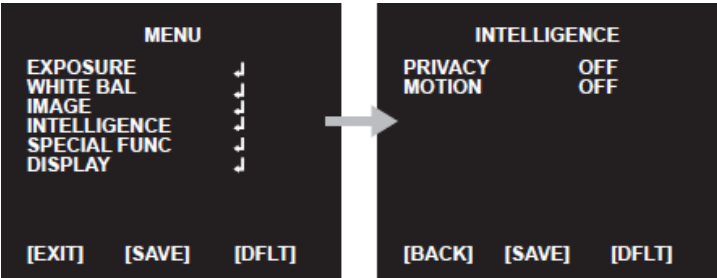

- PRIVACY: Hide an area you want to hide on the screen
OFF / ON[Ⓜ]
MASK: Select mask area number (1 ~ 24)
MODE: Mask enable or disable (OFF / ON)

POSITION: Adjust the mask position

SIZE: Adjust the mask size

COLOR: Select mask color (0 ~ 13)

TRANS: Select mask transparency level (0 ~ 4)

MOTION: When there is movement of the subject in the screen, there will be a motion detection.

OFF / ON[↕]

AREA#: Setting 3 areas(1~3) of motion detection

MODE: OFF / ON (Limit and define areas of motion detection)

SENSITIVITY: Adjust sensitivity of MD (0 ~ 20 steps) More sensitive to setting to low step with sensitivity


POSITION: Adjust the Area position

SIZE: Adjust the Area size

INTERVAL TIME: Select the alarm interval time (0 ~ 255sec)

DWELL TIME: Select the duration time about changing MD mode (0 ~ 255sec)

SPECIAL FUNCTIONS

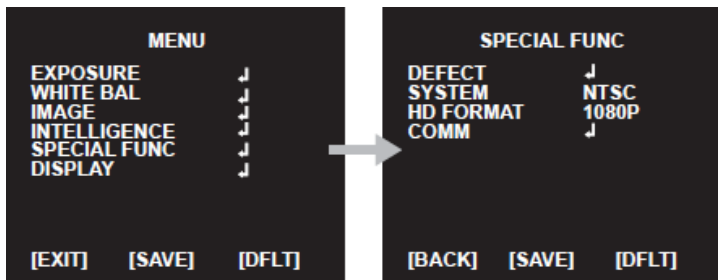

DEFECT: Compensates for bad pixels that may occur. Occurs when the whole screen is in full black or if there is bad pixelation and it changes the THRS values until the screen is fixed.

SYSTEM: Select NTSC (30fps) or PAL(25fps). (NTSC / PAL)

HD FORMAT: Select Digital output 1080P or 720P. (1080P / 720P)

COMM: Set up the camera ID, baud rate, protocol

ID: Select the camera ID

1 ~ 255


BAUD RATE: Select serial communication speed

2400 / 4800 / 9600 / 19200 / 38400 / 57600 / 115200bps

PROTOCOL: Select operating protocol

VISCA / PELCO-D / PELCO-P / UPDATE

DISPLAY

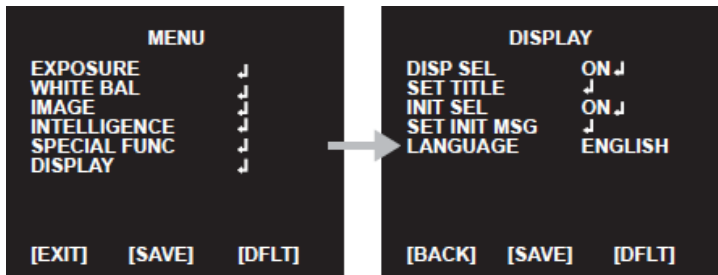

DISP SEL: Select display item.

OFF / ON[↕]

ID: OFF / ON

TITLE: OFF / ON

ZOOM RATIO: OFF / ON

SYSTEM MSG: OFF / ON (MD Alarm and Wait message)

SET TITLE: Select camera title menu (Text edit)

INIT SEL: Select display initial message.

OFF / ON[↕]

ID: OFF / ON
 BAUDRATE: OFF / ON
 PROTOCOL: OFF / ON
 VERSION: OFF / ON
 INIT MSG: OFF / ON

SET INIT MSG: modify initial message. (Text edit)

SPECIFICATION

Model	HD21D12-940
Image Sensor	1/2.9" Sony Exmor CMOS Sensor
Resolution	Digital; 1920x1080p (1080p/30fps) 1280x720p (720p/60fps)
Total Pixels	2,000(H) x 1,121(V), 2.24M Pixels
Active Pixels	1,936(H) x 1,105(V), 2.12M Pixels
Scanning System	Progressive
Min. Illumination	Color: 0.5 lux , BW : 0.1 lux Color DSS: 0.002 lux , BW DSS: 0.001 lux
Video output	HD-SDI
IR LED	12 IR LED
IR Distance	Up to 25ft / 7.5m
Lens	4.0mm Fixed Lens
Lens Mount	DC / Manual
S/N Ratio	More than 50dB (AGC Off)
Brightness	0 ~ 20 steps
Shutter Speed	Auto / Manual (1/30(1/25) ~ 1/60000)
Flickerless	Off / On
DSS	Off / x2 / x3 / x4
AGC	Off / On
WDR / BLC	Off / WDR / BLC
Day & Night	Auto / Day / Night / Ext
White Balance	Auto / One Push / Manual / Indoor / Outdoor
Sharpness	0 ~ 10 steps
Mirror	Off / H / V / H&V
Freeze	Off / On
E.Zoom	Off / Max x2 ~ x23
HLC	Off / On
ACE	Off / Low / Middle / High
DNR	Off / Low / Middle / High / Auto
D.Compress	Off / On
Privacy	Off / On (24 points)
Motion	Off / On (3 points)
Shading Det	Off / On
Shading	Off / On
Defect Det	One Push (Enter)
Defog	Off / On
HD Format	1080P / 720P
Language	English, Japanese, Chinese
Power Source	12V DC \pm 10%
Power Consumption	700mA max
Power Input	Connector
Operation Temperature	14°F ~ 122°F / -10°C ~ +50°C Humidity: 0%RH ~ 80%RH
Storage Temperature	-4°F ~ 140°F / -20°C ~ +60°C Humidity: 0%RH ~ 90%RH
Dimensions	Ø4.13(W) x 3.17(H) inches / Ø105 x 80.5(H) mm
Net Weight	4 oz / 113 g

* Specifications are subject to change without notice.