

zelta

MH24

Dual GSM/GPRS Mobile Phone
User Guide

Contents

1. For your safety.....	3
2. Phone Overview	4
2.1 Appearance	4
2.2 Keypad Definition	5
3. Getting started.....	7
3.1 Installing the SIM Cards and the Battery	7
3.2 Powering On/Off the Mobile Phone.....	9
4. Using the Menus	10
4.1 Messages.....	10
4.2 File manager.....	11
4.3 Service	11
4.4 Multimedia.....	12
4.5 Audio Player	13
4.6 Organizer.....	14
4.7 Profiles.....	15
4.8 Zelta MH24.....	16
4.9 Camera.....	16
4.10 Settings.....	16
4.11 Call center	20
4.12 Phonebook.....	21
6. Addendum.....	22

1. For your safety

Read this simple guideline. Not following them may be dangerous or illegal. Read the complete

User manual for further information.

	Do not switch your phone on when the use of wireless devices is prohibited or when the wireless device may cause interference or danger.
	Do not use your phone while driving.
	Follow relevant rules or regulations in hospitals and health care facilities. Switch your phone off near medical devices.
	Switch your phone off in aircraft. The radio signal from it may cause interference in signals of the aircraft.
	Switch your phone off near high-precision electronic devices. It may affect the performance of these devices.
	Do not attempt to disassemble your phone or its accessories. Only qualified personnel may service or repair the phone.
	Do not place your phone and its accessories in containers with strong electromagnetic field.
	Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.
	Do not put your phone in a high-temperature place or use it in a place with flammable gas such as a petrol pumps.
	Keep your phone and its accessories away from children. Do not allow children to use your phone without guidance.
	Observe any laws or regulations on the use of phone. Respect others' privacy and legal rights when using your phone.

2. Phone Overview

2.1 Appearance



1	Center key	8	Ending/Power key
2	Left soft key	9	Keypad
3	Dial/Answer key	10	Microphone
4	Earpiece	11	Charge/Headset port
5	Display	12	Camera
6	Navigation key	13	Torch
7	Right soft key	14	Speaker

Key

Key	Function
Dial key	Answer all calls. Make calls from SIM1/SIM2 card. View call logs in standby mode.
End /Power Key	Pressing and holding to turn the phone on/off. End a call or reject an incoming call. Return to the standby mode.
OK Key	Press to access the main menu in standby mode. Press to confirm a selection.
Navigation Key	Within a menu, press Up, Down, Left or Right to scroll through menu options.
Left/Right soft Key	Press to perform the function currently displayed in the bottom left/right corner of the screen.
Numeric key	Enter numbers, letters or characters. Select a submenu item labeled with the corresponding number.
* Key	Press to popup the symbols screen when entering text. Press and hold the * Key to toggle between *, +, (pause character) P, and (wait character) W in standby mode. Press Left Soft Key and * Key to lock/Unlock keypad, And long press * key you can speed into FM.

# Key	In standby mode, Long press # key can switch between the silent mode and standby mode. Press to switch the <u>input</u> methods when entering text.
0 Key	Press to enter Space when editing text. Power on /off the torch.



Note: “Press” in this manual, means to press and release the key; “press and hold” means to press and hold the key for at least 2 seconds.

Icons & Symbols

Icon	Description
	Vertical bars indicate the signal strength of the GSM network signal. Five bars indicate that your current position has the best reception.
	Indicates the battery charge level.
	Indicates you have one or more unread messages.
	Indicates there is a missed call.
	Indicates that the alarm clock is on.
	Indicates your phone uses the alert type of “Silent”.
	Indicates your phone uses the alert type of “Earphone”.
	Indicates you are using Bluetooth.

3. Getting Started

Please read the safety instructions in the "Safety Information and Notices" section before use.

Inserting the SIM Card and the battery

1. Remove the back cover, remove the battery, and insert the SIM card.



Install the battery and back cover.



Warning:

(1) There may be the risk of explosion if the battery is replaced by the wrong type.


(2) Dispose of used batteries according to the guidelines.

Inserting a T-Flash (External Memory) Card

1. Power off the Mobile Phone, and take out the battery or any other electrical supply.

Keep the golden color side of the Memory card downward, and push it gently to the right place.

2. Before take out off the memory card, be sure to power off the Mobile Phone and remove the battery first.

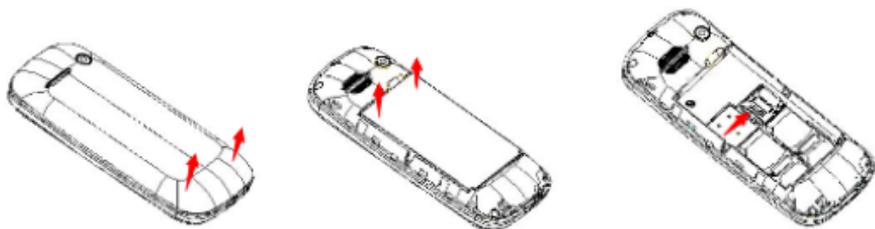

Turning the phone on

Press and hold the end key to turn on/off the Mobile Phone. And if you have set PIN or Mobile Phone code, input it correctly.

Charging the Battery

Ensure the battery is inserted in the handset. To charge the battery, plug in the charger connector at the bottom of your phone (USB interface) and then plug the other end into an AC power socket.

The battery symbol indicates the charging status. While charging, the charge indicators will scroll. When all the scroll bars are steady, the battery is fully charged.

Disconnect the charger from the phone.

Disconnect the charger from the AC power socket.



Note: If the battery is powerless, the battery icon will reappear after a few minutes of charging.

The socket-outlet shall be installed near the equipment and shall be easily accessible.

Warning: Provides charging temperature range $-5\text{ }^{\circ}\text{C}$ to $55\text{ }^{\circ}\text{C}$, over this range, please do not use the charging equipment. And be sure to use the charger provided by the supplier. Use of an unapproved charger may be dangerous and breach of warranty of the equipment approval and terms.

3.1 Installing the SIM Cards and the Battery

☒ Phone lock code

The phone lock code may be set to prevent your mobile phone from being misused.

In general, this code is provided along with the mobile phone by the manufacturer.

The initial phone lock code is set to 1234 by the manufacturer. If the phone lock code

is set, you need to input the phone lock code when powering on the mobile phone.

3.2 Powering On/Off the Mobile Phone

Hold the End key for a while to power on the mobile phone. A power-on animation appears on the display screen.

Input the phone lock code and press the OK key if the mobile phone prompts you to

input the phone lock code. The original code is 1234.

Input the PIN and press the OK key if the mobile phone prompts you to input the PIN.

The PIN is provided by the network operator for new opening

SIM card.

Enter the standby interface.

To power off the mobile phone, hold the End key for a while.

4 Using the Menus

4.1 Messages

If the short message memory is full, a blinking message icon appears on the top of the screen. To normally receive short messages, you need to delete some of the existing short messages.

If the destination user has received the short message you sent and the short Message delivery report function is activated, the phone will give off a message report alert tone.

Write message

Access this menu to create a text message.

Inbox

Received Messages are listed in this menu.

Drafts

Draft messages are listed in this menu.

Outbox

The messages which are sent failed are stored in the Outbox.

Sent messages

Sent messages are listed in this menu.

Message Settings

This function enables you to set the default features about the text message, also, you can check the memory status and choose the preferred storage.

4.2 File manager

The phone supports the Micro SD card. The capacity of the Micro SD card is

selectable. You can use the file manager to conveniently manage various directories

and files on the Micro SD card.

Enter this menu; you can check the files store on memory card.

Select one file to

open, rename, copy etc.

4.3 Internet

Internet service

This function enables you to view the internet. Your phone will ask you with existed

way. You can start to view only by starting corresponding way.

☐ Homepage: indicates the default website of the internet

☐ Bookmarks: used to save most commonly-used websites

☐ Search or input URL: input the website to be searched and press finish button to

access to the network directly

☐ Recent Pages: browse the record of the recently browsed web pages

☐ **Settings**: set up WAP-related service

STK

Use the function of STK.

4.4 Multimedia

Image viewer

You can view the pictures or images through this function.

Video recorder

This function enables you to record video. In the capture interface, you can press left or right direction key to zoom in and zoom out, press OK key to capture videos clip.

Video player

Use this function to play video files. By pressing the direction key can you control the playing process of video player: play/pause (OK key) , fast forward (press and hold right direction key) and rewind (press and hold left direction key). In video player interface, you can press * and # key to tune volume, press up direction key to switch to full screen play.

Sound recorder

The phone support WAV and AMR. The AMR takes the compression algorithm. So in the same memory condition, it has longer recording time than WAV.

After accessing the sound recorder, you can press left soft key to

perform the following operations:

- ☑ **New record:** select this function to record a new file.
- ☑ **List:** recorded files are listed in this menu.
- ☑ **Settings:** Through this function, you can set format for record files.

Audio Player

You can use this function to play audio files. By pressing the direction key can you control the playing process of audio player: play/pause (OK key), switch to last song/next song (press left or right direction key), play list (left soft key), fast forward (press and hold right direction key) and rewind (press and hold left direction key). In audio player interface, you can press* and # key to tune volume.

4.5 FM Radio

You can use the application as a traditional FM radio with automatic tuning and saved channels. In FM radio interface, you can press * and # key to tune volume, up or down direction key to search channels manually, left or right direction key to enable auto search; ok key to play/pause the playing process of the current channel.

4.6 Tools

Torch

Select on or off as you per requirement. Long press “0 “key to switch on or off in the standby interface.

📅 Calendar

Once you enter this menu, there is a monthly-view calendar for you to keep track of important appointments, etc. Days with events entered will be marked.

🕒 Alarm

Five alarm clocks are set but deactivated by default. You can activate one, multiple or all of them as needed. For each alarm clock, the ringing date and the ringing time can be set.

🌐 World Clock

By pressing left/right navigation keys to change time zone on world map, you can check time and date of different cities and regions.

🧮 Calculator

The calculator can add, subtract, multiply and divide. To use the calculator:

📌 Press the up, down, left and right key to select $+$, $-$, \times , \div , $=$ respectively.

📌 Press left soft key to delete the figure.

🔍 EBook reader

EBook reader enables you to read TXT file. Through the USB connecting line putting files to E-book folder of phone or T-Flash card. After finishing downloading, you can find the folder and open the E-book to read text directly.

Fun&Games

Use the function of Fun&Games.

4.7 Profiles

The mobile phone provides multiple user profiles, so that you can customize some settings to adapt to the specific events and environments. Customize the user profiles according to your preference and then activate the user profiles. The user profiles fall into five scenarios: General, Silent, Meeting, and Outdoor and Headset. For details on operation, refer to General.

🔍 Activate

Select Activate to activate the selected mode.

🔍 Customize

After choosing one of the above four modes, select Customize to edit the following items: Alert type, Ring type, incoming call ringtone, ringtone volume, message ringtone, keypad tone etc.

🔍 Reset

Use this function to restore factory settings of user profile.

4.8 Zelta MH24

Features of Zelta MH24

You can view the Features of Zelta MH24.

4.9 Camera

The phone is provided with a camera, which supports the photographing functions.

Roll the phone to align the camera to the picture and then press OK key to capture

photos. Pictures will be saved in the file system of the memory card. In the capture

interface, you can press up or down direction key to zoom in and zoom out.

4.10 Settings

Dual SIM settings

Dual-SIM refers to two SIM card slots, and the two cards can standby at the same

time or set one of them to display on the idle screen.

Phone Settings

Time and date: set the home city, the date format, the time format, and detail

time of the location.

Language: Select the display language for the mobile phone.

Pref. input method: Select preferred input method as needed.

Display settings: Users can access this item to set wallpaper, screen saver, power on/off display, show date and time, LCD backlight etc.

☒ **Dedicated key:** Customize the shortcut functions of the Up, Down, Left, and Right direction keys.

☒ **Auto update time:** Activate/deactivate this function as per your need.

☒ **Flight mode:** Select Normal or Flight mode to set.

Shortcuts: Change Shortcuts settings.

Misc. settings

☒ **Call settings**

☒ **SIM1 /SIM2 call settings**

☒ **Call waiting:** After you choose Activate, the mobile phone will contact the

network. A moment later, the network will make a response and send a message

to acknowledge your operation. If the call waiting function is activated, the

network will alert you and the mobile phone screen will display the incoming call

number if others are calling you while you are already in a conversation.

☒ **Call divert:** this network function enables you to forward incoming calls to

another number you have previously specified.

select Activate or Deactivate. The mobile phone will prompt you to input the call

barring code and then contact the network. A moment later, the

network will make a response and send the operation results to the mobile phone.

Advanced settings

Black list: The number you add to black list cannot call or send message to you

Auto redial: Set it to on or off to enable or disable auto redial. If you set Auto

redial to on, the mobile phone will automatically redial the number a moment

later if the called party does not reply. The number of auto redial times can be

set to a maximum of 10. In the auto redial period, you cannot dial other numbers.

To end the auto redial process, press the End key.

Answer mode: Select an answer mode as per your need.

Connectivity

Bluetooth

With Bluetooth, you can make a wireless connection to other compatible devices,

such as mobile phones, computers, headsets and car kits. You can use the Bluetooth

to send images, video clips, music, sound clips and notes, and transfer files from your

compatible pc.

Data account

Through this function, you can set data account related

parameters.

Data connection SIM

Use the function of Data connection SIM.

Network Settings

Network selection: Set Network selection mode to Automatic or Manual.

Automatic is recommended. When Network selection mode is set to Automatic, the mobile phone will prefer the network where the SIM card is registered.

When Network selection mode is set to Manual, you need to select the network operator's network where the SIM card is registered.

Security Settings

This function provides you with related settings about safety use

SIM security

PIN lock: To activate PIN lock, you need to input the correct PIN code. If you set

PIN lock to on, you need to input the PIN each time you power on the mobile

phone. In the case you input a wrong PIN for three consecutive times; you need

to input the PIN Unlocking Key (PUK). The PUK is used to unlock and change the

locked PIN. To obtain the PUK, contact the network operator.

Change PIN: To change PIN code of SIM card.

- ☐ **Change PIN2:** To change PIN2 code of PIN code.
Security center
Use the function Security center.

☐ **Phone security**

- ☐ **Phone lock:** The function enables you to lock/unlock the phone.
Entering
password to switch on or off the phone. Password is required
when the phone is
locked. The initial password is 1234.

- ☐ **Change password:** to change phone password.
Restore Factory Settings

Use this function to restore factory settings. The preset password is 1234.

4.11 Call logs

☐ **Missed Calls**

You can view a list of the latest missed calls, Choose missed calls and then select a missed call to view, dial, send text message, save, edit, delete etc.

☐ **Dialed Calls**

You can view the latest dialed calls. Choose dialed calls and then select a dialed call to view, dial, send text message, save, edit, delete etc.

☐ **Received Calls**

You can view the latest received calls. Choose received calls and then select a

received call to view, dial, send text message, save, edit, delete etc.

☒ Delete call logs

You can delete the latest call records. Choose Delete call logs and then select to

delete all the numbers in the call history, or delete only the numbers in the missed

calls list, the dialed calls list or the received calls list.

☒ All calls

4.12 Phonebook

The mobile phone can store up to 300 telephone numbers. The number of telephone

numbers that an SIM card can store depends on the storage capacity of the SIM card.

☒ Add new contact: Create new contact to phonebook.

After selecting a telephone number in the phonebook, select Options to

perform the following operations:

☒ View: View the content of the telephone number.

☒ Sent text message: sent text message to the selected number.

☒ Call: call the current number of the SIM1 or SIM2.

☒ Edit: Edit the selected number and name.

☒ Delete: Delete the telephone number from the phonebook.

☒ Copy: Duplicate the telephone number from the mobile phone to the SIM card

or from the SIM card to the mobile phone.

- ❑ Send business card: Select and send contacts information to other recipients via text message, multimedia message or Bluetooth.
- ❑ Add to Blacklist: Add number to blacklist, he/she cannot call you.
- ❑ Mark several: You can select several contacts and sent text message to the selected number.
- ❑ Phonebook setting: To set some parameters of phonebook.

5. Addendum

Common fault diagnosis

Fault phenomenon	Possible reasons
Cannot turn on	The battery is discharged. Charge it with electricity.
Wrong SIM Card	SIM card smudgy, clean the SIM card. Reinstall the SIM card. SIM card has been damaged, replace the SIM card.
Reception bad	Check on the screen of the signal strength indicator, and this is the number of symbols this for 5 case said the strong signal, 2 case said the weak signal

<p>Phone can't dial</p>	<p>You may set the hide the machine number, but your network operator does not provide this service; May have a strong interference environment around signal; May you activate the call barring function; May you activate the line 2, but your network operator does not provide this service;</p>
<p>Battery can't charge</p>	<p>May have excessive discharge battery, charger needed to connect after a period of time to charge; Battery performance have been worse;</p>
<p>Unable to connect to the network</p>	<p>Signal is too weak, or around the radio interference SIM card is installed correctly, whether contact undesirable or SIM card has been damaged? Such as the SIM card is damaged, please you consultation network service operators</p>
<p>Photographs too dark</p>	<p>Brightness set low; Environment light around a dark;</p>
<p>Photographs too vague</p>	<p>Shooting in a state of motion object; Press the shutter moment cell phone has a slight shaking; Dark</p>

Photographs have distortion	May be the foreground subject distance lens too close
-----------------------------	---

Disclaimer

© Zelta. All rights reserved.

Features and specifications are subject to change without prior notice. Certain mobile phone features may not be activated by your service provider, and / or their network setting may limit the feature's functionality. Services and some features such as GPRS, email may be dependent on the network, SIM card, as well as on the compatibility of the devices used and content formats supported and may require network/service subscription/solutions. Data transfers speeds are network dependent. Always contact your service provider for details or help. Talk and standby time is quoted in digital mode and are approximate; battery performance and the signal reception depend on network configuration, signal strength, type of SIM card, operating temperature, features selected as well as voice, data and other application usage pattern. The phones supports Bluetooth, A2DP, in order for Bluetooth devices to communicate with one another, they must utilize the same Bluetooth Profile. To determine the profiles supported by other Zelta products, visit www.zeltamobile.com, for other devices, contact their respective manufacturers. Always demand for original Zelta mobile phones to protect against buying tinkered and/or used, refurbished or

tampered phones. The warranty is applicable only for Zelta phones; the company is not responsible for any loss or theft. Always use Zelta original Enhancements (including batteries) for safety. The use of any other type may invalidate and approval or warranty applying to the mobile phone and may be dangerous. The phone is designed to operate using Li-ion batteries approved by the phone manufactures. Using non approved batteries with the phone may result in poor performance and damage to the phone or its enhancements. The display and products visualization here are illustrative purposes only; Display / color of the phone may differ from that shown on the manual. All features, functionality and other product specifications are based on the latest available information and are correct at the time of printing; however such product specifications are subject to change without notice. Copyrights are reserved. Zelta is the trademark of Sky telecommunication LTD. which is registered.

1. Do's for disposal of product

- a) Always drop your used electronic products, batteries, and packaging materials after the end of their life in nearest collection point or collection center
- b) Separate the packaging material according to responsible waste disposal options and sorting for recycling.
- c) The battery can easily be removed from the product for recycling.

2. Don't of disposal of equipment

- a) Never dump E-waste in garbage bins or municipal solid waste

stream.

- b) Do not dispose of your product as unsorted municipal waste.
- c) Do not throw used batteries into household waste.
- d) Do not dispose damaged or leaking Lithium Ion (Li-Ion) battery with normal household waste.



3. information on the consequences of improper handling, accidental breakage damage and improper recycling of the end of life product.

- a) If batteries are not properly disposed of, it can cause harm to human health or the environment.
- b) Placing of batteries or devices on or in heating devices, such as microwave ovens, stoves, or radiators and improper disposal of batteries may lead to explosion.
- c) If the battery terminals are in contact with metal objects, it may cause a fire.

Features of Zelta MH24

Model Name:	MH24
Network Bands:	GSM 900/1800
Vibrator:	Yes
Display:	2.4"QVGA
Battery:	DC 5V 2400mAh
Camera:	CIF
Camera Flash:	No
GPRS:	Yes
Torch:	Yes
USB Cable:	No