

E-book reader ML E708 User manual

Thanks for buying this E-book reader. In order to let consumer learn the operation of this product easily and enjoy the value it brought, we briefly introduce various function of this e-book. Please read carefully before using it.

Attentions

1. New battery can achieve the best performance only through the first two or three times' charge and discharge cycle.
2. In order to keep the lithium battery on the best usage status. Please extend 3 to 4 hours of charging time on your first three times' charging.
3. In order to prevent the loss of data, we suggest users make a backup for those important data before firmware upgrade each time. We shall not be responsible for the loss that caused by data loss.
4. This product is high precision electronic product, please do not disassemble it
5. Please avoid strong collision on the player.
6. Don't put this player under long-term exposure of strong sunshine. Don't use the player in conditions of high temperature, low temperature, moisture, dust, magnetic field.
7. Use a wet cloth to wipe the out shell of the player gently. Other chemical cleaning solution is strictly
Prohibit to be used.
8. Keep the player away from water or containers that filled with liquid.
9. Please do not make any modification on the player.
10. Please use only the battery, charger or other accessories that provided by the manufacturer. Any fault or danger that cause by using others' accessories it's out of our responsibility.
11. If any problem found on the player during use please contact the local distributor or contact our company's customer service center directly.

Special Advise:

For the convenient of reading, you can save those e-books that often read to 'my stack room' folder then could open them quickly on your next reading.

Key functions guide

1. Direction key

- A. Fast press the Direction Key to select the file under Menu and Content Interface.
- B. Under Music Interface the function of the Direction Key are 'Volume+', 'Volume-' and Music Selection

2. Menu Key

Fast press the Key of Menu to enter Main Menu under any interface.

3. Zoom in & Zoom out Key

Under e-book reading interface fast press these tow keys to change the font and the size of font.

4. Online Menu-- M key

Under e-book and audio playing interface, fast press M key to recall the online menu function.

5. Return or Cancel key

Fast press this key to Return to the previous menu gradually or cancel the current value setup.

6. Number key

Under the interface that has serial no, fast press the no. key to get in the right interface.

7. Rotation key

- A. Fast press it under e-book reading interface to rotate text
- B. Fast press it under Search Interface to switch input method
- C. Under e-book or music content interface, fast press it to rank the file list in order according to the file extensions or Pinyin.

8. Up & Down key

Fast press them for content selection under content menu interface.

Under e-book browse interface press them for page turning.

9. Playing or stop key

Press this key to playing to stop playing

Data transmission and step of charging.

Data transmission

Use the original USB cable in the package to connect with PC and copy the music, video or file you need from the computer hard disk then past the date you copied on the user's disk of the player to realize date transmission.

Step of charging

1. Use the standard USB cable

First step

Use the enclosed USB cable to connect the USB port on the player and the USB port on the back of the PC. Don't connect the one the front of the PC otherwise it has to extend the charging time..

Second step

After the correct connection with PC, the screen will appear the connecting icon. Double click 'remove the firmware safely' to remove the device. Don't take out the USB cable keep the player connecting with PC and now the player starts on charging.

2. To charge

Special warming

The charger should meet the following requirements otherwise any

accident or fault caused will
 regard as artificial damage:
 Input: AC110V~240V 50/60Hz Max:150mA
 Output: DC5.0~5.5V 1000mA(USB) 1500mA(DC)

Operation

1. Turn on the reader

Press down the power button for 3 to 5 second to turn on the reader.

2. Main interface



3. Browse history


Fast press UP or down direction key and move the cursor to Browser history then press M

Enter to viewing the file or page message that opened recently.

Remark: Under history interface, fast press the life and right direction to delete all history.

4. E-book

Under this interface it shows all the text files. Fast press Up or down direction key or press left or right key for page turning then move the cursor on the right text file and press M to confirm to enter reading interface.

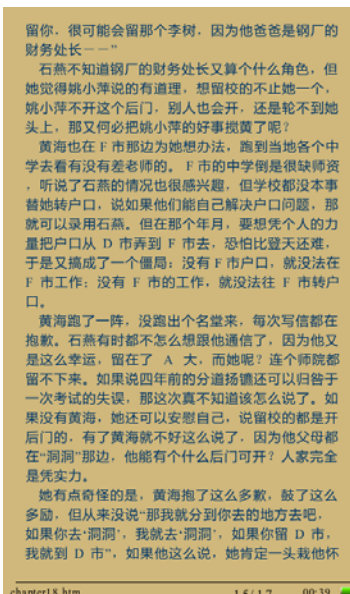

Brief introduction of function operation

Fast press M to enter online menu interface under reading interface.

It includes the following function.

Page jump function

Operating steps : during e-book reading—fast press M key—choose Page Jump—fast press Up or Down direction key to choose the page number —press M key to confirm the page selected.

Bookmark storage function

Operating steps : during e-book reading—fast press M key—choose Bookmark Storage—fast press M key—short press Up or Down direction key to choose number—press M key to confirm the number selected—bookmark are saved it shows the name

Extracting bookmark function

Operating steps : during e-book reading—fast press M key—choose extracting bookmark—fast press M key—fast press Up or Down direction key to choose the bookmark you want to extract—press M key to confirm the number selected—the bookmark are extracted and enter to the reading interface directly.

Bookmark deletion

Operating steps : during e-book reading—fast press M key—choose delete bookmark—fast press M key—fast press Up or Down direction key to choose the bookmark you want to delete—press M key to confirm the number selected—bookmark delete successfully.

Browse mode setting

Operating steps : during e-book reading—fast press M

key—choose browse mode—fast press Up or Down direction key to choose Manual mode or Automatic mode

Manual mode: Press direction key to do page turning

Automatic mode: The e-book shall turn the pages automatically as per the interval time of page turning being set.

Automatic page turning

Operating steps : during e-book reading—fast press M key—choose Automatic page turning— fast press Up or Down direction key to choose interval time of automatic page turning

5. Playing music



Function description

Volume adjustment: Fast press direction key up or down to adjust volume

Playback or pause: Fast press 'M' to playback or pause current music under this interface.

Previous or next track: Fast press direction key left or right to choose last or next song

Fast forward or rewind: long press key left or right to activate fast-forward or Rewind operation

Music list setting: Fast press key 'M' to recall online menu, it consists of repeat mode, play setting, Microsoft music effect and music effects choice.

Repeat setting: play single once, play back single, play whole once, repeat all.

Play setting: sequential play, random play

Music effect: 3D, strong bass, Volume balancing

Music effect choice: normal, Microsoft music effect, rock, pops hit,

classic, strong bass, Jazz

Return: short press “return/cancel” key to go back to the previous music list

6. Video

Function description

Volume adjustment: short press direction key up or down to adjust volume

Play/pause: short press “M” to play or stop playing the current video

Return: fast press “return/cancel” key to return to the previous menu or press it for long to go back to the main menu



7. Picture browse

Function description

Picture rotation: short press key **Rotate** to rotate the pictures on picture browse interface

Picture zoom in & zoom out: short press to these to key to activate picture zoom in & zoom out **Photo switch:** short press direction key to switch picture

Return/exist: short press **return** to go back to the previous directory.

Special warming: you can listen to the music while browsing the pictures

Method of operation: first play the song, then browse picture



8. Sound Record



Function description

Functions selection: Short press **M** key to confirm selection.

Star/pause record: Fast press **M** key to switch record condition


Exit or save operation: First fast press key **return/cancel** then press key **left** or **right** to exit or save your selection as per the save reminding of **'yes'** or **'not'** appeared

Playing record:


Method A: select **play record** under record function and choose the record file you want

Method B: choose the record file from the **Record** column on the content list of main menu

9. Resource management

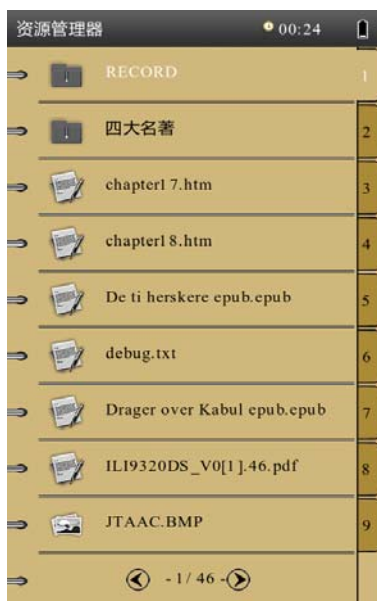

10. Radio receiver

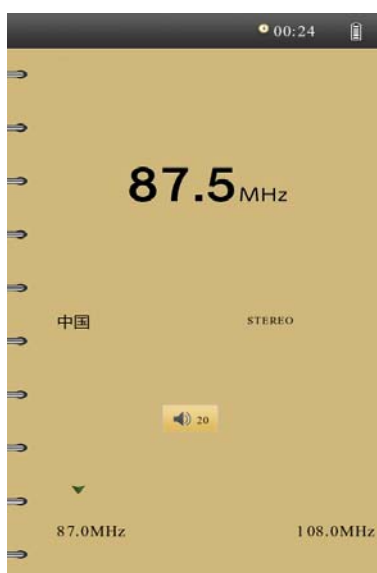

Function description:

Function conformation: Press **M** to choose and enter

Start/Stop record: Press **M** to switch record state.

11. Setup



Functional description

Display setup: adjustment for the time and brightness of backlight

Time /Date setup: time and date setting

Language: total 18 countries' language for your option

Auto-power off: When the player is under no operation state this function is effective. But when the player is under working this function is ineffective.



12. Calendar



Functional Description

Function conforms: Fast press **M** for selection confirmation.

Direction Key: Fast press direction key to search date

13. Turn off reader

Press **power button** for long to turn off reader.

14. Restart Reader

When the system of the player is halted due to improper operation user could press the **reset**

Hold on the back of the player to restart the MP3 player after that restart the player to resume the player to normal condition.

Common problem

- Unable to switch on normally
- Check whether battery has power
- Recheck after adaptor connection
- If unable to turn on after charge, please contact our customer servicer
- No sound with earphone
- Check volume setup (if '0", please adjust)
- Check earphone connection
- Serious Noise
- Check whether earphone connector is clear
- Check whether music files damage and can try by display others
- Keypad unable to work normally
- Check e-book and press 'PLAY ' shortly to open

Function Description

N.O.	function	
	Item	Comment
1	Music format	MP3,WMA,OGG,FLAC,WAV,AAC, APE
2	E-book format	TXT,FB2, PDF,PDB,EPUB,SKT,HTML etc
3	Book function	Support JPG,BMP black-white pictures
4	SD card	Support
5	Audio format	Support MKV、 AVI、 RM、 RMVB、 VOB、 DAT、 MP4、 FLV、 3GP (720Paudio) and so on
6	Information search	Support
7	Record function	Support