USER MANUAL

Model: JBQ-01Table Electric BBQModel: JBQ-02Stand Electric BBQ



JBQ-01



PLEASE READY THE MANUAL CAREFULLY BEFORE USING THE UNIT. AND KEEP IT IN A SFATY PLACE.

EN

Dear customer

Please read the following instructions carefully when using the unit for the first time They give inportant information for your safety and for using unit

 \triangle .**Caution !**The unit is only intended for normal domestic use and not for commercial use.

Normal use

The unit is only intended for grilling suitable food.

No other use is permitted!Any liability or guarantee will cease to apply in the event of damage caused by incorrect operation, incorrect use and not observing the safety regulations.

Safety regulations

▲Be careful when you use the unit

△Only connect the unit to an alternating current supply as per the type plate .

Do not allow the unit or cable to come into contact with extremely hot surfaces . Do not use the cable colled up.(this also applies to any extresion cable used) The socket must be easily accessible at any time to ensure that the unit can be disconnected quickly from the electricity supply .

A Check the power cable and the unit regularly for damage.

 ΔDo not use the unit again if the power cable shows signs of damage or if the unit is damaged in such away as to explse electrical components

△Danger of injury if necessary remove the plug carefully and contact your specialist dealer or customer service.

△The unit should be fitted with an RCD and operated with a nominal residual current of no more than 30mA.Ask youu electrical installer.

 \triangle Do not store or use any easily inflammble materials or sprays near the unit when it is in use .danger of fire

 \land \bigcirc o not use the unit in easily

Combustible atmospheres(e.g near inflammable gases or spray cans).

Danger of explosion and fire

 \triangle do not use the unit in rooms with baths, showers or swimming pools or near wash basins or taps.

△Do not expose the unit to rain or other damp conditions.

△Children or people under the influence of drugs or alcohol may only use the unit under supervision.

 \triangle Ensure that children do not have the opportunity to play with electrical equipment . \triangle Leave the unit to cool down agter use before you pick it up and put it away.

 \triangle Never put plastic parts or any other items except for the food to be grilled on the grill rack.

 \triangle Watch out of for fat splashing when grilling meat .**Risk of burns**

△Do not use any plastic cutlery to put the food on the grill rack,turn it or remove it.

△The unit must never be used under a running extractor fan or wall cupboards

△Never cover the grill rack completely when it is operating, e.g. with aluminium foil

because otherwise the heat cannot be dissipated

Risk of overheating

 \triangle **Caution!** The grill rack, heating element and housing get very hot when in use .therefore put the unit somewhere where it cann't be touched accidentally.

△Caution! Never use charcoal or similar fuels on the electric grill .

 $\Delta Do not touch the grill rack and heating element .$

△Only use the unit when the aluminium reflector is immersed in water.

 \triangle The operating instructions belong to the unit and must be handed over too if the unit is passed on.

 Δ Do not use any accessories that are not expressly approved by the manufacturer.

Special safety hints

Ensure that the thermostat is inserted correctly into the base.Otherwise the unit cannot used .the thermostat is fitted with a safety switch .The heating element switches off automatically if the thermostat is removed from the unit .Do not touch the heating element when it is on.it gets extremely hot.

Assembling the unit

First of all unpack everything and refer to the illustrations for installation .

Fit the heating element. Ensure that the safety switch is fitted to the adge of the base. Fit the blower.insert it into the base as shown in the illustration.

Fit the aluminium grill rack over the heating element.

Attach the four feet one after the other under the base by tuming them clockwise.Tighten the screws

△Caution !NEVER use the unit without water in the base tray. The water level must be between the MIN & MAX marks.



camber of the support shelf on the part16 and part 17 connected with the Screw of M5



step 2 、

pillar of part 4 (above handle) irruptive the hole of the part 7 (pan), pillar of the part 6 (under handle) align with the part 4, connect with screw (pic 2)



connect step 1 and step 2 with part 9, (pic 3,4)



put the reflecting plane into the pan and put the electrical control box insert the step 3 subassembly, the foot of the heating element insert the hole of the pan that in the side . (pic5)









Operation

∆The aluminium reflector must be in the water in the base.

Switch the unit on and set the required

Temperature with the thermostat knob .To do this turn the ("MIN/MAX")knob clockwise.the unit heats up automatically to the set temperature and then turns up the heat off .the control light comes on while it is heating up . Should the temperature fal bellow the set temperature the on again. Thus a constant temperature is maintained.

 \square Models JBQ-01 the die-cast aluminium plate heats up in about 15 minutes. \square dels JBQ-02 the grill rack can be placed at various heights to ensure the optimum distance between the food and the heating element.

wer consumption depends on the thermostat setting. For lengthy grilling it is advisable to set the temperature as high as possible.

When you finish grilling turn the thermostat knob to "MIN'.the unit will now cool down. Take the plug out of the socket.

 \triangle The cooling process will take some time. Do not move the unit until it has cooled down.

Lodels JBQ-01

Please hold onto the supporting feet when transporting the whole grill because the grill and base are not firmly fixed to each other.

Warning Don't put the food on the BBQ except the grill rack.

Grilling

This unit can be used to grill sausages ,meat,fish etc. Materials like charcoal and wood directly onto the grill rack. Do not cover the grill rack with film (aluminium foil or transparent film.for example).

Cleaning

1. Before cleaning remove the plug from the socket and let the unit cool down.

- 2. Remove the heating element from the base.
- 3. then remove the base.the outer heat retaining cover and the grill rack and wash the unit by hand.(do not use any cleaning agents). Do not clean the unit with scourers to avoid scratching it.

△ NEVER immerse the plug.the power cable.the heating element or the thermostat in liquids. These parts must only be wiped over with a dry cloth.

4 The grill rack can be cleaned with a soft brush.

TIP: After grilling let the grill rack cool down and then cover it with damp tea towels and let it soak for 30-60 minutes.

△In order to ensure that the unit works properly, if necessary, remove limescale deposits from the water tray.

Help with faults

If the control light does not come on the heating element may not inserted correctly into the base.

Disposal

Take worn out units to a public collection point for proper disposal or send back to the manufacturer.

Customer service

Repairs and other work undertaken on the machine must only be done by authorised specialist personnel.

For this please contact a specialist dealer or customer services.

Repairs undertaken by non-specialist personnel will lead to the loss of your rights under the guarantee.

△Caution! Improperly carried out repairs may lead to considerable danger for the user.

We reserve the right to make modifications to the structure or design of the unit in the interests of further technical development.



Meaning of crossed - out wheeled dustbin:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.Contact you local government for information regarding the collection systems available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge.