 
 




Volkswagen

Sound System



About this booklet

This booklet contains important information, tips, suggestions and warnings on using your vehicle. The other booklets in the Owner's Literature contain more information that you should be aware of for your own safety and for the safety of your passengers.

Make sure that you always keep the complete Owner's Literature in the vehicle. This is especially important when you lend or sell the vehicle.

This manual describes the **vehicle equipment** at the time of publication. The contents of this booklet correspond to the equipment options on your vehicle.

Illustrations may vary from your vehicle. For this reason you should regard illustrations as a general guide.

At the beginning of this booklet, you will find a **table of contents** showing all the items described in this manual in the order they appear.

An **alphabetical index** is at the end of the booklet.

Directions and positions (for example right, left, front, rear) are always relative to the direction of travel of the vehicle unless stated otherwise.

Some sections of this booklet do not apply to all vehicles. If this is the case, a text at the beginning of the section indicates which vehicles it applies to, for example "Applies to USA Models only".

- ▶ The section is continued on the next page.
- ◀ Indicates the **end of a section**.

® Registered trademarks are marked TM or ®. However, the absence of this symbol does not constitute a waiver of the rights concerning any term.

⇒ ⚠ Cross-reference to a "WARNING" within or outside of a section.

⇒ ⓘ Cross-reference to a "Note" within or outside of a section.

WARNING

Texts with this symbol contain important information on safety and how to reduce the risk of personal injury or death.

Note

 
 
Texts with this symbol draw your attention to potential sources of damage to your vehicle.

For the sake of environment

Texts with this symbol contain information about the environment and how you can help protect it.

Tips

Texts with this symbol contain special tips and other information about getting the most out of your vehicle and its features.



Afterword

Volkswagen works continuously to develop and improve its products. We must therefore reserve the right to change any part of the vehicle, its equipment or technical specifications at any time. No legal commitment can therefore be derived from the information, illustrations or descriptions in this manual.


The texts, illustrations and standards in this manual are based on the information available at the time of publication.

No part of this manual may be reprinted, reproduced or translated without the written permission of Volkswagen AG.


All rights under the copyright laws are expressly reserved by Volkswagen AG. Subject to alteration and amendment.



Printed in Mexico

© Volkswagen AG

 **For the sake of environment**

This paper was bleached without the use of chlorine.

 

  

 


Table of contents

Quick overview	2	mp3/wma	13
Quick overview	2	USB Connection	19
Important Information	4	Auxiliary audio jack (AUX)	22
Radio / CD	5	Bluetooth®	23
Radio	5	Anti-Theft Coding	30
CD	10	Warranty	31
		Alphabetical index	32



Quick overview

Quick overview

This overview is to assist you in familiarizing yourself with the controls

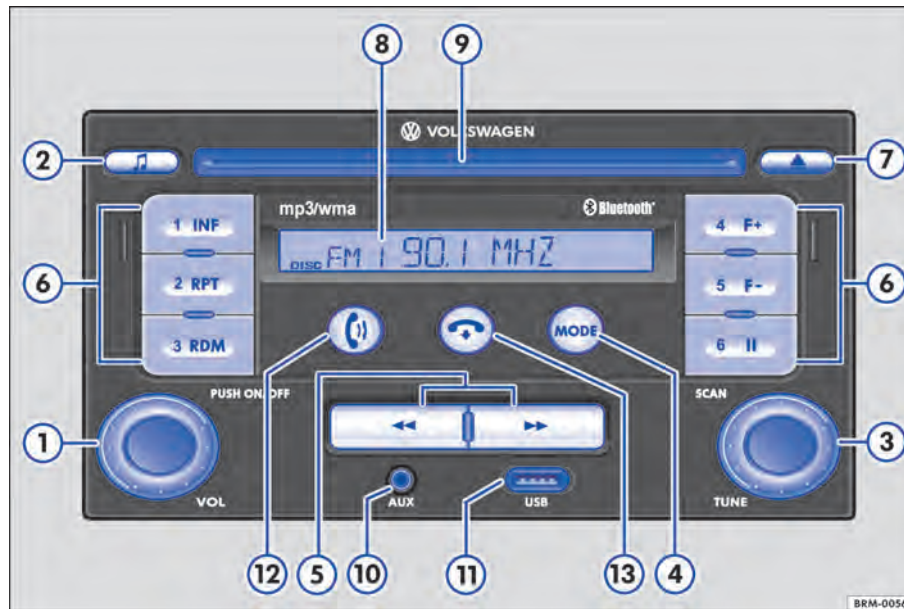 


Fig. 1 Sound System

- ① On/Off switch and volume control. The mode that was in use before the unit was last turned off – radio or CD – will automatically come back on when you turn on the unit. If the unit is silent when turned on and the word **SAFE** appears in the display, then you must re-enter the safety code 5
- ② Sound Setting Buttons and radio set up (SET UP) 6, 6
 - Bass Control **BASS**: Press button ② once and turn knob ① to adjust the bass as desired.
 - Treble Control **TREB**: Press button ② twice and turn the knob ① to adjust the treble as desired.
 - Balance Control **BAL**: Press the button ② three times and turn the knob ① to set the desired balance between the right and left speakers.
 - Fader Control **FADE**: Press the button ② four times and turn the knob ① to set the desired balance between the front and rear speakers
 - Press the button ② until an acoustic signal sounds indicating access to the set up mode (SET UP)
- ③ **SCAN/TUNE** button
 - **SCAN** function

- *Radio Mode*: Briefly press this button to listen to each of the stations for a few seconds. 7
- *CD, mp3/wma, USB Mode*: Briefly press this button to listen to each of the tracks in a given folder for a few seconds. 12, 15
- **TUNE function**
- *Radio Mode*: Turn the knob to manually tune to the next numerically higher or lower frequency. 7
- *CD Mode*: Turn the knob to “skip” through the tracks. Turn clockwise to skip forward or counterclockwise to skip backward. 12
- *Mp3/wma, USB Mode*: Turn the knob to “skip” through the tracks within all folders. Turn clockwise to skip forward or counterclockwise to skip backward when reproducing mp3/wma files in a CD or external USB audio source. 15
- ④ **Band and sound source setting buttons (MODE)** 8
 - Press this button to select the desired sound source: FM1, FM2, AM1, AM2, CD, USB or AUX.
- ⑤ **Automatic Search Buttons (SEEK) << and >>**.
 - *Radio Mode*: Press buttons <> or << to search for a higher or lower frequency. 8
 - *CD Mode*: Press >> to “scroll” upward through the tracks or press and hold the button to fast forward. 12
 - *CD Mode*: Press << to “scroll” forward through the tracks or press and hold the button to fast review. 12
 - *Mp3/wma, USB modes*: Press the >> to “scroll” forward through the tracks in a same folder when reproducing mp3/wma files on a CD or in an external USB audio source or press and hold to fast forward. 15
 - *Mp3/wma, USB modes*: Press the << to “scroll” backward through the tracks in a same folder when reproducing mp3/wma files on a CD or in an external USB audio source or press and hold to fast review. 15
- ⑥ **Station pre-set and additional function buttons:**
 - *Radio Mode*: Press these buttons to pre-set one radio station on each one of the four bands AM1, AM2, FM1 and FM2. 9
 - *INF Function*: Press this button (INF) so available information on the title and artist appear on the display when reproducing mp3/wma files on a CD or on an external USB audio source. 15
 - *RPT Function*: Press this button (RPT) to repeat a track continuously when reproducing mp3/wma files on a CD or on an external USB audio source. Press the button again to cancel the function. 12
 - *RDM Function*: Press this button (RDM) to randomly play all the tracks on a CD when reproducing mp3/wma files on a CD or on an external USB audio source. Press the button again to cancel the function. 12
 - *F- and F+ Functions*: Press these buttons (F-) and (F+) to select folders or lists when reproducing mp3/wma files on a CD or on an external USB audio source. 14
 - *Pause Function*: Press this button (⏸) to briefly stop a track when reproducing MP3/wma files on a CD or on an external USB audio source. Press the button again to restart the track in the same place 12
- ⑦ **Eject button (⏏)**. 11
 - Press this button to eject the CD.
- ⑧ **Display**
 - Radio Mode. 9
 - CD Mode. 13
 - Mp3/wma Mode. 16 ▶

4 Quick overview

9	CD Slot.	11
10	Auxiliary audio plug-in (AUX). ...	22
11	USB Connection.	19
12	Bluetooth.	23
	– Pairing	
	– Connect	
	– Answer incoming call	
	– Transfer ongoing call	
	– Redial	
	– Voice recognition call	
13	Bluetooth.	23
	– Cancel call	
	– Disconnect	

WARNING

Driver distraction causes accidents, collisions and serious personal injury!


- Never allow yourself to be distracted by setting, adjusting or using the Sound System.
- Use the Sound System only if the road, traffic and weather conditions allow and you are sure you will not be distracted from your driving.
- Always set the volume levels so you can clearly hear horns, sirens and other warning sounds outside the vehicle. ◀

Important Information

Operating the Sound System while driving

Driving on today's roads requires the driver's full attention.

The wide range of sophisticated equipment and details of modern car radios offer not only a vast source of entertainment, but also important information regarding traffic updates, road conditions, weather reports etc.

But remember, you should only operate the radio system with its numerous features when the traffic situation really allows ⇒  in "Quick overview" on page 2.

For example, changing CDs or reading song titles on a CD case or in the radio display when driving is often the cause of auto accidents.

It is also strongly recommended you set the volume of your radio system so you can hear signals from other drivers at any time.

Radio coding

Every time you remove the unit from the vehicle (for example: when the car is taken in for repairs

which require the battery to be disconnected) it will be necessary to recode the radio.

If the radio is installed in another vehicle, the electronic lock must be disengaged manually.

If, after switching on the radio the word "SAFE" appears in the display the correct code must be re-entered for the radio to operate - ⇒ page 31.

Tips

- Please note that items marked with an asterisk (*) may be standard on certain models, optional on others or not available on your model. Always check with your authorized Volkswagen dealer to see if the feature or item applies to your model.
- The radio code number and the radio serial number can be found on the "Radio Card" at the beginning of the Owner's Literature.
- It is very important that you keep this "Radio Card" in a safe place – never keep it in the vehicle. Only in this way will the antitheft protection be effective ◀

Radio / CD

Radio

ON/OFF Buttons



Fig. 2 Controls for the radio mode

Press the knob ⇒ fig. 2 ① to turn the unit on/off.

Whatever was playing when the unit was last turned off will automatically come back on when the unit is turned on again.

Every time you turn off the system, the following adjustments will be stored and reproduced when switched on again:

- Radio: the frequency (radio station setting)
- CD player: selected CD track
- External audio source: selected track

The unit turns off automatically when you remove the key from the ignition.

The radio can be switched on even if the key is not in the ignition by pressing ①. After one hour the unit will turn off automatically. This process can be repeated as often as desired.

⚠ WARNING

Driver distraction causes accidents, collisions and serious personal injury!

- Never allow yourself to be distracted by setting, adjusting or using the Sound System.
- Use the Sound System only if the road, traffic and weather conditions allow and you are sure you will not be distracted from your driving

WARNING (continued)

- Always set the volume levels so you can clearly hear horns, sirens and other warning sounds outside the vehicle.

Tips

If after switching it on, the radio does not play and the word "SAFE" appears on the screen, it means the unit is electronically locked see ⇒ page 31. ◀

Volume Control

Volume Control

- Turn the knob ⇒ page 5, fig. 2 ① to adjust the volume. ◀

Sound Adjustment

The quality of sound can be adjusted while listening to the radio, a CD or an external sound source. On concluding this process the adjusted setting will be stored.

Bass Control

- Press the button ⇒ page 5, fig. 2 ② once, the word "BASS" will appear in the display window.
- Turn the knob ② to adjust the bass. The volume of the bass tones can be adjusted from the central position (**BASS 0**) to lower tones (**BASS +1...+6**) or lower (**BASS -1...-6**).

Treble Control

- Press the button ② twice. "TREB" will appear in the display window.
- Turn the knob ② to adjust the intermediate tones. The volume of the trebles can be adjusted from the central position (**TREB 0**) to higher tones (**TREB +1...+6**) or lower tones (**TREB -1...-6**).

Adjustment of balance

- Press the button ② three times. "BAL" will appear in the display screen.

- Turn the knob ② to adjust the desired volume level between the left and right speaker. The apparent source of sound can be adjusted from the central position (**BAL CENTER**) to the left (**BAL LEFT 1...6**) or to the right (**BAL RIGHT 1...6**).

Fader adjustment

- Press the button ② four times. "FADE" will appear in the display.
- Turn the knob ② to adjust the desired volume level between the front and rear speakers. The apparent source of sound can be adjusted from the central position (**FAD CENTER**) to the front (**FAD FRONT 1...6**) or to the rear (**FAD REAR 1...6**).

Set Up Mode

- Press and hold button ② for more than two seconds in order to access the SET UP mode.

Set up

Once within the SET UP mode the following adjustments can be made ▶

Volume when turning on the unit	Press the button \Rightarrow page 5, fig. 2 $\textcircled{2}$ for more than two seconds. SET ON VOL will appear in the display screen. Turn the knob $\textcircled{1}$ to adjust the set on volume
Volume during a phone call	Press the button $\textcircled{2}$ for more than two seconds once the SET ON VOL appears in the display window, briefly press once more. BT VOL will appear in the display window. Turn the knob $\textcircled{1}$ to adjust the radio volume when a Bluetooth call is being made \Rightarrow page 23.
Availability of "Bluetooth audio"	Press the button $\textcircled{2}$ for two more seconds once SET ON VOL appears in the display, briefly press two consecutive times. BT AUDIO ON/OFF will appear in the display window. Turn the knob $\textcircled{1}$ to enable or disable the availability of the "Bluetooth audio" function \Rightarrow page 29.

SCAN/TUNE Button SCAN/TUNE

Use the SCAN/TUNE knob to manually tune to the numerically higher or lower frequency

Automatic Tuning (SCAN)

- Press the SCAN button \Rightarrow page 5, fig. 2 $\textcircled{3}$ briefly to scan upwards to the next higher frequency. Scanning stops at the next station with a signal. After about 10 seconds, the radio will scan to the next station. **SCAN** will appear in the display window after you press this button.

Manual radio station search (TUNE)

- Turn the knob $\textcircled{3}$ clockwise to tune upwards.
- Turn the knob counterclockwise to tune downwards.

Automatic Tuning (SCAN)

If you press the button for the 10 second "hold" period, the radio will "latch" onto the station currently being received.

Manual radio station search (TUNE)

The settings will change in small increments (FM 200 KHz, AM 10 KHz).

Tips

The automatic tuning function will stop after scanning over the total number of stations with signals. \blacktriangleleft

Band Setting and Audio Source MODE



Fig. 3 Controls for the radio mode

Press the MODE button ⇒ fig. 3 ④ to select the desired sound source: FM1, FM2, AM1, AM2, CD or AUX.

If any of the sound sources, such as CD or USB are not available, they will not appear in the display window when the MODE button is pushed.

i Tips

The unit has two FM pre-selection groups (FM= Frequency modulated) and two AM pre-selection groups (AM = Amplitude modulated). ◀

Station Search Buttons (SEEK) << and >>

Use buttons << and >> ⇒ fig. 3 ⑤ search for the next higher or lower radio frequency.

Automatic search

- Press >> to automatically search for the next higher frequency (radio station).
- Press << to automatically search for the next lower frequency (radio station).

- Once a station has been found, briefly pressing << or >> will cause the search operation to be repeated.

Controlled Search

- Press and hold << or >> to tune to a desired frequency (radio station). ▶

- Simply release \ll or \gg just before you reach the desired frequency. The search function will then stop at the next station that offers sufficiently strong reception. ◀

Station Preset Buttons

You can preset one radio station on each of the six buttons in each of the four bands AM1, AM2, FM1 and FM2

To program AM1 / AM2 and FM1 / FM2:

- Select the band/group of pre-selections of your preference ⇒ page 8.
- Tune to the desired radio station ⇒ page 7 or ⇒ page 8.
- Press and hold the button ⇒ page 8, fig. 3 ⑥ on which you want to save the station until you hear an audible signal and the program is muted; this means the station is now preset on this button. The number of the preset station will appear in the display screen.

- To listen to the station you have just stored, briefly press the button.

Tips

When selecting a radio station to listen to, briefly press the button, but avoid holding it down! This way you will avoid inadvertently setting a new frequency (radio station) on this button. ◀

What you will see in the display screen when you are listening to the radio

You will be able to see the following information in the display screen when you are listening to the radio ⇒ page 8, fig. 3 ⑧.

Bands

Display: FM . . . FM1 . . .

Station programming buttons

Display: 1 . . . 6

Frequencies

Display: FM 103.1 MHz

Automatic tuning

Display: SCAN ◀

CD

Taking care of your audio CD's

To assure the highest quality sound reproduction, make sure your CD's are clean and free of scratches or any other type of damage.

Cleaning your CD's

For routine cleaning, wipe the playing surface with a clean soft lint-free cloth from the center of the disc to the outer edge. If the surface is heavily soiled, dampen a soft clean cloth in a mild neutral commercial detergent solution before cleaning the disk.

Note

- Never use benzene, paint thinner or record cleaner as these fluids may severely damage the CD surface.
- When inserting a CD into the slot, make sure the *printed side* is facing up. Then, gently insert the CD into the slot until it is pulled in automat-

ically by the player. Never force the CD into the CD slot!

- If you are going to make your own CD's do not stick an adhesive label on the CD itself. The heat generated by the CD player can loosen the adhesive label which could then come off and jam up the unit. This could cause the need for costly repairs. Instead, use a marker to label your CD's.
- Always store CD's in their cases when you are not listening to them.
- Keep the CD away from heat sources and out of direct sunlight.
- Avoid getting fingerprints on the CD.

Tips

Always hold the CD either by the center or by the outer edge with the printed side facing up. ◀

Eject Button and CD Slot

Insert the CD with the printed side up.



Fig. 4 Controls for the CD mode

Ejecting a CD

- Briefly press the \triangle ⇒ fig. 4 ⑦ to eject the CD.

CD Slot

With the unit on insert a CD into the slot ⑧ with the printed side up. On inserting a CD, **CD LOAD** and then **CD READING** will appear on the dis-

play window. Once the CD is inserted, **DISC** will appear in the display window.

If the CD is not removed from the slot after pressing ⑦ it will automatically re-insert after approximately 10 seconds.

i Tips

If the selected mode is any other sound source, press the button ⇒ page 11, fig. 4 ④ to select the CD mode. ◀

Track Selection

Automatic Track Selection

- Briefly press the **SCAN/TUNE** button ⇒ page 11, fig. 4 ③ to start automatic scanning to the next track. After 10 seconds, scanning will resume and go to the next track. **SCAN** will blink in the display screen.
- To stop scanning, press the **SCAN/TUNE** briefly during the 10 second “hold” time.

Fast Forward/Fast Review within the same track

- Press and hold either one of the buttons ⇒ page 11, fig. 4 ⑤ in order to fast forward (**>>**) or fast review (**<<**) through the tracks. The elapsed time will appear in the display.
- Release the button to stop the operation.
- Press the **>>** or **<<** ⇒ page 11, fig. 4 ⑤ to select the tracks upward or downward.

- Turn the **SCAN/TUNE** ③ knob clockwise or counterclockwise to select the tracks upward or downward.

Selecting the Track

- The currently selected track appears in the display: **TRACK 01 . . . TRACK 02 . . . TRACK 03** etc.
- Briefly pressing the **<<** button or turning the **SCAN/TUNE** knob counterclockwise while a track is playing will cause the unit to “jump” back to the beginning of the track and resume playing from there.

Tips

- The automatic track selection function (SCAN) will stop after scanning through all of the tracks on the CD.
- If the random reproduction function has been selected (RDM) and any of the buttons ⇒ page 11, fig. 4 ⑤ or the knob ③ is turned the track scan will also be random. ◀

Additional functions

The functions described below also apply to the CD player or an external USB sound source with mp3/wma files

RPT Function (repetition)

- Press the ⇒ page 11, fig. 4 ⑥ **RPT** to continually replay a single track. **RPT** will appear in the display.
- Press the button again to cancel the function or select another track.

RDM Function (random mode)

- Press the ⑥ **RDM** to play all the tracks on the CD in a random manner. **RDM** will appear in the display.

- Press the button again to cancel the function.

Pause Function (II)

- Press the ⑥ **II** to momentarily pause the track which is playing. **PAUSE** will appear in the display.
- Press the button again to continue playing.

Tips

In addition to the functions described above, there are others which are applicable when re- ▶

producing a CD or an external USB sound source with mp3/wma files ⇒ page 14. ◀

What you will see on the display when you are listening to a CD

You can see the following information on the display ⇒ page 11, fig. 4 ⑧ when listening to a CD.

Selected compact disk track

Display: TRACK 01 . . . TRACK 02

Automatic tuning

Display: SCAN

Random mode

Display: RND

Repetition mode

Display: RPT

Pause mode

Display: PAUSE

When inserting a CD

Display: CD LOAD, CD READING

The radio unit cannot read the CD

Display: ERROR ◀

mp3/wma

mp3/wma player operation

The CD player is also compatible with CD-R and CD.RW which contain data in mp3 or wma format. However their reflectivity range must be at least 60%.

Different types of information (for example: name of the song, and the artist) can appear on the display during the reproduction of compact disks with mp3/wma files. Remember that it is only possible to read this information while the vehicle is stopped or when traffic conditions allow it ⇒ ⚠.

Only use conventional 12cm (4.72") CDs. Shape CDs or 8cm (3.15 in.) CDs are not compatible.

⚠ WARNING

Try not to become distracted from your driving at any moment.

ℹ Tips

If a CD that contains audio (mp3 or wma) and data is inserted in the player, the unit will only reproduce the audio files.

- Either **WMA** or **MP3** will appear on the display, depending on the type of file being played.
- The unit only reads files that do not require licenses. ◀

Folder and Play List search buttons



Fig. 5 Folder search buttons

Folder search

– Press buttons $\boxed{F-}$ and $\boxed{F+}$ \Rightarrow fig. 5 $\textcircled{6}$ to select the desired folder or play list in alphabetical order. Press $\boxed{F+}$ to scroll upwards for folders and play lists or $\boxed{F-}$ to scroll down for folders or play lists.

Display the name of the folder

– Briefly press either one of the buttons $\boxed{F-}$ and $\boxed{F+}$ $\textcircled{6}$ to display the first eight letters of the name of the folder to which the file being played belongs.

The search of folders and play lists by means of the $\boxed{F-}$ and $\boxed{F+}$ buttons will be take place according to the access order of the files in the CD \Rightarrow page 18.

Tips

The name and number of the folder or the play list selected will appear in the display screen: **P001 Name... P002 Name...** for play lists and **F001 Name... F002 Name...** for folders.

- If there are files (tracks) in the root directory “ROOT” will appear on the display screen for a few seconds before the name of the file (track) appears on the display.
- Once the radio unit has “read” the information in the folder, the name of the file (track) will appear on the display and will be displayed for a few moments.
- Each time the unit selects a new track, the available information is shown on the display screen while it is playing. ◀

Information Button **INF**

- Press the **INF** ⇒ page 14, fig. 5 ⑧ button once. **TITL** will appear on the display, and the name of the track will be shown. Once the name of the track has been fully displayed, the file information will re-appear on the display screen.
- Press the **INF** twice: **ART** will appear on the display screen and the artist's name will appear. Once the name of the artist has been fully displayed, available information on the artist will re-appear on the display. ◀

Random Play Button

Random Track Playing for all files

- Press the **RDM** ⇒ page 14, fig. 5 ⑧ button. **RND** will appear on the display. Press the **RDM** button once again to cancel the random playing function.

Random Track Playing for a Single Folder.

- Press the **RDM** button ⑧ for more than three seconds. **RND** will blink on the display screen. Press the **RDM** button again to cancel the random playing function.

i Tips

If you have chosen the random playing function (RDM) and you press any one of the buttons ⇒ page 14, fig. 5 ⑤ or if you turn knob ③, the track search will also be done in a random manner. ◀

Track Selection

Automatic Track Selection

- Briefly press the **SCAN** ⇒ page 14, fig. 5 ③ button to start automatic scanning to the next tracks within a single folder or play list. After 10 seconds, scanning will resume and go to the next track. **SCAN** and the available information on the file will appear on the display screen.
- To stop scanning, press the **SCAN** button during the ten second “hold” time.

Selecting a track within a single folder

- Press the **>>** or **<<** ⇒ page 14, fig. 5 ⑤ to select tracks from within a single folder. Press **>>** to scroll up or **<<** to scroll down. The available information on the file will appear in the display screen.

Track selection in all folders

- Turn the **SCAN/TUNE** ③ knob to the left or right to select tracks upward or downward in all folders. Available information on the files will be shown on the display.

Track selection

- The name and number of files (tracks) currently selected will appear on the display: **T001 NOMBRE . . . T002 NAME . . . T003 NAME** etc.
- If you briefly press the **<<** button or turn the **SCAN/TUNE** knob to the left while a track is playing, the unit “jumps” to the beginning of the track and resumes playing from that point.
- If you press the **<<** button twice while the first track in a folder is playing, the unit will “jump” to the last file in the same folder. ▶

- If you briefly press the $\langle \rangle$ button while the last track in a folder is playing, the unit will “jump” to the first file in the same folder.
- When the last file in the folder has been reached and the $\langle \text{SCAN/TUNE} \rangle$ knob is turned to the right the unit will “jump” to the first file in the same folder.
- When the first file in the folder has been reached and the $\langle \text{SCAN/TUNE} \rangle$ knob is turned to the

left, the unit will “jump” to the last file in the following folder.

- When the $\langle \text{SCAN/TUNE} \rangle$ knob is turned, or either of the $\langle \ll \rangle$ or $\langle \gg \rangle$ buttons are pressed, the available file information will be scrolled. Once the scroll action has been completed, the first eight characters of the file will remain in the display and after a few seconds the scrolling will start again. ◀

Information displayed

Information on the file

The file information which is available will be scrolled or will appear in the display. The type of information displayed depends on the following:

- If the mp3/wma file has an ID3 label with information on it, the radio unit will display the name of the track and the name of the artist in the display. If this information is not available on

the mp3/wma file “- - - -” will appear when the $\langle \text{INF} \rangle$ button is pressed ⇒ page 14, fig. 5 ⑥.

- Folder and the file names can be displayed like titles. Capital letters, numbers and underscored items “_” are scrolled.
- A maximum of 32 characters can be displayed.
- Folders and file names using other characters to name folders or files will not be appropriately displayed. ◀

What you see in the display while listening to an mp3/wma CD

You can see the following information in the display when listening to an mp3/wma CD ⇒ page 14, fig. 5 ⑩.

Selected play list

Display: P001 NAME. . . P002 NAME. . .

Selected Folder

Display: F001 NAME . . . F002 NAME. . .

Selected CD track and available information

Display: T001 NAME . . . T002 NAME . . .

Type of file playing

Display: WMA o MP3

Automatic tuning

Display: SCAN

Random mode

Display: RND

Repetition mode

Display: RPT

Pause mode:

Display: PAUSE

When inserting a CD

Display: CD LOAD, CD READING

The radio unit cannot read the CD

Display: ERROR ◀

About mp3 / wma

Except for personal enjoyment, duplicating data or distributing, transferring or copying it, whether for free or for a fee, without permission of the copyright holder is strictly forbidden by the Copyright Act and by international treaty.

What are MP3 and wma?

MP3 (MPEG audio layer 3) is a compression standard prescribed by the ISO and MEG.

MP3 files contain compressed audio data. MP3 encoding is capable of compressing the audio data at extremely high ratios, shrinking music files by as much as one-tenth their original size. The MP3 format achieves such high compression ratios by eliminating sounds that are either inaudible to the human ear or masked by other sounds.

How to create MP3/ WMA files

The software used to create MP3 files is widely sold from various sources. For details on creating MP3 files, refer to the owner's manual for that software.

The MP3 files that can be played by this device have the file extension "mp3" or "cad". Files with no extension can not be played back.

Corresponding File Systems

This unit supports disks formatted with ISO9660. Disks in Joliet format which adjust to ISO9660 can also be reproduced. However, it is possible that names of folders / files etc. not be adequately visualized.

Please take the following points into account:

- When creating a CD be sure to choose the Mode 1 CD or Mode 2/XA.
- The audio quality depends on the "sampling rate" used to create the MP3 file.
- Be sure to finalize the session when creating a disk.
- When naming your MP3 files, use short file names. The length of the display is limited.
- We recommend you use one-word names to name your files, (for example: Folder_A) and avoid repeating the same names on the CD.
- Don't use more than 50 folders when creating a disk, otherwise finding the files you want to play will be difficult.
- Don't use more than eight levels of sub-folders when you create the CD.
- The number of tracks that can be played goes from 1 to 999.
- Using the "drag and drop" option available on WINDOWS-XP to move files to the compilation window, does not allow for mode adjustment nor for the ID3 tag version which is compatible with this radio unit. Disks recorded this way can sometimes not be played in this unit.

ID3 Tag

This radio unit does not accept ID3Tags v1.

If the file contains information on the IS3 tag, the name of the track and the name of the artist will appear on the display independently of the name of the file.

If the file contains both ID3 v1 and ID3 v2 tags, only the information on the ID3 v1 file will appear on the display. ◀

Order of tracks

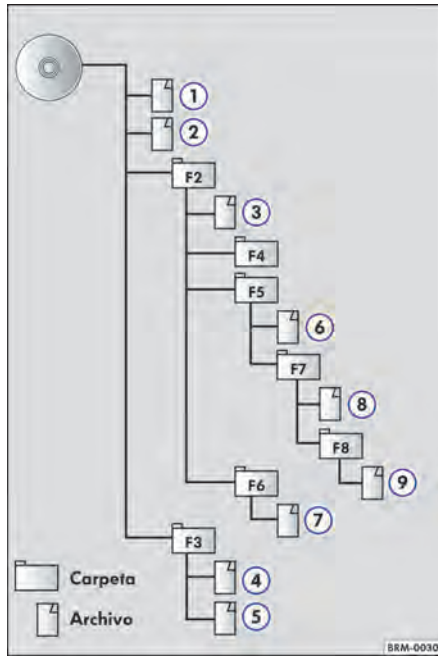 


Fig. 6 Traditional structure of CD files

The unit plays files inside a CD in a particular order. The illustration ⇒ fig. 6 is an example of a

typical CD containing files, play lists, folders and sub-folders.

The unit will access the folders according to the hierarchical structure of the CD they are on.

- Playing will start with the first file under the root directory (see ① and ②). The root directory will appear in the display as folder 1 (F1).
- The unit will then access the folders remaining in the root directory (see F2 and F3) in alphabetical order and will play the files located within them (see ③, ④ and ⑤).
- The unit will then access the suborders within the main folders in the root directory (see F4, F5 and F6 within F2) and will play the files located inside them (see ⑥ and ⑦).
- If there happen to be folders without files inside (see F4 within F2). The unit will ignore this folder and will “jump” to the following folder at the same CD structure level which contains files (in example F5).
- The unit will then access the following sub-order level (see F7 within F5) and will play the files located within (see ⑧).
- The unit will then access the next existing suborder files (see F8 within F7) and will play the files which are within (see ⑨).

Tips

The unit can access up to 8 levels of suborders. ◀

USB Connection

USB or memory storage device connection

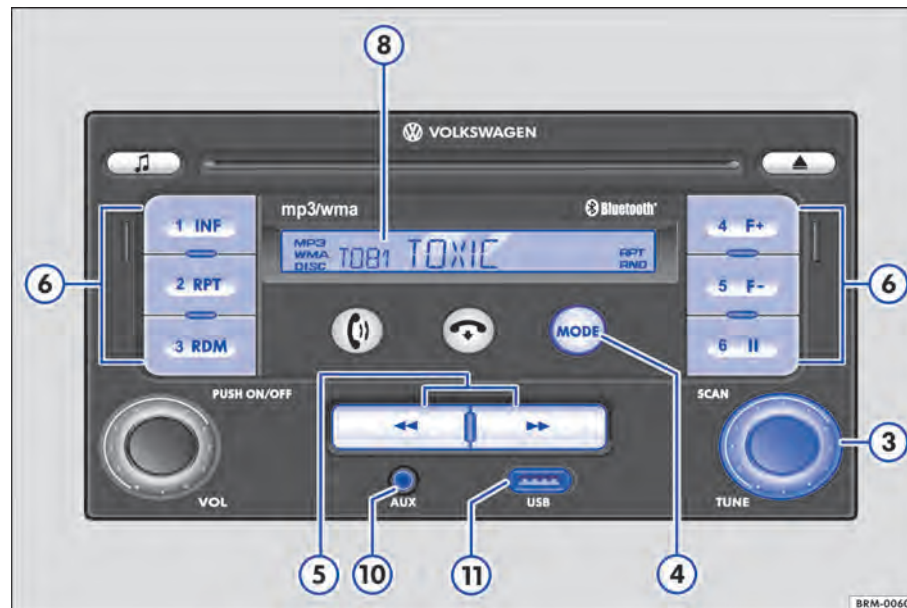 


Fig. 7 USB and AUX connections

Introduction of a memory storage device connection

- Insert a USB device in the USB connection port ⇒ [fig. 7 11](#), or
- Connect a commercial USB connection cord to the mp3 player and insert the other end of the cable into the USB port if you prefer to use the mp3 player as your memory storage device.
- **USB LOAD** will appear in the display.

Removal of the memory storage device

- First change the entry source of the sound system to, for example, FM or radio ⇒ [!](#).

- Afterward remove the memory mode or the extension cable from the USB connection port ⇒ [!](#).

With the memory storage device inserted, stored music can be played on the radio ⇒ [page 21](#).

For more information on mp3/wma files, see ⇒ [page 13](#), ⇒ [page 17](#)

! WARNING

Always concentrate on your driving. Driver distraction causes accidents, collisions and serious personal injury!

- Use the USB device only if the road, traffic and weather conditions allow and you are sure you will not be distracted from your driving.

WARNING (continued)

- Always set the volume levels so you can clearly hear horns, sirens and other warning sounds outside the vehicle.
- The USB device or memory mode must never be removed while the vehicle is in movement.

WARNING

- Never add accessories such as cup or cell phone holders to the airbag surfaces or airbag inflation area → Booklet “Owner's Manual”, chapter “Safety first”.
- Objects on or near the surfaces that harbor the airbags can be projected and cause serious injury in the event the airbags inflate.

Note

- The allowed temperature range for USB and memory storage devices is limited and frequently is between 0°C and 40°C. Therefore the memory storage device must never be left inside the vehicle for long periods of time!
- Never plug the mp3 directly into the USB port if you want to use it as a memory storage device because it could damage the port. Connect the player to the port by means of a USB cable.
- Never remove the memory storage device if the USB cable is in use as the source, this could permanently damage the memory!

- The connection must not be used for any device other than certified USBs or memory storage devices. It is impossible to use hard drives or multi-port USB connectors in the port!
- The maximum USB or other memory entry must not exceed 100 mA/5V.
- Never introduce metallic objects into the USB connection, as this could cause short-circuits and damage the unit.
- Never store important files on the USB device or memory mode. Volkswagen accepts neither responsibility nor obligation for lost data or files.

Tips

- To select a file from the root directory, use buttons (F+) or (F-) ⇒ page 19, fig. 7 ⑥. The radio plays the first ordered and recognized track (in mp3 or wma format).
- If the interface does not detect the memory storage device within 15 seconds, remove the memory mode and re-insert it into the USB connection.
- It is only possible to use the mp3 player with a USB cable as a memory mode. The mp3 player must have an available and correctly formatted USB memory function, if not, the mp3 player must be connected to the auxiliary audio entry.
- Some mp3 players need to be activated by pressing a button to establish a connection through the USB port. Refer to the Owner's Manual in what refers to mps players. ◀

General Notes

- The radio unit can only read certified USB flash drives which use the 1.1,2.0 communication protocol or both 1.1/2.0. The package or wrapping of the USB device must bear the USB logo.
- The only music formats which can be played are mp3 (MPEG1 Layer3 from 32 to 329 kbps).
- DRM music formats are **not** compatible.
- The radio orders the music folders and files in an ascending manner based on its titles; the first criterion is the number of the music file or folder (numerical order); the second criterion is the name (alphabetical order).
- With an external audio device connected, another source on the radio can be selected at any time. The audio device will continue to play until you turn it off.
- If you use a 12 volt socket for external audio devices, unshielded devices can cause interference during playback (buzzing, static). If this happens, we recommend you avoid connecting the external audio device to the 12 volt socket.
- If you use an external audio device which is very low-volume or which buzzes at a “normal” volume in the vehicle's sound system, increase the volume of the external audio device. This ▶

however, will not be possible on all external audio devices.

- The number of tracks that can be played is from 1 to 999.

- If playback becomes “distorted”, turn down the volume of the external audio device. ◀

Playing music files on the radio

The radio buttons can be used as control elements.

Saving files on a USB flash drive or memory storage device

Make sure the USB flash drive or memory storage device is correctly formatted.

In order to achieve a tree-type folder configuration of the compatible music files that can be read by the USB flash drive or mp3 player, it will be necessary to build the desired structure on a CPU and once finished, copy the whole tree onto the USB flash drive or memory storage device in one single step.

We recommend tracks not be stored directly on USB flash drives or memory storage devices, but rather organized in directories. This way tracks can be saved in a more structured manner (for example all tracks of a certain type of music can be stored together in a folder).

Creating sub-folders of a main folder is also an option. For example, you can store all of the albums pertaining to one artist in this manner.

Example of the structure of folders:

- **Main folder 1**
 - Sub-folder 1_1
 - Sub-folder 1_2
 - Sub-folder 1_3
 - ...
- **Main folder 2**
- **Main folder 3**
- **Main folder 4**
 - Sub-folder 4_1
 - Sub-folder 4_2
 - ...
- **Main folder 5**

■ Main folder 6

Playing music files from the USB flash drive

The description for playing music files on ⇒ page 13 also applies to playing files with the USB flash drive.

Playing music files from an iPod

It is possible to play music files from an iPod using a USB flash drive as long as the files are in mp3 or wma format. Playback, pauses and track search can be done with the radio buttons. The compatible iPod models are: mini, nano, photo, shuffle and video.

WARNING

Always concentrate on your driving. Driver distraction causes accidents, collisions and serious personal injury!

- Use the USB device only if the road, traffic and weather conditions allow and you are sure you will not be distracted from your driving.
- Always set the volume levels so you can clearly hear horns, sirens and other warning sounds outside the vehicle.
- The USB device or memory mode must never be removed while the vehicle is in movement.

Tips

- Skipping through numerous songs can cause a small delay in playback.
- Depending on the type of device used, the radio may require a few seconds to recognize the USB flash drive or memory storage device.
- The unit can accept up to 8 levels of sub-folders. ◀

What you see on the display while listening to an external USB flash drive audio device with mp3/wma files

The following information will appear on the display when listening to an external USB flash drive audio device ⇒ page 19, fig.7 ⑩.

Select folder

Display: F001 NAME . . . F002 NAME . . .

Track number and available information

Display: T001 NAME . . . T002 NAME . . .

Type of file playing

Display: WMA or MP3

Automatic tuning

Display: SCAN

Random mode

Display: RND

Repetition mode

Display: RPT

Pause mode

Display: PAUSE

On inserting an external USB flash drive audio device

Display: USB LOAD

The USB flash drive cannot be read

Display: USB ERROR ◀

Auxiliary audio jack (AUX)

Auxiliary audio jack for external audio devices

The auxiliary audio jack allows external audio devices to operate by means of the factory-installed sound system, using a special adapter cable.

Adapter cable ¹⁾

You will need a special adapter cable to connect an external audio device to the auxiliary audio socket. One end of this adapter cable must be plugged into the safety socket (3.5 mm stereo) and the other end into the external audio device. A suitable cable should be available at electronics specialty stores.

Connecting an external audio device

An external audio device should only be connected when the vehicle is parked.

- Connect the external audio device ⇒ page 19, fig.7 ⑩, to the jack using the adapter cable ¹⁾.
- Press the [MODE] button ⇒ page 19, fig.7 ④ on the radio several times to select the external audio device, **AUX PLAY** will appear on the radio display.

- If necessary switch on your external audio device.

Disconnecting the external audio device

Disconnect an external audio device only when the vehicle is stopped.

- Switch your audio system off if necessary.
- Disconnect the adapter cable from the auxiliary audio socket.

WARNING

Always pay attention to your driving. Driver distraction causes accidents, collisions and serious personal injury!

- Always set the volume levels so you can clearly hear horns, sirens and other warning sounds outside the vehicle. ▶

¹⁾ Available at specialized stores


⚠ WARNING

- Never add accessories such as cup or cell phone holders to the airbag surfaces or airbag inflation area ⇒ Booklet "Owner's Manual", chapter "Safety first".

⚠ WARNING (continued)

- Objects on or near the surfaces that harbor the airbags can be projected and cause serious injury in the event the airbags inflate.

i Tips

Use the **[VOL]** knob ⇒ page 8, [fig. 3](#)  to control volume and clarity of sound. ◀

General Notes

- The only music formats which can be played are mp3 (MPEG1 Layer3 from 32 to 320 kbps) AND WMA (from 8 to 192 kbps.) This player cannot play the i-Pod format directly.
- If an i-Pod is connected to the external audio jack, the radio unit will only control and play the sound signal generated by the i-Pod. Music playback in i-Pod format will be played by the i-Pod itself.
- With the external audio device connected you can select another source on the radio at any moment. The audio device will continue to play until you switch it off.
- You **cannot** control the external audio device through the factory-installed radio. The selec-

tion of tracks must be done through the external audio device.

- Using a 12-volt socket to power external audio devices without proper shielding can cause interference during playback (buzzing, static). If this happens, we recommend not connecting the external audio device to the 12-volt socket.
- If you use an external audio device which is very low-volume or which buzzes at a "normal" volume in the vehicle's sound system, increase the volume of the external audio device. This however, will not be possible on all external audio devices.
- If playback becomes "distorted", turn down the volume of the external audio device. ◀

Bluetooth®

General information

Bluetooth® is a norm which describes a global standard of wireless communication which makes it possible to transmit voice and data between different equipment by means of a radio frequency link. The type of communication to be established between the radio and a BT device (Bluetooth) depends on the profiles that are supported by both parties.

Basically, the radio allows Bluetooth connections to:

- Provide cell phones with hands-free functions within the vehicle.
- Allow the vehicle's audio system to play audio generated by a cell phone with BT.

The Bluetooth radio connection is free of cost.

Bluetooth is a registered brand of Bluetooth SIG, Inc.

Set up

Using the set up mode, some of the Bluetooth parameters can be modified ⇒ page 6 ▶

⚠ WARNING

Always concentrate on your driving. Driver distraction causes accidents, collisions and serious personal injury!

- Never become distracted while driving because of setting-up, adjusting or using your cell phone.
- Use the cell phone only if the road, traffic and weather conditions allow and you are sure you will not be distracted from your driving.
- Always set the volume levels so you can clearly hear horns, sirens and other warning sounds outside the vehicle.
- In areas where there is deficient or no cell phone coverage, and occasionally in tunnels, carports or underpasses you will be unable to make cell phone calls, not even emergency calls!
- Using a cell phone within a vehicle without having a separate external antenna can be hazardous for you health and that of your passengers, because electromagnetic radiation energy emitted by these devices can be above limits established as safe.
- Always completely disconnect cell phones when fueling the vehicle. Electromagnetic radiation may cause sparks to light fuel vapors, which may in turn cause fires.

⚠ WARNING

Cardiologists have warned that cell phones can seriously affect the way in which pacemakers work.

⚠ WARNING (continued)

- Always keep the cell phone antenna at least 20cm (8 inches) from the pacemaker.
- Never keep a connected cell phone in a pocket directly above the pacemaker.
- If you suspect interference with a pacemaker, immediately switch phone off.

⚠ WARNING

- Never add accessories such as cup or cell phone holders to the airbag surfaces or airbag inflation area ⇒ Booklet "Owner's Manual", chapter "Safety first".
- Objects on or near the surfaces that harbor the airbags can be projected and cause serious injury in the event the airbags inflate.

i Tips

- Please keep in mind that the quality of a phone call may be affected by high speeds, meteorological factors (rain or wind), road conditions, environmental noise or a deficient network connection.
- Always comply with local rules in what refers to cell phone use.
- Some countries have restrictions in what refers to Bluetooth devices. You may request information from local authorities.
- When you link or connect a cell phone using Bluetooth technology, be sure to follow safety indications included in the instructions for operation. Use only compatible products. Ask your authorized Volkswagen dealer about compatible products. ◀

Linking a Bluetooth telephone

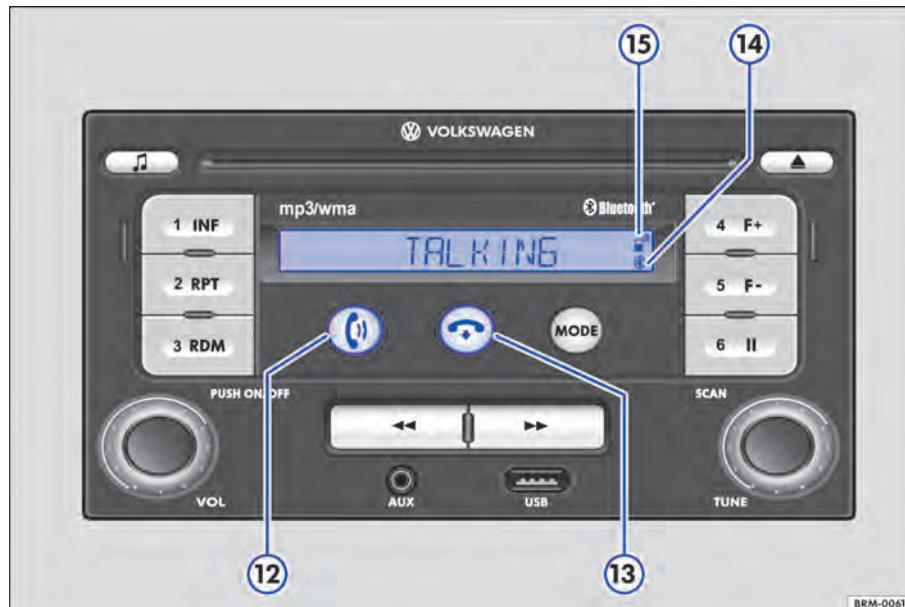 


Fig. 8 Controls for Bluetooth connection

Before connecting a Bluetooth device to the radio, it must be paired.

- Press and hold the button ⇒ fig. 8 12 until you hear two acoustic signals. **PAIRING** appears in the display window for a few seconds.

If you do not have a paired phone, the pairing process will begin immediately after the second “beep”. As of this moment the radio will be visible for any telephone with Bluetooth technology for about 1 minute. The symbol 14 will blink on the display and the Bluetooth PIN will also appear (Key XXXXX) This PIN will be requested by the telephone in order to allow the pairing and later connection to the radio.

Use the phone to begin the pairing process. Check the phone's instruction manual. Once the telephone is paired, **PAIRED** will appear on the display and the symbol 14 will stop blinking in the display.

After verifying the Bluetooth connection by inputting the code number, the cell phone and cell phone pre-installation will detect each other. Up to **five** phones can be paired during the cell phone pre-installation. If an additional phone is paired to the cell phone pre-installation, the phone unused for the longest period of time will be automatically erased.

About pairing

The radio is able to pair with **five** Bluetooth devices, and only one of the paired phones can be connected at a time. Connection priority will be given to the last phone that was paired and connected to the radio unit.

Tips

- If the pairing process does not take place within one minute, the process must be started again.
- The radio appears as an audio and Hands Free device with the name “VW RADIO”. ▶

- It is impossible to pair devices during an established telephone communication.
- It is impossible to pair a cell phone while it is playing a BT audio device. ◀

Connecting a Bluetooth telephone

Once it has been paired, the cell phone can be connected. Refer to the cell phone User's Manual, as methods vary depending on the brand and model.

Once the cell phone connection is established, the symbol ⇒ page 25, fig. 8 ⑮ appears and remains in the display. The cell phone's Bluetooth name appears in the display for a few seconds as "BTXXXXXX", where "XXXXXX" is the first eight characters in the telephone name.

When a Bluetooth device is connected to the radio for the first time, the radio memorizes the number, so each time it is turned on, or the button is briefly pressed ⇒ page 25, fig. 8 ⑫ (manual form), the radio will try to connect with the last five Bluetooth telephones which have been connected to it in the order in which they were connected beginning with the last phone. The symbol ⑭ blinks to indicate that the radio is searching for the paired numbers. **cinco**

Automatic connection to the radio

On turning on the radio, as long as there is at least one telephone paired and connected, it will begin to search for the Bluetooth devices.

As long as the connection process is automatic, the display will not show a specific message, and the symbol ⇒ page 25, fig. 8 ⑭ will blink in the display screen until the connection is established, from which time it will remain permanently lit. If the paired telephone is using the Bluetooth device search function at the same time, the connection between both devices will be automatic.

Tips

- It is important to differentiate between the concepts of pairing and connection, because a Bluetooth device cannot be connected unless it has been previously paired.
- Only one cell phone can be paired at a time.
- If the radio does not immediately recognize a paired telephone, press the button ⇒ page 25, fig. 8 ⑫ once. ◀

Cancelling a Bluetooth connection

– In order to cancel a Bluetooth telephone connection, press and hold the button ⇒ page 25, fig. 8 ⑬ until you hear an acoustic signal. **DISCONNECT** will appear in the display, and the indicator light ⑯ ⇒ page 25, fig. 8 ⑭ will begin to blink in the display indicating that the radio unit is in search mode for Bluetooth devices to be connected.

If you cancel the connection during a call, the call is transferred to the telephone. In the same manner, if the radio frequency signal is not strong enough to allow for an acceptable communication between the radio and the telephone, the link will be disconnected automatically and the display will read: **DISCONNECT**.

Tips

It is also possible to cancel a connection from a cell phone. Refer to the cell phone user's manual as the method varies from phone to phone. ◀

Accepting and rejecting calls

Accepting a call

- To accept a call, briefly press the button ⇒ page 25, [fig. 8 12](#). The radio will go silent and the words: **ANS CALL** and then **TALKING** will appear in the display.

Rejecting a call

- Briefly press the button ⇒ page 25, [fig. 8 13](#) to reject an incoming call during the “ring” signal. **CALL ENDED** will appear in the display.

Each time there is an incoming call to the connected cell phone with the radio on, an acoustic signal will sound and the display will read **CALL FROM**. If the connected cell phone has caller ID, the number from which the call is incoming will appear in the radio display.

The audio connection will be available through the vehicle’s front speakers and the microphone in the front of the radio.

Transferring a call from the radio to the cell phone and vice versa

Briefly press the button ⇒ page 25, [fig. 8 12](#) during the call, it will then be transferred from the radio to the cell phone and vice versa. **CALL TRANS** will appear on the display.

Tips

- It is possible to control volume and audio adjustments with the radio buttons.
- In order to end the call, briefly press the button ⇒ page 25, [fig. 8 13](#). **CALL ENDED** will appear in the display. ◀

Making and ending calls

Making a call from the cell phone

- Dial the desired number on the cell phone.
- Once the cell phone “SEND” button is pressed, the radio will go silent and the call will go through. The word **CALLING** will appear on the display and if the call is answered the display will read **TALKING**.

Making a call from the radio (using the telephone’s voice recognition function)²⁾

- Press the button for approximately 2 seconds ⇒ page 25, [fig. 8 12](#) and release. The cell phone will begin the calling process by means of voice commandos and the radio display will read **VOC DIAL**.

- As of this moment follow the instructions for voice recognition available on the cell phone in order to activate the voice commando to make calls.

Making a call from the radio (“RE-DIAL”) FUNCTION)

- Quickly press the button twice ⇒ page 25, [fig. 8 12](#). **LAST CALL** will appear on the display and a call will go out to the last number dialed on the cell phone.

Ending a call

- Briefly press the button ⇒ page 25, [fig. 8 13](#) during a call. The display will read **CALL ENDED**. The call will be ended and the radio will resume playing the previously selected audio. ▶

²⁾ Depends on the cell phone connected

Calls from the radio (through the telephone's voice recognition function)

The radio itself cannot guarantee that this function will be available because no universal protocol exists to which all manufacturers of telephones with Bluetooth must adhere. Therefore, before attempting to make a call using voice recognition make sure of the following:

- That the phone has the function.
- That the phone is correctly adjusted to the commando function.
- That the user knows how to use this function on the telephone before attempting to do it with the telephone paired to the radio.

Tips

- If during the call using voice recognition no name is indicated within the following three seconds, the redial process will begin.
- The radio will go back to audio as soon as the cell phone ends the call, either with the corresponding key or when the other party ends the call. ◀

Additional functions

“Wake-up” function

If during the trip in your vehicle you do not wish to use the radio but will take calls, be sure your telephone is connected to the radio ⇒ page 26. You may drive with the radio off, but when an incoming call comes in the radio will automatically go on so you can answer the call, and will go off again once the call ends.

Recording the numbers of calls received

It is possible to save up to 6 numbers from prior incoming calls, storing them on the six station programming buttons ⇒ page 19, fig. 7 ⑥.

When you receive a call the words **CALL FROM** will appear on the display along with this person's number. Before answering or during the call press any of the buttons ⑥ for more than 2 seconds, the display will then read **NUMBER**

SAVED indicating that the number has been saved in the button.

Making a call with recorded numbers

Each time you want to make a call with a stored number proceed as follows:


- Press the button ⇒ page 25, fig. 8 ⑫. The display will read **CALL TO** and the radio will go silent.
- Press the memory button on which the number you want to call is stored ⇒ page 28. The stored number will appear in the display so you have the opportunity to read it.
- If the number is correct, confirm the call by pressing the button again ⇒ page 25, fig. 8 ⑫.
- If the number is not correct select another memory button and proceed as indicated above. ◀

“Bluetooth® audio” wireless communication interface

With the Bluetooth® Audio wireless communication interface, music stored in a cell phone can be played on the vehicle's radio

In order to use Bluetooth audio, the cell phone must support the Bluetooth “Advanced Audio Distribution Profile” (A2DP). The A2DP is used for wireless transmission of a high quality stereo audio signal.

How to begin reproduction with “Bluetooth audio”

- To begin using “Bluetooth Audio”, the cell phone must be paired and connected to the radio ⇒ page 25.
- Select the cell phone music playback mode (for example play in earpiece or play by means of Bluetooth). Refer to the User's Manual for this purpose, as methods vary from phone to phone.
- Select the **VW RADIO** equipment.
- Begin the playback from the cell phone. Refer to the User's Manual for this purpose, as methods vary from phone to phone.
- You will begin to hear the playback. **BT AUDIO ST** and the symbol  will appear in the display.

To end playback with “Bluetooth audio”

- End the playback with the music playback mode on your cell phone or turning off the radio. The display will read: **MP3 STOP**.

Operating the system during “Bluetooth audio” playback

Use the radio to adjust audio or change to another audio source.

Use the cell phone keys to select fast forward or fast review of a track. Read your cell phone User's Manual for further instructions.

Operating the telephone during “Bluetooth audio” playback

All telephone functions are available during “Bluetooth Audio “ playback. The music is silenced during a call.

Disconnecting the “Bluetooth audio” function

The simultaneous connection of two cell phones, one for making calls (Hands Free) and another one exclusively for audio reproduction by means of the “Bluetooth Audio” function can cause incompatibilities which may damage normal functioning. If you have a cell phone that offers both profiles (Hands Free and A2DP) you must disconnect the “Bluetooth Audio” function in the **SET UP** mode ⇒ page 6.

Linking a compatible audio device with Bluetooth³⁾

In order to connect a compatible audio device with Bluetooth (for example an MP3 player) to the cell phone pre-installation, proceed as follows:

- Disconnect all of the active Bluetooth connections between the cell phone and the cell phone pre-installation.
- Connect the audio device compatible with Bluetooth to the cell phone pre-installation. Check operation instructions.

Tips

- It may take up to 70 sec. for music to begin to be heard through Bluetooth audio.
- You can adjust the volume directly on some cell phones. We recommend you set the volume at the highest on the cell phone and use the radio to adjust it if necessary. ◀

³⁾ Not available for all markets

Recommendations for better “Bluetooth Audio” functioning

- Before pairing a cell phone with the radio unit, we recommend you turn off the cell phone for approximately 3 seconds before turning it back on.
- If you wish to make a call during “Bluetooth Audio” playback, we recommend you stop the playback (from the external audio player) and resume the playback when you have ended the call.
- We recommend you frequently check for available cell phone software updates.
- After 240 pairing/disconnecting of devices to Bluetooth, some phones may begin to have connection problems. Turn the phone off for approx. 3 seconds before turning it back on.
- We recommend you erase the historical memory of phones linked through Bluetooth and keep only frequently used numbers.
- If you drive two or more vehicles with the radio unit described in this manual, you must identify each one with a different name.
- To assure an adequate volume during a call we recommend you control the volume through the SET UP adjustment mode ⇒ page 6, with the BT VOL option. It is also necessary to check the volume set on the cell phone. ◀

Anti-Theft Coding

Radio coding

Every time you remove the unit from the vehicle (for example: when the car is taken in for repairs which require the battery to be disconnected) it will be necessary to manually re-code the radio.

If the radio is installed in another vehicle, the electronic lock must be disengaged manually.

If, after switching on the radio the word “SAFE” appears in the display the correct code must be re-entered for the radio to operate.

Tips

- The radio code number and the radio serial number can be found on the “Radio Card” at the beginning of the Owner’s Literature.
- It is very important that you keep this “Radio Card” in a safe place – never keep it in the vehicle. Only in this way will the anti-theft protection be effective ◀

Cancelling the electronic lock

Perform the steps in exactly the following order:

- Turn on the radio. First **SAFE** and then **CODE1000** will appear in the display.
- Use the radio station preset buttons 1 to 4 ⇒ page 14, fig. 5 ⑥ to enter the code number on your Radio Card. Use preset button 1 to enter the first digit of the code number. Use button 2 to enter the second digit etc. The value range for each of the 4 digits is 0 to 9. The digit will increase by 1 each time you tap the preset button. The number returns to 0 after 9.
- After you have finished entering the code, press the button [>>] ⇒ page 14, fig. 5 ⑤ for longer than 2 seconds until you hear an audible signal.
- If you have entered the code number correctly, a radio frequency will appear in the display.

Wrong Code Number

If you have accidentally entered a wrong code number **SAFE** will appear in the display.

You can repeat the procedure again once. The number of attempts will appear in the display. If you accidentally enter a wrong code a second time **SAFE** will appear in the display. Initially it will flash, then it will stay on.

If the wrong code is entered again, the unit will be disabled for about one hour. **Leave the unit ON and the key in the ignition switch for this hour.** After the hour has elapsed, the number of attempts will stop being displayed and you can cancel the electronic lock once again.

Remember the cycle is:

- 2 attempts
- One hour locked.

Tips

If you lose your Radio Card, contact your authorized Volkswagen dealer. ◀

Warranty

Warranty, Replacement, Antenna Care

Warranty

The same warranty terms and conditions apply to the vehicle sound system as to the vehicle itself.

Replacement

After the warranty has expired, a unit that needs to be repaired will be replaced at a reasonable price with a fully reconditioned unit. This unit will be comparable to a new unit and will be covered by a replacement parts warranty. This replacement service will not be available however, if the unit housing is damaged or if unauthorized persons have attempted to make repairs.

Antenna Care

The antenna is designed to achieve optimal performance with the radio and is located in a position where reception is good and susceptibility to interference is low.

Vehicles equipped with antennas embedded in the windshield or backlights offer the further advantages of being completely protected from damage and wear.

No antenna care is required for vehicles equipped with roof mounted antennas. ◀

Alphabetical index

A

About mp3 / wma 17
Accepting and rejecting calls 27
Additional functions 12, 28
 Making a call with recorded numbers 28
 Recording the numbers of calls received 28
 Wake-up function 28
Adjustment of balance 6
AM band selection 8
Antenna Care 31
Anti-Theft Coding 30
Audio CD 10
Automatic search 8
Automatic Tuning 7
AUX mode selection 8
Auxiliary audio jack 22
AUX-IN 22

B

Band Setting and Audio Source 8
Bass Control 6
Bluetooth
 Accepting and rejecting calls 27
 Cancelling a Bluetooth connection 26
 Connecting a Bluetooth telephone 26
 General information 23
 Linking a Bluetooth telephone 25
 Making and ending calls 27
 Transferring a call from the radio to the cell phone and vice versa 27
Bluetooth Audio 29
 A2DP 29
 Advanced Audio Distribution Profile 29
Bluetooth audio wireless communication interface 29
Bluetooth® 23
Button
 Eject 11
 RDM 15

C

Cancelling the electronic lock 31
CD 10
 Care 10
CD Mode
 Automatic Track Selection 12, 15
 CD Slot 11
 Display 13
 Displays 16
 Fast Forward 12
 Fast Review 12
 Manual Track Selection 12
 SCAN 15
 Track Selection 12, 15
 TUNE 15
CD mode selection 8
Connecting a Bluetooth telephone 26
Controlled Search 8

D

Display USB
 Display 22
Displays 9, 13

E

External audio devices 22

F

Fader adjustment 6
Fast Forward/Fast Review within the same track 12
FM band selection 8
Folder and Play List search buttons 14
Folder search 14

I

Ignition lock 5
Important Information 4
Information Button 15

K

Key 5

L

Linking a Bluetooth telephone 25

M

Making and ending calls 27

Manual radio station search 7

Manual Track Selection

 SCAN/TUNE Button 12

 Seek button 12

mp3 13

mp3/wma player operation 13

O

ON / OFF 5

ON/OFF Buttons 5

Order of tracks

 CD 18

Q

Quick overview 2

R

Radio 5

Radio Card 4

Radio coding 4

Random Play Button 15

Replacement 31

S

SCAN/TUNE Button 7

Search

 Play List 14

Service 31

Set up 6, 23

Sound Adjustment 6

Station Preset Buttons 9

Station Search Buttons (SEEK) 8

T

Taking care of your audio CD's 10

Treble Control 6

U

USB mode selection 8

USB or memory storage device
connection 19

V

Volume Control 6

W

Warranty 31

wma 13