



TM
KORRYO

USER'S MANUAL



KST 14

Kwik Bite

SANDWICH MAKER



Dear Customer,

Congratulations! Thank you for buying this KORYO appliance. Your new Sandwich Maker has been designed for your convenience. We are sure you will get many years of trouble-free service from this appliance!

Before commissioning this device please read this user manual carefully. Please retain these instructions, the warranty certificate, sales receipt, and if possible, the carton with the inner packaging.

CONTENTS

Warning.....	4
How to make toasted sandwiches.....	4
Important safeguards	5
Hints for best results.....	6
Care and cleaning.....	6
Warranty.....	7

WARNING

1. Before connecting the appliance, check that the power supply at home corresponds to the voltage indicated on the appliance.
2. Do not immerse the appliance in any liquid and do not use it near wash basins, shower or bathroom.
3. Do not touch the appliance with wet or damp hands.
4. Do not leave the appliance exposed to atmospheric agents like rain, sun etc.
5. Do not use extensions in bathroom or shower.
6. Do not leave the appliance within reach of children or irresponsible persons without supervision.
7. While carrying out any cleaning or maintenance operations, always disconnect the appliance from the mains power supply by removing the plugs or switching it off.
8. Beware that the cable is not damaged.
9. Do not pull the supply cable or the appliance to remove the plug from the socket.
10. Do not use the appliance if the cable or the plug are damaged.
11. The users should not replace the supply cable and/or the plug of this appliance in case of damage or for the replacement, use only a specialized technician to rectify the same.
12. Do not use the appliance for different purposes.

HOW TO MAKE TOASTED SANDWICHES

1. Before using please wipe the surface with a damp cloth and dry with cloth, tissue etc. To obtain an even golden brown result, you can slightly butter the side of the bread in contact with the plate.
2. Fit the plug into the wall socket.
3. Close the Sandwich Maker and prepare sandwich while toaster is heating.
4. When the Sandwich Maker is ready after about 3 mins the temperature indicator light (the green one) will light up.
5. Fully open the Sandwich Maker, place a slice of bread in the bottom half with the buttered side against the plate.
6. Fill the sandwich, press the bottom half into the plate.

7. Place your filling and cover with the second slices of bread with buttered side up. You can toast only one sandwich if you wish. Fillings should be placed well within the sandwich slices.
8. Lower the upper cooking plate carefully onto the bread until the sandwich maker is tightly clamped.
9. The sandwich will be toasted in 2-3 mins or longer to suit your taste. Open the toaster and remove sandwich using plastic or wooden spatula. Never use metal knife as this may damage the non-stick coating.
10. Close the lid to preserve the heat until ready to toast the sandwiches.
11. Prepare sandwiches if required while the one is being toasted.
12. After use, remove the plug from the wall socket.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plug or Sandwich Maker into water or any other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Do not use appliance for other any other purpose.
- Unplug the appliance after using and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To reduce the risk of injury, use only accessory attached if recommended by the appliance manufacturer.
- Do not use outdoors.
- Do not let cord hang over sharp edges of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, remove plug from wall outlet.

HINTS FOR BEST RESULTS

1. Always preheat before using. Plug cord into power outlet while preparing the fillings.
2. For soft or liquid sandwich fillings use medium sliced bread, white or brown.

CARE AND CLEANING

1. After using and before cleaning, please remove sandwich maker plug and wait for the appliance to cool.
2. Wipe the inside and edges of the plate with absorbent paper towel or a soft cloth.
3. Pour a little cooking oil onto the plate and wipe off after 5 minutes, when the food has softened.
4. Wipe the appearance with only slightly wet cloth to be sure that no moisture, oil or grease enters the appliance.
5. Do not clean the inside or outside of your Sandwich Maker with any abrasive pad or steel wool as in this way it will damage your Sandwich Maker.

WARRANTY

This product comes with a warranty of 12 months from the date of purchase as specified on the warranty card. This is against all defective material or workmanship. In the event of a defect, Future Value Retail Limited or KORYO Authorized Service Centre undertakes to repair the set, free of charge, during the warranty period.

In the event of a defect developing in the product, contact Future Value Retail Limited or KORYO Authorized Service Centre and provide information about the defect, the model number and serial number of the product.

THIS WARRANTY IS VOID IF

1. The completely filled warranty card is not presented to the authorised personnel at the time of servicing of the product.
2. The product is not operated according to the instructions given in the user manual.
3. Defects are caused by improper or reckless use.
4. Modifications or alterations have been made to the product or if the product has been tampered with, in any manner whatsoever.
5. Repairs to the product are carried out by anyone other than an authorised company representative.
6. For defects other than faulty parts or workmanship such as damage due to lightning, abnormal voltage, spillages, dust, accidental damage, etc.
7. The serial number is deleted or altered.
8. Used for any non-domestic purpose.

OTHER TERMS AND CONDITIONS

1. Repairs or replacement will be carried out either by a Future Value Retail Limited authorised customer care centre or by a representative.
2. All expenses incurred in collecting the unit(s) or part(s) thereof from the Customer Service Centre, as well as any other expenses and incidentals will be borne by the customer.
3. Whilst the company will make every effort to carry out repairs at the earliest, it is made expressly clear that the company is under no obligation to do so in a specified period of time.
4. The company or its authorised customer centre reserves the right to retain any part(s) or component(s) replaced at its discretion, in the event of a defect being noticed in the equipment during the warranty

WARRANTY CARD

THIS CARD IS VALID ONLY IF IT IS FILLED IN COMPLETELY,
SIGNED AND STAMPED BY THE DEALER ON DATE OF PURCHASE

MODEL NO : _____ SERIAL NO : _____

CUSTOMER NAME : _____

ADDRESS : _____

PHONE NO : RESIDENCE : _____ OFFICE : _____

INVOICE/CASH BILL NO : _____

DATE OF PURCHASE : _____

CUSTOMER SIGNATURE : _____

DEALER'S STAMP

* For service request kindly contact Customer Care Centre at : 1800-425-7722, 080-26577722

* Please mail in queries to feedback@koryoworld.com



Also Available

Microwave Oven	Mixer Grinder	Split Air Conditioner
Induction Cook Top	Juicer Extractor	Window Air Conditioner
OTG	Juicer Mixer Grinder	Geyser
Electric Cooker	Slow Juicer	Room Heater
Electric Kettle	Steam & Dry Iron	Immersion Heater
Pop-Up Toaster	Hair Dryer	Hand Blender
Sandwich Maker	Vacuum Cleaner	Fan
Electric Pressure Cooker	Washing Machine	Emergency Light



Imported by:

Future Value Retail Limited

Tower C, 9th Floor, 247 Park, L.B.S. Marg, Vikhroli (West),
Mumbai - 400 083, Maharashtra, India.