

Oster®



MODEL **TSSTTVGS1-049**

INSTRUCTION MANUAL TOASTER OVEN

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

READ ALL INSTRUCTIONS, PRODUCT LABELS AND WARNINGS BEFORE USING THE TOASTER OVEN.

1. **DO NOT** touch "▲" hot surfaces. Always use oven mitts when handling hot materials and allow metal parts to cool before cleaning. Allow the unit to cool thoroughly before putting in or taking off parts. Always use the oven handles when moving the unit. The temperature of accessible surfaces may be high when the appliance is in use.
2. When the unit is not in use and before cleaning, unplug the oven from the wall outlet. Note: Make sure the oven is turned off before unplugging.
3. To protect against risk of electrical shock, do not immerse the appliance in water or any other liquids.
4. **DO NOT** operate this or any appliance with a frayed or damaged cord or plug or after the appliance malfunctions or is dropped or has been damaged in any manner. Take this appliance only to the nearest Authorized Oster® Service Center for examination, repair or adjustment.
5. **DO NOT** use attachments not recommended by the manufacturer; they may cause fire, electric shock or personal injury.
6. **DO NOT** use outdoors or for commercial purposes.
7. **DO NOT** use this appliance for other than its intended use.
8. **DO NOT** let the cord dangle over the edge of a tabletop or countertop or touch hot surfaces.
9. **DO NOT** place the appliance near a hot gas or electric burner or in a heated oven.
10. Extreme caution should be used when using containers constructed of material other than metal or glass.
11. A fire may occur if the toaster oven is covered or touching flammable materials, including curtains, draperies, walls, etc., when in operation. Do not store any items on top of the appliance when in operation.
12. When using the oven, pull the unit out a minimum of 15 cm (6 inches) away from walls on all sides. Remove cords from other products from behind the oven.
13. **DO NOT** store any materials, other than manufacturer's recommended accessories, in this unit when not in use.
14. **DO NOT** place any flammable materials in oven, such as paper, cardboard, plastic or any materials that may catch fire or melt.
15. **DO NOT** cover the oven with metal foil. This will cause overheating of the appliance.
16. Oversized foods or metal utensils must not be inserted in the appliance as they may create a fire or risk of electrical shock.
17. **DO NOT** clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electrical shock.
18. When broiling, use extreme caution when removing tray or disposing of hot grease.
19. The door and the outer surface may get hot when appliance is used.

20. To turn this appliance off, return all controls to the off "O" position.
21. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
22. Close supervision is necessary when any appliance is used by or near children, or incapacitated individuals.
23. The instructions shall state that appliances are not intended to be operated by means of an external timer or separate remote-control system
24. This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments, farm houses, by clients in hotels, motels and other residential type environments, bed and breakfast type environments.

 
THIS UNIT IS FOR HOUSEHOLD USE ONLY.

SAVE THESE INSTRUCTIONS

SHORT POWER SUPPLY CORD INSTRUCTIONS

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the electrical rating of the cord must be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

DESCRIPTION OF THE APPLIANCE

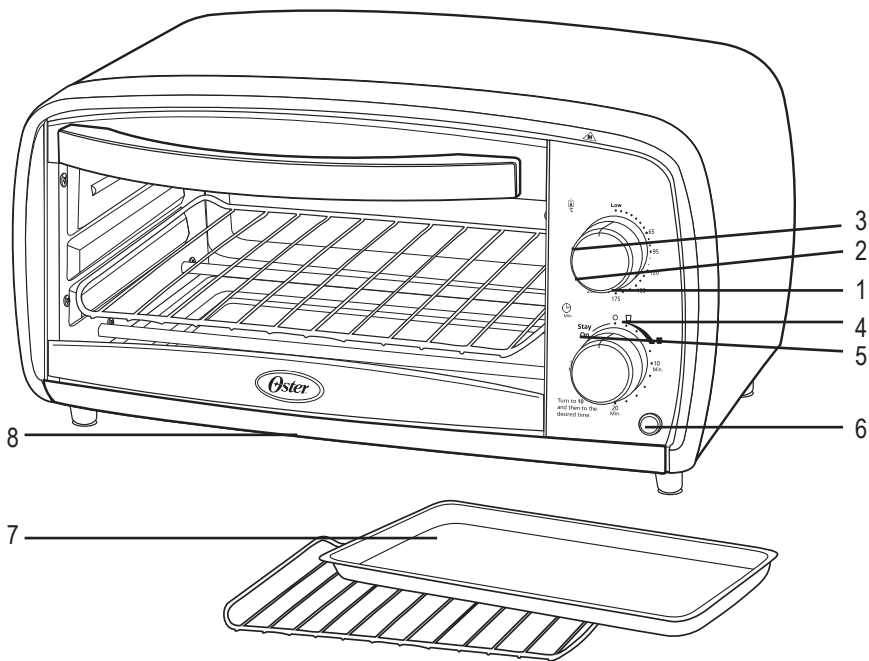

1. Temperature Control Dial
2. Toast Setting
3. Broil Setting
4. Toast Color Control / Timer Dial
5. Stay-On Setting
6. Indicator Light
7. Baking Pan
8. Crumb Tray

LEARNING ABOUT YOUR TOASTER OVEN

1. **Removable Wire Rack** – To accommodate a wide variety of foods.
2. **Temperature Selector/Function Selector Knob** – Adjust the thermostat dial to the desired temperature. Select cooking function by turning knob to desired setting. (See Figure 1)
3. **Timer Selector Knob** – Allows to adjust the dial to the desired time for up to 30 minutes. Oven will automatically shut off when cooking is completed. (See Figure 2)
4. **Power Light** – Indicates that oven is plugged in and that the timer is set to begin warming.
5. **Removable Crumb Tray** – For crumb or fallen food particles collection. Pulls out for easy cleaning.
6. **Glass Door** – Allows you to see food while is cooking.
7. **Easy Clean Interior Walls** – Allows for easy cleaning.
8. **Baking Pan and Broiling Rack** – Use for all your baking, broiling and grilling needs.

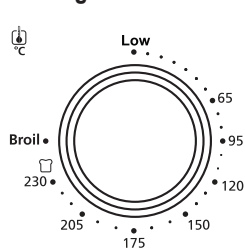 


Figure 1

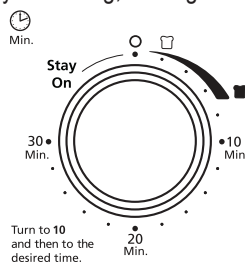 


Figure 2

PREPARING TO USE YOUR TOASTER OVEN FOR THE FIRST TIME

If you are using your toaster oven for the first time, please be sure to:

- Remove any stickers from the surface of the oven.
- Open oven door and remove all printed documents and paper from inside the toaster oven.
- Clean the rack, tray, and pan with hot water, a small amount of dishwashing liquid and a non-abrasive sponge or cleaning pad.
- **DO NOT IMMERSE THE BODY OF THE UNIT IN WATER.**
- Dry the unit thoroughly before using.
- Select a location for the toaster oven. The location should be in an open area on a flat counter where the plug will reach an outlet.
- Plug the toaster oven into the appropriate electrical outlet.

The heating elements are designed to work efficiently and maintain a precise temperature. You may not see the elements glowing, however they are working properly.



PLEASE NOTE – It is recommended that the toaster oven heat at 230° for approximately 15 minutes to eliminate any manufacturing residue that may remain after shipping.

OPERATING INSTRUCTIONS




Your Oster® Toaster Oven is equipped with all the options of a full-size oven in a countertop appliance; toasts, bakes and broils.

 
 
NOTE: During initial start up you may detect a slight smell and/or smoke. Turn the temperature to max and let run for approximately 5 minutes.

PREHEATING THE OVEN

1. Place oven rack into the desired position before heating the oven. (See “Positioning Rack” Section)
2. Turn the temperature control/function selector knob () to the desired temperature or setting.
3. Set the timer knob () to desired time and allow 7 – 9 minutes for the oven to preheat.

TO USE THE TOAST FUNCTION

1. Place oven rack in Broil/Toast position. Place food on rack.
2. Turn function knob to Toast ()
3. Rotate Toast Color Control/Timer Dial () clockwise past 10 minutes then back to desired toast shade ()

IMPORTANT: When choosing Toast color light () , medium (set between light and dark) and dark () , always rotate timer over 10 minutes and then rotate back to Dark, Medium or Light. This will ensure that the timer operates correctly and safely. When the toast cycle is finished the bell will ring and the electrical power is automatically turned off. To stop the cycle at any time, turn the timer counterclockwise to the “Off” position and the bell will ring. In this cycle both the top and bottom heating elements operate, however they may not glow red-hot. Please note this is normal and they are operating properly.

TO USE THE BAKE FUNCTION

1. Place the food on the baking pan and then place the pan on the top of the Wire Rack in the oven. Close the oven door.

NOTE: We suggest to always preheat the oven before placing the food inside.

2. Rotate the Temperature Dial to the desired temperature.
3. After rotating the Temperature Dial to your desired temperature, then you must select from the following options on the Timer Dial.
 - For items requiring shorter baking times, rotate the Timer Dial clockwise (up to 30 min). At the sound of the bell, the bake function will automatically turn “Off.”
 - For longer baking times, rotate the Timer Dial counterclockwise to the “Stay On” setting. Baking will continue until the Timer Dial is manually turned to the “Off” position and the bell will sound.
 - During this cycle, both the top and bottom heating elements operate.

NOTE: Always monitor the food at this setting to ensure that you are not overcooking. Do not use oven plastic or paper cooking bags in the toaster oven.

TO USE THE BROIL FUNCTION

1. Place the food on the baking pan and then place the pan on the top of the wire rack in the oven.
2. Close the door to the first notch, leaving approximately a 3-inch gap at the top. This will insure adequate airflow during broiling.
3. Rotate the Temperature Dial clockwise to the "Broil" position.
4. After rotating the Temperature Dial to the "Broil" position, select the Timer Dial with the following options.
5. When broiling is completed, open door fully and remove food carefully with oven mitt.
 - For items requiring short broil times, rotate the Timer Dial clockwise (up to 30 minutes). At the sound of the bell, the broil function will automatically turn "Off."
 - For longer broiling times, rotate the Timer Dial counterclockwise to the "Stay On" setting. The broiling will continue until the Timer Dial is manually turned to the "Off" position and the bell will sound.
 - In this cycle only the upper heating elements operate, however they may not glow red-hot. Please note this is normal and they are operating properly.

NOTE: Always monitor the food at this setting to ensure that you are not overcooking. We suggest using the Timer as food can burn quickly at this setting. When broiling, turn food over for even cooking. Food should not be placed directly on the wire rack. For Top Browning simply broil as long as desired.

NOTE: Do not preheat; Do not allow aluminum foil to touch heating elements. Allow one inch between heating element and food.

POSITIONING RACK

To accommodate a wide variety of foods the oven has two rack positions. The rack can be inserted in the oven in the up position or down position. The rack will fit into either of the rack guides inside of the oven. (See Figure 3)

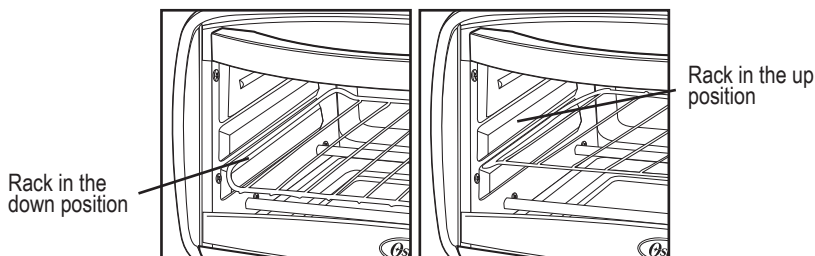 


Figure 3

Before removing the rack allow the unit to cool.

To remove the rack, open the oven door and pull the rack towards the front of the oven. Positioning of the rack will depend on the size of the food and desired browning.

CLEANING YOUR TOASTER OVEN

Before cleaning your Oster® Toaster Oven, unplug it and allow it to cool. To clean, wipe with damp cloth. **DO NOT IMMERSE IN WATER!** Make sure to use only mild, soapy water. Abrasive cleaners, scrubbing brushes and chemical cleaners will damage the continuous clean coating on this unit. Empty crumb tray frequently to avoid accumulation of crumbs. Oven racks are dishwasher safe (top of dishwasher only). Other than the recommended cleaning, no further user maintenance should be necessary.

CLEANING THE WIRE RACK

The wire rack can be removed for easy cleaning. Open the oven door and tilt upward slightly, pull the wire rack toward you until it slides out completely. Once the rack is removed, clean the interior with a damp cloth. To replace the wire rack, open the oven door and tilt upward slightly and slide the rack into the two rack grooves at either side of the oven chamber, push straight to the back of the oven chamber. Ensure that the automatic door hooks are in the correct position to push in the wire rack towards the rear of the oven chamber. The exterior may be wiped with a damp cloth. Remember; do not place the entire unit in water or any liquid. **DO NOT WIPE THE HEATING ELEMENTS** – They are self-cleaning.

CLEANING THE BOTTOM OF THE CRUMB TRAY

This appliance has a removable interior crumb tray at the bottom of the baking chamber. First, unplug this appliance and allow cooling. To clean out the crumbs, simply lift the crumb tray and pull out of the Toaster Oven/Broiler.

DO NOT use the dishwasher to clean any of the accessories, which are included with these products.

DO NOT use any abrasive cleaning products. TO PREVENT COUNTERTOP FROM BEING DAMAGED, THE TOASTER OVEN/BROILER MUST BE OPERATED WITH THE CRUMB TRAY IN PLACE AND CLEANED OF EXCESS FOOD. NEVER OPERATE YOUR TOASTER OVEN/BROILER WITH THE OVEN DOOR OPEN.

STORING YOUR TOASTER OVEN

Allow the appliance to cool completely before storing. If storing the oven for long periods of time make certain that it is clean and free of food particles. Store the oven in a dry location such as on a table or countertop or cupboard shelf.

HELPFUL TIPS/ TROUBLESHOOTING		
PROBLEM	POTENTIAL CAUSE	SOLUTION
<ul style="list-style-type: none"> Overcooked / undercooked foods. 	<ul style="list-style-type: none"> Incorrect temperature or time setting. Rack placement. 	<ul style="list-style-type: none"> You may have to adjust the time and temperature to the desired taste. Because your oven is smaller than your regular oven, it will heat up faster and generally cook in shorter periods of time. Refer to "Positioning Rack" Section. Rack may need to be adjusted to accommodate food type.
<ul style="list-style-type: none"> Burnt smell. 	<ul style="list-style-type: none"> Food build-up inside oven, on heating elements or in crumb tray. 	<ul style="list-style-type: none"> Refer to "Cleaning Your Toaster Oven" Section.
<ul style="list-style-type: none"> Oven does not turn ON. 	<ul style="list-style-type: none"> Unit is unplugged. Timer was not turned past 10 minute mark. 	<ul style="list-style-type: none"> Plug the toaster oven into appropriate electrical outlet. Set timer knob and temperature knob to the desired setting. Both must be turned on to operate the toaster oven.
<ul style="list-style-type: none"> Only one heating element is heating up. 	<ul style="list-style-type: none"> Function setting selection determines which heating element will operate. 	<ul style="list-style-type: none"> When toasting, make sure the oven is not set to broil setting.
<ul style="list-style-type: none"> Heating elements do not stay ON. 	<ul style="list-style-type: none"> Heating elements will cycle ON and OFF to maintain proper heat. 	<ul style="list-style-type: none"> Be certain that function is as desired.

WARRANTY

Jarden Consumer Solutions of India Private Limited (hereinafter referred to as “JCS”) warrants that, for a period of two (2) years from the date of purchase of this product as evidenced in the cash memo (“Warranty Period”), this product will be free from defects in material and workmanship (the “Warranty”). Please preserve the warranty card and the cash memo of the product duly stamped and signed by the dealer, as this will be required for any claims under this Warranty.

- The rights and benefits under this Warranty are additional to your statutory rights, which are not affected by this Warranty.
- During the Warranty Period, JCS, at its sole choice, will either repair or replace this product or any component of the product found to be defective free of cost through (the dealer from whom the product was purchased or through the service center listed in the card – business people to confirm), provided that:
 - JCS is promptly informed of the defect;
 - The product has not been altered in any way or subjected to misuse or repair by the person other than a person authorized by JCS;
 - This Warranty, duly filled, stamped and signed by the dealer is made available.
- The Warranty provided herein is towards the original purchaser and is not transferrable to any third party.
- Any repaired or replaced product will be warranted on these terms for the remaining portion of the Warranty in the country where the product was purchased.
- Liability for consequential loss or damage is neither accepted nor is it implied.
- This Warranty is in lieu of all others expressed or implied and does not cover the following:
 - a. If product was use in any manner other than the intended use.
 - b. If the product has not been used according to the instruction manual/user’s manual, included with the product.
 - c. If the defects are caused by improper use or reckless use.
 - d. If the product was altered or repaired by anyone other than those authorized by JCS.
 - e. If installation of the product is not done as per the printed instructions provided along with the product.
 - f. If the defects are caused by fire, flood, and other act of god.
 - g. If the defects are caused by use of incorrect current or voltage or faulty electric power supply.
 - h. Normal wear and tear of parts and accessories resulting from regular use.
 - i. Damage resulting from transportation, accidents, mishandling or negligence on the part of the consumer.
 - j. The following part/components:
 - Broken glass or ceramic parts
 - Light bulb
 - Accessories
 - k. If the product is put to industrial or commercial use.
 - JCS will not be responsible for any delay in servicing due to non-availability of any components or due to reasons beyond the control of JCS.
 - Any failure of the product to perform any purpose other than the intended purpose shall not be considered as a default under this warranty.
 - In any event, if JCS becomes liable for damages incurred in connection with these presents, then the liability of JCS will be limited to the amount equal to the sale invoice amount paid by you.

Waste electrical products should not be disposed off with household waste. Please recycle where facilities exist.

AUTHORIZED SERVICE CENTERS

Region	State	City	Name	Address	Contact Person	Contact No.
East	West Bengal	Kolkata	Jeeves Consumer Services Pvt Ltd	356, Jodhpur Park, Kolkata - 700068	Someswar Basu	(033) 40012100
	West Bengal	Kolkata	Southern Service	6/19A, Prince Anwarshah Road, Poddar Nagar, Kolkata - 700068	Subrata Manna	(033) 24729651 / 65488822
	West Bengal	Kolkata	Baishanu Service Care	55D, Adaya Nath Saha Road, Lake Town, Near Jaya Cinema, Kolkata - 700048	Piyush Nandan	(033) 40664210
	West Bengal	Howrah	Time n Service	37 & 38, Mohenath Lane, Salkia, Howrah - 711106	Tapas Hazra	(033) 65639720
	West Bengal	Hooghly	DNP Enterprises	52, Sahaganj Main Road, P.O. Sahaganj, Near Bandel Station, Hooghly - 712104	Indrajit Bag	(0) 9163668360
	West Bengal	Barrackpore	Balaji Enterprise	4/E/A Barasat Road, Barrackpore, Dist. North 24 Parganas, Near 15 No. Rail Gate, Barrackpore - 700122	Pradip Kr Ghosh	(033) 25451224
	West Bengal	Siliguri	S D Electronics	Deys Lodge, 138/69/57, Nazrul Sarani, Ashrampara, Siliguri - 734001	Arup Dey	(0353) 2526028
	West Bengal	Asanol	Yes Service	Hutton Road, Near Mahal Banquet Marriage Hall, Asanol - 713301	Sarfaraz Ahmed	(03228) 2280029
	Assam	Guwahati	Multi Track Services	G S Road, Ground Floor, Bora Service Station, Ulubari, Guwahati - 781007	Kallol Dutta	(0361) 2457296

AUTHORIZED SERVICE CENTERS

North	Delhi	Delhi	Jeeves Consumer Services Pvt Ltd.	# E-10, Arya Samaj Road, School Road, Uttam Nagar, Delhi - 1100059	Md Khalid Pervez	(011) 45785915
	Delhi	Delhi	Jeeves Consumer Services Pvt Ltd.	R-32, 2nd Floor, Vikas Marg, Shakarpur, Opp. Heera Sweets, Metro Pillar # 46, Delhi - 1100092	Manjeet Singh	(011) 47754764
	Delhi	Delhi	S T Services	M-131, 1st Floor, Guru Harkrishan Nagar, Paschim Vihar, New Delhi - 110041	Vipin Yadav	(011) 32958438 / 45586987
	Haryana	Gurgaon	Jeeves Consumer Services Pvt Ltd.	4/18 A, 1st Floor, Laxmi Garden, Behind Police Chowki, Khandasa Road, Gurgaon-122001	Karamvir Fogaat	(0124) 4073434
	Haryana	Faridabad	Jeeves Consumer Services Pvt Ltd.	5H-49, 1st Floor, NIT Faridabad -121001	Manoj Kumar Panwar	(0129) 4163003
	Uttar Pradesh	Noida	Jeeves Consumer Services Pvt Ltd.	1st Floor, Above Punjab ATM, Sector-22, Chaura More Main Road, Near Oriental Bank of Commerce, Opp.Rajkiya Inter College, Noida, U.P - 201301	Devender Singh	(0120) 4162644
	Uttar Pradesh	Lucknow	Swastik Customer Care	A-1/3, SEC-H Aliganj, Near Kendriya Bhawan, Lucknow - 226020	Uma Shankar Mishra	(0522) 3298003 / 4102581 / 4102582
	Uttar Pradesh	Kanpur	Shubham Electronics	192, Manohar Nagar Barra -3, Opp Deepshika Guest House, Kanpur - 208027	Suman Gupta	(0512) 2283394 / 2602029
	Uttar Pradesh	Agra	Sai Electronics	25/113, Gandhi Nagar, Agra - 282 003	Ajay Singhal / Sunil	(0562) 3297005
	Haryana	Ambala	Telecare	Old Hospital Road, Bara Thakur Dwara, Opp. Polytechnic, Ambala City - 134003	Devinder Sharma	(0171) 25567369
	Haryana	Sonapat	Saibaba Enterprises	House No. 1510, Sector - 15, Sonapat - 131001	Pramod Sharma	(0130) 6411206
	Haryana	Karnal	Jeeves Consumer Services Pvt Ltd.	Shop # 50, Ground Floor, Mayapuri, Rajiv Gandhi Marg/ Near Raj Palace, Meeraghati Chowk, Karnal - 132001	Neeraj Sharma	(0184) 4022201
	Punjab	Mohali	Jeeves Consumer Services Pvt Ltd.	# SCF-4, Basement, The High Land Society, NAV, Baltana, Zirakhpur, Mohali-140603	Shiv Dhandra	(0176) 2652574
	Punjab	Ludhiana	Jeeves Consumer Services Pvt Ltd.	Shop # 18B, Dhyan Singh Commercial Complex, Opp. Bus Stand, Ludhiana - 141001	Gurbeer Singh	(0161) 2444002
	Punjab	Jalandhar	Jeeves Consumer Services Pvt Ltd.	EH-31, Laddowali Road, Opposite Gurudwara, Jalandhar - 144001	Ashok Kumar	(0181) 2221707
	Punjab	Amritsar	Keerat Electronics	Naraingarh Bazar, Shaheed Bhagat Singh Road, Chheharta, Amritsar - 143 001	Sukhdeep / Mantreet Singh	(0183) 2450095
	Himachal	Shimla	Suvidha Electronics	Mehta Niwas, Ground Floor, Near Himfard Building, B C S, New Shimla - 171009	Rajesh Kumar	(0) 9816457886
	Himachal	Mandi	Kuldeep Electro Care	Neear FCI Godown, Kehanwal Road, Ram Nagar, Mandi - 175001	Kuldeep Singh	(01905) 222140 / 329574
	Rajasthan	Jaipur	Jeeves Consumer Services Pvt Ltd.	A-79, Subash Nagar Shopping Centre, Jaipur - 302016	Vipendra Singh	(0141) 4035102

AUTHORIZED SERVICE CENTERS

West	Maharashtra	Mumbai	S P Services	Shop No. 10, Abdul Sattar Compound, Fitwala Road, Opp. Satguru Darshan Bldg., Near Railway Station, Elphinston Road (West), Mumbai - 400013	Palsingh Panyari	(022) 24326726 / 24312623
	Maharashtra	Mumbai	Jeeves Consumer Services Pvt Ltd.	Plot No 27/5, Pawani Chowk, Opp Mulund Darshan Building, Mulund Colony, Mulund (W), Mumbai - 400082	Ramesh Yadav	(022) 65288597
	Maharashtra	Mumbai	Jeeves Consumer Services Pvt Ltd.	Shop No.1-1A, Ground floor, Kirti Co-Op Housing Society, Ramachandra Extn Lane, Near Movie Time, Evershine Nagar, Malad(W), Mumbai-400064	Murali Joshi	(022) 65278590
	Maharashtra	Pune	Jeeves Consumer Services Pvt Ltd.	No. 337, Sai Leela, 1st Floor, Datt Wadi, Mhasoba Chowk, Pune - 411030	Saket Dubey	(020) 24321679
	Maharashtra	Nagpur	Technic Services	Khare Building, Hanuman Lane, Sitabuldi, Nagpur - 440 012	Dilip Panda	(0712) 2550076
	Maharashtra	Chandrapur	Suvidha Electronics	No. 1, Devt Appartment, Church Road, Hanuman Nagartukum, Chandrapur - 442401	Subash Deashkar	(07172) 258966 / 256453
	Maharashtra	Kolhapur	Sikir Mobiles	1492 C Ward, Laxmipuri, Opp. TATA Brand Stores, Kolhapur - 416001	Sukir Bakare	(0) 9372555011
	Maharashtra	Aurangabad	Emperor Services	S-5,Manik Arcade Kalda Corner, Opp Chowbey Hospital, Chetna Nagar, Aurangabad -31005	Mr. Willy Bento Colaco	(0240) 2350606
	Maharashtra	Nashik	Harsha Electronics	3, Talak Complex, Rachna Vidyalaya Road, Sharanpur Roda, Nashik - 422002	Pravin Patil	(0) 9422254240
	Goa	Salcete	Jolly Enterprises	Shop # G-2, 78/A Nuvem Enclave, Along NH-17 Highway, Belloy Nuvm, Salcete - 403604	John Gonzanalves	(0832)2791800
	Gujarat	Ahmedabad	Jeeves Consumer Services Pvt Ltd.	No. 37, Om Tower, Near Star Bazar, Jodhpur Cross Road, Satellite, Ahmedabad - 380015	Girish Parmar	(079) 40080485
	Gujarat	Baroda	Uday Refrigeration	G/3 Nandanvan Complex, Atma Jyoti Ashram Road, Behind Citizen Society, Ellora Park, Baroda	Shailesh	(0265) 6590948
	Gujarat	Surat	Sadgurudev	Shop No. L/6, Shankutal Complex, Beside Sangvi Tower, Near Gujarat Gas Circle, Adajan Patia, Surat - 395009	Manoj Rana	(0261) 6540417
	Gujarat	Rajkot	PC Systems	4-Sardar Nagar (West), Tagore Road, Near Astron Circle, Rajkot-360001	Manoj Gohil	(0281) 2480479
	Madhya Pradesh	Indore	Cool Home Refrigeration	LG-70, Trade Centre, 18, South Tukogunj, Indore- 452 001	Husain Anjum	(0731) 4076404
	Madhya Pradesh	Bhopal	Jeeves Consumer Services Pvt Ltd.	Ward no 47, Goyal Vihar, Ground floor, Flat no-G-1, 31-C, Zone-2, MP Nagar, Bhopal	Ram Ashish Prasad	(0755) 4059310

AUTHORIZED SERVICE CENTERS

South	Tamil Nadu	Chennai	Jeeves Consumer Services Pvt Ltd.	New No.3,Old No.1-A, Sripuram,2nd Lane,Royapetah, Chennai-600014	Dinesh Kumar	044-42632371
	Tamil Nadu	Chennai	G C Services	Old No. 12, New No. 37, 1st Floor, Sattanna Naichen Street, Nehru Timber Market, Choolai, Chennai - 600112	Naval R	(044) 26690084 / 42822868
	Tamil Nadu	Coimbatore	V K Engineering	108-A/92, West Ponnurangam Road, Ground Floor (Near Telephone Exchange), R.S.Puram, Coimbatore - 641002	Selvadurai	(0422) 2541172
	Pondicherry	Pondicherry	Bestronics	49, Saint Theresa Street, Pondicherry - 605001	B Jayashankar	(0) 9443728020
	Andhra Pradesh	Hyderabad	Jeeves Consumer Services Pvt Ltd.	Flat No. 205, Karan Centre, Opp. IBP Petrol Pump and Karan Hotel, Park Lane, S.D.Road, Near Paradise Circle, Secunderabad - 500003	Kumararajan	(040) 64591168
	Andhra Pradesh	Vijaywada	Jeeves Consumer Services Pvt Ltd.	Door No.25-10-10A,G.S.Raju Road,Gandhi Nagar, Near Gymkhana Road, Vijayawada - 520003	Rahamatullah Gouse Khan	(0866) 6591168
	Karnataka	Bangalore	Jeeves Consumer Services Pvt Ltd.	No. 126, 1st Floor, 8th Main J.P.Nagar, 3rd Phase, Bangalore - 560078	Ramesh Kumar	(080) 41209331
	Karnataka	Bangalore	Jeeves Consumer Services Pvt Ltd.	First Floor, Khan Bldg, 7 & 8th Cross, Jakkasandra Extension, Bangalore - 560032	Surulivel	(080) 25520424
	Karnataka	Mangalore	Jeeves Consumer Services Pvt Ltd.	1st Floor, Quadra compound, Bejai,kapikad, Kavour Road, Mangalore -575004	Divakar Shetty	(0824) 2213699
	Karnataka	Mysore	Jeeves Consumer Services Pvt Ltd.	No.1095, 1st Floor, C&D Block, Lalithadri Road, Kuvempunagar, Mysore - 570023	Venkatesh.S.Kulkarni	(0821) 4191094



WARRANTY CARD

© 2014 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved.
Distributed by Jarden Consumer Solutions of India Private Limited, Unit B-204, Universal Business
Park, Off Saki Vihar Road, Chandivali Farm Road, Andheri (E) Mumbai 400 072, India. 2 Year
Limited Warranty - see inside for details. Sunbeam Products, Inc. and Jarden Consumer Solutions
of India Private Limited are subsidiaries of Jarden Corporation (NYSE: JAH).
1-800-102-6300

www.oster.in

Model No. : _____

Date of Purchase : _____

Dealer's Stamp : _____

Printed in China
TSSTTVGS1-049_14EM1

P.N. 9100210000291
GCDS-OST33516-JC