

ASSEMBLY & INSTALLATION INSTRUCTIONS

TABLE OF CONTENTS

pg. 2-5	CIRCA TABLE
pg. 6-9	CIRCA FLOOR
pg. 10-13	CIRCA PEDESTAL
pg. 14-17	CIRCA WALL
	CIRCA PENDANT





ASSEMBLY & INSTALLATION INSTRUCTIONS






Pablo" CIRCA TABLE

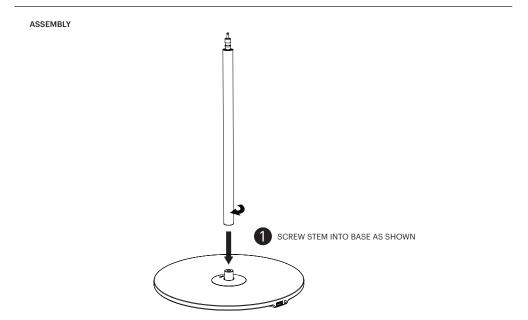

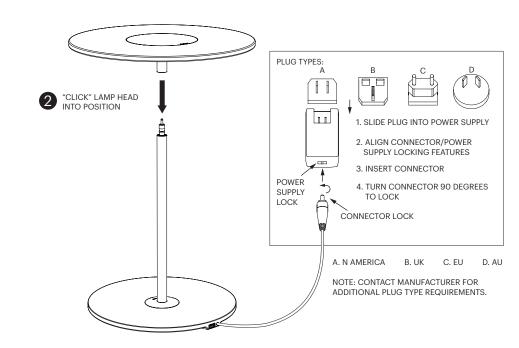

Pablo" CIRCA TABLE

CIRCA TABLE SWITCH AND USB CHARGING

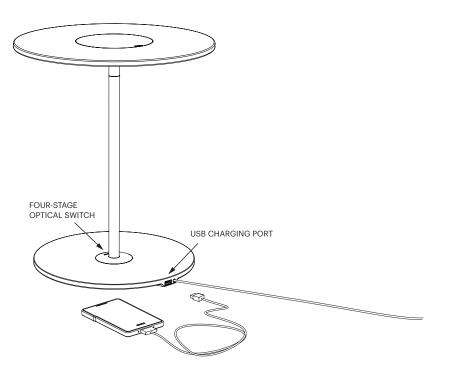

HIGHLIGHTS

SINGLE 5.0V USB OUTPUT SUPPORTS CHARGING FOR SMARTPHONES, TABLETS AND OTHER MOBILE DEVICES.

SPECIFICATIONS

USB 2.0 OR 1.1 STANDARD CORD REQUIRED (CORD NOT INCLUDED) OUTPUT VOLTAGE: 5VDC + - 5% OUTPUT CURRENT: 1A MAX

NOTE

CIRCA TABLE WILL CONTINUE TO CHARGE YOUR MOBILE DEVICE EVEN WHEN LAMP IS IN THE "OFF" POSITION.


PLEASE REFER TO YOUR MOBILE DEVICE'S USER MANUAL FOR COMPATIBILITY AND CHARGING TIME. PLEASE REFRAIN FROM LEAVING YOUR DEVICE PLUGGED IN FOR LONGER THAN THE RECOMMENDED TIME, OTHERWISE IT MAY RESULT IN OVER CHARGING.

PRESS AND HOLD OPTICAL SWITCH FOR 1.5 SECONDS TO TURN OFF. TAP BRIEFLY TO CYCLE THROUGH FOUR STAGES.


CARE INSTRUCTIONS

WIPE CLEAN WITH A SOFT DAMP CLOTH. AVOID AMMONIA-BASED CLEANERS.

Pablo" CIRCA TABLE

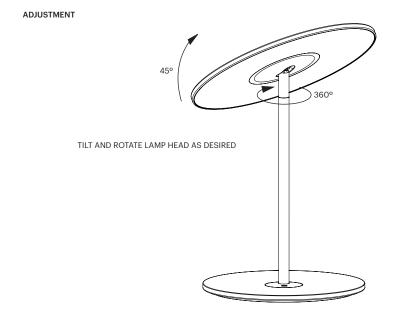

INFO@PABLODESIGNS.COM 888 MARIN STREET SAN FRANCISCO, CA 94124

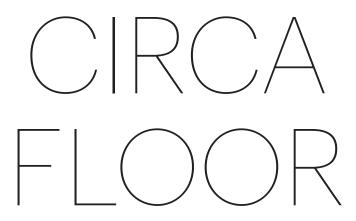

ASSEMBLY & INSTALLATION INSTRUCTIONS

INFO@PABLODESIGNS.COM 888 MARIN STREET SAN FRANCISCO, CA 94124





Pablo[®] CIRCA FLOOR


ASSEMBLY

1. SCREW LOWER STEM INTO BASE AS SHOWN


2. SCREW UPPER STEM INTO LOWER STEM AS SHOWN

3. "CLICK" LAMP HEAD INTO POSITION

OPTIONAL ACCESSORY

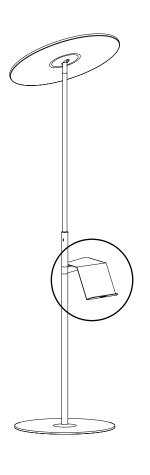


PEDESTAL FOR MOBILE DEVICES SOLD SEPARATELY (SEE PEDESTAL ASSEMBLY INSTRUCTIONS)

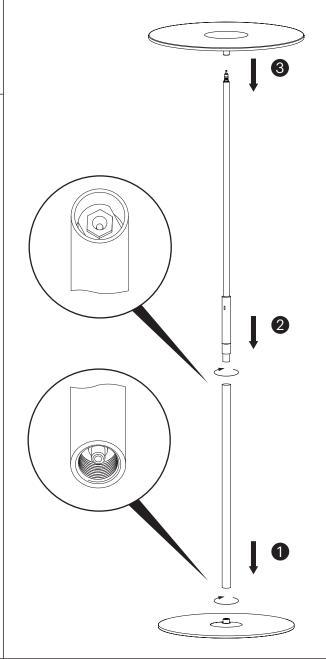


Pablo[®] CIRCA FLOOR

ADJUSTMENT

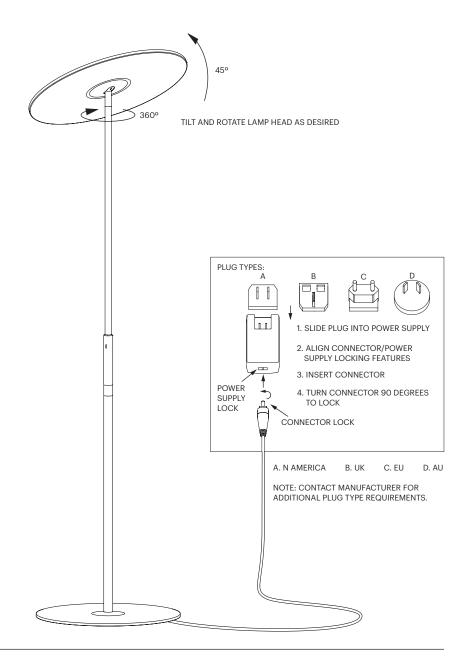

Pablo^{*} CIRCA FLOOR

CIRCA FLOOR SWITCH AND USB CHARGING

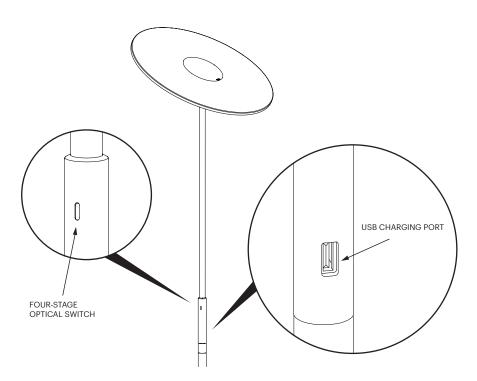

HIGHLIGHTS

SINGLE 5.0V USB OUTPUT SUPPORTS CHARGING FOR SMARTPHONES, TABLETS AND OTHER MOBILE DEVICES.

SPECIFICATIONS

USB 2.0 OR 1.1 STANDARD CORD REQUIRED (CORD NOT INCLUDED) OUTPUT VOLTAGE: 5VDC + - 5% OUTPUT CURRENT: 1A MAX

NOTE

CIRCA FLOOR WILL CONTINUE TO CHARGE YOUR MOBILE DEVICE EVEN WHEN LAMP IS IN THE "OFF" POSITION.

PLEASE REFER TO YOUR MOBILE DEVICE'S USER MANUAL FOR COMPATIBILITY AND CHARGING TIME. PLEASE REFRAIN FROM LEAVING YOUR DEVICE PLUGGED IN FOR LONGER THAN THE RECOMMENDED TIME, OTHERWISE IT MAY RESULT IN OVER CHARGING.

PRESS AND HOLD OPTICAL SWITCH FOR 1.5 SECONDS TO TURN OFF. TAP BRIEFLY TO CYCLE THROUGH FOUR STAGES.

ACCESSORIES

OPTIONAL PEDESTAL FOR MOBILE DEVICES

CARE INSTRUCTIONS

WIPE CLEAN WITH A SOFT DAMP CLOTH. AVOID AMMONIA-BASED CLEANERS.



ASSEMBLY & INSTALLATION INSTRUCTIONS

INFO@PABLODESIGNS.COM 888 MARIN STREET SAN FRANCISCO, CA 94124





Pablo[®] CIRCA PEDESTAL

 \leq

 \leq

>

4




1. SCREW LOWER STEM INTO BASE AS SHOWN

2. REMOVE SPACER FROM UPPER STEM (PEDESTAL REPLACES SPACER)


3. POSITION PEDESTAL BETWEEN UPPER AND LOWER STEM, THEN SCREW TO TIGHTEN

4. "CLICK" LAMP HEAD INTO POSITION

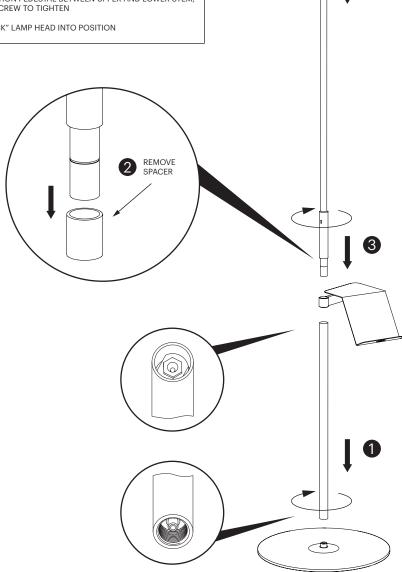

Pablo" CIRCA PEDESTAL

ADJUSTMENT

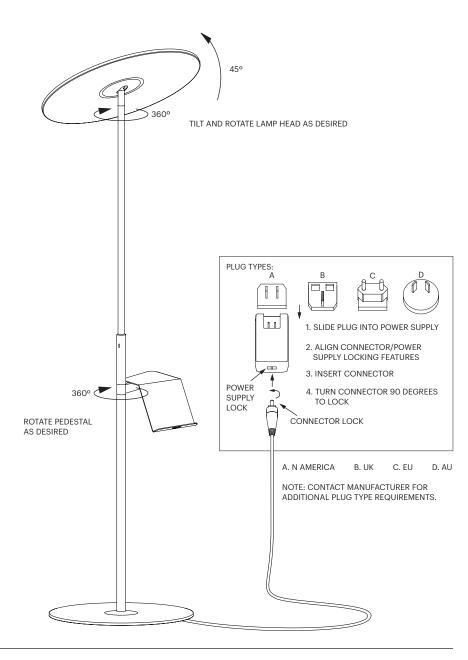

Pablo[®] CIRCA PEDESTAL

CIRCA FLOOR SWITCH AND USB CHARGING FOUR-STAGE OPTICAL SWITCH N USB CHARGING PORT . . A CORD REST 0 TAF CORD MANAGEMENT SLOT

HIGHLIGHTS

SINGLE 5.0V USB OUTPUT SUPPORTS CHARGING FOR SMARTPHONES, TABLETS AND OTHER MOBILE DEVICES.

SPECIFICATIONS

USB 2.0 OR 1.1 STANDARD CORD REQUIRED (CORD NOT INCLUDED) OUTPUT VOLTAGE: 5VDC + - 5% OUTPUT CURRENT: 1A MAX

NOTE

CIRCA PEDESTAL WILL CONTINUE TO CHARGE YOUR MOBILE DEVICE EVEN WHEN LAMP IS IN THE "OFF" POSITION.

PLEASE REFER TO YOUR MOBILE DEVICE'S USER MANUAL FOR COMPATIBILITY AND CHARGING TIME. PLEASE REFRAIN FROM LEAVING YOUR DEVICE PLUGGED IN FOR LONGER THAN THE RECOMMENDED TIME, OTHERWISE IT MAY RESULT IN OVER CHARGING.

PRESS AND HOLD OPTICAL SWITCH FOR 1.5 SECONDS TO TURN OFF. TAP BRIEFLY TO CYCLE THROUGH FOUR STAGES.

CARE INSTRUCTIONS

WIPE CLEAN WITH A SOFT DAMP CLOTH. AVOID AMMONIA-BASED CLEANERS.



ASSEMBLY & INSTALLATION INSTRUCTIONS


INFO@PABLODESIGNS.COM 888 MARIN STREET SAN FRANCISCO, CA 94124





CIRCA WALL ASSEMBLY INSTRUCTIONS


Pablo

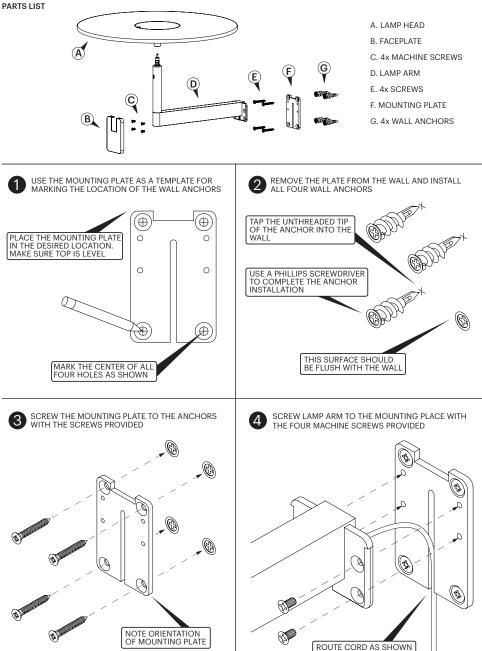

Pablo[®] ASSEMBLY INSTRUCTIONS


ASSEMBLY

CIRCA WALL

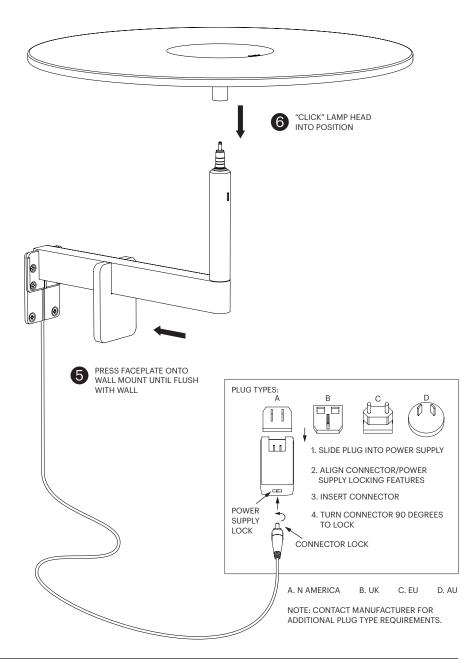



CIRCA WALL SWITCH AND USB CHARGING

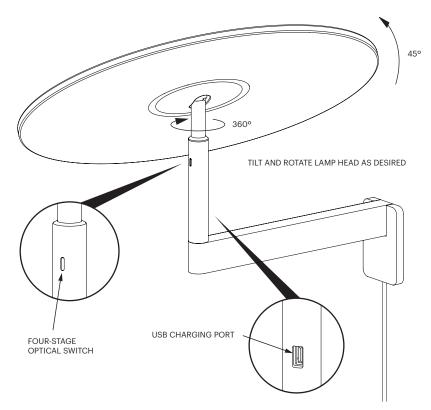

HIGHLIGHTS

SINGLE 5.0V USB OUTPUT SUPPORTS CHARGING FOR SMARTPHONES, TABLETS AND OTHER MOBILE DEVICES.

SPECIFICATIONS

USB 2.0 OR 1.1 STANDARD CORD REQUIRED (CORD NOT INCLUDED) OUTPUT VOLTAGE: 5VDC + - 5% OUTPUT CURRENT: 1A MAX

NOTE

CIRCA WALL WILL CONTINUE TO CHARGE YOUR MOBILE DEVICE EVEN WHEN LAMP IS IN THE "OFF" POSITION.

PLEASE REFER TO YOUR MOBILE DEVICE'S USER MANUAL FOR COMPATIBILITY AND CHARGING TIME. PLEASE REFRAIN FROM LEAVING YOUR DEVICE PLUGGED IN FOR LONGER THAN THE RECOMMENDED TIME, OTHERWISE IT MAY RESULT IN OVER CHARGING.

PRESS AND HOLD OPTICAL SWITCH FOR 1.5 SECONDS TO TURN OFF. TAP BRIEFLY TO CYCLE THROUGH FOUR STAGES.

CARE INSTRUCTIONS

WIPE CLEAN WITH A SOFT DAMP CLOTH. AVOID AMMONIA-BASED CLEANERS.

CIRCA PENDANT

120V / 220V ASSEMBLY & INSTALLATION INSTRUCTIONS


INFO@PABLODESIGNS.COM 888 MARIN STREET SAN FRANCISCO, CA 94124








IMPORTANT: WE RECOMMEND FIXTURE BE INSTALLED BY AN ELECTRICIAN

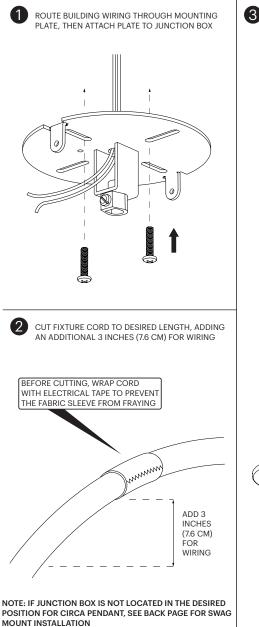




ROUTE FIXTURE AND BUILDING CORDS AS SHOWN, THEN PULL CIRCA PENDANT TO DESIRED HEIGHT AND SET STRAIN RELIEF



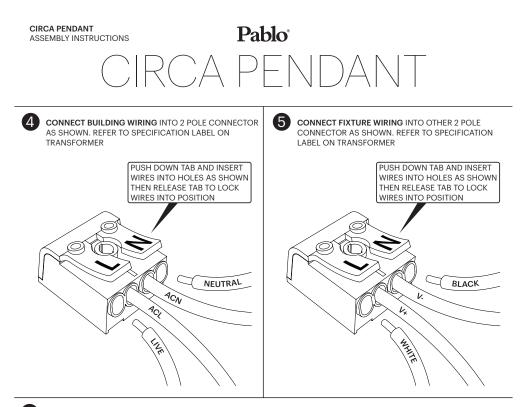

TUCK WIRES AND POLE CONNECTIONS INTO CANOPY COVER, THEN SLIDE COVER PLATE UP TO CEILING AND SECURE WITH SUPPLIED SCREWS

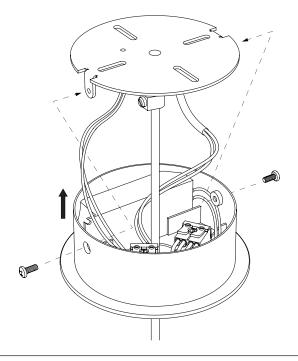

6

Pablo* CIRCA PENDANT

