

Micra X10 SUPER USER MANUAL

CONTENT

1. OVERVIEW	- 2 -
2. WARNINGS.....	- 2 -
3. APPEARANCE	- 3 -
4. GETTING STARTED.....	- 3 -
4.1 SIM CARD INSTALLATION	- 3 -
4.2 BATTERY INSTALLATION.....	- 4 -
4.3 CHARGING THE BATTERY	- 4 -
4.4 SECURITY SETTINGS	- 5 -
5. YOUR PHONE.....	- 5 -
5.1 POWER ON	- 5 -
5.2 MAKING A CALL.....	- 5 -
5.3 REJECTING A CALL.....	- 6 -
5.4 ANSWERING A CALL	- 6 -
5.5 VOLUME SETTINGS.....	- 6 -
5.6 ENDING CALLS	- 6 -
5.7 EMERGENCY SERVICE.....	- 7 -
5.8 EXTENSION CALL/QUICK DIAL	- 7 -
5.9 MISSED/ DIALED CALL	- 7 -
5.10 CALL DIVERT	- 7 -
5.11 CALL BARRING.....	- 7 -
5.12 T-FLASH CARD	- 7 -
5.13 USB CABLE.....	- 8 -
5.14 POWER OFF	- 8 -
6. STANDBY SCREEN.....	- 8 -
7. LIST OF MAIN MENUS AND SUBMENUS.....	- 9 -
8. ENTRY MODE	- 9 -
9. ACCESSORIES	- 9 -
10. CARE AND MAINTENANCE	- 10 -
11. ABOUT SAR.....	- 11 -

1. Overview

Thank you for purchasing a Micra X10 mobile phone.

2. Warnings

Not following these simple guidelines may be dangerous or illegal. Read the complete user guide for further information.

TURN ON SAFELY

Do not turn on the phone when wireless phone is prohibited or when it may cause interference or danger.

ROAD SAFETY

Obey all road safety laws. Always use both of your hands to operate the vehicle while driving.

INTERFERENCE

All wireless phones may be sensitive to interference, which may affect performance.

TURN OFF IN HOSPITALS

Follow all restrictions. Turn off the phone near medical equipment.

TURN OFF ON AIRCRAFTS

Follow all restrictions. Wireless devices can cause interference on aircrafts.

TURN OFF WHEN REFUELING

Do not use the phone at/near refueling stations. Do not use near fuel or chemicals.

USE SENSIBLY

Only qualified personnel may install or repair this product.

ENHANCEMENTS AND BATTERIES

Use only appropriate enhancements and batteries. Do not connect incompatible products.

WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.

 
BACKUP COPIES

Remember to make back-up copies or keep a written record of all important information stored in your phone.

CONNECTING TO OTHER DEVICES

When connecting to any external device, read its user guide for detailed safety instructions. Do not connect with incompatible products.

3. Appearance

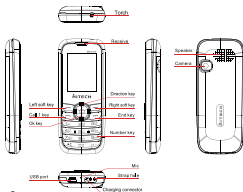


4. Getting Started

4.1 SIM Card Installation


When you subscribe to a cellular network, you will receive a plug-in SIM card complete with your subscription details, such as your PIN, and available optional services.

 Caution: Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

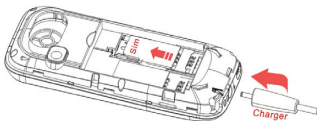

Tips: Face the gold color contact point of SIM card towards the cell phone and push the SIM card into the slot.

 4.2 Battery Installation

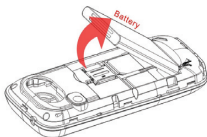


Caution: Install according to the illustration above to avoid breaking the battery connectors.

4.3 Charging the Battery

Insert the charger; the flash symbol on the charger plug must face upwards.

Connect the charger to a standard wall outlet and the battery power icon in the up-right corner of the screen will start scrolling. When the battery bar stops scrolling, the battery charge is complete. Press the two sides of the charger plug and disconnect the charger from the phone.

 - When the battery is low, a "low battery" message will display across the screen and the battery icon will seem empty. If the battery level is insufficient, the phone will turn off automatically. Do not use your phone under low battery state for an extended period of time or it may cause battery damage.



4.4 Security Settings

—PIN code

PIN code (Personal Identity Number) prevents unauthorized use of your phone. The **PIN** code is provided by your network operator with the **SIM** card.

If you enter the wrong code three times in a row, the **PIN** code will be blocked. To unblock the **PIN** code, you need to enter your **PUK**. Your **PUK** is provided by your network operator.

—Power on Pwd

Activate/Modify/Deactivate power on password (the length of the password is 4-8 digital numbers). If you activate the "Power on Pwd", you need to enter the password each time you turn on the phone. If you want to modify or deactivate power on password, enter Modify/Deactivate option to set.

5. Your Phone

5.1 Power On

- Press and hold power key to turn on your phone, light the backlight, and display power on animation.
- If you do not insert a **SIM** card, or the **SIM** card has incomplete connection, your phone will show "Insert **SIM**". In this condition, you can only access part of the menu and only permission using some urgent calling.
- If the **PIN** code is blocked, the alert message for inputting **PUK** code will display on the screen before power on.
- The phone will search the network automatically after power on.

If your phone registers to network correctly, the name of the network and signal strength will display; if your phone can't register or can't register correctly, you can only access emergency calls and other functions that do not rely on the network.

5.2 Making a Call

In standby mode, press numerical keys to input phone number to dial phone number. When you finish inputting phone number, press the dial

key or left soft key to make a call. If you're making a long distance call, add the area code preceding the telephone number.

Press OK key to access Option.

- Add to phone book: Add a phone number to telephone directory
- Add to existed contact: Add the phone number to existed contact
- Send SMS: Send message to a certain number
- Insert wpn: Pause P/Wait W
- SIM 1 call: Dial the number of SIM card 1
- SIM 2 call: Dial the number of SIM card 2

5.3 Rejecting a Call

Press end key to reject an incoming call.

5.4 Answering a Call

When you receive a call, the phone will ring or vibrate and will display an incoming call indicator. Press the dial key, OK key, or left soft key to answer.

Press left soft key to access menu:

- Turn on handfree
- Shuttle
- Names
- Messages
- Call history
- Start recording
- Mute
- DTMF on/off

5.5 Volume Settings

During a call, press navigation keys to adjust the volume.

5.6 Ending Calls

Press the end key to end or cancel a call.

5.7 Emergency Service

You can dial an emergency call without the SIM card.

Contact your service provider to get the emergency call number.

5.8 Extension Call/Quick Dial

After inputting phone number, quickly press key (*) thrice until the symbol "P" appears, then input the extra number.

5.9 Missed/ Dialed Call

Enter main menu->Call History -> check Missed/Dialed calls.

In standby mode, press dial key to check Dialed calls.

5.10 Call Divert

 
When the call divert is activated, incoming calls will be diverted to voice mail or other phone numbers according to the call divert settings.

5.11 Call Barring

When the call barring activated, some of the calls will be barred according to the call barring setting condition. Contact your service provider to sign up for call barring.

5.12 T-flash Card

Insert the T-Flash card into phone from the slot. This will expand the Flash memory of the phone.

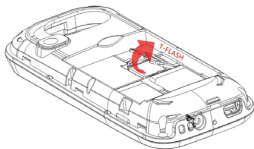

5.13 USB Cable

You can transfer and store files, such as MP3, MP4 and pictures from PC, through USB cable, to the mass storage in phone or identified SD card that is inserted.

The operating method is as follows:

—Connect: Plug the IO port of the cable into your phone, and the USB port into the PC.

Read & write mode:

T-Flash card: Install the T-Flash card, and connect the phone set to PC, if the phone set is power off, it can be charged or used as a mass storage.

—File transfer

•File folder instruction: Find the mobile memory (T-FLASH card) in "my computer", double click it, and you will find the folders as follows:

"Photos" is used to store the picture.

"My Music" is used to store the MP3 music file.

"Videos" is used to store the video file.

These folders is preset by the system, don't change the folders' name.

•Read & Write: You can copy the files in T-Flash to PC hard disk, or copy the files in PC hard disk to the folder of the T-Flash card.

—Quit: On the PC side, select taskbar->delete hardware safely, exit the T-Flash card identified states, stop the T-Flash card, and pull out the USB cable.

5.14 Power Off

In standby mode, press and hold power key to turn off phone.

6. Standby Screen

Press and hold power key to turn on your phone, phone will light the backlight and display power on animation.

On the screen, icons indicate the network name, signal strength, battery levels, time and date, and phone configure information. Refer to icons

information in standby screen.

7. List of Main Menus and Submenus

In standby screen, press left key or OK key to access the main menu. The main menu includes items: (1) User Profiles (2) Call center (3) Phonebook (4) Multimedia (5) Messaging (6) Organizer (7) Fun&Games (8) File Manager (9) Settings.

8. Entry mode

You can use several methods for entering text and numbers. By selecting a Text Entry Mode, the phone provides a few Text Entry Mode for new adding, editing contact records, finding contacts, editing SMS and writing memos.

Select Text Entry Mode:

8.1 Letter entry mode

Press a key once to insert the first letter on the key, twice for the second letter, etc. If you pause briefly, the last letter in the display is accepted and the text awaits the next entry.

For example, press the "2" key continuously, it will appear "a", "b", "c", "2" one by one.

8.2 Number entry mode

Number Entry Mode can input the number in the text, such as telephone number. Tap the proper number and input it.

9. Accessories

You can use accessories approved by our company, the other accessories can be provided by the seller.

Extra battery

We provide several kind of lithium battery with different capacity.

Traveler charger

Super sleek, useful charger can charge the mobile phone very quickly.

Plug the charger into the electrical plugs and connects the other side connects to the bottom of the phone.

You can check the charging progress in the screen of the phone, it will not

power on automatically when charging.

10. Care and maintenance

Battery care

- Your device is powered by a rechargeable battery. When the power is weak, please charge the battery. In order to extend the lifespan of the battery, use all the battery's power before recharging.

- Unplug the charger from the electrical plug and the device when not in use. Do not leave the battery connected to a charger more than a week. Overcharging may shorten its lifespan.

- Extreme temperatures can affect the ability of your battery to charge.

Battery needs the fit temperature. If the surrounding temperature is over 40°C, the battery cannot be charged.

- Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) Short-circuiting the terminals may damage the battery or the connecting object.

- Leaving the battery in hot or cold places, such as in a closed car in summer or a freezer in winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 59°F and 77°F (15°C and 25°C). A hot or cold battery may not function temporarily, even when the battery is fully charged.

- Battery performance is particularly limited in temperatures below freezing.

- Do not dispose of batteries in a fire! Dispose of batteries according to local regulations. Please recycle when possible. Cellphones are not considered household waste.

Mobile phone maintenance

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your

device does get wet, remove the battery and allow the device to dry completely before replacing it.

- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.

All of the above suggestions apply to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

11. About SAR

Use of wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.

Make sure the cell phone has a low SAR.

Keep your calls short or send a text message (SMS) (instead. This advice applies especially to children, adolescents and pregnant women.

Use cell phone when the signal quality is good.

People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.

12. SAR value

GSM Network	GSM900	GSM900	DCS1800	DCS1800
	On Head	On body	On Head	On body
SAR Value	0.525W/KG	0.741W/KG	0.405W/KG	0.654W/KG