0000030000

## Caledyne

## Completion Barrier Valve (patent applied for)

#### Description

The Caledyne Completion Barrier Valve (CBV) is a down-hole barrier valve, which uses a ball to provide isolation between the upper and lower completions.

The CBV may be opened remotely by applying tubing pressure cycles, which actuate an opening mechanism at the top of the tool.

The CBV may be mechanically opened and closed with a shifting tool, both before and after it is cycled open.

#### **Key Benefits**

Forces due to pressure differentials across the ball do not affect the open/close mechanism or the remote opening module.

Smooth internal bore with a minimal number of locations for debris to collect.

Remote opening module can be replaced for different actuation modules or to vary the number of pressure cycles to open.

Multiple remote opening modules may be fitted without increasing the tool length, giving full redundancy across this part of the tool.

Internal equalizing mechanism across the ball allows for reduced loads to open the ball under high differential pressures.

Trigger mechanism can be independently tested prior to assembling inside the valve.

#### Application

- Formation isolation when installing the upper completion.
- Packer setting valve

#### Certification

Consult your Caledyne representative.



Issue	В	Technical Manual	Number:
Date	29-03-10		0000030000

Number:


0000030000

## Caledyne


Technical Specification						
Parameter	3-1/2" x 7"	4-1/2" x 7"	4-1/2" x 7-5/8"	5-1/2" x 9-5/8"	5-1/2" x 9-5/8" (Large Bore)	
Α	2674mm (105.3")	2744.4mm (108.0")	2744.4mm (108.0")	3177.3mm (125.1")	3330.0mm (131.1")	
	88.90mm	114.30mm	114.30mm	140.60mm	140.60mm	
В	(3.500")	(4.500")	(4.500")	(5.535")	(5.535")	
C (min)	71.73mm	82.47mm	82.47mm	115.85mm	120.57mm	
	(2.824")	(3.247")	(3.247")	(4.561")	(4.747")	
D (max)	140.08mm	149.23mm	153.08mm	204.28mm	212.8mm	
	(5.515") 88.90mm	(5.875") 114.30mm	(6.027") 114.30mm	(8.043") 140.60mm	(8.378") 140.60mm	
E	(3.500")	(4.500")	(4.500")	(5.535")	(5.535")	
	2013.3mm	2050.2mm	2050.2mm	2334.6mm	2428.0mm	
F	(79.3")	(80.7")	(80.7")	(91.9")	(95.6")	
•	1135.6mm	1165.6mm	1165.6mm	1455.8mm	1514.0mm	
G	(44.7")	(45.9")	(45.9")	(57.3")	(59.6")	
н	967.7mm	1002.7mm	1002.7mm	1211.8mm	1260.0mm	
	(38.1")	(39.5")	(39.5")	(47.7")	(49.6")	
I	628.5mm	643.5mm	643.5mm	738.5mm	768.0mm	
•	(24.7")	(25.3")	(25.3")	(29.1")	(30.2")	
J	895.7mm	925.7mm	925.7mm	1095.8mm	1140mm	
	(35.3")	(36.4")	(36.4")	(43.1")	(44.9")	
Unner connection (note 1)	3-1/2" 9.2#	4-1/2"	4-1/2"	5-1/2" 23#	5-1/2" 23#	
Upper connection (note 1)	NEW VAM Pin	15.1# NEW VAM Pin	15.1# NEW VAM Pin	NEW VAM Pin	NEW VAM Pin	
	3-1/2" 9.2#	4-1/2"	4-1/2"	5-1/2" 23#	5-1/2" 23#	
Lower connection (note 2)	NEW VAM	15.1# NEW	15.1# NEW	NEW VAM	NEW VAM	
	Pin	VAM Pin	VAM Pin	Pin	Pin	
Shifting Profile Size (note 3)	2.812"	3.312"	3.312"	4.562"	4.750"	
Pressure cycles to open (note 4)			1-20 cycles			
Pressure rating across ball			5,000psi			
Pressure rating through housing	10,000psi	5,000psi	10,000psi	10,000psi	10,000psi	
Maximum opening pressure			4,000psi			
Maximum threshold pressure			3,000psi			
Minimum threshold pressure			1,000psi			
Maximum overbalance			500psi			
Temperature rating			0-150 <i>°</i> C	000 000 1	000 000 0	
	172,500lbf	294,000lbf	294,000lbf	398,000lbf	398,000lbf	
Tensile rating (80ksi Material)	NEW VAM	NEW VAM Yield	NEW VAM Yield	NEW VAM	NEW VAM	
	Yield (1.2 F of S)	(1.2 F of S)	(1.2 F of S)	Yield (1.2 F of S)	Yield (1.2 F of S)	
	(1.2 F 01 3)				(1.2 F 01 3)	
	AISI 4140-45 18-22Rc 80ksi AISI 420 18-22Rc 80ksi 13%Cr					
Metallurgy Options	Inconel 718 (UNS N07718)					
	per NACE MR0175					
Standard Elastomer	Viton					
Standard Ball Seat		P	EEK compoun	d		
WP Shifting Tool Size	2.875"	3.312"	3.312"	4.562"	4.750"	
Stinger Size	2.875"	3.312"	3.312"	4.562"	4.750"	
HEST Base Assembly Size	2.200"	2.200"	2.200"	3.000"	3.000"	

	Bill of Material	
Item	Description	Qty
1	Top Sub	1
2	Hydrostatic Housing	1
3	Outer Extension	1
4	Lower Coupling	1
5	Ball Housing	1
6	Lock Housing	1
7	Bottom Sub	1
8	Upper Hydrostatic Piston	1
9	Lower Hydrostatic Piston	1
10	Profile Sleeve	1
11	Key Housing	1
12	Locking Key	8
13	Snap Ring	1
14	Hyd Piston Interlock Key	4
15	Side Plate A	1
16	Side Plate B	1
17	Ball	1
18	Trunnion	2
19	Ball Seat Assembly	1
20	Transfer Sleeve	1
21	Snap Ring	1
22	Ball Seat	1
23	Cyclic Trigger Sub	2
24	No-Go Ring	1
25	Burst Disc Assembly	2
26	Adjuster Rod	1
27	1/4" x 1/4" Long Socket Head Set Screw	5
28	1/4" UNC x 1/4" Long Brass Shear Screw	2
29	Wave Spring	4
30	O-Ring Viton 70	5
31	Back Up Nitrile 90	10
32	O-Ring Viton 70	2
33	Back Up Nitrile 90	4
34	Tee Seal	3
35	Tee Seal	6
36	Tee Seal	2
37	1/4" NPT Flush Plug	2
38	PLAA2528010A	2


Issue	В	Technical Manual
Date	29-03-10	

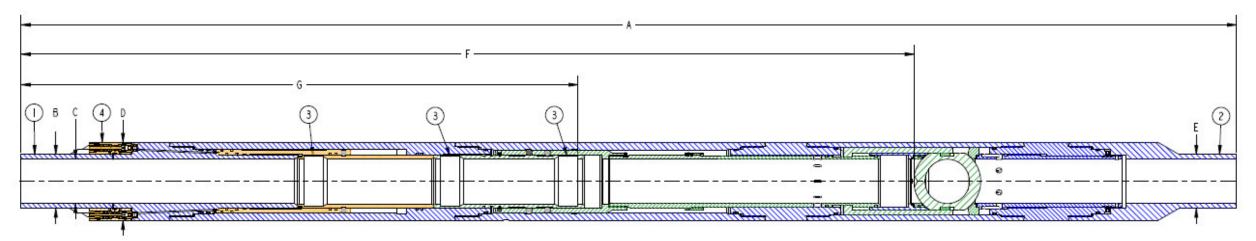

Completion Barrier Valve – Locked Closed Position

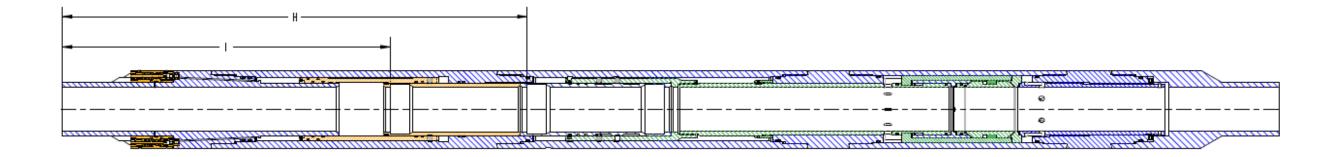

Completion Barrier Valve – Cycled Open Position

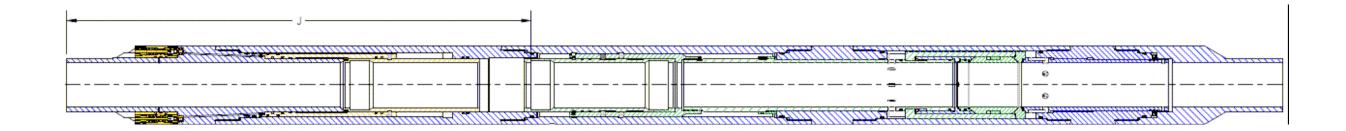


Completion Barrier Valve – Recommissioned Locked Open


### Number:

### 0000030000

Issue	В	Technical Manual	Number:	
Date	29-03-10	Technical Manual	0000030000	

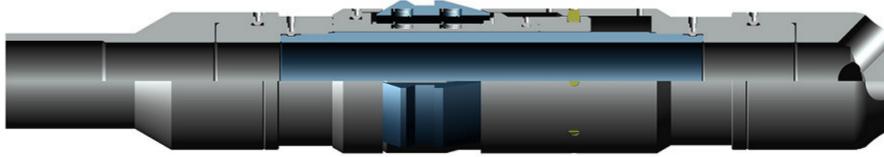

WP Shifting Tool

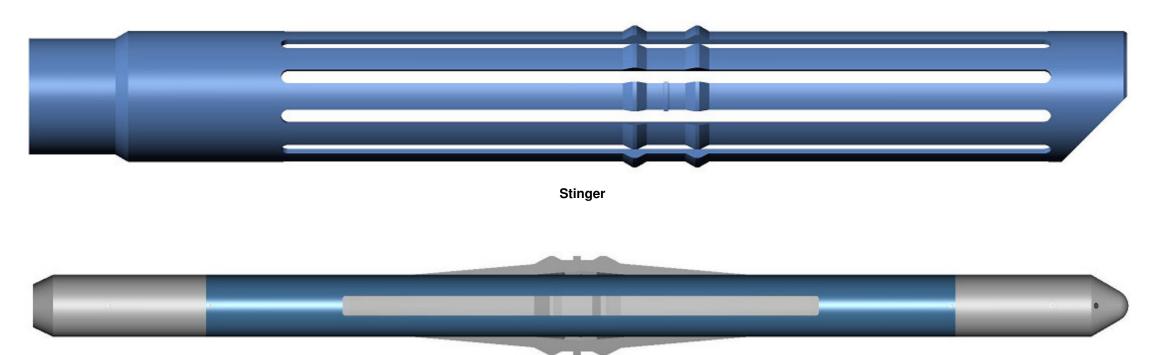

HEST



lssue	В	Technical Manual	Number:
Date	29-03-10	rechnical Manual	0000030000

#### Shipping/Storage Preparations

- 1. Ensure the valve is left **open**.
- 2. Fit thread protectors to the upper and lower connections.
- 3. Place the CBV in a suitable shipping crate. Ensure that Silica Gel is included in the crate.

#### Care and Maintenance

- 1. Ensure thread protectors are fitted to the upper and lower connections at all times.
- 2. If the tool is being stored for more than 3 months, it should be stored vertically to help prevent the internal o-rings taking a set.
- 3. The CBV is not field redressable. The tool should be returned to Caledyne or an approved refurbishment facility for redress.

#### **Operational Procedures**

For installation of this item of equipment, refer to the appropriate operations manual, but these notes are given as guidance.

#### The CBV is made up to the tubing string and run in hole. It may be installed either open or closed.

#### Gravel Packing

- 1. If carrying out gravel packing operations with the CBV, the shifting tool is normally positioned at the end of the wash string, so the CBV is automatically closed when the wash pipe is withdrawn.
- 2. Once the valve is closed it may be pressure cycled open.

#### Pressure Cycle to Open

- 1. Apply pressure to the tubing above the maximum threshold pressure as defined in the technical specification. Hold this pressure for 5 minutes.
- 2. Bleed of pressure to a figure below the minimum threshold pressure as defined in the technical specification. Hold this pressure for 5 minutes.
- 3. On the bleed down of the last cycle, the valve will open.

#### WP Shifting Tool

The WP Shifting tool can be used to shift the CBV open/closed on wash pipe, coil tubing, drill pipe or slickline.

- 1. Once the valve has been cycled open, the WP shifting tool is used to close it again. The WP shifting tool is set up with shear out keys, so that the internal sleeves are repositioned.
- 2. Further open and close operations are done with the WP shifting tool set up with auto-release keys.
- 3. RIH to depth.
- 4. POOH and latch shifting profile.
- 5. Jar up to shift profile sleeve and close ball.
- 6. At full travel the shifting tool will auto-release.
- 7. POOH.

Issue	В	Technical Manual	Number:
Date	29-03-10	rechincal Manual	0000030000

#### Stinger

The Stinger is mounted on the bottom of an upper completion. The CBV is installed closed. When the upper completion is installed the WP Shifting Tool will open the valve. On removal, the valve is automatically closed.

- 1. Fit Stinger to bottom of upper completion.
- 2. RIH to depth. The Stinger will pick up the lower shifting profile, opening the ball.
- 3. Continue RIH to depth.
- 4. To close the ball, POOH with upper completion.
- 5. The Stinger will pick up the upper shifting profile, closing the ball.
- 6. Continue POOH.

#### HEST

The High Expansion Shifting Tool (HEST) is a coil tubing deployed shifting tool allowing the operator to run through restrictions above the CBV and expand the shifting keys out to locate the profile once at depth. Nozzles at the bottom of the HEST also allow the operator to jet through the tool to clean up profiles prior to shifting.

- 1. Fit key set to suit CBV profile size into the HEST Base Assembly.
- 2. Make up the HEST to coiled tubing.
- 3. RIH to depth.
- 4. At depth begin jetting through HEST.
- 5. Increase pressure to value detailed in the HEST Technical Manual to inflate the keys.
- 6. Pick up the profile and shift the CBV ball open/closed.
- 7. POOH.

#### **Contingency Measures**

#### Pressure cycling does not open the valve.

- 1. Use the WP Shifting Tool or HEST.
- 2. RIH and tag the ball.
- 3. POOH and latch shifting profile.
- 4. Jar down to shift profile sleeve and open ball.
- 5. At full travel the shifting tool will auto-release.
- 6. POOH.
- 7. Further open/close operations can then be carried out using a suitable CBV shifting tool.

#### Debris stops the valve from being mechanically opened.

- 1. RIH with hydrostatic bailer or similar and remove debris from on top of the ball.
- 2. POOH.
- 3. Use the WP Shifting Tool or HEST.
- 4. RIH and tag the ball.
- 5. POOH and latch shifting profile.
- 6. If the profile cannot be latched repeat steps 1 to 6.
- 7. Once shifting profile is latched, Jar down to shift profile sleeve and open ball.
- 8. At full travel the shifting tool will auto-release.
- 9. POOH.

#### Paraffin build up in the Shifting Profiles (or similar)

Issue	В	Technical Manual	Number:
Date	29-03-10	Technical Manual	0000030000

- 1. Fit key set to suit CBV profile size into the HEST Base Assembly.
- 2. Make up the HEST to coiled tubing.
- 3. RIH to depth.
- 4. At depth begin jetting through HEST with suitable solvent.
- 5. Travel in/out of hole jetting all profiles.
- 6. Increase pressure to value detailed in the HEST Technical Manual to inflate the keys.
- 7. Pick up the profile and attempt to shift the CBV ball open/closed.
- 8. If the sleeve is still unable to move repeat steps 4 to 6 until the sleeve can move freely.
- 9. Continue to shift ball open/closed a number of times to ensure free movement.
- 10. POOH.

#### Ball cannot be opened and must be milled.

The CBV ball has a centre dimple looking up hole when in the fully closed position which acts as a pilot for milling operations. Mill selection and method should be determined with reference to best practices for fishing and milling operations.