

MP330 User manual

Introduction:

Thanks for choosing MP330, Which is the most competitive media player , and support the most current video format

Features:

- ◆ Elegant and Fantastic housing design 。
- ◆ Support different show interface, with full function remote control to exchange interface.
- ◆ Support the following music format: MP3, WMA, APE, FLAC, OGG, AAC, AC3, DTS
- ◆ Support the following high definition video format: RM/RMVB, MPEG-1/2/4, H.264(SD, HD), CVBSI, DIVX, XVID, VOB, MOV, MKV
- ◆ Photo frame full function :support JPEG、BMP、GIF、PNG.
- ◆ Support the HDMI 720P format video.
- ◆ Support different out put interface YPbPr、HDMI, CVBS ,S-Video and support 720p,
- ◆ Transparent sharp multi-layer interface system . support 720P TV and full interface UI.
- ◆ Different play model for your option : Loop playback, slideshow, Random playback ,repeat one and single play.
- ◆ With multi language : Simplified Chinese , Chinese , English.
- ◆ Four Main function: Video display, Photo viewer, Audio player and E-Book.

Packing contents:

- MP330 Media Player
- YPbPr cable
- AV cable
- S-vidoe cable
- Remote control/battery
- Adaptor with 5.3V-2.8A
- User manual

MP330 connection:



Setting:

Pls connect MP330 accroding the connection chat exactly

Open the TV , Switch TV to the correct input (If you connect MP330 to TV via HDMI. Pls choose input of TV to HDMI, and choose the box output to HDMI)


Power the button of  on you remote control. After a few second , the device will starting




Choose , and press ok to enter the movie selection







Choose  to get the music



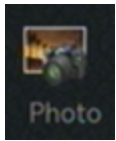

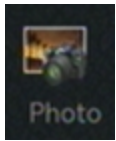Choose , for the pic view



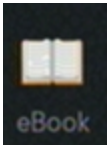


Choose **eBook**, for the file preview




Product features:



- 1: Easy to use, no need any software
- 2: Slim & simple design, suitable for living room
- 3: Support multi-kind video format, hardware decoding, fluent playing.
- 4: High quality play, RM/RMVB video format resolution up to 1024*576
- 5: Support Music and photo playing

  
0%



Choose , for the game playing



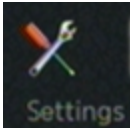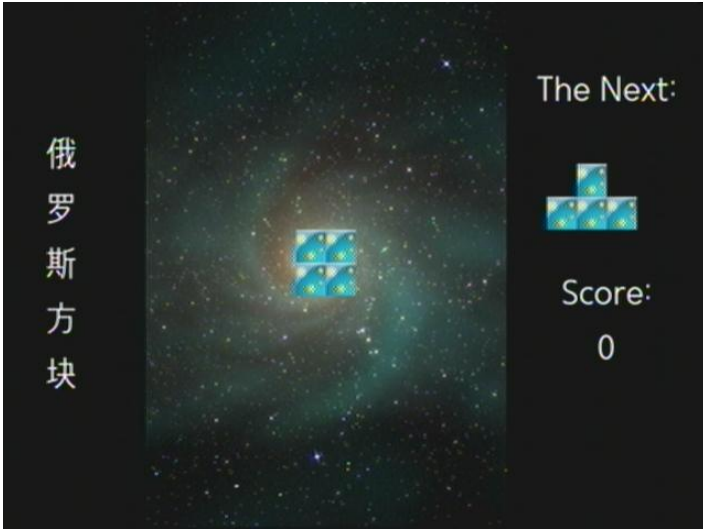

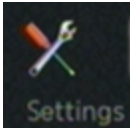Choose , for output , Sound , Language ,Auto off , hardware info and restore default setting.

FAQ:

Q1: Why can't enter the Main Menu or the Star-up screen looks different?

A1: Please follow the steps below:

1. Please check the cable connections. Have you properly connected all of the necessary cables?(For example, the power cable for the media player)
2. Please check TV signal has set to right mode
3. If your answer is no to No.2, please press the VGA/YPbPr/AV-S keys on the Remote to switch to the correct output mode.

Q2: Media Player can not start.

A2: Please check if the power adapter was connected to the player; try to reinsert the plug to

connect the power.

Q3: Why there is no sound?

A3: Please check the connection of the audio adapters and audio volume.

Q4: Remote control is not working well or not working

A4: If the remote distance too far or IR angle direction too large.

Please check if the remote battery contact is not good or lack of power.

Q5: Why can not read USB hard disk enclosure

A5: Check if external HDD is connected right

Check if the HDD power supply is normal

Check if the HDD itself with problem. (Please use the good quality products from reliable manufacturers).

Q6: Why can not recognize memory cards/ USB flash Drive/ USB HDD

A6: Please reinsert storage device or restart the player power.

Check if the storage device is damage. (Please use the good quality products from reliable manufacturers)