

SGH-I896

**P O R T A B L E Q u a d - B A N D
M O B I L E P H O N E**

User Manual

**Please read this manual before operating your
phone, and keep it for future reference.**

The Samsung logo, consisting of the word "SAMSUNG" in white, bold, sans-serif capital letters, centered within a dark gray, horizontally-oriented oval.

SAMSUNG

Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating thereto (the "Phone System"), is proprietary to Samsung and protected under federal laws, provincial laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Copyright

© 2010 Samsung Electronics Canada, Inc. SAMSUNG is a registered trademark of Samsung Electronics Co., Ltd. and its related entities.



T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437; U.S. Pat. 5,953,541; U.S. Pat. 6,011,554 and other patents pending.

ACCESS[®] and NetFront[™] are trademarks or registered trademarks of ACCESS Co., Ltd. in Japan and other countries.

The Bluetooth[®] word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Samsung Electronics Canada, Inc. is under license. Other trademarks and trade names are those of their respective owners.

microSD[™] and the microSD logo are Trademarks of the SD Card Association.

Openwave[®] is a registered Trademark of Openwave, Inc.

 and  are trademarks of SRS Labs, Inc. CS Headphone and WOW HD technologies are incorporated under licence from SRS Labs, Inc.

Wi-Fi, the Wi-Fi CERTIFIED logo, and the Wi-Fi logo are registered trademarks of the Wireless Fidelity Alliance, Inc.

Google, the Google logo, Android, the Android logo, Android Market, Gmail, Google Mail, Google Apps, Google Calendar, Google Checkout, Google Earth, Google Latitude, Google Maps, Google Talk, Picasa, and YouTube are trademarks of Google Inc.

Swype and the Swype logos are trademarks of Swype, Inc. © 2010 Swype, Inc. All rights reserved.

Java™ is a trademark of Sun Microsystems, Inc.

Windows Media Player® is a registered trademark of Microsoft Corporation.

Pat. 7,295,673;7,460,688;7,519,274

Open Source Software

Some software components of this product incorporate source code covered under GNU General Public License (GPL), GNU Lesser General

Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit:

<http://opensource.samsung.com/category/mobile/mobile-phone/>.

Disclaimer of Warranties; Exclusion of Liability

Except as set forth in the express warranty contained on the warranty page enclosed with the product, the purchaser takes the product "as is", and Samsung makes no express or implied warranty of any kind whatsoever with respect to the product, including but not limited to the merchantability of the product or its fitness for any particular purpose or use; the design, condition or quality of the product; the performance of the product; the workmanship of the product or the components contained therein; or compliance of the product with the requirements of any law, rule, specification or contract pertaining thereto. Nothing contained in the instruction manual shall be construed to create an express or implied warranty of any kind whatsoever with respect to the product. In addition, Samsung shall not be liable for any damages of any kind resulting from the purchase or use of the product or arising from the breach of the express warranty, including incidental, special or consequential damages, or loss of anticipated profits or benefits.

Privacy

The privacy and copyright laws of Canada govern the disclosure, reproduction and distribution of data, media and other content, including music and video content. Certain activities, including downloads or transfer by any means (including, via cable, Bluetooth® or otherwise) of such content may be an infringement of privacy or copyright law. Neither Samsung Electronics Canada Inc. nor any of its affiliates shall be liable or responsible for any data or content disclosed, reproduced, downloaded or distributed by the user of this equipment.

Warning

Depending on the user interface used in the handset, you may experience slow keypad response when performing tasks in the background. This can impact making phone calls. When there is no activity or change in the icons at the top of the main LCD display, the handset will resume normal operations.

contents

introducing your phone	3
Install the SIM Card and Battery	3
Charge the Battery	6
Insert a Memory Card (optional)	8
Phone Layout	10
Indicator Icons	14
getting started with your phone	16
Turn Your Phone On and Off	16
Use the Touch Screen	17
Get to Know the Idle Screen	18
Access Applications	20
Customize Your Phone	21
Enter Text	24
Set up Voice Mail	27
Android Market	27
Download Files from the Web	28
Synchronize Data	29

communication	31
Calls	31
Text and Multimedia Messages	36
Gmail™	38
Email	39
Google Talk™	41
Social Hub	42
entertainment	43
Camera	43
Video Player	53
Gallery	54
Music Player	56
personal information	60
Contacts	60
Calendar	63
Memo	64

Voice Recorder	64
web	66
Internet	66
Google Search	69
Layar	69
Google Maps™	69
YouTube™	71
Daily Briefing	72
Market	73
connectivity	74
Bluetooth	74
Wi-Fi	76
AllShare	78
TV Connections (TV Out Mode)	80
PC Connections	81
tools	84

Clock	84	Privacy	99
Calculator	86	SD card and phone storage	99
Mini Diary	86	Search	100
My Files	87	Locale and text	100
ThinkFree Office	87	Accessibility	102
Write and Go	88	Text-to-speech	102
Voice Dialer	89	Date and time	103
GPS Navigator	90	About phone	103
Samsung Apps	90		
settings	92	troubleshooting	104
Settings	92	health and safety information	109
Wireless and network	92	Getting the Most Out of Your Reception	109
Call settings	93	Safe Use of and Access to Your Phone	111
Sound and display	95	Caring for the Battery	114
Location and security	96	Special Precautions and Industry Canada Notice	115
Applications	97	Specific Absorption Rates (SAR)	116
Accounts and sync	98	Owner's Record	117

warranty information	118
Standard Limited Warranty	118
index	124

using this manual

Instructional Icons

Before you start, familiarize yourself with the icons that are used in this manual:



Warning: Situations that could cause injury to yourself or others.



Caution: Situations that could cause damage to your phone or to other equipment.



Note: Notes, usage tips, or additional information.



Refer to: Pages with related information. For example: ▶ p. 12 (represents “see page 12”).



Followed by: The order in which options or menus must be selected to perform a step. For example: Select **Messaging** → **New message** represents: select **Messaging** followed by **New message**.

[] **Square brackets:** Device keys. For example:
[] (represents the Lock key).

introducing your phone

 
When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, available optional services, and many other features.

Install the SIM Card and Battery


Prior to use it is necessary to install both the battery and S M into their corresponding internal compartments. The microSD™ card slot is also located in this same internal area.

Install the SIM card:

1. Remove the battery cover by sliding the bottom section of the phone downward (1).

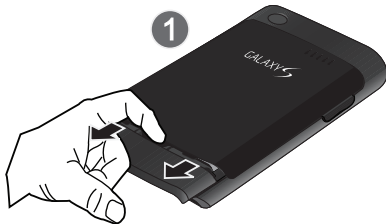

 2. Lift the cover up (2) and away from the phone (3).

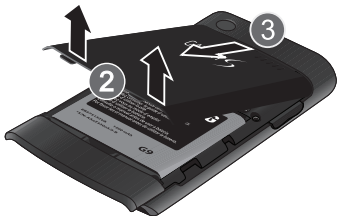

3. Carefully slide the SIM card into the SIM card socket (as shown) until the card locks into place. Make sure that the card's gold contacts face into the phone and that the

upper-left angled corner of the card is positioned as shown.



- If the card is not inserted correctly, the phone does not detect the SIM card. Re-orient the card back into the slot if the SIM is not detected.

 
Install the battery:

4. Insert the battery into the opening on the back of the phone, making sure the connectors align (1).
5. Gently press down to secure the battery (2).



6. Place the battery cover onto the back of the phone (1) and press down (2).

7. Press up on the bottom of the phone (3) until you hear a light click.

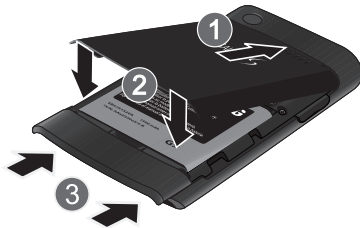


Charge the Battery

Before using the phone for the first time, you must charge the battery. You can charge the phone with the provided travel adapter or by connecting the phone to a PC using a PC data cable.



Only use Samsung-approved chargers and cables. Unauthorized chargers or cables can cause batteries to explode or damage your phone.



When your battery is low, the phone will emit a warning tone and display a low battery message. The battery icon  will also be empty and turn red. If the battery level becomes too low, the phone will automatically power off. Recharge the battery to continue using the phone.



Long backlight settings, searching for service, vibrate mode, browser use, and other variables may reduce the battery's talk and standby times.

To charge the battery using the travel adapter:

1. Open the cover to the multifunction jack on the top of the phone.
2. Plug the small end of the travel adapter into the multifunction jack.






Improperly connecting the travel adapter can damage the phone. Damage due to misuse is not covered by the warranty.

3. Plug the large end of the travel adapter into a power outlet.



- You can use the phone while it is charging, but it will take longer to fully charge the battery.
- While charging, the battery might heat up. This does not affect the phone's life span or performance.

4. When the battery is fully charged (the battery icon  is no longer moving), unplug the travel adapter from the power outlet and then from the phone.



Failure to unplug the travel adapter before you remove the battery can damage the phone.


5. Close the cover to the multifunction jack.

To charge the battery using the PC data cable:

1. Open the cover to the multifunction jack on the top of the phone.
2. Plug the micro USB end of the PC data cable into the multifunction jack.
3. Plug the USB end of the PC data cable into a USB port on a PC.



Depending on the type of PC data cable you are using, it might take some time before charging begins.

4. When the battery is fully charged (the battery icon  is no longer moving), unplug the PC data cable from the phone and then from the PC.

Insert a Memory Card (optional)

Your phone accepts a microSD™ or microSDHC™ memory card up to 32GB to expand available memory space. This secure digital card enables you to exchange images, music, and data between SD-compatible devices.



- Your phone only supports the FAT file structure for memory cards. If you insert a card formatted with a different file structure, your phone will prompt you to reformat the memory card.
- When you insert a memory card into your phone, it appears in My Files as a folder labelled sd.



Samsung uses approved memory standards for memory cards but some brands might not be fully compatible with your phone. Using an incompatible memory card might damage your phone or corrupt data stored on the card.

To insert a memory card:

1. Remove the back cover.
2. Insert a memory card with the gold-coloured contacts facing down.



3. Push the memory card into the memory card slot until it locks into place.
4. Replace the back cover.

To remove a memory card:

Before removing the memory card, unmount it for safe removal.



Do not remove the memory card while the phone is transferring information. This can damage the memory card or phone.

1. In Idle mode, select **Applications** → **Settings** → **SD card and phone storage**.
2. In the External SD card section, select **Unmount SD card**. Wait until the message "External SD card safe to remove" displays at the top of the screen.
3. Remove the back cover.
4. Push the memory card gently until it disengages from the phone.
5. Pull the memory card out of the memory card slot.
6. Replace the back cover.

To format a memory card:

Formatting your memory card on a PC might cause incompatibilities with your phone. Only format the memory card on the phone.



Memory card must be unmounted before it can be formatted (see above).

- In Idle mode, select **Applications** → **Settings** → **SD card and phone storage** → **Format SD card** → **Format SD card** → **Erase everything**.



Formatting a memory card erases all data stored on the card. Remember to make backup copies of all important data stored on the card before formatting. The manufacturer's warranty does not cover the loss of data resulting from user actions.

Phone Layout

 
This section outlines some key features of your phone and describes the screen and the icons that appear when the phone is in use. It also shows how to navigate through the phone.

Front of phone



1. **Earpiece:** allows you to hear the caller.
2. **Home screen indicator:** shows which Home screen is presently displayed.
3. **Application icons:** you can place shortcuts to your favorite applications on the Home screen.
4. **Primary shortcuts:** allows quick access to important features Phone, Email, Browser, and Applications.
5. **Menu key:** allows access sub-menus that provide additional options for various applications.
6. **Home key:** allows you to return to the main Home screen from any screen or menu.
7. **Back key:** allows you step backwards when navigating a menu or web page.
8. **Search key:** accesses the Google Search feature where you can search for information on the Web.
9. **Indicator icons:** shows status information such as received signal strength, battery level, missed calls, etc.

Side of Phone

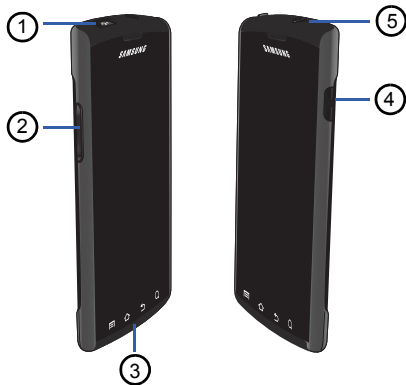

1. **Power/Accessory Interface connector:** lets you connect a travel charger or other optional accessories such as a USB/data cable or a hands-free headset.
2. **Volume keys:** let you adjust the ringer volume while in standby mode or adjust the sound volume during a call. When receiving a call, briefly press either volume key to mute the ring tone. Press and hold either volume key to reject an incoming call and send it directly to voicemail.
3. **Microphone:** allows other callers to hear you when you are speaking to them.
4. **Lock key:** Lets you lock or unlock the touch screen. Press and hold to open the Phone options screen (accesses Silent mode, Flight mode, Power off).
5. **Headset jack:** allows you to plug in 3.5mm headphones.

Back of phone









1. **Camera lens:** used to take pictures and shoot videos.
2. **External speaker:** allows you to hear sound without holding the phone to your ear or using the headphones, such as when the Speakerphone is turned on.

Indicator Icons

Icons shown on the display might vary depending on your region or service provider.


Icon	Definition
	No signal
	Signal strength
	GPRS network connected
	EDGE network connected
	UMTS network connected
	WLAN activated
	Bluetooth activated
	Bluetooth phone connected
	GPS activated
	Voice call in progress

Icon	Definition
	Call on hold
	Speakerphone activated
	Missed call
	Synchronized with the web
	Uploading data
	Downloading data
	Call forwarding activated
	Connected to PC
	No SIM card
	New text or multimedia message
	New email message
	New voicemail message
	Alarm activated
	Roaming (outside of normal service area)

Icon	Definition
	Silent mode activated
	Flight mode activated
	Vibration activated
	Music playback in progress
	Error occurred or caution required
	Battery power level
10:00 AM	Current time

getting started with your phone

 
Turn Your Phone On and Off

To turn your phone on, press and hold the lock key []. Your phone will automatically connect to the network. When you turn on your phone for the first time, tap the Android image on the screen and follow the on-screen instructions to set up your phone for its first use.




You might be charged for data connection because the connection to the Google web server is always active by default.

To turn your phone off:

1. Press and hold [].
2. Select **Power off**.



- Follow all posted warnings and directions when in areas where the use of wireless devices is restricted, such as airplanes and hospitals.

- To only use your phone's non-network services, switch to Flight mode. Press and hold [] and select **Flight mode**.

Use the Touch Screen

Your phone's touch screen lets you easily select items or perform functions.



- To avoid scratching the touch screen, do not use sharp tools.
- Do not allow the touch screen to come into contact with other electrical devices. Electrostatic discharges can cause it to malfunction.
- Do not allow the touch screen to come into contact with water. The touch screen may malfunction in very humid conditions or when exposed to water.




- For optimal use of the touch screen, remove the screen protection film before using your phone.
- Your touch screen has a layer that detects small electrical charges emitted by the human body. For best performance, tap the touch screen with your fingertip.

To control the touch screen:

- **Tap:** Tap once with your finger to select or launch a menu, option, or application.
- **Tap and hold:** Tap an item and hold it for more than two seconds to open a pop-up option list.
- **Scroll:** Tap and drag your finger up, down, left, or right to move to items on the list.
- **Drag and drop:** Tap and hold your finger on an item and then drag your finger to move the item.



- **Double-tap:** Tap twice quickly with your finger to zoom in or out while viewing photos or web pages.



- Your phone turns off the touch screen when you do not use the phone for a specified amount of time. To turn on the touch screen, press [].
- You can also adjust the backlight time. In Idle mode, select **Applications** → **Settings** → **Sound and display** → **Screen timeout**.

To lock or unlock the touch screen and keys:

You can lock the touch screen and keys to prevent any unwanted phone operations.

- To lock, press [].
- To unlock, turn on the touch screen by pressing [, and then swipe the screen with your finger.

Get to Know the Idle Screen


When your phone turns on or is in Idle mode, the Idle screen is displayed. From this screen, you can access various features and status information.

The Idle screen has seven panels. Scroll left or right to a panel on the Idle screen. You can also select a dot on the top of the screen to move to the corresponding panel of the Idle screen.

Add items to the Idle screen:

You can customize the Idle screen by adding shortcuts to applications or items in applications, widgets, or folders.

To add items to the Idle screen:

1. Press [] → **Add**.
2. Select the item category and then select an item:
 - **Samsung Widgets:** Add Samsung widgets to the Idle screen.

- **Android Widgets:** Add Android widgets to the Idle screen.
- **Shortcuts:** Add shortcuts to items, such as applications, bookmark, and contacts.
- **Folders:** Create a new folder or add folders for your contacts.
- **Wallpapers:** Set a background image.




Available items vary depending on the current Idle screen mode.

To move items on the Idle screen:

1. Touch and hold the item that you want to move.
2. Drag the item to a new location.

To remove items from the Idle screen:

1. Touch and hold the item that you want to remove.

The item is magnified and the  icon appears, indicating that the application tab has switched to the trash tab.

2. Drag the item to the trash tab.
3. When the item and the trash tab turn red, release the item.

Use the shortcuts panel

In Idle mode or while using an application, tap the indicator icons area and drag your finger down to open the shortcuts panel. You can activate or deactivate wireless connection features and access a list of a notifications, such as messages, calls, events, or processing status.





- To hide the shortcuts panel, drag the bottom of the list up.
- To clear the notification list, select **Clear**.

In the shortcuts panel, you can access the following options:

- **Wi-Fi:** Activate or deactivate the WLAN connection feature. ► p. 76
- **Bluetooth:** Activate or deactivate the Bluetooth wireless connection feature. ► p. 74
- **GPS:** Activate or deactivate GPS mode.
- **Vibration:** Activate or deactivate Vibration mode.

Add or remove panels from the Idle screen

You can add or remove panels from the Idle screen to organise widgets according to your preferences and needs.

1. In Idle mode, press [Edit.
2. Select  to remove a panel or  to add new panels.
3. Press [Save.



Access Applications

To access your phone's applications:

1. In Idle mode, select **Applications** to access the application list.
2. Scroll left or right to display the application screens. You can also select a dot at the top of the screen to move to the corresponding main menu screen.
3. Select an application.



- In order to use applications provided by Google™, you must have a Google account. If you do not have a Google account, you will need to create one.
- You can add a shortcut to an application by tapping and holding an application icon in the application list. You can then move the icon on the Idle screen as needed.

4. Press [] to return to the previous screen or press [] to return to the Idle screen.



Your phone has a built-in motion sensor that detects its orientation. While using some features, if you rotate the phone the interface automatically switches to landscape view. To set the interface to retain the portrait orientation when the phone is rotated, select **Settings** → **Sound and display** → **Orientation**.

Customize Your Phone

Get more from your phone by customizing it to suit your needs.

To set the current date and time:

1. In Idle mode, select **Applications** → **Settings** → **Date and time**.

2. Set the date and time and change other options as needed.

To turn the touch tone on or off:


- In Idle mode, select **Applications** → **Settings** → **Sound and display** → **Audible selection**.

To adjust the volume of the ringtones:

- In the Idle mode, press the Volume key up or down to adjust the ringtone volume.

To switch to or from Silent mode:

To mute or unmute your phone, do one of the following:

- In the Idle mode, select **Phone** → **Keypad** and tap and hold #.
- In Idle mode, press and hold [] and select **Silent mode**.

To change your ringtone:

1. In Idle mode, select **Applications** → **Settings** → **Sound and display** → **Voice call ringtone**.
2. Select a ringtone in the list and select **OK**.

To activate animation for switching windows:

- In Idle mode, select **Applications** → **Settings** → **Sound and display** → **Animation** → **Some animations** or **All animations**.

To select wallpaper for the Idle screen:

1. In the Idle mode, press [Wallpaper and select an option.
2. Select an image.
3. Select **Save** or **Set wallpaper**.



Samsung is not responsible for any use of default images or wallpapers provided on your phone.

To adjust the brightness of the display:

You can quickly adjust the brightness of the display.

1. In Idle mode, select **Applications** → **Settings** → **Sound and display** → **Brightness**.
2. Clear the checkbox next to **Automatic brightness adjustment**.
3. Drag the slider left or right to adjust the level of brightness.
4. Select **OK**.



The brightness level of the display will affect how quickly the phone uses battery power.

To set an unlock pattern:

You can set an unlock pattern to prevent unauthorized people from using your phone without your permission.

1. In Idle mode, select **Applications** → **Settings** → **Location and security** → **Set unlock pattern**.
2. Follow the on-screen instructions and example patterns and select **Next** (if needed).
3. Draw a pattern by dragging your finger to connect at least 4 dots.
4. Select **Continue**.
5. Draw the pattern again to confirm.
6. Select **Confirm**.



- When you have set an unlock pattern, you have to use the pattern each time you turn on the phone. If you do not want the phone to require a pattern, clear the checkbox next to **Require pattern** in **Location and security**.
- If you forget the unlock pattern, take your phone to a Samsung Service Centre to be unlocked.
- Samsung is not responsible for the loss of passwords or private information or other damages caused by third-party software.

To lock your SIM card:

You can lock your phone by activating the PIN supplied with your SIM card.

1. In Idle mode, select **Applications** → **Settings** → **Location and security** → **Set up SIM card lock** → **Lock SIM card**.
2. Enter your PIN and select **OK**.

Once the PIN lock is enabled, you must enter the PIN each time you turn on the phone.



- If you enter an incorrect PIN too many times, your SIM card will be blocked. You must enter a PIN unlock key (PUK) to unblock the SIM card.
- If you block your SIM card by entering an incorrect PUK, bring the card to your service provider to be unblocked.

Enter Text

You can enter text by selecting characters on the virtual keypad or by inputting handwriting on the touch screen. You can enter text and create messages or contacts.



You cannot enter text in some languages. To enter text, change the writing language to one of the supported languages. ► p. 100

To change the keyboard type:

You can change the type of keyboard that is used to enter text. Tap and hold on the text input field, select **Input method**, and select a keyboard type (**Swype** or **Samsung keypad**).

 
Using the Swype keyboard

To enter text using the Swype keyboard:

1. Select the first character of a word and drag your finger to the second character without releasing the finger from the screen. A line joins the selected characters.



2. Pause on the second character for a moment and then drag your finger to the next character.
3. Continue until you have finished the word.
4. Release the finger on the last character. The word is inserted into the text input field.
5. Repeat steps 1-4 to complete your text.
Tap and hold each key to enter additional characters.
6. You can also use the following keys:

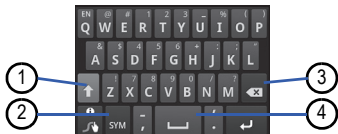

Number	Function
1	Change case.

Number	Function
2	Switch between Symbol mode and ABC/Number mode.
3	Delete characters.
4	Insert a space.



- To hide the Swype keyboard, press [↩].
- To view the Help information about using the Swype keyboard, tap and hold [?].

Using the Samsung keypad

To enter text using the Samsung keypad:

1. Select and select a text input method. You can select one of key input methods (QWERTY or traditional keypad) or the handwriting input methods.
2. Enter text by selecting alphanumeric keys or by writing on the touch screen.

You can also use the following keys:



Number	Function
1	Change case.
2	Switch between Number/Symbol mode and ABC mode.
3	Change the text input method or access the keypad settings (tap and hold).
4	Clear your input.
5	Start a new line.

Number	Function
6	Insert a space.



Copy and paste text

While you are entering text, you can use the copy and paste feature to use the same text in other applications.

To copy and paste text:

1. Tap and hold the text input field.
2. Select **Select text** in the option list.
3. Drag your finger across the text you want to highlight.
4. Tap and hold the highlighted text.
5. Select **Copy** to copy, or **Cut** to cut the text onto the clipboard.
6. In another application, tap and hold the text input field.
7. Select **Paste** to insert the text from the clipboard into the text field.



Set up Voice Mail

1. From the Home screen, tap  then touch and hold .
2. You may be prompted to enter a password.
3. Follow the tutorial to create a password, record a greeting, and record your name.



These steps may be different depending on your network.

Accessing Your Voice Mail

1. From the Home screen, tap  then touch and hold .
2. When connected, follow the voice prompts from the voice mail center.

Accessing Your Voice Mail From Another Phone

1. Dial your wireless phone number.
2. When you hear your voicemail greeting, press the # key on the phone you are using.
3. Enter your passcode.

Android Market

Android Market provides you with an easy way to shop for games and mobile applications. Based on the Android platform, your phone's functionality can be extended by installing additional applications.




- This feature might not be available in your region.
- Your phone saves downloaded files to the internal moviNAND™ memory. To save the files on a memory card, connect your phone to a PC and copy the files to the memory card.

To install applications:

1. In Idle mode, select **Applications** → **Market**.
2. Select **Accept** in the terms and conditions page.
3. Select an item category and then select an item.
4. Select **Install** (for free items) or **Buy**.
 - If you select **Install**, select **OK** to download the item immediately.
 - If you select **Buy**, you need to enter your credit card information. Follow the on-screen instructions.

To uninstall applications:

1. In the Android Market home screen, press [] → **Downloads**.
2. Select the item that you want to delete.
3. Select **Uninstall** → **OK**.

Download Files from the Web

When you download files or web applications from the web, your phone stores them on a memory card.



Files that you download from the web can include viruses that will damage your phone. To lessen your risk, only download from sources that you trust.





Some media files include Digital Rights Management to protect copyrights. This protection might prevent you from downloading, copying, modifying, or transferring some files.


To download files from the web:

1. In Idle mode, select **Browser**.
 2. Search for a file or application and download it.
- To install applications downloaded from websites other than Android Market, you must select the check box at

Applications → **Settings** → **Applications** → **Unknown sources**.

To view the download history:

1. In Idle mode, select **Browser**.
2. Press [] → **More** → **Downloads**.
3. To clear the download history list, press [] → **Clear list**.

To cancel downloading, press [] → **Cancel all downloads**.

Synchronize Data

You can synchronize data stored in Google Mail™, Calendar and Contacts with the Google web server and back up or restore your data.

When the synchronization is complete, your phone stays connected to the web. If any change is made on your phone

or on the web, the information is updated in the other location automatically. .



- This feature might not be available in your region.
- To synchronize with the Google web server, you must have a Google account. If you do not have a Google account, sign up for a Google account by selecting **Create** on the first setup screen.

To set up a server account:

1. In Idle mode, select **Applications** → **Settings** → **Accounts and sync**.
2. Select **Add account** and select an account type.
3. Follow the on-screen instructions to complete the account setup.

For online community services such as Facebook or MySpace, enter your user name and password and select **Log in**.

To activate automatic sync:


1. In Idle mode, select **Applications** → **Settings** → **Accounts and sync**.
2. Select **Auto-sync**.
3. Select the account that you want to sync information with.
4. Select the applications that you want to synchronize.

For each application that is synchronized, if you add or edit data on your phone or on the web, the updated information appears in the other location automatically.

To exclude applications from automatic synchronization, clear the checkbox next to the application that you do not want to synchronize.

To synchronize data manually:

1. In Idle mode, select **Applications** → **Settings** → **Accounts and sync**.
2. Select an account.

3. Press [] → **Sync now**. Your phone will synchronize the data you have selected for synchronization.


communication

Calls

You can use your phone to make and answer calls, use options during calls, and customize and use call-related features.

Make and answer calls

To make a call:

1. In Idle mode, select **Phone**.
2. Enter an area code and phone number.
3. Select  to make the call.
4. To end the call, select **End call**.



When you hold the phone close to your ear during a call, it automatically locks the touch screen to prevent accidental inputs.



- Use the contact list to save the numbers that you dial frequently. ► p. 60
- To quickly access the call log to redial numbers that you have dialed recently, select **Phone** → **Call log**.
- Use the voice command feature to dial by voice.

To answer a call:

1. When a call comes in, slide the **Accept** icon to the right.



When the phone is ringing, press the Volume key to mute the ringtone.

2. To end the call, select **End call**.

To reject a call:


When a call comes in, slide the **Reject** icon to the left. The caller will hear a busy tone.

To send a message when you reject incoming calls, slide the **Reject call with msg** icon.



First set a text message that will be sent to callers. In Idle mode, select **Applications** → **Settings** → **Call settings** → **All calls** → **Reject call with message**. Select an existing message and edit as required, or select **Create** and create a new text message.

To call an international number:

1. In Idle mode, select **Phone** → **Keypad**, and tap and hold **0** to insert the **+** character.
2. Enter the complete number that you want to dial (country code, area code and phone number), and then select  to dial the number.

To call a contact from Contacts:

1. In Idle mode, select **Phone** → **Contacts**.
2. Select a contact's name.

3. Select the number that you want to dial.

To use the headset:

By plugging the supplied headset into the phone, you can make and answer calls:



- **Answer a call:** Press the headset button.
- **Reject a call:** Press and hold the headset button.
- **Place a call on hold or retrieve a held call during a call:** Press and hold the headset button.
- **End a call:** Press the headset button.



The supplied headset is only designed to be used with your phone and might not be compatible with other phones and MP3 players.




Use options during a voice call

You can use the following options while a voice call is in progress:

- **Adjust voice volume:** Press the Volume key up or down.
- **Place a call on hold:** Select .
- **Retrieve a held call:** Select .
- **Dial a second number:** Select **Add call** and then dial the new number.
- **Answer a second call:** Slide the **Accept** icon when the call waiting tone sounds. The phone prompts you to end or hold the first call. You must subscribe to a call waiting service to use this feature.
- **Open the dialing screen:** Select **Dialpad**.
- **Activate the speakerphone:** Select **Speaker**.



In noisy environments, you might have difficulty hearing some calls while using the speakerphone. For better audio performance, use the normal phone mode.

- **Turn off the microphone:** Select **Mute** so that the caller cannot hear you.
- **Use a Bluetooth headset:** Select **Headset** to use a Bluetooth headset to listen and talk to the caller.
- **Open the phonebook:** Press [] → **Contacts**.
- **Add a memo:** Press [] → **Memo**.
- **Switch between two calls:** Select **Swap**.
- **Make a multiparty call (conference call):** Make or answer a second call and select **Merge** when connected to the second party. Repeat to add more parties. You must subscribe to the multiparty call service to use this feature.
- **Connect the current caller to the caller placed on hold:** Press [] → **Transfer**. You will be disconnected from the call.
- t to your image using the front camera lens.

View and dial missed calls

When you miss one or more calls, the missed call icon is displayed in the icon bar at the top of the screen.

To dial the number of a missed call:

1. Open the shortcut panel.
2. Select the missed call.


Use additional features

You can use various other call-related features, such as auto rejection, call forwarding, or call barring.

To set auto rejection and create the reject list:

You can use auto rejection to automatically reject calls from specific numbers.

1. In Idle mode, select **Applications** → **Settings** → **Call settings** → **All calls** → **Auto reject**.
2. Select **Enable auto reject** to activate auto rejection.

3. Select **Auto reject list**.
4. Press [] → **Create**.
5. Enter a number to reject and select **Save**.
6. To add more numbers, repeat steps 4-5.

To set call forwarding for voice calls:

Call forwarding is a network feature that allows you to send incoming calls to another number that you specify. You can set this feature separately for several conditions when you are not able to answer calls, such as when you are already on the phone or when you are outside of the service area.

1. In Idle mode, select **Applications** → **Settings** → **Call settings** → **Voice call** → **Call forwarding**.
2. Select a condition.
3. Enter a number to which calls will be forwarded and select **Enable**.
Your setting will be sent to the network.

To set call barring:

Call barring is a network feature that restricts specific types of calling or prevents others from making calls with your phone.

1. In Idle mode, select **Applications** → **Settings** → **Call settings** → **Voice call** → **Call barring**.
2. Select a call type to restrict.
3. Enter a call barring password and select **OK**.
Your setting will be sent to the network.


To set call waiting:

Call waiting is a network feature that alerts you of an incoming call when you are on a call.

1. In Idle mode, select **Applications** → **Settings** → **Call settings** → **Voice call** → **Call waiting**.
2. Your setting will be sent to the network.

To view call logs:

You can view logs of your calls and filter them by type.

1. In Idle mode, select **Phone** → **Call log**.
2. Press [View by and select an option (All calls, Missed calls, Dialed calls, or Received calls).



From the call logs, you can make a call to a contact by quickly flicking the contact to the right, or send a message by flicking the contact to the left.

3. Select a log to view its details.



From the detail view, you can dial the number, send a message to the number or add the number to the phonebook or reject list.

Text and Multimedia Messages


You can create and send text (SMS), multimedia (MMS), or email messages, and view or manage messages that you have sent or received. For instructions on entering text, see ► p. 24.





You might incur additional charges for sending and receiving messages while outside your home service area. For details, contact your service provider.


To send a text message:

1. In Idle mode, select **Applications** → **Messaging** → **New message**.
2. Enter a number manually or choose from the recent recipient list, contact list or group list by selecting the corresponding button.
3. Select the checkbox next to each contact or number to receive the message then select **Add**.


4. Select **Type to compose** and enter your message text.
To insert emoticons, press [] → **Insert smiley**.
5. Select **Send** to send the message.

To send a multimedia message:

1. In Idle mode, select **Applications** → **Messaging** → **New message**.
2. Enter a number manually or choose from the recent recipient list, contact list or group list by selecting the corresponding button.
3. Select the checkbox next to each contact or number to receive the message then select **Add**.
4. Select **Type to compose** and enter your message text.
To insert emoticons, press [] → **Insert smiley**.
5. Press [] → **Attach**, select an option, and then add an item.

6. Press [] → **Add subject** and add a subject for the message.
7. Select **Send** to send the message.

To view text or multimedia messages:

1. In Idle mode, select **Applications** → **Messaging**.
Your messages are grouped into message threads by contact.
2. Select a contact.
3. Select a text or multimedia message in the message thread.
4. For a multimedia message, select  to view the attachment.

Listen to voicemail messages

If you have set missed calls to be diverted to voicemail, callers can leave a voice message when you do not answer incoming calls.

To access your voicemail inbox and listen to voicemail messages:

1. In Idle mode, select **Phone** → **Keypad**, and tap and hold **1**.
2. Follow the instructions on the voicemail server.



The voicemail server number must be saved on the phone. Your service provider can give you the number.

Gmail™



You can retrieve new email messages from Gmail™ to your Inbox. When you access this application, the Inbox screen appears. The total number of unread messages displays in the title bar and the unread messages display in bold. If you

have labelled a message, its label appears in a coloured rectangle on the message.



This feature might not be available in your region.

To send an email message:

1. In Idle mode, select **Applications** → **Gmail**.
2. Press [] → **Compose**.
3. Enter a name or address in the recipient field.
4. Enter a subject and message.
5. To attach an image file, press [] → **Attach** and select a file.
6. Select **Send** to send the message.

To view email messages:

1. In Idle mode, select **Applications** → **Gmail**.

2. Select an email message.

In the message view, use the following options:

- **Reply:** Reply to the message.
- **Reply to all:** Reply to the message including all recipients.
- **Forward:** Forward the message to other recipients.
- **Preview:** Select **Preview** next to the attachment item to view the attachment.
- **Download:** Save the attachment on your phone.
- **Archive:** Archive the message.
- **Delete:** Delete the message.
- **Older:** View an older message.

Organize email by labels

You can organize your email by labelling your messages or adding stars to mark important messages. You can then sort messages by label filter.

To add a label to a message:

1. In the Inbox screen, tap and hold a message.
2. Select **Change labels**.
3. Select a label to add and select **OK**.

To add a star to a message:

1. In the Inbox screen, tap and hold a message.
2. Select **Add star**. The star icon next to the message is activated.

To filter messages:


1. In the Inbox screen, press [] → **View labels**.
2. Select the label of the messages that you want to view.

Email


You can send or view email messages using your personal or company email account.

To set up an email account:

1. In Idle mode, select **Applications** → **Email**.
2. Enter your email address and password.
3. Select **Next** (for general email accounts, such as Google Mail and Yahoo) or **Manual setup** (for other company email accounts).
4. Follow the on-screen instructions.

When you have finished setting up the email account, the email messages are downloaded to your phone. If you have created more than two accounts, you can switch between email accounts. Press [] → **Accounts** and select the one from which you want to retrieve the messages.

To send an email message:

1. In Idle mode, select **Applications** → **Email** and then select an email account.
2. Press [] → **Compose**.

3. Select **Contacts**.

You can enter an email address manually or select one from the recent recipients or groups by selecting another button.

4. Select the Cc/Bcc field to add more recipients.
5. Select the subject field to enter a subject.
6. Select the text input field to enter your email text.
7. Select **Attach** and attach a file.
You can select an image, video, or sound clip.
8. Select **Send** to send the message.




If you are offline or outside your service area, the message will be held in the message thread list until you are online and in your service area.


To view email messages:

When you open an email account, you can view previously retrieved emails offline or connect to the email server to

view new messages. After you retrieve email messages, you can view them offline.

1. In Idle mode, select **Applications** → **Email** and then select an email account.
2. Press [] → **Refresh** to update the message list.
3. Select an email message.


In the message view, use the following options:

- **Reply:** Reply to the message.
- **Delete:** Delete the message.
- **Reply all:** Reply to the message including all recipients.
- **Open:** View an attachment.
- **Save:** Save the attachment on your phone.
- [] → **Forward:** Forward the message to other recipients.

Google Talk™

You can send instant messages to your friends or family using Google Talk™.




To add friends to your Friends list:

1. In Idle mode, select **Applications** → **Talk**
The friend list shows all of your Google Talk contacts at a glance.
2. Press [] → **Add friend**.
3. Enter the email address of the friend and select **Send invitation**.

When your friend accepts the invitation, they are added to your friend list.

To start a chat:

1. In Idle mode, select **Applications** → **Talk**
2. Select a friend from the Friends list. The chat screen opens.

3. Enter your message and select **Send**.
To insert emoticons, press [] → **More** → **Insert smiley**.
4. To switch between active chats, press [] → **Switch chats**.
5. To end the chat, press [] → **End chat**.

Social Hub

You can access Social Hub™, the integrated communication application for email, messages, instant messages, contacts, or calendar information. Visit <http://socialhub.samsungmobile.com> for more details.

To access Social Hub:

1. In Idle mode, select **Applications** → **Social Hub**.
2. Check and use the contents delivered from the Social Hub.

entertainment

Camera

You can capture and view photos and videos. You can take photos at resolutions up to 2560 x 1920 pixels (5 megapixels) and videos at resolutions up to 1280 x 720 pixels.

Capturing photos

 
To capture a photo:

1. In Idle mode, select **Applications** → **Camera**.
2. Rotate the phone counter-clockwise to switch to landscape view.



- The camera interface is designed for use in landscape orientation only.
- The camera automatically turns off if you do not use it for a specific amount of time.
- The storage capacity might differ depending on the type of scene and lighting conditions.


3. Aim the lens at the subject and make any necessary adjustments.

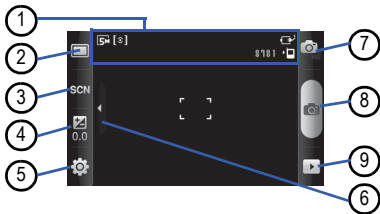




Number	Function
1	Check the camera status and settings. <ul style="list-style-type: none"> • : Resolution • : Exposure meter type • : Number of photos you can take (according to available memory) • : Default storage location

Number	Function
2	Change the shooting mode.
3	Change the scene mode.
4	Adjust the exposure value.
5	Change the camera settings.
6	Hide or display icons in the viewfinder.
7	Switch to the camcorder.
8	Capture a photo.
9	View the photo or video that you captured last.

- You can also press the volume keys to zoom in and out.
- If you want the lens to focus on a location other than the centre of the screen, tap the preview screen where you want to focus. The focus frame moves to the location that was tapped and changes to green when the subject is in focus.

4. Select  to take a photo. The photo is saved automatically.



After taking photos, select  to view the photos.

- **View more photos:** scroll left or right.
- **Zoom in or out:** Select  or , double tap on the screen or place two fingers on the screen and slowly pinch or spread them apart.
- **Share:** Send a photo to others.
- **Set as:** Set a photo as wallpaper or a contact icon.
- **Delete:** Delete a photo.

To capture a photo using preset options for types of scenes:


Your camera provides you with predefined settings for various scenes. You can select the proper mode for your shooting condition and subjects. For example, when you take photos at night, select the night mode that uses an extended exposure.


1. In Idle mode, select **Applications** → **Camera**.

2. Rotate the phone counter-clockwise to switch to the landscape view.
3. Select **SCN**, select a scene, and then select .
4. Make any necessary adjustments.
5. Select  to take a photo.

To capture a series of photos:

You can easily take a series of photos of moving subjects. This is useful when you are photographing a sporting event or children at play.

1. In Idle mode, select **Applications** → **Camera**.
2. Rotate the phone counter-clockwise to switch to the landscape view.
3. Select  → **Continuous**.
4. Make any necessary adjustments.



5. Tap and hold . The camera will continue to take photos until you release the camera shutter.



- Image resolution is reduced to 640 x 480 pixels (0.3 megapixels).

To capture a panoramic photo:

You can take wide panoramic photos using Panorama shooting mode. This mode is convenient for photographing landscapes.

1. In Idle mode, select **Applications** → **Camera**.
2. Rotate the phone counter-clockwise to switch to the landscape view.
3. Select  → **Panorama**.
4. Make any necessary adjustments.
5. Select  to take the first photo.


6. Slowly move the phone in any direction and align the green frame with the viewfinder.
When you have aligned the green frame and viewfinder, the camera will automatically take the next photo.
7. Repeat step 6 to complete the panoramic photo.




- Image resolution is reduced to 640 x 480 pixels (0.3 megapixels).

To capture a photo in Smile shot mode:



Your camera can recognise people's faces and help you to take photos when they smile.

1. In Idle mode, select **Applications** → **Camera**.
2. Rotate the phone counter-clockwise to switch to the landscape view.
3. Select  → **Smile shot**.
4. Make any necessary adjustments.

5. Select .
6. Aim the camera lens at your subject.
Your phone recognizes people in an image and detects their smiles. When the subject smiles, the camera automatically takes a photo.



To capture a beauty photo:

You can hide facial imperfections using Beauty mode.

1. In Idle mode, select **Applications** → **Camera**.
2. Rotate the phone counter-clockwise to switch to the landscape view.
3. Select  → **Beauty**.
4. Make any necessary adjustments.
5. Select  to take a photo.

To capture a vintage photo:

You can take photos with a vintage look and feel by applying colour filters.




1. In Idle mode, select **Applications** → **Camera**.
2. Rotate the phone counter-clockwise to switch to the landscape view.
3. Select  → **Vintage**.
4. Select  to select a colour filter.
5. Make any necessary adjustments.
6. Select  to take a photo.

To capture a photo using the frame guide:

You can take two photos with the same background and then combine the left and right halves of each photo into one photo. This feature is useful if you want to take a photo with a friend but no one is available to take the photo for you.





- Image resolution is reduced to 640 x 480 pixels (0.3 megapixels).

1. In Idle mode, select **Applications** → **Camera**.
2. Rotate the phone counter-clockwise to switch to the landscape view.
3. Select  → **Add me**.
4. Make any necessary adjustments.
5. Select  to take the first photo.
The left half of the first photo appears as a transparent guide for the next photo.
6. Make any necessary adjustments with the aid of the guide.
7. Select  to take the second photo.
The phone automatically combines the left side of the first photo and the right side of the second photo into one photo.

To capture an action photo:

You can capture shots of a moving subject and then combine them into a single photo that shows the action.



1. In Idle mode, select **Applications** → **Camera**.
2. Rotate the phone counter-clockwise to switch to the landscape view.
3. Select  → **Action shot**.
4. Make any necessary adjustments.
5. Select  to take the first photo.
6. Move the phone to follow the moving subject.
The phone automatically captures the next photos.
7. Continue to follow the subject until the phone has captured all of the shots required for the action photo.



- Image resolution is reduced to 640 x 480 pixels (0.3 megapixels).

To capture a photo in Cartoon mode:

You can take photos with cartoon effects.

1. In Idle mode, select **Applications** → **Camera**.
2. Rotate the phone counter-clockwise to switch to the landscape view.
3. Select  → **Cartoon**.
4. Make any necessary adjustments with the aid of the guide.
5. Select  to take a photo.

Customize the camera settings

Before taking a photo, select  →  to access the following options:

Option	Function
Outdoor visibility	Activate to enhance LCD visibility outdoors.
Focus mode	Take close-up photos or set the camera to automatically detect and focus on the subject or on human faces.
Timer	Select the length of the delay before the camera takes a photo.
Resolution	Change the camera's resolution.
White balance	Adjust the colour balance to suit lighting conditions.

Option	Function
Effects	Apply a special effect, such as sepia or black and white tones.
ISO	Adjust the sensitivity of the camera imaging sensor.
Metering	Select a type of exposure meter.
Anti-Shake	Reduce the blur caused by the phone's vibration or movement.
Auto contrast	Automatically adjust the contrast between the subject and background.
Blink detection	Set the camera to alert you when people close their eyes.
Image quality	Set the quality level for your photos.
Adjust	Adjust the contrast, saturation, and sharpness.


Before taking a photo, select  →  to access the following settings:

Setting	Function
Guidelines	Display guidelines on the preview screen.
Review	Set the camera to display the taken photo or return to capture mode.
GPS	Set the camera to include location information for your photos. To improve GPS signals, avoid shooting in locations where the signal might be obstructed. For example, between buildings or in low-lying areas, or in poor weather conditions.
Shutter sound	Set the camera shutter sound when capturing a photo.


Setting	Function
Storage	Select the default location for storing captured photos.
Reset	Reset menus and shooting options.


Capturing video

To capture a video:



 1. In Idle mode, select **Applications** → **Camera**.
2. Rotate the phone counter-clockwise to switch to the landscape view.
3. Select  to switch to the camcorder.

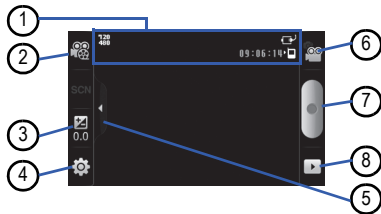4. Aim the lens at the subject and make any necessary adjustments.



Number	Function
1	Check the camcorder status and settings. <ul style="list-style-type: none"> • 120 480: Resolution • 09:06:14: Length of video that can be captured (according to available memory). • : Default storage location


Number	Function
2	Change the recording mode (for attaching to a multimedia message or for saving normally).
3	Adjust the exposure value.
4	Change the camcorder settings.
5	Hide or display icons in the viewfinder.
6	Switch to the camera.
7	Capture a video.
8	View the last photo or video that you captured.

- Press the Volume key to zoom in or out.
- Select  to start recording.
- Select  to stop recording.

The video is saved automatically.





The camera might not be able to properly record videos to a memory card with a slow transfer speed.

After capturing videos, select  to view the captured videos.



- **Scroll left or right:** View more videos.
- **Play:** Play a video.
- **Delete:** Delete a video.
- **Share:** Send a video to others.

Customize the camcorder settings

Before capturing a video, select  →  to access the following options:

Option	Function
Outdoor visibility	Enhances LCD visibility outdoors.

Option	Function
Timer	Select the length of delay before the camera starts recording a video.
Resolution	Change the resolution.
White balance	Adjust the colour balance to suit the lighting conditions.
Effects	Apply a special effect, such as sepia or black and white tones.
Video quality	Set the quality level for your videos.
Adjust	Adjust contrast, saturation, and sharpness.

Before capturing a video, select  →  to access the following settings:

Setting	Function
Guidelines	Display the guidelines on the preview screen.
Audio recording	Turn audio recording on or off.
Review	Set the camera to display the recorded video or return to capture mode.
Storage	Select the default location for storing captured videos.
Reset	Reset menus and shooting options.

Video Player

You can use the video player to play various kinds of videos. The video player supports the following file formats: .3gp,


.mp4, .avi, .wmv, .flv, .mkv (Codec: MPEG4, H.263, Sorenson H.263, H.264, VC-1).








- Some file formats may not be supported, depending on the software of the phone.
- If the file size exceeds the available memory, an error can occur when you open files.

To play a video:

1. In Idle mode, select **Applications** → **Video Player**.
2. Select the video that you want to play.
3. Rotate the phone counter-clockwise to switch to landscape view.
4. Control the playback with the following icons:

Icon	Function
	Change the ratio of the video screen.

Icon	Function
	Scan backward in a file (tap and hold).
	Pause playback or select  to resume playback.
	Scan forward in a file (tap and hold).
	Activate the 5.1 channel surround sound system when headphones are connected.

Gallery

You can view photos and play videos saved in your phone's memory or on a memory card.



If your phone indicates that the memory is full when you access Gallery, delete some of the files using My Files or other file management applications and try again.

Supported File Formats



Your phone supports the following file formats:

Type	Format
Image	Extension: .bmp, .gif, .jpg, and .png
Video	<ul style="list-style-type: none">• Extension: .3gp, .mp4, .avi, .wmv, .flv, .mkv• Codec: MPEG4, H.263, H.264, Xvid, VC-1





- Some file formats may not be supported, depending on the software of the phone.
- If the file size exceeds the available memory, an error can occur when you open files.


To view a photo in Gallery:

1. In Idle mode, select **Applications** → **Gallery**.
2. Select a folder.
3. To change the view mode, select  or  at the top right of the screen.
4. Select a photo to view.

While viewing a photo, use the following options:

- **Scroll left or right:** View more photos.
- **Zoom in or out:** Select  or . You can also tap the screen with two fingers and then spread them apart to zoom in (move your fingers closer together to zoom out).
- **Slideshow:** Start a slideshow of images in the selected folder. Tap the screen to stop the slideshow.

To play a video in Gallery:

1. In Idle mode, select **Applications** → **Gallery**.
2. Select a video (with the  icon) to play.

3. Rotate the phone counter-clockwise to switch to the landscape view.
4. Control the playback with the virtual keys. ► p. 54

To share images or videos in Gallery:

1. In Idle mode, select **Applications** → **Gallery**.
2. Select a folder.
3. Tap and hold one or more images or video files to make a selection.
4. Select **Share** and select a sharing option.

Music Player

You can listen to music using the music player. The music player supports the following file formats: .mp3, .m4a, .mp4,

.3gp, .3ga, .wma, .ogg, .oga, .aac, and .flac. Supported music codecs include: MIDI, MP3, AAC, AMR, IMY, WAV..



- You can play music files in the following formats if you open them from **My Files**, multimedia messages, or on the web browser: .mid, .midi, .xmf, .rtttl, .smf, .imy, .rtx, .ota, .amr, .awb, and .wav.
- Some file formats may not be supported, depending on the software of the phone.
- If the file size exceeds the available memory, an error can occur when you open files.

To add music files to your phone:

Start by transferring files to your phone or memory card:

- Download from the web. ► p. 28
- Download from a PC with the optional Samsung Kies. ► p. 81
- Receive using Bluetooth. ► p. 76

- Copy to your memory card. ► see below
- Synchronize with Windows Media Player 11. ► p. 81







To copy music files to a memory card:




1. Insert a memory card.
2. Using an optional PC data cable, connect the multifunction jack on your phone to a PC.
3. Open the status bar and select **USB connected** → **Mount**. The memory card appears as an external drive attached to the PC.
4. Open the source folder to view files.
5. Copy files from the PC to the memory card.

To play music files:

1. In Idle mode, select **Applications** → **Music Player**.
2. Scroll to the left or right and select a library category (All, Playlists, Albums, Artists, or Genres).

3. Select a music file.
4. Control playback with the following icons:

Icon	Function
	Adjust the volume.
	Activate the SRS CS Headphone™ 5.1 channel surround sound system when headset is connected.
	Activate Shuffle mode. (Displays when you tap the player screen.)
	Change the repeat mode (off, repeat a file, or repeat all files). (Displays when you tap the player screen.)
	Skip backward or scan backward in a file (tap and hold).
	Pause playback.

Icon	Function
	Resume playback.
	Skip forward or scan forward in a file (tap and hold).
	<ul style="list-style-type: none"> SRS CS Headphone™ delivers a 5.1 surround sound experience over standard headphones or earbuds when listening to multichannel content, such as DVD movies. WOW HD™ significantly improves audio playback quality, delivering a dynamic 3D entertainment experience with deep, rich bass and high frequency clarity for crisp detail.

To create a playlist:

1. In Idle mode, select **Applications** → **Music Player**.
2. Select **Playlists**.

3. Press [] → **Create**.
4. Enter a title for the new playlist and select **Save**.
5. Select **Add music**.
6. Select the files that you want to include and select **Add**. During playback, you can add files to a playlist by pressing [] → **More** → **Add to playlist**.



To add songs to the quick list:

You can add songs to the quick list and save them as a playlist. During playback, press [] → **Add to quick list** to add the current song to the quick list.

To go to the quick list, from the music player main screen, select **Playlists** → **Quick list**. To save the quick list as a playlist, press [] → **Save as playlist**.

To customize music player settings:

1. In Idle mode, select **Applications** → **Music Player**.

2. Press [] → **More** → **Settings**, or press [] → **Settings**.
3. Adjust the following settings to customize your music player:

Option	Function
Equalizer	Select an equalizer type (alters the frequency response).
Effect	Select a sound effect.
Music menu	Select music categories to display on the music library screen.
Visualization	Display an animated visualization during playback.

personal information

Contacts

You can use contact cards and groups to store personal information in the phone's memory or on a SIM card. You can save names, mobile phone numbers, home phone numbers, email addresses, birthdays and more for your contacts.

To add a contact to the contact list:

1. In Idle mode, select **Applications** → **Contacts**.
2. Select **Create contact**.
3. Select a storage location.
4. Enter contact information.
5. Select **Save** to add the contact card to memory.

To create a contact from the dialer screen:

1. In Idle mode, select **Phone** → **Keypad**.
2. Enter a phone number.

3. Select **Add to Contacts** → **Create contact**.
4. Select a memory location.
5. Enter contact information.
6. Select **Save** to add the contact to memory.

To import or export contacts:

1. In Idle mode, select **Applications** → **Contacts**.
2. Press [] → **More** → **Import/Export**.
3. Select an option to import or export.
4. For importing contacts, select an importing option.

To find a contact:

1. In Idle mode, select **Applications** → **Contacts**.
2. Scroll up or down in the contact list. You can also select the first letter of the name in the alphabetical list at the right side of the screen.

3. Select a contact's name.



Once you have found a contact, you can:

- Call the contact by selecting **Call**.
- Send a message by selecting **Send Message**.
- Edit the contact information by pressing [] → **Edit**.

To set a speed dial number:

1. In Idle mode, select **Applications** → **Contacts**.
2. Press [] → **Speed dial**.
3. Select a location number and then select a contact.



You can quickly dial this number by tapping and holding the location number in the dialing screen.

To create your namecard:

1. In Idle mode, select **Applications** → **Contacts**.

2. Press [] → **More** → **My profile**.
3. Enter your details.
4. Select **Save**.



You can send your namecard to others by attaching it to a message or email or by transferring it using Bluetooth.

To retrieve contacts from your community accounts:

You can view the list of community website accounts and select an account to add a contact from the website to your phone contacts.

1. In Idle mode, select **Applications** → **Contacts**.
2. Press [] → **Get friends**.
3. Select an account.

To create a group of contacts:

By creating groups of contacts, you can manage multiple contacts and send messages or email to an entire group. Start by creating a group.

1. In Idle mode, select **Applications** → **Contacts** → **Groups**.
2. Press [] → **Create**.
3. Enter a name and select a ringtone for the group.
4. Select **Save**.

To view the communication log:

You can view the communication log of calls, messages, email or SNS threads.

1. In Idle mode, select **Applications** → **Contacts** → **History**.
2. Select the item that you want to view.

To view social network activities:

You can view the recent activities of contacts in social network services, such as Facebook, MySpace, and Twitter.

1. In Idle mode, select **Contacts** → **Activities**.
2. Select the item that you want to view.

Calendar

You can create and manage daily, weekly, or monthly events, and set alarms to remind yourself of important events.

To create an event:

1. In Idle mode, select **Applications** → **Calendar**.
2. Press [■] → **Create**.
3. Enter the details of the event as required.
4. Select **Save**.

To change the calendar view:

1. In Idle mode, select **Applications** → **Calendar**.
2. Select a view mode at the top of the calendar.

To view events for a specific date:

1. In Idle mode, select **Applications** → **Calendar**.
2. Select a date on the calendar. In the month view, days with scheduled events are indicated by a small triangle.
To move to a specific day by entering a date manually, press [■] → **Go to**, specify the date by selecting + or - as required for each item, and select **Set**.
To select today's date, press [■] → **Today**.
3. Select an event to view its details.



You can send the event to others by pressing [■] → **Send via** and select an option.

To stop an event alarm:


If you set an alarm for a calendar event, the event alarm icon will appear at the specified time.


1. Open the shortcuts panel from the top of the screen (drag the bar down).
2. Select a reminder to view more details about the event.
3. To snooze or dismiss the reminder, select **Snooze all** or **Dismiss all**.

Memo

You can record important information to save and view later.

To create a memo:

1. In Idle mode, select **Applications** → **Memo**.
2. Select **Create memo** or press [] → **Create**.
3. Enter your memo text.

4. To change the background colour, select [] to close the keyboard and select a colour.
5. Select **Save**.

To view memos:

1. In Idle mode, select **Applications** → **Memo**.
2. Select a memo to view its details.






You can send the memo to others by tapping and holding the memo and selecting an option.

Voice Recorder

You can record memos with your phone's voice recorder and then set the voice memos as call or alarm ringtones.

To record a voice memo:

1. In Idle mode, select **Applications** → **Voice Recorder**.
2. Select  to start recording.

3. Speak into the microphone.
4. When you are finished, select .
5. To record more voice memos, select  at the bottom of the screen.

To play a voice memo:

1. In Idle mode, select **Applications** → **Voice Recorder**.
2. Select the voice memo that you want to play.



You can send the voice memo to others by tapping and holding a voice memo and selecting **Share**.

web

Internet


You can access and bookmark your favourite web pages.


















- You might incur additional charges for accessing the web and downloading media. For details, contact your service provider.
- Available functions can vary depending on your region.

To browse web pages:



1. In Idle mode, select **Browser**. The preset homepage opens.
To access a specific web page, select the URL input field, enter the web address (URL) of the web page and select **Go**.
2. Navigate web pages by tapping links or entering the web address of the web page that you want to access.

You can also select  to open a list of saved bookmarks, frequently visited pages, and recent internet history.

While browsing web pages, you can use the following options:

- **Zoom in or out:** Touch and drag your finger on the screen and then select  or . You can also place two fingers on the screen and slowly pinch or spread them apart to zoom in or out.
- [] → **New window:** Open a new browser window.
- [] → **Brightness Setting:** Adjust the brightness of the screen. This feature might be unavailable in your region.
- [] → **Windows:** View the currently active windows. You can open multiple pages and switch back and forth between them.
- [] → **Refresh:** Reload the current web page.
- [] → **Forward:** Go to the next page in history.
- [] → **More** → **Add bookmark:** Bookmark the current web page.
- [] → **More** → **Find on page:** Search for text on the web page.
- [] → **More** → **Select text:** Select text on the web page. Highlight the text with your finger. The highlighted text is copied to the clipboard and you can paste it in a different location.
- [] → **More** → **Page info:** View the web page details.
- [] → **More** → **Share page:** Send the web address (URL) of the web page to others.
- [] → **More** → **Add RSS feeds:** Add an RSS feed. You can read RSS feeds using Google Reader.
- [] → **More** → **Downloads:** View the download history.
- [] → **More** → **Settings:** Customize the browser settings.

To bookmark your favourite web pages:


1. In Idle mode, select **Browser**.
2. Select  → **Bookmarks**.
3. Select **Add**.
4. To bookmark the web page you were viewing, press [] → **Bookmark last-viewed page**. To bookmark a different address, enter the page title and web address (URL).
5. Select **OK**.

In the bookmark list, tap and hold a bookmark to access the following options:


- **Open:** Opens the web page.
- **Open in new window:** Open the web page in a new window.
- **Edit bookmark:** Edit the bookmark details.

- **Add shortcut to Home:** Add the bookmark shortcut to the Idle screen.
- **Share link:** Send the web address (URL) of the web page to others.
- **Copy link URL:** Copy the web address (URL) of the web page.
- **Delete bookmark:** Delete the bookmark.
- **Set as homepage:** Use the web page as the homepage in the browser.

To add an RSS feed address:

1. In Idle mode, select **Browser**.
2. Open a web page that has an RSS feed.
3. Press [] → **More** → **Add RSS feeds**.
4. Select the RSS feed that you want to add.
5. Select **OK** to open Google Reader and view the RSS feed.

To access frequently visited pages or the recent history:


1. In Idle mode, select **Browser**.
2. Select  and then select **Most visited** or **History**.
3. Select the web page that you want to access.



You can add a web page to the bookmark list by selecting the star icon on the right side of the screen.

Google Search

You can search for information from websites using the Google Search service. The Google Search bar is added to your Idle screen by default.

1. In Idle mode, select the Google Search bar.
2. Enter one or more keywords and select .
The phone opens the Google website and performs the search.

Layar

Layar allows you to browse locations for real-time local information or maps using the camera in your phone and to share the information with others.

In Idle mode, select **Applications** → **Layar** and follow the on-screen instructions. This feature might not be available in your region.

Google Maps™

You can use Google Maps to find your location, search the online map for streets, cities, or countries, and get directions.





- This feature might not be available in your region.
- To use Google Maps, you must select **Settings** → **Location and security** → **Use wireless networks** or **Use GPS satellites**.


To change the map view:

1. In Idle mode, select **Applications** → **Maps**.


To search the map:



1. In Idle mode, select **Applications** → **Maps**.
2. Drag your finger on the screen to scroll through the map.
3. To zoom in or out, select  or .

To find your location:



1. In Idle mode, select **Applications** → **Maps**.
2. Press [My Location.

To search for a specific location:

1. In Idle mode, select **Applications** → **Maps**.
2. Press [Search.
3. Use one of the following methods:



- Enter the address and select .
- Enter the category of the business and select .
- Select an address you have visited from the list.

To get directions to a specific destination:


1. In Idle mode, select **Applications** → **Maps**.
2. Press [Directions.
3. Enter the addresses of the starting location and the ending location.
To enter an address from your contact list or to point to a location on the map, select  → **My current location**, **Contacts**, **Point on map** or **Starred items** (only appears if you have added stars to the map).
4. Select a travel method (car, bus, or walk) and select **Go**.
5. Select a travel route to view the details of your trip (if necessary).
6. Select **Show on map**.

To share your location using Google Latitude™:

You can share your location with your friends and view your friend's locations using Google Latitude™.

1. In Idle mode, select **Applications** → **Maps**.
2. Press [] → **Join Latitude**.
3. Press [] → **Add friends** and select an option.
4. Select the friends that you want to add or enter an email address and select **Add friends** → **Yes**.

When your friend accepts your invitation, you can share locations.

You can view the marks that indicate the locations of your friends by pressing [] → **See map**.

YouTube™

YouTube is a free online video streaming service. You can view and share videos using YouTube.

 


This feature might not be available in your region.

To watch videos on YouTube:

1. In Idle mode, select **Applications** → **YouTube**.
2. Select a video from the list.
3. Rotate the phone counter-clockwise to switch to the landscape view.

4. Control playback using the following keys:

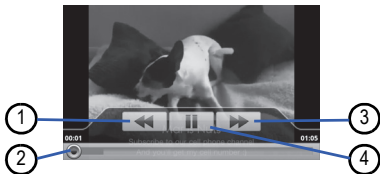


Number	Function
1	Scan backward in file.
2	Move to a point in the file by dragging the bar.
3	Scan forward in a file.
4	Pause playback or select ► to resume playback.

To share videos on YouTube:



1. In Idle mode, select **Applications** → **YouTube**.
2. Touch and hold a video.
3. Select **Share** and select an option.

Daily Briefing

You can get current weather, finance information, news, and schedule information from the web.

1. In Idle mode, select **Applications** → **Daily Briefing**.
2. Select  to update information.
3. Scroll left or right to view the various types of information.



To select the information displayed on the screen, press [] → .

Market

You can download games, ringtones, or other applications from the Android Market.



This feature might not be available in your region.

1. In Idle mode, select **Applications** → **Market**.
2. Search for a file and download it to the phone. ► p. 27

connectivity

Bluetooth

Bluetooth is a short-range wireless communications technology capable of exchanging information over a distance of about 10 metres without requiring a physical connection.

You do not need to line up the phones to beam information with Bluetooth. If the phones are within range of one another, you can exchange information between them even if they are located in different rooms.



- Samsung is not responsible for the loss, interception, or misuse of data sent or received using the Bluetooth wireless feature. Always ensure that you share and receive data with phones that are trusted and properly secured.
- If there are obstacles between the phones, the operating distance may be reduced.

- Some phones may not be compatible with your phone, especially those that are not tested or approved by Bluetooth SIG.

To turn on the Bluetooth wireless feature:

1. In Idle mode, select **Applications** → **Settings** → **Wireless and network** → **Bluetooth settings**. The preset homepage opens.
2. Select **Bluetooth** to turn on the Bluetooth wireless feature. A green check mark appears at the right side to indicate that it is turned on.

To find and pair with other Bluetooth-enabled phones:

1. In Idle mode, select **Applications** → **Settings** → **Wireless and network** → **Bluetooth settings** → **Scan devices**.
2. Select a device.


3. Enter a PIN for the Bluetooth wireless feature or the other phone's Bluetooth PIN, if it has one, and select **OK**. Alternatively, select **Accept** to match the PIN between your phone and the phone.

When the owner of the other phone enters the same PIN or accepts the connection, pairing is complete. If the pairing is successful, the phone will automatically search for available services.



Some phones, especially headsets and hands-free car kits, have a fixed Bluetooth PIN, such as 0000. If the other phone has a fixed PIN, you must enter it.

To send data using the Bluetooth wireless feature:

1. Select a file or item, such as a contact, calendar event, memo, or media file, from an appropriate application or from **My Files**.
2. Press [] → **Share**, **Send via**, or **Send namecard via** → **Bluetooth**.

3. Search for and pair with a Bluetooth-enabled phone.

To receive data using the Bluetooth wireless feature:

1. In Idle mode, select **Applications** → **Settings** → **Wireless and network** → **Bluetooth settings** → **Visible**.
Your phone is visible to other Bluetooth phones for 120 seconds.
2. When prompted, enter the PIN for the Bluetooth wireless feature and select **OK** (if necessary).
3. If necessary, select **Accept** to confirm that you are willing to receive data from the other phone.

Received data is saved to the appropriate application or to a folder according to its type. For example, a music or sound clip is saved to the sound folder and a contact to the phonebook.

Wi-Fi

You can use your phone's wireless networking capabilities to activate and connect to any wireless local area network (WLAN) compatible with the IEEE 802.11 b/g/n standards. You can connect to the internet or other network phones anywhere an access point or wireless hotspot is available.



Your phone uses non-harmonized frequency and therefore some countries might restrict the use of a WLAN.

To activate the WLAN feature:

1. In Idle mode, select **Applications** → **Settings** → **Wireless and network** → **Wi-Fi settings**.
2. Select **Wi-Fi** to turn on the wireless networking feature. A green check mark appears at the right side to indicate that it is turned on.



An active WLAN running in the background will consume battery power. To preserve battery power, only activate the WLAN when needed.

To find and connect to a WLAN:

1. In Idle mode, select **Applications** → **Settings** → **Wireless and network** → **Wi-Fi settings**. The phone will automatically search for available WLANs.
2. Select a network under **Wi-Fi networks**.
3. Enter a password for the network (if necessary).
4. Select **Connect**.

To add a WLAN manually:

1. In Idle mode, select **Applications** → **Settings** → **Wireless and network** → **Wi-Fi settings** → **Add Wi-Fi network**.

2. Enter the SSID for the network and select the security type.
3. Set the security settings depending on the selected security type.
4. Select **Save**.

To connect to a WLAN using a Wi-Fi Protected Setup (WPS):

Using WPS, you can connect to a secured network.

1. In Idle mode, select **Applications** → **Settings** → **Wireless and network** → **Wi-Fi settings**.
2. Select **WPS button connection**.
3. Press a WPS button on the access point within 2 minutes.

To connect to a WLAN with a WPS PIN:

1. In Idle mode, select **Applications** → **Settings** → **Wireless and network** → **Wi-Fi settings**.

2. Select a network indicated by the WPS icon and select **WPS PIN**.
3. On the access point, enter the PIN and press the start button.

AllShare

You can use the Digital Living Network Alliance (DLNA) service to share media files between DLNA-enabled phones over a WLAN.

You must first activate the WLAN feature and add a WLAN profile. ► p. 76

To customize DLNA settings for sharing media files:

To allow other DLNA-enabled phones to access media files on your phone, you must activate media sharing.



Some files may not play on the DLNA-enabled phones, depending on the phones.

1. In Idle mode, select **Applications** → **AllShare**.
2. Select **Settings**.
3. Adjust the following settings to customize the DLNA feature:

Option	Function
Media server name	Enter a name for your phone as a media server.
Share media	Turn on video sharing, image sharing or music sharing with other DLNA-enabled phones.
Access point network	Select a connection profile to use for DLNA connections.
Upload from other devices	Set whether or not to accept upload from other devices.
Default memory	Select the default memory location for saving downloaded media files.

To play your files on another DLNA-enabled phone:

1. In Idle mode, select **Applications** → **AllShare**.
2. Select **Play file from my phone on another player**.
3. Select a media category and then select a file.
4. Select **Add to playlist**.
5. Select a player to play the media file.
Playback begins on the selected player.
6. Control playback using the icons on your phone.



Playback might be buffered, depending on the network connection and the connected server.

To play others' files on your phone:

1. In Idle mode, select **Applications** → **AllShare**.
2. Select **Play file from server on my phone**.

Your phone automatically searches for DLNA-enabled phones.

3. Select a phone as the media server (the one that contains media files).
4. Select a media category and a file.
5. Control playback using the icons on your phone.

To play files from one phone on the other phone:

1. In Idle mode, select **Applications** → **AllShare**.
2. Select **Play file from server on another player via my phone**.

Your phone automatically searches for DLNA-enabled phones.

3. Select a phone to be the media server (the one that contains the media files).
4. Select a media category and a file.
5. Select a player (the one that will play the media file).

Playback begins at the selected player.

- Control playback using the icons on your phone.

TV Connections (TV Out Mode)

You can connect your phone to a TV and view the phone's interface on the TV screen.

- In Idle mode, select **Applications** → **Settings** → **Sound and display** → **TV out**.
- Select **TV out** to activate TV out mode.
- Select **TV system**.

- Select a video encoding system according to your region.

Option	Function
PAL	Australia, Austria, Belgium, China, Denmark, England, Finland, Germany, Italy, Kuwait, Malaysia, Netherlands, New Zealand, Norway, Singapore, Spain, Sweden, Switzerland, Thailand
NTSC	Canada, Japan, Korea, Mexico, Taiwan, USA

- Ensure that the TV is on and connect your phone to the TV with a TV out cable.
Match the colours at the ends of the TV out cable with those on the TV's A/V ports.
- Switch the TV to External input mode.

The phone interface appears on the TV screen.




- Your files might not display correctly due to differences in video systems or quality or the TV display.
- The Bluetooth stereo headset and zoom features will not work in TV out mode.

PC Connections

You can connect your phone to a PC in various USB connection modes: you can synchronize files with Windows Media Player, transfer data to and from your phone directly, or use the Samsung Kies program.

To connect with Samsung Kies:

Ensure that Samsung Kies is installed on your PC. You can download the program from the Samsung website (www.samsungmobile.com).

1. In Idle mode, select **Applications** → **Settings** → **Applications** → **USB settings** → **Kies (Firmware update)**.
2. Press [] to return to Idle mode.
3. Using an optional PC data cable, connect the multifunction jack on your phone to a PC.
4. Run Samsung Kies and use wireless connections or copy data and files.
Refer to the Samsung Kies help for more information.

To synchronize with Windows Media Player:

Ensure that Windows Media Player is installed on your PC.

1. In Idle mode, select **Applications** → **Settings** → **Applications** → **USB settings** → **Media player**.
2. Press [] to return to Idle mode.

3. Using an optional PC data cable, connect the multifunction jack on your phone to a PC on which Windows Media Player is installed.
When connected, a pop-up window will appear on the PC.
4. Open Windows Media Player to synchronize the music files.
5. Edit or enter your phone's name in the pop-up window (if necessary).
6. Select and drag music files to the sync list.
7. Start synchronization.

To connect as a mass storage phone:

You can connect your phone to a PC as a removable disk and access its file directory. If you insert a memory card into the phone, you can also access the file directory of the memory card by using the phone as a memory card reader.



The file directory of the memory card will appear as a removable disk, separate from the internal memory.

1. If you want to transfer files to or from a memory card, insert a memory card into the phone.
2. In Idle mode, select **Applications** → **Settings** → **Applications** → **USB settings** → **Mass storage**.
3. Using an optional PC data cable, connect the multifunction jack on your phone to a PC.
When connected, a pop-up window will appear on the PC.
4. Open the folder to view the files.

5. Copy files from the PC to the memory card.



To disconnect the phone from the PC, click the USB phone icon in the Windows task bar and select the option to safely remove the mass storage phone. Then disconnect the PC data cable from the PC. Otherwise, you might lose data stored on the memory card or damage the memory card.

tools

Clock

You can set and control alarms for important events and set various world clocks. You can also use the stopwatch and count-down timer.

To set a new alarm:

1. In Idle mode, select **Applications** → **Clock** → **Alarm**.
2. Select **Create Alarm** or press [] → **Create**.
3. Set the alarm details.
Select **Set as daily briefing** to activate the Daily briefing immediately after you stop the alarm (► p. 72).
4. When you are finished, select **Save**.




If you set **Smart alarm**, your phone will play a selected soft alarm sound and display the alarm screen for a preset period of time before the set alarm goes off.

To stop an alarm:

When an alarm sounds:

- Press and hold **Stop** to stop the alarm.
- Press and hold **Snooze** to repeat the alarm after a specified length of time.

To delete an alarm:

1. In Idle mode, select **Applications** → **Clock** → **Alarm**.
2. Press [] → **Delete**.
3. Select the alarms that you want to delete.
4. Select **Delete**.


To create a world clock:

1. In Idle mode, select **Applications** → **Clock** → **World clock**.
2. Select **Add city** or press [] → **Add**.
3. Enter a city name or select one from the city list.

To select a city in the world map view, select .

4. To add more world clocks, repeat steps 2 and 3.





To allow clock adjustment for daylight savings time, press [] → **DST settings**. Touch a clock to apply or remove DST adjustment.

To use the stopwatch:

1. In Idle mode, select **Applications** → **Clock** → **Stopwatch**.
2. Select **Start** to begin the stopwatch.
3. Select **Lap** to record lap times.
4. When you are finished, select **Stop**.
5. Select **Reset** to clear the recorded times.

To use the count-down timer:


1. In Idle mode, select **Applications** → **Clock** → **Timer**.


2. Set the length of time to count down.
3. Select **Start** to begin the countdown.
You can now use other functions with the timer counting down in the background. Press [] or [] and access another application.
4. When the timer expires, tap and hold **Stop** to stop the alert.

Calculator

You can perform mathematical operations directly on your phone, similar to using a hand-held or desktop calculator.

1. In Idle mode, select **Applications** → **Calculator**.
2. Perform the calculation.

To view the calculation history, select  to close the calculator keypad.

To clear the history, press [] → **Clear history**.

Mini Diary

You can keep a photo diary on your phone.


To create a Mini Diary:

1. In Idle mode, select **Applications** → **Mini Diary**.
2. If you are accessing the program for the first time, the Select city screen appears. Select **Add**, enter your location and select **Search**. Select the name of your location, select your location again to update weather information, then select **Save**.
3. Select **Create diary** to create a new entry.
4. To change the date of the entry, tap the date.
5. Select **Tap to add photo** and add an existing image or use the camera to capture a photo.
6. Select **Tap to create memo**, enter the text, and then select **Save**.
7. Select **Save**.

To view a Mini diary:

1. In Idle mode, select **Applications** → **Mini Diary**.
2. Select a diary.




To upload a mini diary to your community website, press [] → **Publish**.

My Files

You can quickly and easily access all of your images, videos, music, sound clips, and other types of files stored in your phone and on a memory card.

1. In Idle mode, select **Applications** → **My Files**.
2. Select a folder and then select a file.

In a folder, press [] to use the following options:

- **Share:** Share files with others via Picasa, Messaging, AllShare, Gmail, Bluetooth, or YouTube.



- **Create folder:** Create a new folder.
- **Delete:** Delete files or folders.
- **View by:** Change the view mode.
- **List by:** Sort files or folders.
- **More:** Use additional features when using a file, such as **Move, Copy, Rename, Bluetooth visibility, and Settings**.

ThinkFree Office

You can view and edit document files on a memory card inserted in your phone. If you have an account with the ThinkFree and Google Docs™ web services, you can manage documents online. This application supports the following file formats: .txt, .doc, .docx, .xls, .xlsx, .ppt, .pptx, and .pdf.


To create a new document:

1. In Idle mode, select **Applications** → **ThinkFree Office**.

2. If you are launching this application for the first time, select **Accept** to confirm activation. Select **Activate now** to activate the application on your phone.
3. Select **My Docs**.
4. Press [] → **New** and select a document type.
5. Enter a name for the document and select **OK**.
6. Enter contents in the document using the tools at the bottom of the screen.
7. When you have finished editing, select the Save icon on the toolbar or press [] → **File** → **Save**.

To view and edit a document on your phone:

1. In Idle mode, select **Applications** → **ThinkFree Office**.
2. Select **My Docs** and then select a document.
3. Select a text encoding type (if necessary).
4. View and edit the document.

- To move between pages or pan through the document, scroll in the corresponding direction.
 - To open the toolbar to edit the document (word, text, or excel file), press [] → **Edit**.
5. When you have finished editing, save the document.

To manage documents online:

1. In Idle mode, select **Applications** → **ThinkFree Office**.
2. Select **Online**.
3. Enter your username and password to access your account and then select **Sign in**.
4. View and manage your documents on the server.

Write and Go

You can enter text and send it as a message, upload it to a community website, or save it as a memo or calendar event.

1. In Idle mode, select **Applications** → **Write and Go**.

2. Enter text using the text input panel.
3. When you are finished, select one of the options:
 - **Send message:** Send a text message containing the entered text.
 - **Update status:** Upload the text to a community website.
 - **Save:** Save the text as a calendar event or memo.Follow the onscreen instructions to send a message, log into a community service to upload the text, or create a memo or event.

Voice Dialer

You can dial a number or open an application by voice.



- This feature might not be available in your region.
- Recognized languages might vary depending on your region.

To call a contact by voice dialing:

You can call numbers directly by saying the contact's name or number.

1. In Idle mode, select **Applications** → **Voice Dialer**.
2. Say "**Call**" or "**Dial**" and then say a name or a phone number. To redial the last dialed number, say "**Redial**".
3. Press **OK** to confirm the operation or select the correct operation from the confirmation list. The phone dials the selected number.

To open an application:

1. In Idle mode, select **Applications** → **Voice Dialer**.
2. Say "**Open**" and then say the name of an application.
3. Press **OK** to confirm the operation. The phone opens the corresponding application.

GPS Navigator

You can use your phone as a GPS device to access driving directions and other services.

1. In Idle mode, select **Applications** → **Navigation**.
2. Follow the onscreen instructions.

Samsung Apps

Samsung Apps allows you to easily download an abundance of useful applications to your phone and to keep them updated. Featuring a wealth of games, news, reference, social networking, widgets, health related applications, and more, Samsung Apps gives you instant access to a huge selection of mobile experiences.

- To launch Samsung Apps, in Idle mode, select **Applications** → **Samsung Apps**.

- To launch widgets, tap and hold the empty area on the idle screen and select **Samsung Widgets** from the list.
- To launch downloaded applications, in Idle mode, select **Applications** and then select the required application.
- To use Samsung Apps, your phone must be connected to the internet using a cellular connection or Wi-Fi.

All Samsung Apps applications are made available to you subject to the Samsung Apps Terms and Conditions (<http://www.samsungapps.com/common/term.as>) and Samsung Account Terms and Conditions (<http://www.samsungapps.com/common/terms4account.as>). Please read through these and ensure you understand the basis on which these applications are provided to you. Samsung may collect personal information from you in order to deliver the applications to your device. This is done in accordance with the Samsung Apps privacy policy (<http://www.samsungapps.com/common/privacy.as>). In order to receive any of the applications, you must select the

"Accept" button indicating that you agree to the terms and conditions and the use of your personal data in accordance with the privacy policy.



- You might incur additional charges when accessing the internet or downloading applications.
- Available applications, widgets, and updates might differ depending on your region.

settings

Settings

To access the Settings menu:

1. In Idle mode, select **Applications** → **Settings**.
2. Select a setting category and then select an option.

Wireless and network

Change the settings for wireless network connections.

Flight mode

Disable all wireless functions on your phone. You can only use non-network services.

Wi-Fi settings

- **Wi-Fi:** Turn the WLAN feature on or off. ► p. 76
- **Network notification:** Set the phone to notify you when an open network is available.

- **WPS button connection:** Connect to a WLAN using a Wi-Fi Protected Setup (WPS) button.
- **Add Wi-Fi network:** Add WLAN APs manually.

Mobile AP settings

Set your device as an wireless AP (Access Point) to connect to the internet on other network devices.

Bluetooth settings

- **Bluetooth:** Turn the Bluetooth wireless feature on or off.
▶ p. 74
- **Device name:** Set a Bluetooth name for your phone.
- **Visible:** Set your phone to be visible to other Bluetooth phones.
- **Scan devices:** Search for available Bluetooth devices.

VPN settings

Set up and manage Virtual Private Networks (VPNs).

Mobile networks

- **Data roaming:** Set the phone to connect to another network when you are roaming or when your home network is not available.
- **Access Point Names:** Set up access point names (APNs).
- **Network Mode:** Select whether phone can access GSM/HSPA (auto mode), GSM only, or HSPA only.
- **Network operators:** Search for available networks and select a network for roaming.

Call settings

Customize the settings for calling features.

All calls

- **Show my number:** Show your mobile phone number to recipients. (You must insert the SIM card to use this feature.)
- **Auto reject:** Enable or disable the auto reject feature and specify a list of callers to automatically reject.
- **Answering call:** Set how to answer calls by pressing any key or set the phone to answer automatically after a specified amount of time.
- **Prefix dialing:** Activate prefix dialing and set up prefix dialing numbers.
- **Reject call with message:** Select a message to be sent to a caller when you reject a call.
- **Call status tones:** Activate or deactivate the call connect tone or minute minder tone.
- **Alerts on call:** Activate or deactivate alerts during a call.

Voice call

- **Call forwarding:** Divert incoming calls to another number.
- **Call barring:** Block incoming or outgoing calls.
- **Call waiting:** Specify options for handling an incoming call when you are already on a call.
- **Auto redial:** Activate auto redial to automatically redial a call that was not connected or was cut off during a call.
- **Noise suppression:** Automatically reduce noise level during a call.

Fixed Dialing Numbers

- **Enable FDN:** Restrict outgoing calls only to contacts specified in the FDN list. To activate or deactivate this feature, enter the PIN2 supplied with your SIM card and restart the device.
- **Change PIN2:** Change the PIN2.

- **FDN List:** Set up a list of contacts for fixed dialing.

Voicemail

- **Voicemail service:** Select your service provider or set another provider to receive voicemails.
- **Voicemail:** Enter the number to access the voicemail service. You can obtain this number from your service provider.

Sound and display

Change the settings for various sounds on your phone and for the display.

- **Silent mode:** Activate silent mode to mute all sounds, except for media sounds and alarm ringtones.
- **Ringer volume:** Set the default volume of the call and notification ringtones.

- **Media volume:** Set the default volume for music and videos.
- **System volume:** Set the default volume for touch feedback sound and power on/off sound.
- **Voice call ringtone:** Select a ringtone to alert you to incoming voice calls.
- **Phone vibrate:** Set the phone to vibrate to alert you to incoming calls.
- **Notification ringtone:** Select a ringtone to alert you to events, such as incoming messages, missed calls, and alarms.
- **Audible touch tones:** Set the phone to sound when you touch the keys on the dialling screen.
- **Audible selection:** Set the phone to sound when you select an application or option on the touch screen.
- **Haptic feedback:** Set the phone to vibrate when you touch the keys.

- **Vibration intensity:** Adjust the vibration intensity of the haptic feedback.
- **SD card notifications:** Set the phone to sound when a memory card is recognized.
- **Font style:** Change the font type for the display text. You can download fonts from Android Market by selecting **Get fonts online**.
- **Orientation:** Set whether or not to rotate the content automatically when the phone is rotated.
- **Animation:** Set the phone to display animation when you switch between windows.
- **Brightness:** Set the brightness of the display.
- **Screen timeout:** Set the length of time the phone waits before turning off the display's backlight.
- **Power saving mode:** Activate Power saving mode. In Power saving mode, the phone saves power by adjusting the white balance on the display and the brightness level.

- **TV out:** Select a video encoding system for your TV for proper TV connections. ► p. 80

Location and security


Change the settings for securing your phone, and the SIM card, and GPS functionality.

- **Use wireless networks:** Set the phone to use wireless networking for checking locations, if supported in an application.
- **Use GPS satellites:** Enable the GPS functionality for checking locations, if supported in an application. You can view locations at street level by using the GPS.
- **Set unlock pattern:** Set an unlock pattern to unlock the phone. ► p. 22
- **Require pattern:** Set the phone to require the unlock pattern each time you turn it on. By doing this, you can prevent unauthorized people from unlocking the phone.

- **Use visible pattern:** Set the unlock pattern to be visible or invisible as you draw it.
- **Use tactile feedback:** Set the phone to vibrate when you tap and draw the unlock pattern.
- **Set up/Change password:** Create and confirm a new password for accessing credentials.
- **Set up SIM card lock:**
 - **Lock SIM card:** Lock your SIM card by activating the PIN requirement. You need to enter the PIN supplied with your SIM card.
 - **Change SIM PIN:** Change the PIN used to access your SIM card.
- **Visible passwords:** By default, the phone displays your password as ● for security. Set the phone to display your password as you enter.
- **Use secure credentials:** Use certificates and credentials to ensure secure use of various applications.
- **Install encrypted certificates:** Install encrypted certificates that are stored on a memory card.
- **Set password:** Create and confirm a password for accessing credentials.
- **Clear storage:** Erase the credential contents from the phone and reset the password.

Applications

Change the setting for managing installed applications.

- **Unknown sources:** Select to download applications from any source. If you do not select this option, you can only download applications from the Android Market.
- **Manage applications:** Access the list of the applications installed on the phone and check the application information. To view the applications that are currently running or third-party applications installed additionally, press [] → **Filter** → **Running**, **Third-party**, or **All**.

- **Running services:** View the services that are currently running on the phone and manage them.
- **Development:**
 - **USB debugging:** Select to use debug mode when you connect your phone to a PC by using a PC data cable. This is used for application development.
 - **Stay awake:** Set the phone's screen to stay on while charging the battery.
 - **Allow mock locations:** Allow mock locations and service information to be sent to a Location Manager service for testing. This is for application development.
- **Samsung Apps:** Select a network connection to get application update notification from Samsung Apps (Wi-Fi or packet switched data network).
- **USB settings:** You can connect your phone to a PC with an optional PC data cable in various USB connection modes.
 - **Kies (Firmware update):** Transfer files using the Samsung Kies program.
 - **Media player:** Transfer files using Windows Media Player.
 - **Mass storage:** Transfer files directly to and from the phone.
 - **Ask on connection:** Allows you to choose a file transfer method when the phone is connected to a PC.

Accounts and sync

Change the settings for the auto sync feature or manage accounts for synchronization.

- **Background data:** Select this setting to use the auto sync feature. The auto sync will run in the background without opening applications and synchronize data.
- **Auto-sync:** Set the phone to automatically synchronize contact, calendar, and email data.

Privacy

Change the settings for managing your settings and data.

- **Use my location:** Set the phone to use your current location for Google services.
- **Factory data reset:** Reset your settings to the factory default values.

SD card and phone storage

Check used and available storage space for an External SD card, your phone's internal mass storage ("Internal SD card"), and internal phone storage.

- **External SD card**
 - **Total space:** View the total amount of storage space.
 - **Available space:** View the amount of available storage space.
- **Internal SD card**
 - **Total space:** View the total amount of storage space.
 - **Available space:** View the amount of available storage space.
 - **Unmount SD card:** Unmount the external or internal SD card before formatting.
 - **Format SD card:** Format the external or internal SD card.
- **Internal phone storage**
 - **Available space:** View the amount of available storage space.

Search

Change the Web search settings.

- **Google search settings:**
 - **Show web suggestions:** Set the phone to display suggestions while you are entering a keyword.
- **Searchable items:** Select the types of items to include in your search.
- **Clear search shortcuts:** Clear the information from recent searches.

Locale and text

Change the settings for text input.

Select locale

Select a display language for all menus and applications, and a writing language for all text editors.

Select default keyboard

Select your preferred method of inputting text (**Swype** or the **Samsung keypad**).

Swype

- **Language:** Select a language for Swype text input.



You cannot enter text in some languages using Swype. To enter text, change the writing language to one of the supported languages.

- **Word Prediction:** the program predicts word when typing.
- **Audio feedback:** sounds provide audible feedback.
- **Vibrate on keypress:** vibration provides physical feedback.
- **Enable Tip Indicator:** turn on flashing indicator for quick help.

- **Auto-spacing:** Set the phone to automatically insert a space between words.
- **Auto-capitalization:** Set the phone to automatically capitalize the first letter after a final punctuation mark, such as a period, question mark, or exclamation mark.
- **Show complete trace:** Set how long the screen displays your Swype path.
- **Word Choice Window:** Set how often the word list will display.
- **Speed vs. Accuracy:** Set the balance between speed and error tolerance.
- **Swype help:** Access help information for using the Swype keyboard.
- **Tutorial:** Learn how to enter text faster with the Swype keyboard.
- **Version:** View the version information.

Samsung keypad

- **Keypad types:** Select the default input method, such as the QWERTY keypad, 3x4 keypad, Handwriting box 1, Handwriting box 2.
- **Writing language:** Select a language for text input.



You cannot enter text in some languages. To enter text, you should change the writing language to one of the supported languages.

- **XT9:** Activate XT9 mode to enter text using Predictive input mode.
- **XT9 advanced settings:** Activate the advanced features of XT9 mode and set up your own word list.
- **Keypad sweeping:** Enable the sweeping feature for the keypad input method. You can enter text by sweeping keys instead of tapping.

- **Auto-capitalization:** Set the phone to automatically capitalize the first letter after a final punctuation mark, such as a period, question mark, or exclamation mark.
- **Handwriting settings:** Customize the settings for recognition time and view details of the handwriting software.
- **Tutorial:** Learn how to enter text with the Samsung keypad.

Accessibility

Lets you enable and disable downloaded accessibility applications.



Requires downloading an accessibility application before this menu option is available.

Text-to-speech

Change the settings for the text-to-speech feature that reads aloud text from messages or applications that support the feature.

- **Listen to an example:** Listen to the spoken text for an example.
- **Install voice data:** Download and install voice data for the text-to-speech feature.
- **Driving mode:** Set the phone to read verbal notifications for incoming calls, messages, or event details.
- **Always use my settings:** Default settings override application settings.
- **Speech rate:** Select a speed at which text is spoken.
- **Language:** Select a language for the spoken text.

Date and time

Access and alter the following settings to control how time and date are displayed on your phone:

- **Automatic:** Automatically update the time using network-provided values.
- **Set date:** Set the current date manually.
- **Select time zone:** Set your home time zone.
- **Set time:** Set the current time manually.
- **Use 24-hour format:** Set to the time to be displayed in 24-hour format.
- **Select date format:** Select a date format.

About phone

Access information about your phone, check the phone's status, and learn how to use your phone.

troubleshooting

If you are having trouble with your mobile phone, try these troubleshooting procedures before contacting a service professional.

When you turn on your phone or while you are using the phone, it prompts you to enter one of the following codes:

Code	Try this to solve the problem:
Password	When the phone's lock feature is enabled, you must enter the password that you set for the phone.
P N	When using the phone for the first time or when the PIN requirement is enabled, you must enter the PIN supplied with the S M card. You can disable this feature using the Lock SIM card menu.

Code	Try this to solve the problem:
PUK	Your SIM card is blocked, usually as a result of entering your PIN incorrectly several times. You must enter the PUK supplied by your service provider.
PIN2	When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM card. For details, contact your service provider.

Your phone displays “Service unavailable” or “Network error”

- When you are in areas with weak signals or poor reception, you might lose reception. Move to another area and try again.
- You cannot access some options without a subscription. Contact your service provider for more details.

The touch screen responds slowly or improperly

If the touch screen is not responding properly, try the following:

- Remove any protective covers from the touch screen. Protective covers might prevent the phone from recognising your inputs and are not recommended for touch screen phones.
- Ensure that your hands are clean and dry when tapping the touch screen.

- Restart your phone to clear any temporary software bugs.
- Ensure that your phone's software is upgraded to the latest version.
- If the touch screen is scratched or damaged, take it to your local Samsung Service Centre.

Your phone freezes or has fatal errors

If your phone freezes or hangs, you might need to close programs or reset the phone to regain functionality. If your phone is frozen and unresponsive, press and hold [ⓘ] for 8-10 seconds. The phone will reboot automatically.

If this does not solve the problem, perform a factory data reset. In Idle mode, select **Applications** → **Settings** → **Privacy** → **Factory data reset** → **Reset phone** → **Erase everything**.

Calls are being dropped

When you are in areas with weak signals or poor reception, you might lose your connection to the network. Move to another area and try again.

Outgoing calls are not connected

- Ensure that you have pressed the Dial key.
- Ensure that you have accessed the correct cellular network.
- Ensure that you have not set call barring for the phone number you are dialling.

Incoming calls are not connected

- Ensure that your phone is turned on.
- Ensure that you have accessed the correct cellular network.
- Ensure that you have not set call barring for the incoming phone number.

Others cannot hear you speaking on a call

- Ensure that you are not covering the built-in microphone.
- Ensure that the microphone is close to your mouth.
- If using a headset, ensure that it is properly connected.

Audio quality is poor

- Ensure that you are not blocking the phone's internal antenna.
- When you are in areas with weak signals or poor reception, you might lose reception. Move to another area and try again.

When dialling from contacts, the call is not connected

- Ensure that the correct number is stored in the contact list.
- Re-enter and save the number, if necessary.
- Ensure that you have not set call barring for the contact's phone number.

The phone beeps and the battery icon flashes

- Your battery is low. Recharge or replace the battery to continue using the phone.

The battery does not charge properly or the phone turns off

- The battery terminals might be dirty. Wipe both gold-coloured contacts with a clean, soft cloth and try charging the battery again.
- If the battery will no longer charge completely, dispose of the old battery properly and replace it with a new battery (refer to your local bylaws for proper disposal instructions).

Your phone is hot to the touch

When you use applications that require more power or use applications on your phone for an extended period of time, your phone may feel hot to the touch. This is normal and should not affect your phone's lifespan or performance.

Error messages appear when launching the camera

Your Samsung phone must have sufficient available memory and battery power to operate the camera application. If you receive error messages when launching the camera, try the following:

- Charge the battery or replace it with a battery that is fully charged.
- Free some memory by transferring files to a PC or deleting files from your phone.
- Restart the phone. If you are still having trouble with the camera application after trying these tips, contact a Samsung Service Centre.

Error messages appear when opening music files

Some music files might not play on your Samsung phone for a variety of reasons. If you receive error messages when opening music files on your phone, try the following:

- Free some memory by transferring files to a PC or deleting files from your phone.
- Ensure that the music file is not Digital Rights Management (DRM)-protected. If the file is DRM protected, ensure that you have the appropriate license or key to play the file.
- Ensure that your phone supports the file type.

Another Bluetooth device is not located

- Ensure that the Bluetooth wireless feature is activated on your phone.
- Ensure that the Bluetooth wireless feature is activated on the device that you wish to connect to, if necessary.
- Ensure that your phone and the other Bluetooth device are within the maximum Bluetooth range (10 metres).
- If the tips above do not solve the problem, contact a Samsung Service Centre.

A connection is not established when you connect the phone to a PC

- Ensure that the PC data cable you are using is compatible with your phone.
- Ensure that you have the proper drivers installed and updated on your PC.

health and safety information

Comply with the following precautions to avoid dangerous or illegal situations and to ensure peak performance of your mobile phone.

Getting the Most Out of Your Reception

Keeping Tabs on Signal Strength

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal. If you're inside a building, being near a window may give you better reception.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Knowing Radio Frequency Safety

The design of your phone complies with updated NCRP standards described below. In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Maintaining Your Phone's Peak Performance

There are several simple guidelines for operating your phone properly and maintaining safe, satisfactory service.

- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it's inoperable, return it to a dealer store or call Customer Support for service.



For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

Safe Use of and Access to Your Phone

Failure to follow the instructions outlined may lead to serious personal injury and possible property damage.



Excessive exposure to sound at high volumes can cause hearing damage. Always turn the volume down before plugging the headphones into an audio source and use only the minimum volume setting necessary to hear your conversation or music.

Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free phone) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

When using your phone in the car:

- Get to know your phone and its features, such as speed dial and re-dial.

- When available, use a hands-free phone.
- Position your phone within easy reach.
- Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.
- Do not take notes or look up phone numbers while driving.
- Dial sensibly and assess the traffic; if possible, place calls when stationary or before pulling into traffic.
- Do not engage in stressful or emotional conversations that may divert your attention from the road.
- Dial 911 to report serious emergencies. It's free from your wireless phone.
- Use your phone to help others in emergencies.
- Call roadside assistance or a special non-emergency wireless number when necessary.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems and/or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check

with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical phones, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.



Always turn off the phone in health care facilities and request permission before using the phone near medical equipment.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn off your phone when in a blasting area or in other areas with signs indicating that two-way radios should be turned off. Construction crews often use remote-control RF phones to set off explosives.

Turn off your phone when you are in an area with a potentially explosive atmosphere. Although it is rare, your phone or its accessories could generate sparks. Sparks could cause an explosion or a fire resulting in bodily injury or even death. These areas are often, but not always, clearly marked. These areas include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust or metal powders.

- Any other area where you would normally be advised to turn off your vehicle's engine.



Never transport or store flammable gas, liquid or explosives in the compartment of your vehicle that contains your phone or accessories.

Turning Off Your Phone During Thunderstorms

Do not use your phone during a thunderstorm. Your phone may malfunction and your risk of electric shock is increased.

Restricting Children's Access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone, dial 911 by mistake or make calls that increase your phone bill.

Warning Regarding Display

The display on your handset is made of glass or acrylic and could break if your handset is dropped or if it receives significant impact. Do not use if screen is broken or cracked as this could cause injury to you.

UL Certified Travel Adapter

The Travel Adapter for this phone has met applicable UL safety requirements. Please adhere to the following safety instructions per UL guidelines.

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE. IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS. DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS. FOR CONNECTION TO A SUPPLY NOT IN NORTH AMERICA, USE AN

ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET. THIS POWER UNIT IS INTENDED TO BE CORRECTLY ORIENTATED IN A VERTICAL OR HORIZONTAL OR FLOOR MOUNT POSITION.

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Use only Samsung approved batteries and desktop chargers. These chargers are designed to maximize battery life. Using other batteries or chargers voids your warranty and may cause damage.
- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).

- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. When used correctly, the battery can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month:

-4° F to 140° F (-20° C to 60° C)

More than one month:

-4° F to 113° F (-20° C to 45° C)

Disposal of Lithium Ion (Li-ion) Batteries

For safe disposal options of your Lilon batteries, contact your nearest service center.



Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.



For safety, do not handle a damaged or leaking Lilon battery.

Special Precautions and Industry Canada Notice

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment, and void your authority to operate this

equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Information to User

This equipment has been tested and found to comply with the limits of a Class B digital phone, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful

interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient / relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rates (SAR)

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not

represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the 896 are:

GSM850: Head: 0.38 W/Kg; Body-worn: 0.70 W/Kg

GSM1900: Head: 0.23 W/Kg; Body-worn: 0.49 W/Kg

UMTS V: Head: 0.38 W/Kg; Body-worn: 0.36 W/Kg

UMTS II: Head: 0.42 W/Kg; Body-worn: 0.44 W/Kg

2.4 GHz WLAN: Head: 0.36 W/Kg; Body-worn: 0.08 W/Kg

Owner's Record

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: **SGH-I896**

Serial No.:

warranty information

Standard Limited Warranty

What is Covered and For How Long?

SAMSUNG Electronics Canada Inc. ("SAMSUNG") warrants to the original purchaser ("Purchaser") that SAMSUNG's phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Leather Case	90 Days
Holster	90 Days
Other Phone Accessories	1 Year

What is Not Covered? This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product; or (g) Product used or purchased outside Canada.

This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if: (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery; (ii) any of the seals on the battery are broken or show evidence of tampering; or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations? During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to

deliver the Product, call Samsung Customer Care at 1-800-Samsung. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product.

Repaired/replaced leather cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG. If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

What Are the Limits On SAMSUNG's Liability? EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE

PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- WARRANTIES OF TITLE OR NON-INFRINGEMENT;
- DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;
- THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL,

CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND SHALL BE PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED

WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS.

THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR

OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Samsung Electronics Canada, Inc.

©2010 Samsung Electronics Canada, Inc. SAMSUNG is a registered trademark of Samsung Electronics Co., Ltd. and its related entities.

No reproduction in whole or in part allowed without prior written approval.

Specifications and availability subject to change without notice.

index

AllShare 78

Android Market 27

Download 28

Uninstall 28

Animation 22

Applications

Access 20

Battery

Charging 6

Installing 3

Bluetooth 74

Activating 75

Connect to other devices 75

Receive data 76

Send data 75

Brightness 22

Calculator 86

Calendar 63

Call barring 35

Call forwarding 35

Call waiting 35

Calls

Answering 32

Auto rejection 34

Call logs 36

From Contacts 32

International 32

Making 31

Missed 34

Options during voice call 33

Reject 32

Use headset 33

Camcorder

Capture video 51

Settings 52

Camera

Action shot 48

Beauty photo 47

Capture photo 43

- Cartoon mode 49
- Frame guide 47
- Panoramic photo 46
- Preset options for scenes 45
- Series of photos 45
- Settings 49
- Smile shot mode 46
- Vintage photo 47

Clock

- Alarm 84
- Smart alarm 84
- Stopwatch 85
- Timer 85
- World clock 85

Contacts

- Find 61
- Group 62

- Import/Export 61
- Namecard 61

Current date and time 21

Daily Briefing 72

Data

- Synchronise automatically 30
- Synchronise manually 30
- Synchronize 29

Email 39

Enter Text 24

Flight mode 92

Gallery 54

- Share 56
- View photo 55
- View video 55

Google Latitude 71

Google Mail 38

Google Maps 69

Google Search 69

Google Talk 41

GPS Navigator 90

Idle Screen

- Add items 18
- Add/remove panels 20
- Move items 19
- Remove items 19

Indicator Icons 14

Internet 66

- Bookmark 68
- Browse 66

- History 69
- Layar 69
- Mass Storage 82
- Memo 64
- Memory Card 8
 - Format 9
 - Insert 8
 - Remove 9
- Messages
 - Sending multimedia 37
 - Sending text 36
 - Viewing multimedia 37
 - Viewing text 37
- Mini Diary 86
- Music Player 56
 - Add music files 56
 - Copy music files 57
 - Play music files 57
 - Playlist 58
 - Quick list 58
 - Settings 58
- My Files 87
- Namecard 61
- PC Data Cable 7
- Phone
 - Back 13
 - Customize 21
 - Front 11
 - Turn On/Off 16
- Ringtone
 - Change 22
- Volume 21
- Samsung Apps 90
- Samsung keypad 25
- Samsung Kies 81
- Settings
 - About Phone 103
 - Accessibility 102
 - Accounts 98
 - Applications 97
 - Bluetooth 93
 - Calls 94
 - Date and Time 103
 - Flight mode 92
 - Locale 100
 - Location 96
 - Mobile networks 93

- Privacy 99
- Samsung keypad 101
- SD Card & Phone Storage 99
- Search 100
- Security 96
- Sound 95
- Swype 100
- Text-To-Speech 102
- Voicemail 95
- VPN 93
- Wi-Fi 92
- Shortcuts Panel 19
- Silent mode 21
- SIM card 3
 - Lock 23
- Social Hub 42

- Speed Dial Number 61
- Swype 24
- Text
 - Copy 26
 - Entering 24
 - Paste 26
 - Samsung keypad 25
 - Swype 24
- ThinkFree Office 87
- Touch Screen
 - Control 17
 - Lock/Unlock 18
- Touch tone 21
- Travel Adapter 6
- TV Out 80

- Unlock Pattern 22
- Video Player 53
 - Play 54
- Voice Dialer 89
- Voice Mail
 - Accessing 27
 - From Another Phone 27
- Voice Recorder 64
- Voicemail 37
- Volume
 - Ringtone 21
- Wallpaper 22
- Web
 - Download 28
- Wi-Fi 76

Connect 77

WLAN 76

Windows Media Player 81

WLAN 76

Write and Go 88

YouTube 71