

User's Manual

Xpad 82

User's Manual

Attention

This handbook contains important security measures and the correct use of the product information, in order to avoid accidents. Pls make sure to reading the manual carefully before use the device.

- Please don't be in high temperature, moisture or very dust place
- Please don't be in high temperature, Especially in summer don't put the device in the car when Windows closed.
- Avoid fall or Violent collision of the device, don't make the TFT display screen were violent tremor, This could cause TFT display screen abnormal or damage.
- Please choose the appropriate volume, Use headphones should not be too big volume, If feel tinnitus, Lower the volume or stop using it please charge In the following condition,

A. The battery power ICONS shows have no power

B. The system automatically shut off, startup after power off soon

C. Operation buttons no response

 
- When the device in the format or ongoing upload and download file, please don't suddenly disconnect, This could cause application error.
- For those who because of damage to the product, repair, or other causes of erased the memory, The company shall not be liable for any responsibility, please follow the user manual for the standardized operation to use the device.
- Don't disassemble the product, don't use alcohol. Thinner or benzene to scrubbing products
- Don't use the device one of the place of prohibit to use electronic equipment in regional (such as the plane)
- Please don't using the Tablet PC when you in driving or walking down the street, USB just only be used for data transmission

USER'S MANUAL

The company reserves the right to improve product, products specification and design have any change, The information is subject to changes without prior notice. (This tablet is no waterproof function)

Remark! All pictures in this manual is just for your reference. products specification and design have any change, The information is subject to changes without prior notice.

Appearance and button

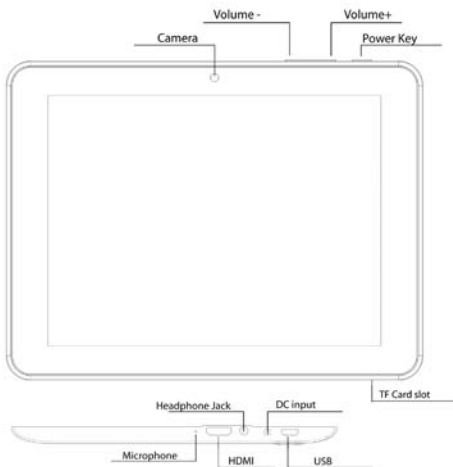

Touch panel

8" Capacitive touch panel: In The Operation, to click dragging on the touch panel

POWER

Startup: Long Press and hold the power button, the system will enter the main interface

Shutdown: In the main menu interface, Press the power button about 5 second to shutdown, The system can hint "power off" option, Click "ok". you can safely shut down.

Lock screen: Short press Power button to lock screen or unlock screen.

Remark!

1. When power is empty, system will shut down automatically.
2. Illegal turn off the device, restart will scan and restore the disk, it may take longer time to enter into system

Volume +, Volume-

The buttons on top Volume +, Volume-achieve changes in the volume.

Earphone jack

3.5 mm standard earphone jack

Video output interface – HDMI output interface

TF card – Slot for MicroSD card

Micro USB – you can use it to connect the computer for data transmission, charging and external connection USB flash drive

Remark!

Unless unable to shutdown, otherwise don't use the reset, suggest you to shutdown by normal, if no will easy to damage the machine system.

First use

Battery management and charge

Before first use, please set the device's battery is fully charged

Just need to connect the adaptor or USB interface, then you can charge

The first two times charging please keep about 6 hours, after that you just need 4 hours to charge.

Remark:

This tablet using Built-in type polymer battery, Charge must be to choose standard adaptor (Input: AC110~240V 50/60Hz Max: 180MA. Output: DC5.0~5.5V/1.5A), this device without supply DC charging, USB interface can charge, Choose USB interface to charger

During the charging, the battery icon will scroll

When finished charging, battery icon will become green and stop rolling

In order to prolong the service life of the machine, suggest use out battery power before charge it

Remark:

1. If you long time don't to use this Tablet, in order to avoid power consumption caused damage, pls charge/ play the battery once a month.

2. After low battery shut down, connect DC adaptor, device will remind low battery, charging, need to wait some time until the battery is enough power to enter into main menu.

3. Device charging should be in standby status for reach normal charging time.

Because with device and screen consumption, it may cause longer charging time.

Connection with PC

USB connection

Using USB to connect the MID and PC, the default connection mode is a synchronous mode. You can see this USB icon and then drag the status bar to drop, appeared the following interface:

Step 1:

 
 


Step 2:



USER'S MANUAL

Step 3: According to the above photo, please choose USB connected. Then you can see the following interface:

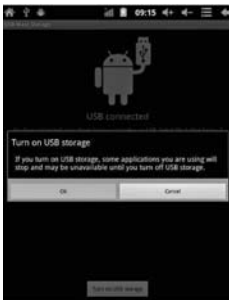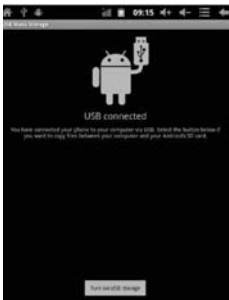

Step 4: Please press “turn on USB storage”. Then you will find the following photos:

Please choose “OK”. Then USB is connected. “USB is connected”: means external memory (SD) loading is completed, and you can see the corresponding letter in the PC terminal.

Use USB cable to connect device to PC, device will pop up the USB connection window, click Turn on USB storage to connect to PC

Equipment operation interface

Main interface describe

After startup will enter the main interface



In the main interface, you can:



USER'S MANUAL

Management main interface software ICONS: long press the icons 3 second, after the icons will bigger, then you can drag anywhere in the interface.

Delete icons: long press the icons 3 second, drag the icons to the Recycle Bin icon, once it become red, Loosen your hand, after that you can delete icon

Status bar describe


The status bar below of the screen




From left: BACK, HOME, recent applications. From Right: battery status, time, other icons.

 
Use touch panel

Device equipped with a 10 "touch screen. Following the main touch screen area is described, and describes some of the tips for how to use the touch screen.

No matter which interface you are on the screen, can go back to main screen through pressing the soft key  on the bottom right corner of the main screen.

Attention!

In different applications, by tapping the back soft key  on the bottom right corner on the touch screen, you can return to its interface on the upfloor

In different applications, by tapping the menu key  on the upper right corner of touch screen, the screen will appear the operation setting interface as follows,

Remark:

In the main interface, you can touch the icon to open the APPs

USER'S MANUAL

In different browser(file, music, video, pictures), You shift and drag the scroll bar, so that the file list can up or down to roll.

Equipment basic set



Setting: Click setting icons , enter setting interface



Application

Manage applications

 


Unknown sources: Click "Unknown Sources", then click "OK"
 Manage application: manager and uninstall Application

Remark:

when you Firmware Upgrade, pls close the USB connect
 How to uninstall?



1. enter  "setting">"Application">"Manage application" And then there will be installed the program list
2. Click you want to uninstall icons, will enter the following interface
3. Click Uninstall, then you can delete the application

 
Backup & reset

Factory data reset



Storage

Remove TF card, view of the available storage space

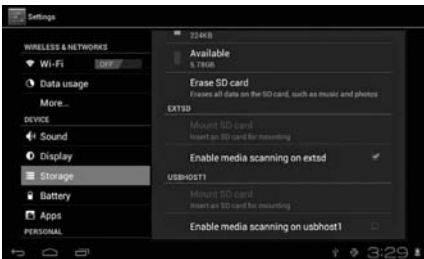

Remark:

Please touch option "delete SD card", so that can safety to remove SD card

Language & input

Setting: (Language), text input and automatic error correction options;



Select Language: 54 kind of national languages are available

Remark: Android system can support 54 kind of language, now menu interface just support 14 language,

Android keyboard: Android keyboard setting

Sound on Key-press

Auto- capitalisation

Show suggestions: Display suggested words while typing

Auto-complete: Specebar and punctuation automatically insert high-lighted word

Date & time

Set date, set time, Select time zone and select date format



About tablet



Problem solution

Device can't to open

- 1) Check the battery power
- 2) Connect adaptor first, then check again
- 3) After charging then can't to open, pls contact with the supplier

After startup the screen or the opening picture has been appeared, the device appear shutdown

- 1) Power is not enough, please charge

Headset can't hear the voice

- 1) Pls check the volume whether set to 0
- 2) Check the music file whether damaged. Try playing other music, if the file have damaged may lead to serious noise or hop sounds.

Can copy file or paly music and so on

- 1) Pls check between computer and device is correct connection
- 2) Check the memory storage space is already full
- 3) Check the USB cable is good or not
- 4) USB connection is disconnected

NOTE



INFORMACJA O PRAWIDŁOWYM POSTĘPOWANIU W PRZYPADKU UTYLIZACJI URZĄDZEŃ ELEKTRONICZNYCH I ELEKTRYCZNYCH

Umieszczony na naszych produktach symbol przekreślonego kosza na śmieci informuje, że nieprzydatnych urządzeń elektrycznych czy elektronicznych nie można wyrzucać razem z odpadami gospodarczymi.

Właściwe działanie w wypadku konieczności utylizacji urządzeń czy podzespołów lub ich recyklingu polega na oddaniu urządzenia do punktu zbiórki, w którym zostanie ono bezpłatnie przyjęte. W niektórych krajach produkt można oddać podczas zakupu nowego urządzenia.

Prawidłowa utylizacja urządzenia daje możliwość zachowania naturalnych zasobów Ziemi na dłużej i zapobiega degradacji środowiska naturalnego. Informacje o punktach zbiórki urządzeń wydają właściwe władze lokalne.

Nieprawidłowa utylizacja odpadów zagrożona jest karami przewidzianymi prawem obowiązującym na danym terenie.



Made in P.R.C.