 


**English**

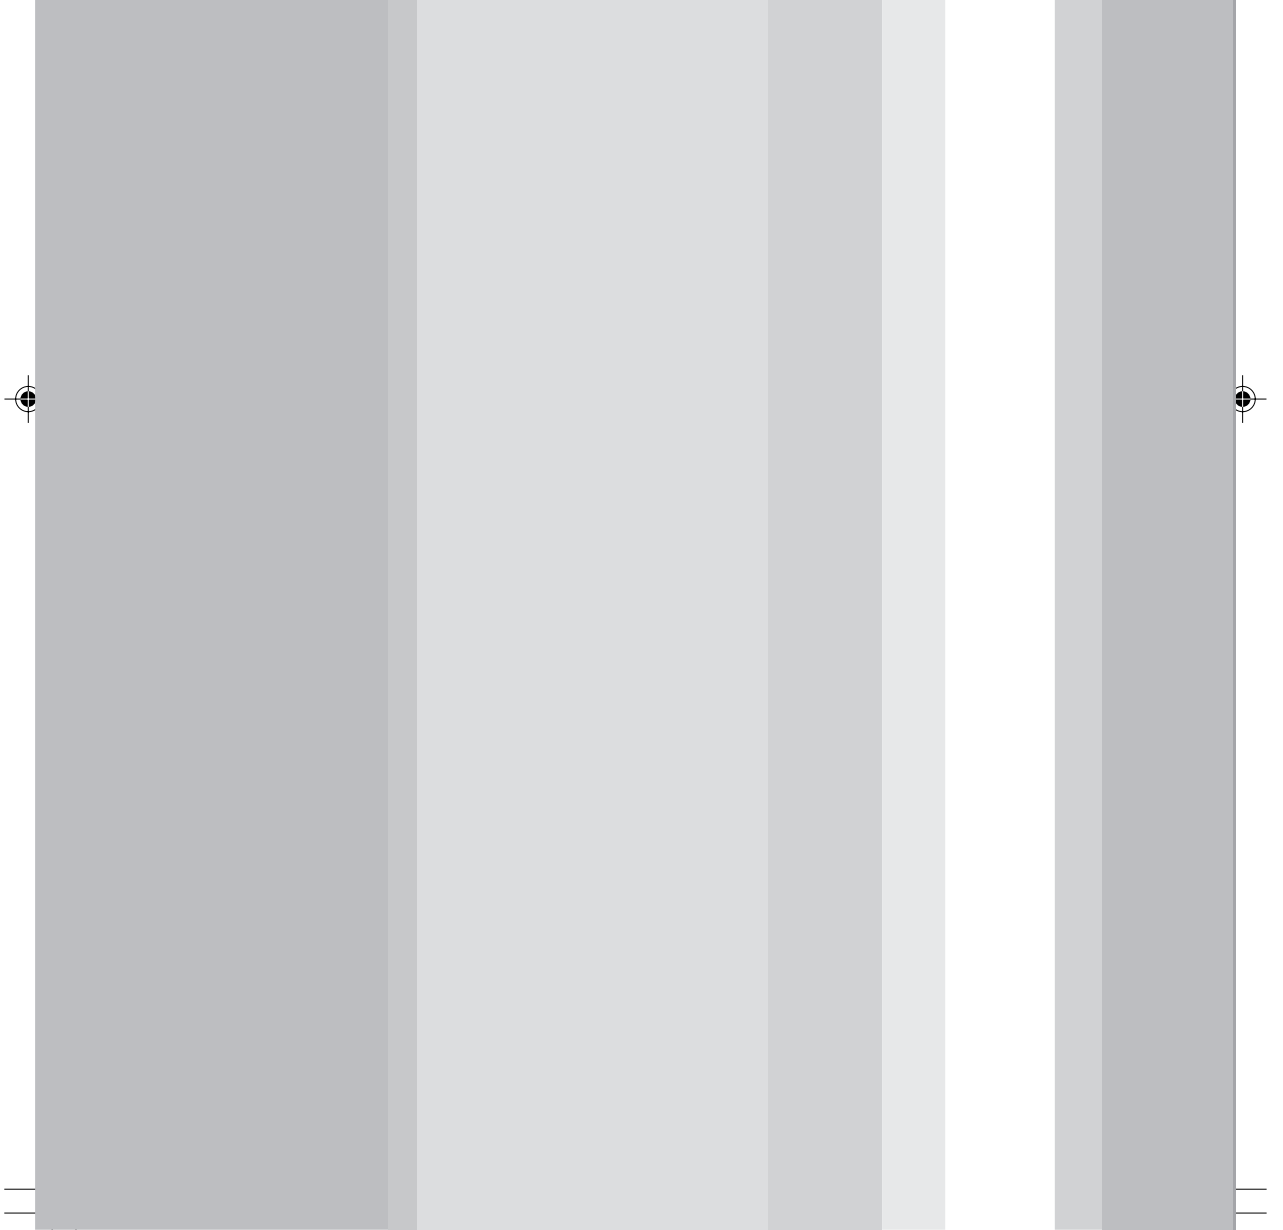

## FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation

**Note:** This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Use of shielded cable is required to comply with Class B limits in Subpart B of Part 15 of the FCC rules. Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.





## TRADEMARK INFORMATION

- Microsoft® and Windows® are U.S. registered trademarks of Microsoft Corporation.
- Pentium® is a registered trademark of Intel Corporation.
- Macintosh is a trademark of Apple Computer, Inc.
- SD™ and MMC™ are trademarks.
- Other names and products may be trademarks or registered trademarks of their respective owners.

## READ THIS FIRST

### Notice:

1. Product design and specifications are subject to change without notice. This includes primary product specifications, software, software drivers, and user's manual. This User Manual is a general reference guide for the product.
2. The product and accessories that come with your camera may be different from those described in this manual. This is due to the fact that different retailers often specify slightly different product inclusions and accessories to suit their market requirements, customer demographics, and geographical preferences. Products very often vary between retailers especially with accessories such as batteries, chargers, AC adapters, memory cards, cables, carrying cases/pouches, and language support. Occasionally a retailer will specify a unique product color, appearance, and internal memory capacity. Contact your dealer for precise product definition and included accessories.
3. The manufacturer assumes no liability for any errors or discrepancies in this user's manual.
4. For driver updates, refer to our website.



## WARNINGS

- ⊗ Do not use this camera if it is emitting smoke (or an unusual odor), if it becomes unusually hot to the touch, produces a peculiar noise, or exhibits any other abnormal conditions. Operating the camera in any of these circumstances may cause a fire or an electrical shock. Stop using the camera immediately, turn the camera off and remove the batteries. Contact your dealer or authorized service facility for repairs. Never attempt to repair this camera by yourself, as this may be dangerous.
- ⊗ Do not expose the camera to moisture and make sure no water gets into the camera. Take particular care when using the camera under extreme weather conditions, such as rain or snow, or when operating the camera at the beach or near water. Avoid using this camera in places subject to extreme moisture. Do not use the camera if water has entered the camera. Turn the camera off and remove the batteries. Contact your dealer or authorized service facility. Do not continue to use the camera as this may cause a fire or an electrical shock.
- ⊗ Do not use the camera if any foreign objects have entered the camera. Turn the camera off, and remove the batteries. Contact your dealer or authorized service facility. Do not continue to use the camera as this may cause a fire or an electrical shock.
- ⊗ Do not place the camera in an unstable location such as on a wobbly table or sloping surface where the camera may fall or tip over and cause injury. If the camera has been dropped or damaged, turn the camera off and remove the batteries. Contact your dealer or authorized service facility. Do not continue to use the camera as this may cause a fire or an electrical shock.
- ⊗ Do not insert or drop metallic or other foreign objects into the camera through access points. This may cause a fire or an electrical shock.
- ⊗ Do not attempt to modify this camera. Do not remove the camera casing. This may cause a fire or an electrical shock. Internal inspection and repairs should only be carried out by an authorized service facility.
- ⊗ Never operate this camera in any way while driving a vehicle. This may cause a traffic accident.





## CAUTIONS

- △ Do not place this camera in a location affected by oil fumes or steam, such as near a cooking stove or humidifier. This may cause a fire or an electrical shock.
- △ Do not leave this camera in a location subject to extremely high temperatures, such as in a sealed vehicle or in direct sunlight. Exposure to high temperatures may adversely affect the camera case and internal components and may cause a fire.
- △ Do not cover or wrap the camera with a cloth or quilt. This may cause heat to build up and distort the camera case and cause a fire. Always use the camera and accessories in well-ventilated locations.
- △ Handle the camera carefully and do not expose the camera to shock or vibration. Handling the camera roughly may cause a malfunction.
- △ Do not use batteries other than those specified for use with your camera. Use of unsuitable batteries may result in the batteries splitting, or leaking and may cause a fire, injury, or soiling of the battery compartment.
- △ When placing the batteries into the camera, check the polarity markings on the batteries ( - and + ) to ensure that the batteries are inserted correctly. Incorrect battery polarity will result in camera inoperability and may result in the batteries splitting or leaking and causing a fire, injury, or soiling of the battery compartment.
- △ Remove the batteries if the camera will not be used for an extended period of time. The batteries may leak and cause a fire, injury or soiling of the battery compartment. If the batteries leak, clean and wipe the battery compartment carefully and install new batteries. Wash your hands carefully if you touch the battery fluid.



## Table of Contents

<b>Introduction.....</b>	<b>08</b>
Package Contents	
<b>Getting to Know the Camera.....</b>	<b>09</b>
Front View	
Top View	
Rear View	
Bottom View	
Side View	
Image LCD Display Icons	
Input/Output Connectors	
<b>Getting Started.....</b>	<b>11</b>
Power - Inserting Batteries	
Using an AC Power Adapter	
Using a Memory Card	
Setting the Date and Time	
Attaching the Hand Strap	
<b>Basic Operations.....</b>	<b>13</b>
Recording a Still Image	
Recording a Video Clip	
Viewing Still Image/ Video Clip	
On Image LCD Display	
On a TV Monitor	
Erasing Still Image/ Video Clip	
Erase One	
Erase All	
Setting Image Resolution and Quality	
Flash	
Digital zoom	
Self-Timer	
Slideshow Display	
Displaying Thumbnail Images	
Viewing Image Information	
<b>Camera Menus.....</b>	<b>20</b>
Record Menu	
Setup	
Image Size	
Quality	
EV Compensation	
White Balance	





# Digital Camera

- Quick View
- Movie Menu
  - Setup
  - White Balance
  - EV Compensation
- Play Menu
  - Setup
  - Slide Show
  - Erase
  - Copy To Card
  - DPOF
- Setup Menu
  - Factory Setup
  - Date/Time
  - Language
  - Sound
  - Format Media
  - Video Mode
  - USB Configuration
  - Auto Power Off
  - Light Frequency

## **Transferring Recorded Images to Your Computer.....28**

- System Requirements for Computer
- Step 1: Installing the USB Driver
- Step 2: Connecting the Camera to Your Computer
- Step 3: Downloading Images/Video Clips

## **Using the Camera as a PC Camera.....30**

- System Requirements for Videoconferencing
- Step 1: Installing the PC camera driver
- Step 2: Connecting the Camera to Your Computer
- Step 3: Running Software Application (for example: Windows Netmeeting)

## **Specifications.....32**





## Introduction

Thank you for the purchase of the digital camera. With the camera, you will live a whole new camera experience and make photo shooting more interesting and fun. Here below we will guide you through the whole picture taking process, please keep this manual on hand and enjoy your time.

## Package Contents

Carefully unpack your camera and ensure that you have the following items:

### Common Product Components:

- Digital camera
- USB cable
- Video cable
- Software CD-ROM
- User's manual
- Camera strap

### Common (Optional) Accessories:

- Memory card
- Camera pouch
- AC power adapter
- Batteries

### NOTE

Accessories and components vary by retailer.



 




## Getting to Know the Camera


### Front View

1. Viewfinder window
2. Lens
3. Self-timer indicator
4. Built-in flash

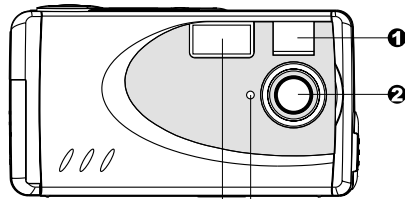


### Top View

 1. Shutter button
2. Hand strap holder

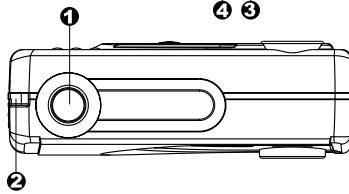


### Rear View

 1. Power button
2. Menu button
3. ▲ Arrow button (up)  
Self-timer button
4. ▼ Arrow button (down)  
Flash button
5. OK OK button
6. Digital zoom button
7. Thumbnail button
8. MODE Mode button
9. Image LCD display
10. Viewfinder
11. LED indicator

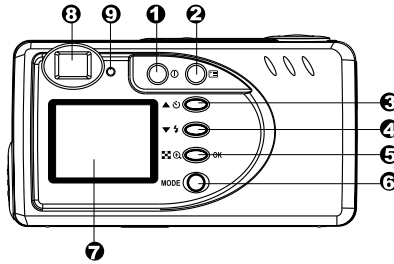


### Bottom View

 1. Tripod socket

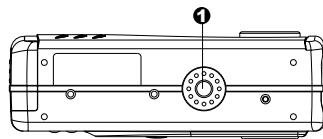

### Side View

 1. Battery/Card cover
2. Terminal cover

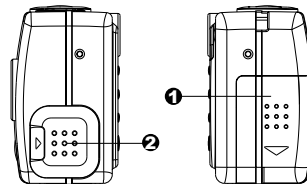

### Image LCD Display Icons

#### Display icons-Still Image Record Mode:

Recording mode — [Camera icon]

Remaining battery power — [Battery icon]

Flash Mode — [Flash icon]

Self-timer mode — [Timer icon]

White balance (No indication: Auto)

Exposure compensation setting (No indication: 0.0) — [+1.0ev]

Possible number of shot — [0020]

Image resolution — [Resolution icon]

Image quality — [Quality icon]

Card indicator — [Card icon]

SD memory card — [SD icon]

Multi Media Card(MMC) — [MMC icon]

#### Display Icons- Movie Mode:

Movie Mode — [Movie icon]

Possible recording time — [00:20]

#### Display Icons- Still Image Playback Mode:

Playback Mode (Still image) — [Play icon]

DCF Directory-file number — [000-0020]

DPOF indicator — [DPOF icon]

 
#### Display icons- Video(movie) Playback Mode:

Playback Mode (Video clip) — [Video icon]

[00:10]

### Input/Output Connectors


- 1.USB connector
- 2.Video output connector
- 3.AC adapter connector

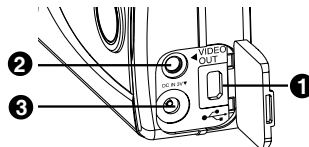


## Getting Started

### Power-Inserting Batteries

 1. Slide the battery cover in the direction indicated by the arrow on the battery cover.
2. Insert 2 AA batteries with the correct polarity as shown on the inner side of the battery cover. (Note also the decal inside the battery compartment)
3. Close the battery cover.

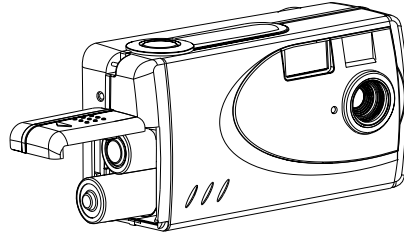

### NOTE

- Do not mix battery (use only one battery type at a time) as this may cause poor camera performance fire or explosion.
- Batteries should be inserted in the battery compartment with the “+” and “-” sides facing correctly.
- Battery low is indicated by  icon blinks for 6 times, and then the camera will automatically power off. Replace with a new set of batteries.
- To improve battery performance, replace all installed batteries at the same time.
- Do not drop, puncture or disassemble batteries and keep batteries away from heat.
- Take out all the installed batteries if they won't be used for an extended period of time.

### IMPORTANT

Please observe the following precautions as these may cause the battery to split or leak.

 
- △ Do not attempt to charge the alkaline battery.
- △ Do not carry or store a battery with objects such as metal pens, necklaces, coins or hairpins as this could become short circuit the positive + and negative - poles of the battery.
- △ Do not subject batteries with too strong impacts, such as hitting them with a hammer, stepping on them or dropping them.

### Using an AC Power Adapter(Optional accessory)

1. Open the terminal cover as shown:
2. Connect one end of the power adapter to the port labelled “DC IN 3V” as illustrated.
3. Plug the other end of the power adapter into a power outlet.


(A power supply must provide 3 VDC rated at 2.5 A for proper camera operation).

(An AC adapter is an optional accessory and is not usually included with the camera). Use only the specified batteries or AC power adapter with this camera, the use of other power sources may cause a fire, or damage the camera.

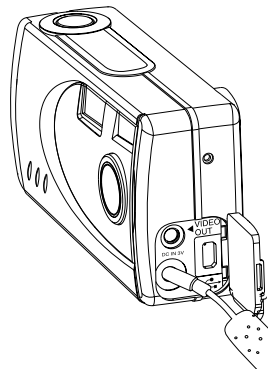

### Using a Memory Card (Optional accessory)

 The camera is equipped with 8 MB of internal (built-in) memory. In addition to saving your images in internal memory, you may also store your images on a removable memory card either SD memory card or Multi Media Card (MMC).

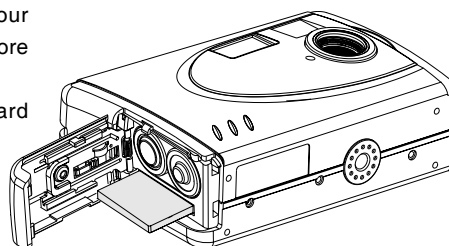

A memory card is not included with the camera but be purchased at a computer, photo, or electronics store.

To insert a memory card:






1. Make sure to turn the camera off.
2. Open the battery/card cover on the side of the camera.
3. Insert a memory card into the memory card slot:
  - Insert the card as indicated by the arrow on the memory card.
  - The face of the memory card will be towards the camera lens.
  - Press the card until you hear a distinctive click.
  - Make sure the memory card has fully seated allowing the cover to be closed.
4. Close the battery/card cover.


#### NOTE

 To remove a memory card, press on the edge of the card momentarily, and release.

### Setting the Date and Time


Follow these steps to set the correct date and time:

1. Power on the camera.
2. Press the  button.
3. SETUP will be highlighted, then press the OK button. The SETUP menu appears.
4. Select DATE/TIME by using the  or  button, and then press the OK button.
5. Enter the values of the year, month, day and time fields by using the  or  button. Press the OK button after each field is set.

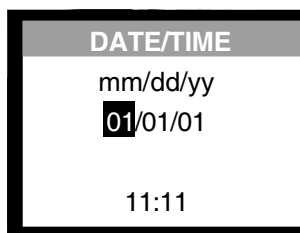

### Attaching the Hand Strap

 
1. Insert the thin end of the strap into the strap holder.
2. Pass the other end of the strap through the loop of thin cord and pull the strap tight.

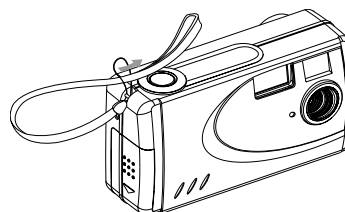


## Basic Operations

### Recording a Still Image


To record a still image, perform the following:

 1. Power on the camera.
2. Toggle the **MODE** button to select the  mode.
3. Look at the image on the image LCD display or viewfinder to compose your shot.
4. Press the shutter button.

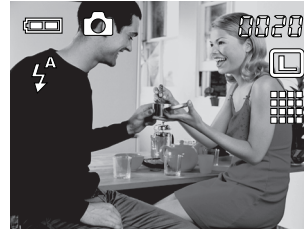


### Recording a Video Clip

To record a video clip, perform the following:

1. Power on the camera.
2. Toggle the **MODE** button to select the  mode.
3. Start recording a video clip by pressing the shutter button.

The elapsed time is displayed on the image LCD display.

 
To stop recording, press the shutter button.

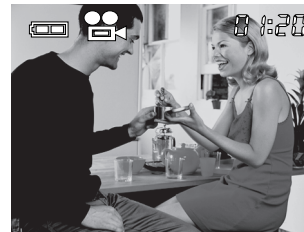


### Imaging Tips

For successful image, please follow these suggestions.

 - Hold the camera firmly with both hand and brace your elbows lightly against your body.
- Take care to keep your fingers, hair and the camera strap away from the camera lens.
- Use the viewfinder or image LCD display to frame your shot.
- When using the viewfinder, brace the camera against your forehead to stabilize your shot.

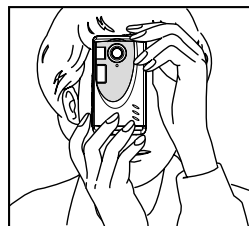


## Viewing Still Image/Video Clip

In the  mode, you can view still images/video clips stored in the camera's internal or card memory on the image LCD display. You can also connect the camera to the TV monitor in this mode to playback the still images/video clips.



### On Image LCD Display

#### Still Image


To view a recorded still image, follow the steps below:

1. Power on the camera
2. Toggle the **MODE** button to select the  mode.

The latest captured image (or the starting scene if the latest captured video clip will be displayed) on the image LCD display.

3. Select the image that you want to view by using the  or  button.


 
 
To view the previous image, press the  button.

To view the next image, press the  button.





#### Video Clip

  To view a recorded still image, follow the steps below:

1. Power on the camera.
2. Toggle the **MODE** button to select the  mode.
3. Select the video clip you wish to view by using the  or  button.

4. Press the shutter button to start.

To pause playback at anytime, press the shutter button.

To stop playback, press the  or  button.




### NOTE

To playback the video clip on the computer, we recommend that you use the "Quick Time Player". This software is free of charge, compatible for Mac and Windows-based computers and can be downloaded from the Web site at [www.apple.com](http://www.apple.com). For Quick Time Player usage, please refer to its on-line help for more information.

### On a TV Monitor

Television monitors can be used to playback still image or video clip.

1. Set the appropriate video output mode (NTSC/PAL) corresponding to your TV standard.
  - From the **SETUP**, select **VIDEO MODE**.
2. Connect one end of the video cable to the video output connector of your camera.
3. Connect the other end of the video cable to the video port of your television.
4. Turn on the camera and TV.
5. Toggle the **MODE** button to select the  mode.



6. Playback the recorded images the same way as you would playback them on the the image LCD display.

**NOTE**

The VIDEO OUT function is highly power consumptive. Hence, batteries may be consumed sooner than normal.

**Erasing Still Image /Video Clip**

There are two ways to erase images:

 
Erase One and Erase All

△ Recorded images in an SD memory card cannot be erased when it is write-protected.

△ To erase the pictures recorded in the memory card, make sure to insert the card before deletion.


△ To erase the pictures recorded in the camera (internal memory), do not insert any memory card or the camera will not be able to read the internal data with an external memory card attached.

△ External memory (memory card) always has priority over internal memory - whenever a memory card is inserted into the camera ,the camera will use the memory card for both capture and playback.

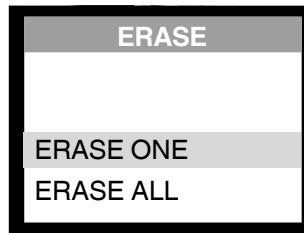

**ERASE ONE**

 1. Power on the camera, and toggle the MODE button to select the ► mode.
2. Select the image/video clip you wish to delete by using the ▲ or ▼ button.
3. Press the [ ] button.
4. Use the ▲ or ▼ button to select ERASE, and then press the OK button.
5. Select ERASE ONE by using the ▲ or ▼ button, and then press the OK button.
6. "ERASE CURRENT?" will be displayed in the image.
7. Press the OK button to delete this image/ video clip.  
The next image/video clip appears.

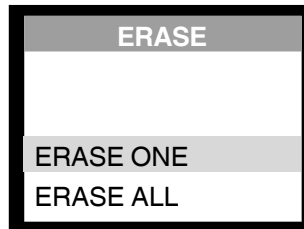


**NOTE**

If you want to cancel the deletion, toggle the [ ] button to exit from menu mode or toggle the MODE button to any other mode.

### ERASE ALL

 1. Power on the camera, and toggle the **MODE** button to select the **▶** mode.
2. Press the **☰** button.
3. Use the **▲** or **▼** button to select ERASE, and then press the **OK** button.
4. Select ERASE ALL by using the **▲** or **▼** button, and then press the **OK** button. The ERASE ALL menu appears:
5. Use the **▲** or **▼** button to select YES.
6. To confirm deletion, press the **OK** button.

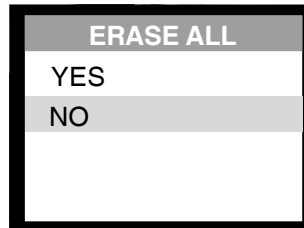

### Setting Image Resolution and Quality

Resolution and quality settings determine the pixel size (dimension), image file size, and compression ratio for your images. These settings affect the number of images that can be stored in the memory, or on a memory card. As you get to know the camera, it is recommended that you try each quality and resolution setting to get an appreciation for the effects that these settings will have on your images.

Higher resolution and higher quality images offer the best photographic results but produce large files sizes. Therefore, fewer images will take up more memory space.

High resolution and quality settings are recommended for printed output and situations requiring the finest detail. Lower resolution/quality images take up less memory space and may be quite suitable for sharing images via e-mail, in a report, or on a web page.

To change image resolution and quality settings:



1. Power on the camera.
2. Toggle the **MODE** button to select the **📷** mode.
3. Press the **☰** button.
4. Move to IMAGE SIZE or QUALITY with the **▲** or **▼** button and press the **OK** button.
5. Change the settings with the **▲** or **▼** button and press the **OK** button.

 
 




## Flash

The flash is designed to function automatically when lighting conditions warrant the use of flash. You can take an image using a flash mode suitable to your circumstances. If you change the flash mode, the camera will retain that setting even if the camera is turned off.

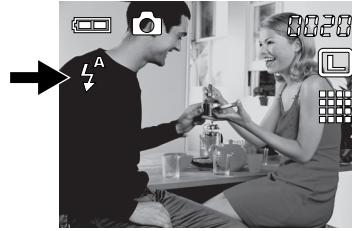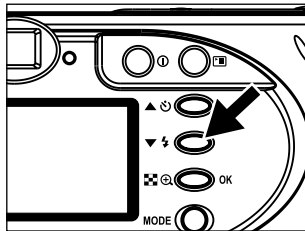



1. Power on the camera, and toggle the **MODE** button to select the  mode.
2. Press the  button repeatedly until your desired flash mode appears.



 3. Compose the image and press the shutter button.



The camera has four flash modes: Automatic Flash, Red-Eye Reduction, Forced Flash (On) and Flash Off. The modes appear, cyclically, when you press the flash button.


The table below will help choose the appropriate flash mode:

Flash mode	Description
 Auto flash	The flash fires automatically according to the ambient lighting conditions. Select this mode for general photography.
 Red-eye reduction	The flash emits a precursor-flash before the main flash fires. This causes the pupil in the human eye to constrict, reducing the red-eye phenomenon. Select this mode when taking images of people and animals in low light conditions.
 Forced flash	The flash will always fire regardless of the surrounding brightness. Select this mode for recording images with high contrast (backlighting) and deep shadows.
 Flash off	The flash will not fire. Select this mode when taking images in a place where flash photography is prohibited, or when the distance to the subject is beyond the effective range of the flash.

### Digital Zoom

 
 
 
Using digital zoom, images appear closer. Whereas digital zoom is a compelling feature, the more an image is enlarged (zoomed), the more pixilated (grainier) the image will appear.

1. Power on the camera.
2. Toggle the **MODE** button to select the  mode.
3. Press the  button to activate 2X digital zoom function. The 2X icon appears on the image LCD display.
4. Press the shutter button to capture a “zoomed” image.

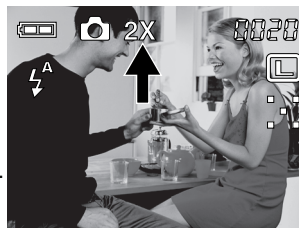

### Self-Timer

This feature allows you to get into the scene when taking group images.

1. Secure the camera to a tripod or place it on a stable surface.
2. Power on the camera, and toggle the **MODE** button to select the  mode.
3. Press the  button. The  icon appears on the image LCD display.
4. Compose the scene.
5. Press the shutter button. The self-timer function is activated.
6. After ten seconds, the camera takes an image. In the first 7 seconds, the self-timer indicator blinks at a rate relatively slow and then blinks rapidly for the last 3 seconds.


 
 
 

 



#### NOTE

After an image is taken using self-timer, the self-timer mode is turned off. If you wish to take another image using the self-timer, repeat these steps.

### Slideshow Display

The slideshow function enables you to playback your images back automatically in sequential order as a slide show. This is a very useful and entertaining feature for reviewing recorded images and for presentations.

 1. Power on the camera, and toggle the **MODE** button to select the  mode.
2. Press the  button and move to SLIDE SHOW by using the  or  button, and then press the **OK** button.
3. Set the playback interval by using the  or  button again, and then press the **OK** button.

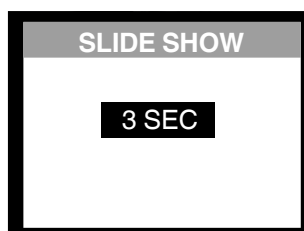

The slideshow starts, displaying your images on the image LCD display, one by one, at the set interval.

To stop the slideshow display, press the **OK** button.

**NOTE**

You can adjust the slideshow display interval within the range of 1 sec. to 9 sec. For interval setting, refer to SLIDE SHOW in the PLAY MENU.

**Displaying Thumbnail Images**

This function allows you to view nine thumbnail images on the image LCD display simultaneously so you may search for a particular image.

1. Power on the camera, and toggle the **MODE** button to select the **▶** mode.
2. Toggle the **☒** button until thumbnail screen appears on the display screen.
  - Nine thumbnail images appear (assuming there are nine or more images in memory).
  - To view a full-size image, selecting it by using the **▲** or **▼** button, and then press the **OK** button.




**Viewing Image Information**

Image information can be viewed on the image LCD display during image playback.

Toggle the **☒** button until image information screen appears on the display screen.

**Still Image**

 

**Image Information on**  
**SIZE :** Image resolution  
**TIME:** Captured time  
**DATE:** Captured date


## Camera Menu
 
### Record Menu

The RECORD MENU contains six items: SETUP, IMAGE SIZE, QUALITY, EV COMPENSATION, WHITE BALANCE and QUICK VIEW.

Steps to access **RECORD MENU**, perform the following:

1. Toggle the **MODE** button to select the **📷** mode.
2. Press the **☰** button. The **RECORD MENU** appears.

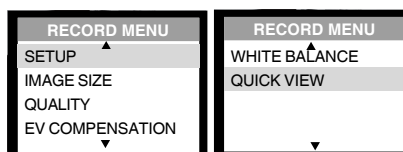


### SETUP

For more details, refer to **SETUP MENU** section.

### IMAGE SIZE

The image resolution (size) determines the size of your image and how many images can be stored in the internal memory or on the memory card. The higher resolution (larger size) produces the large size image but takes up more space in memory. Lower resolution (smaller size) takes up less memory space, suitable for sharing images via email or the Internet.

 1. Follow steps 1 through 2 in access **RECORD MENU** section.
2. Highlight **IMAGE SIZE** by using the **▲** or **▼** button, and then press the **OK** button.
3. Use the **▲** or **▼** button again to select the desired image size.
4. Press the **OK** button to confirm the selection.

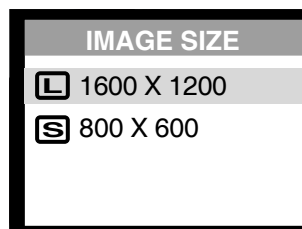

### QUALITY

The image quality determines the compression ratio of your image and how many images can be stored in the internal memory or on the memory card. The higher quality produces the less compressed image but takes up less memory space. Lower quality takes up less memory space, suitable for sharing images via email or the Internet.

1. Follow steps 1 through 2 in access **RECORD MENU** section.
2. Highlight **QUALITY** by using the **▲** or **▼** button, and then press the **OK** button.
3. Use the **▲** or **▼** button again to select the desired image quality.
4. Press the **OK** button to confirm the selection.





### EV COMPENSATION

The camera will automatically adjust the camera shutter speed for the proper exposure of each scene. Occasionally, it is desirable to manually override the automatic exposure value (EV) to accommodate special scene circumstances.

 
 
1. Follow steps 1 through 2 in access **RECORD MENU** section.
2. Highlight EV COMPENSATION by using the ▲ or ▼ button, and then press the OK button.
3. Use the ▲ or ▼ button again to specify the desired EV.
  - The EV range is from -2.0 to +2.0 in steps of 0.5 EV.
4. Press the OK button to confirm the selection.



### WHITE BALANCE

Automatic white balance is recommended for most cases. For particular circumstances, you may manually select another white balance preset-according to the ambient lighting conditions.


1. Follow steps 1 through 2 in access **RECORD MENU** section.
2. Highlight WHITE BALANCE by using the ▲ or ▼ button, and then press the OK button.
3. Use the ▲ or ▼ button again to select the desired white balance.
4. Press the OK button to confirm the selection.

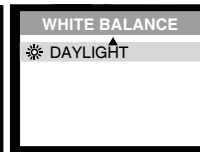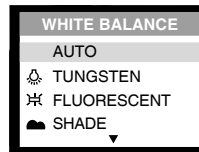

### QUICK VIEW

If Quickview is enabled, each image will be displayed on the LCD momentarily after it is captured. If disabled, each image will not be displayed immediately after capture.

 1. Follow steps 1 through 2 in access **RECORD MENU** section.
2. Highlight QUICK VIEW by using the ▲ or ▼ button, and then press the OK button.
3. Use the ▲ or ▼ button again to select ON/OFF.
4. Press the OK button to confirm the selection.

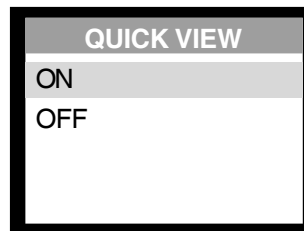


## Movie Menu

The MOVIE MENU contains three items: SETUP, WHITE BALANCE and EV COMPENSATION.

Steps to access MOVIE MENU, perform the following:

 1. Toggle the **MODE** button to select the **MOVIE** mode.
2. Press the **MENU** button. The **MOVIE MENU** appears.

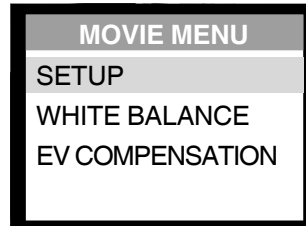


### SETUP

For more details, refer to **SETUP MENU** section.

### WHITE BALANCE

Automatic white balance is recommended for most cases. For particular circumstances, you may manually select another white balance preset-according to the ambient lighting conditions.

 
1. Follow steps 1 through 2 in access **MOVIE MENU** section.
2. Highlight **WHITE BALANCE** by using the **▲** or **▼** button, and then press the **OK** button.
3. Use the **▲** or **▼** button again to select the desired white balance.
4. Press the **OK** button to confirm the selection.

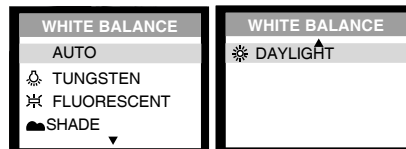

### EV COMPENSATION

The camera will automatically adjust the camera shutter speed for the proper exposure of each scene. Occasionally, it is desirable to manually override the automatic exposure value (EV) to accommodate special scene circumstances.

 
1. Follow steps 1 through 2 in access **MOVIE MENU** section.
2. Highlight **EV COMPENSATION** by using the **▲** or **▼** button, and then press the **OK** button.
3. Use the **▲** or **▼** button again to specify the desired EV.
  - The EV range is from -2.0 to +2.0 in steps of 0.5 EV.
4. Press the **OK** button to confirm the selection.

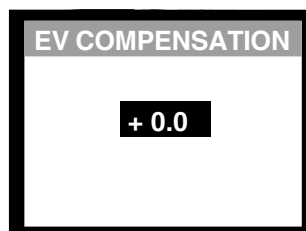


## Play Menu

The PLAY MENU contains five items: SETUP, SLIDE SHOW, ERASE, COPY TO CARD and DPOF.

 Steps to access **PLAY MENU**, perform the following:

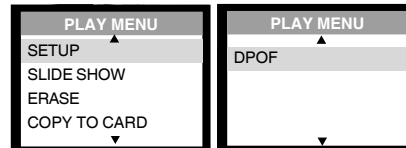

1. Toggle the **MODE** button to select Play mode.
2. Press the  button. The **PLAY MENU** appears.



### SETUP

For more details, refer to **SETUP MENU** section.

### SLIDE SHOW

Your camera can display your images sequentially as a slide show at a selected interval. Use the  or  button to select the slide interval time you desire and then press the **OK** button.

**[1 sec], [3 sec], [5 sec], [7 sec], [9 sec]**

Refer to section in this manual titled SLIDESHOW DISPLAY for further detail.

### ERASE

This option allows you to delete one image/video clip or delete all images/video clips the memory at one time. If you wish to delete the images or video clips in the internal memory, ensure that the memory card is not inserted in the camera. Otherwise, you will delete the images or video clips stored in the memory card.

#### ERASE ONE

This option allows you to delete one image/video clip.

Refer to section in this manual titled ERASE ONE on ERASING STILL IMAGE/VIDEO CLIP section for further detail.

#### ERASE ALL

 
This option allows you to delete all images/video clips the memory at one time.

Refer to section in this manual titled ERASE ALL on ERASING STILL IMAGE/VIDEO CLIP section for further detail.

### COPY TO CARD

This feature allows you to copy your images from the camera's internal memory to a memory card. Of course, you can only do this if you have a memory card installed and some images in the internal memory.


1. Follow steps 1 through 2 in access **PLAY MENU** section.
2. Highlight COPY TO CARD by using the ▲ or ▼ button, and then press the OK button.
3. Use the ▲ or ▼ button again to select YES.
4. Press the OK button to confirm the selection.

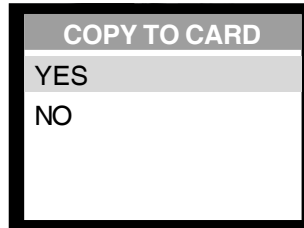


### DPOF (Digital Print Order Format)


DPOF allows you to embed printing information on your memory card. Using DPOF you can select an image to be printed and then specify how many prints to you would like. Take your memory card to a DPOF enabled printer that accepts memory cards. The DPOF/card-compatible printer will read the embedded information on the memory card and print your images as specified.

 1. Follow steps 1 through 2 in access **PLAY MENU** section.
2. Highlight DPOF by using the ▲ or ▼ button, and then press the OK button.
3. Use the ▲ or ▼ button to select the print quantity (0~9). If quantity is 0, this function is disabled.
4. Press the OK button to confirm the selection.

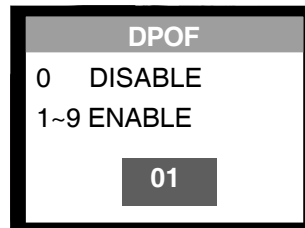

### Setup Menu

 The SETUP menu is shared by all three modes. Users can invoke the SETUP menu by using the  button in all three modes.

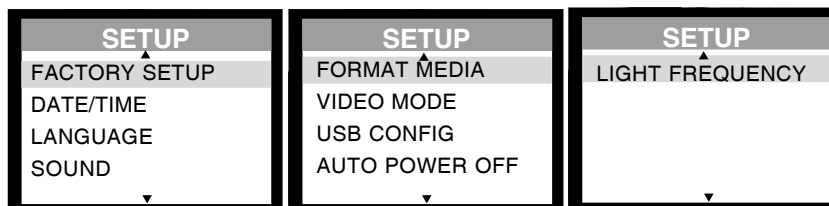




### FACTORY SETUP

Sets whether or not to return the settings to their original factory settings.

 1. Toggle the MODE button to the / / mode.
2. Press the button.
3. Highlight SETUP, press the OK button. The **SETUP MENU** appears.
4. Use the or button to highlight FACTORY SETUP, and then press the OK button.
5. To reset to default settings, use the or button again to select YES.
6. Press the OK button to confirm the selection.

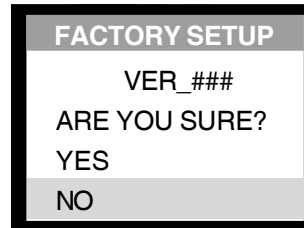

### DATE/TIME

 
Sets the date and time.

Refer to section in this manual titled SETTING THE DATE AND TIME for further detail.

### LANGUAGE

Sets the OSD menu language.

1. Follow steps 1 through 3 in FACTORY SETUP section.
2. Use the or button to highlight LANGUAGE, and then press the OK button.
3. Use the or button again to select the desired language.
4. Press the OK button to confirm the selection.

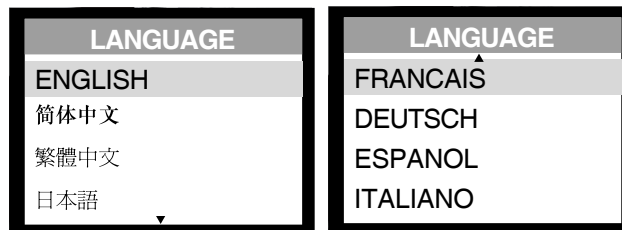


### SOUND

Enables/disables the sound effects.

The camera produces a sound (beep) each time you press the camera button if this function is enabled.

 
1. Follow steps 1 through 3 in FACTORY SETUP section.
2. Use the or button to highlight SOUND, and then press the OK button.
3. Use the or button again to select ON/OFF.
4. Press the OK button to confirm the selection.

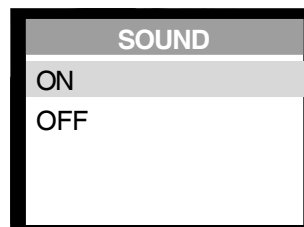

### FORMAT MEDIA

Formats the memory card and erases all data from the card.

 1. Follow steps 1 through 3 in FACTORY SETUP section.
2. Use the ▲ or ▼ button to highlight FORMAT MEDIA, and then press the OK button.
3. Use the ▲ or ▼ button again to select YES/NO.
4. Press the OK button to confirm the selection.

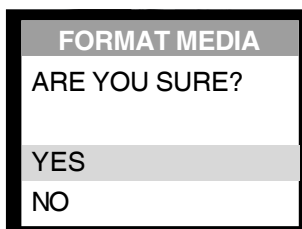

#### NOTE

 
An SD memory card cannot be formatted if it is write-protected.

### VIDEO MODE

Sets video output type.

The camera provides 2 different video output types for your selection: NTSC and PAL. Select the correct video type for the connected device (e.g. NTSC TV or PAL TV).

1. Follow steps 1 through 3 in FACTORY SETUP section.
2. Use the ▲ or ▼ button to highlight VIDEO MODE, and then press the OK button.
3. Use the ▲ or ▼ button again to select NTSC/PAL.
4. Press the OK button to confirm the selection.

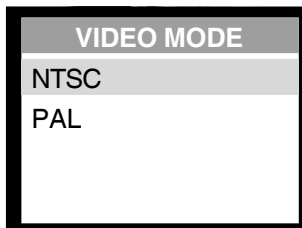


### USB CONFIGURATION

This menu contains two modes, including DISK DRIVE and PC CAMERA.

DISK DRIVE: This mode allows to transfer pictures to the computer.

PC CAMERA: This mode allows to use netmeeting/video conference.

 1. Follow steps 1 through 3 in FACTORY SETUP section.
2. Use the ▲ or ▼ button to highlight USB CONFIG, and then press the OK button.
3. Use the ▲ or ▼ button again to select DISK DRIVE/PC CAMERA.
4. Press the OK button to confirm the selection.

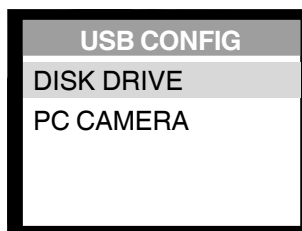




### AUTO POWER OFF

You may specify or cancel a power-off time.

 
1. Follow steps 1 through 3 in FACTORY SETUP section.
2. Use the ▲ or ▼ button to highlight AUTO POWER OFF, and then press the OK button.
3. Use the ▲ or ▼ button again to select the desired setting.
4. Press the OK button to confirm the selection.

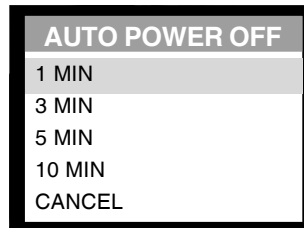

### LIGHT FREQUENCY

The camera supports different lighting frequencies: 50Hz and 60Hz. When photography under fluorescent lighting, select the correct frequency setting depending on your local area's voltage. However, under other lighting situation, select "disable" for this setting.

 1. Follow steps 1 through 3 in FACTORY SETUP section.
2. Use the ▲ or ▼ button to highlight LIGHT FREQUENCY, and then press the OK button.
3. Use the ▲ or ▼ button again to select the desired setting.
4. Press the OK button to confirm the selection.

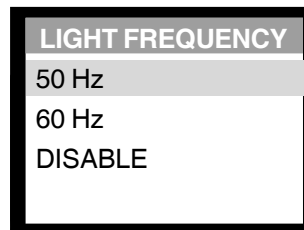

### NOTE

Before taking pictures, preview the image with both 50Hz and 60Hz and compare the results.



## Transferring Recorded Images to Your Computer

You can share recorded images/video clips with your family or friends via e-mail or post them on the Web. Before doing those things, you need to connect the camera to your computer by using the USB cable and then transfer the images/video clips.

To transfer images/video clips from the camera to your computer, follow the steps below.

- Step 1:** Installing the USB driver
- Step 2:** Connecting the camera to your computer
- Step 3:** Downloading images/video clips

### System Requirements for Computer

	System requirements (Windows)	System requirements (Macintosh)
CPU	Pentium® processor or higher	Power PC G3 processor 266MHz or higher
OS	Windows 98/98SE/Me/2000/XP	OS 8.6 or later
Memory	32MB RAM(64MB recommended)	32MB RAM(64MB recommended)
Free Space on Hard Disk	128 MB hard disk space	128 MB hard disk space
Required Devices	A CD-ROM drive, An available USB port	A CD-ROM drive, An available USB port
Color Monitor	Color monitor (800x600, 24-bit or higher recommended)	Color monitor (800x600, 24-bit or higher recommended)

 
### Step 1: Installing the USB Driver

The USB driver on the supplied CD-ROM is for Windows 98 and Mac OS 8.6.

1. Insert the CD-ROM packaged with the camera into the CD-ROM drive.
2. Follow the on-screen instructions to complete the installation.
3. Restart your computer.

### Step 2: Connecting the Camera to Your Computer

1. Power on the camera.
2. Connect one end of the USB cable to an available USB port on your computer.
3. Connect the other end of the USB cable to the USB connector on the camera.
4. The USB CONFIG menu appears on the image LCD display.
5. Select DISK DRIVE by using the ▲ or ▼ button, and then press the OK button.  
DISK DRIVE is displayed on the image LCD display.
6. Look for a new "removable disk" appearing in the "My Computer" window. Your recorded images/video clips will be in a folder on this "removable disk". (For Mac users, double-click the "untitled" disk drive on the desktop.)

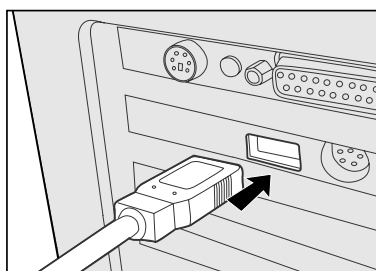



### Step 3: Downloading Images/Video Clips

When the camera is turned on and connected to your computer, it is considered to be one disk drive. You can download images/video clips by copying them from the “removable disk” (“untitled” disk on a Macintosh) to your hard drive or other storage disk.

#### ■ For computers running Windows

Open the “removable disk” by double clicking on it. Double click on the folder. Your images are inside the folder(s). Select the images that you want, then choose Copy from the Edit menu. Open the destination location and choose Paste from the Edit menu. You may also drag and drop image files from the camera to a desired location.

#### ■ For computers running Mac OS

Open the “untitled” disk window and the hard disk or the destination location. Drag and drop from the camera disk to the desired destination.



## Using This Camera as a PC Camera

This camera can act as a PC camera, allowing you to hold a videoconference and talk to business associates over the Internet or corporate Intranet, or conduct real-time conversation with friends or family.

To use this camera as a PC camera, follow the steps below:

**Step 1:** Installing the PC camera driver

**Step 2:** Connecting the camera to your computer

**Step 3:** Running software application (for example: Windows NetMeeting)

### System Requirements for Videoconferencing

To use this camera for videoconferencing, your computer must contain the following components:

- Microphone
- Sound card
- Speakers or headphones
- Network connection

### Step 1: Installing the PC Camera Driver

The PC camera driver on the supplied CD-ROM is exclusively for Windows. The PC camera function provided on this camera is not supported by Macintosh platform.

### Step 2: Connecting the Camera to Your Computer

1. Power on the camera.
2. Connect one end of the USB cable to an available USB port on your computer.
3. Connect the other end of the USB cable to the USB connector on the camera.
4. The USB CONFIG menu appears on the image LCD display.
5. Select PC CAMERA by using the ▲ or ▼ button, and then press the OK button.  
PC CAMERA is displayed on the image LCD display.
6. Position the camera steadily on top of your computer monitor.



### Step 3: Running Software Application (for example: Windows NetMeeting)

To use Windows NetMeeting for videoconferencing:

1. Launch Windows NetMeeting.

(**Start > Programs > Accessories > Communications > NetMeeting**)

2. Click the **Start Video** button to view live video.

3. Click the **Place Call** button.

4. Type the e-mail address or the network address of the computer that you are calling.

5. Click **Call**.

The person you are calling must have Windows NetMeeting running and also accept your call to start the videoconference.

#### NOTE

For more information about the operation of videoconference application software, refer to its respective software help.



## Specifications

Item	Description
<b>Sensor</b>	2.0 megapixels CMOS
<b>Color depth</b>	10-bit
<b>Resolution</b>	1600x1200 pixels 800x600 pixels
<b>Compression method</b>	JPEG
<b>File format</b>	Exif(ver. 2.1), DCF(ver. 1.0), DPOF(ver. 1.0), AVI(Motion-JPEG)
<b>LCD</b>	1.5" color LCD
<b>Self-timer</b>	10 seconds delay
<b>Zoom</b>	2x digital zoom
<b>Capture modes</b>	Still photographs or video recording
<b>Memory type</b>	8 MB internal memory SD memory card / Multi Media Card (MMC)
<b>Flash effective range</b>	1.2m~2.1m
<b>Lens</b>	Fixed Focus Focal length: f= 9.0mm Aperture: F3.0
<b>Focal range</b>	1.5m ~infinity
<b>Exposure compensation</b>	Auto; Manual: -2.0 ~ +2.0EV (0.5EV step)
<b>White balance</b>	Auto, Tungsten, Fluorescent, Shade(Cloudy), Daylight
<b>Interface</b>	AC adapter connector, USB connector, Video output connector (NTSC or PAL)
<b>Power</b>	2 AA Alkaline (1.5V) or Ni-MH (1.5V) batteries, one CRV3 Lithium battery pack (3V), or AC power adapter (2.5A/3.3V)
<b>Dimensions</b>	108mm x 56mm x 37mm
<b>Weight</b>	125g

\*Design and specifications are subject to change without notice.