

CONTENT

1. WARNINGS	- 1 -
2. GETTING STARTED	- 2 -
2.1 APPEARANCE	- 2 -
2.2 KEYPAD DEFINITION	- 3 -
2.3 BATTERY INSTALLATION	- 5 -
2.4 SIM CARD/T-FLASH CARD INSTALLATION	- 5 -
2.5 CHARGING THE BATTERY	- 6 -
2.6 SECURITY SETTINGS	- 7 -
2.7 T-FLASH CARD	- 7 -
2.8 USB CABLE	- 7 -
3. BASIC FUNCTIONS	- 7 -
3.1 MAKING A CALL	- 7 -
3.2 EMERGENCY SERVICE	- 8 -
3.3 ANSWERING A CALL	- 8 -
3.4 REJECTING A CALL	- 8 -
4. GUIDE TO MENU OPERATIONS	- 8 -
4.1 MESSAGING	- 8 -
4.2 FILE MANAGER	- 10 -
4.3 SERVICES	- 11 -
4.4 MULTIMEDIA	- 11 -
4.4.1 IMAGE VIEWER	- 11 -
4.4.2 VIDEO RECORDER	- 11 -
4.4.3 VIDEO PLAYER	- 11 -
4.4.4 SOUND RECORDER	- 11 -
4.4.5 FM RADIO	- 12 -
4.5 MUSIC	- 12 -
4.6 CAMERA	- 12 -
4.7 PROFILES	- 12 -
4.8 SYMPHONY D24	- 12 -
4.9 PHONEBOOK	- 12 -
4.10 SETTINGS	- 13 -
4.10.1 PHONE SETTINGS	- 13 -
4.10.2 SECURITY SETTINGS	- 14 -
4.10.3 NETWORK SETTINGS	- 15 -
4.10.4 DUAL SIM SETTINGS	- 15 -
4.10.5 CONNECTIVITY	- 15 -
4.10.6 RESTORE SETTINGS	- 15 -
4.11 CALL CENTER	- 16 -
4.11.1 CALL HISTORY	- 16 -
4.11.2 CALL SETTINGS	- 16 -
4.12 TOOLS	- 17 -
4.12.1 TORCH	- 17 -
4.12.2 CALENDAR	- 17 -
4.12.3 ALARM	- 17 -
4.12.4 WORLD CLOCK	- 17 -
4.12.5 CALCULATOR	- 17 -
5. CARE AND MAINTENANCE	- 17 -
6. TECHNICAL INFORMATION	- 19 -

1. Warnings

Not following these simple guidelines may be dangerous or illegal. Read the complete user guide for further information.

TURN ON SAFELY

Do not turn on the phone when wireless phone is prohibited or when it may cause interference or danger.

ROAD SAFETY

Obey all road safety laws. Always use both of your hands to operate the vehicle while driving.

INTERFERENCE

All wireless phones may be sensitive to interference, which may affect performance.

TURN OFF IN HOSPITALS

Follow all restrictions. Turn off the phone near medical equipment.

TURN OFF ON AIRCRAFTS

Follow all restrictions. Wireless devices can cause interference on aircrafts.

TURN OFF WHEN REFUELING

Do not use the phone at/near refueling stations. Do not use near fuel or chemicals.

USE SENSIBLY

Only qualified personnel may install or repair this product.

ENHANCEMENTS AND BATTERIES

Use only appropriate enhancements and batteries. Do not connect incompatible products.

WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.

BACKUP COPIES

Remember to make back-up copies or keep a written record of all important information stored in your phone.

CONNECTING TO OTHER DEVICES

When connecting to any external device, read its user guide for detailed safety instructions. Do not connect with incompatible products.

2. Getting Started

2.1 Appearance



The Symbols above indicate:


- | | |
|----------------------|-------------------|
| 1. OK Key | 2. Left Soft Key |
| 3. Dial Key | 4. Number Keys |
| 5. * Key | 6. Right Soft Key |
| 7. End Key/Power Key | |
| 8. Navigation Keys | |
| 9. # Key | |

2.2 Keypad Definition

Key	Definitions
Left Soft key/ Right Soft key	<ol style="list-style-type: none"> 1. Execute functions that the left-down/right-down corner indicator shows. 2. In the standby mode, press left soft key to access Menu, press right soft key to access Phonebook.
Navigation Keys	<ol style="list-style-type: none"> 1. In other modes, it is used as the navigation/direction key except for some special functions. 2. In standby mode, press up or down keys to enter shortcut functions, press left or right to adjust the volume.
OK Key	<ol style="list-style-type: none"> 1. In standby mode, press the key to enter the Main menu. 2. In the dial panel, after the input data, press the keys can choose to save the number to the phone book. 3. In other mode, press the key for confirmation
End Key/ Power Key	<ol style="list-style-type: none"> 1. Mainly used as power on/off. 2. Press to return to standby screen in any interface. 3. End calls or reject incoming calls.
Dial Key	<ol style="list-style-type: none"> 1. Press this key to dial or receive an incoming call. 2. In standby mode, press this key to access All calls.
Number Keys	<ol style="list-style-type: none"> 1. Use these keys to input numbers or letters.


<p>* Key</p>	<ol style="list-style-type: none"> 1. After inputting phone number, quick press * key thrice, then the symbol “p” appears and input the extension number. You can make an extension call. 2. In standby mode, press left soft key and * key to lock or unlock keypad. 3. In editing interface ,press * key to enter symbols menu.
<p># Key</p>	<ol style="list-style-type: none"> 1. In text editing interface, press # key to switch the text input method. 2. Press and hold # key to transfer the profile of Meeting/Silent/General.

2.3 Battery Installation

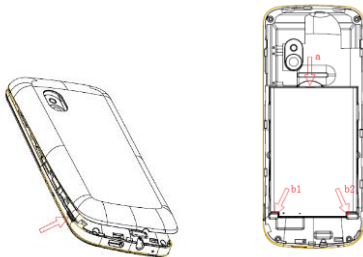

Caution: Install according to the illustration above to avoid breaking the battery connectors.

 2.4 SIM Card/T-Flash Card Installation



Caution: Do not bend or scratch your SIM card and T-Flash card. Avoid exposing your SIM card and T-Flash card to static electricity, water, or dirt.

Tips: Face the gold color contact point of SIM card towards the cell phone and push the SIM card into the slot. With the metal contacts facing down, gently slide the T-Flash card into the slot.

2.5 Charging the Battery

Insert the charger into USB interface of the phone; the charging symbol on the charger plug must face upwards.

Connect the charger to a standard wall outlet and the battery power icon in the up-right corner of the screen will start scrolling. When the battery bar stops scrolling, the battery charge is complete. Press the two sides of the charger plug and disconnect the charger from the phone.

- When the battery is low, a “low battery” message will display across the screen and the battery icon will seem empty. If the battery level is insufficient, the phone will turn off automatically. Do not use your phone under low battery state for

an extended period of time or it may cause battery damage.

2.6 Security Settings

— PIN code

PIN code (Personal Identity Number) prevents unauthorized use of your phone. The **PIN** code is provided by your network operator with the **SIM** card.

If you enter the wrong code three times in a row, the **PIN** code will be blocked. To unblock the **PIN** code, you need to enter your PUK. Your PUK is provided by your network operator.

— Phone Lock

Activate/Modify/Deactivate power on password (the length of the password is 4-8 digital numbers). If you activate the “Phone lock”, you need to enter the password each time you turn on the phone. If you want to modify the Startup password or deactivate power on password, enter Change password to set. The default password is 1122.

2.7 T-flash Card

Insert the T-Flash card into phone. This will expand the Flash memory of the phone.

2.8 USB Cable

You can transfer and store files, such as MP3, MP4 and pictures from PC, through USB cable, to the mass storage in phone or identified SD card that is inserted.

3. Basic Functions

3.1 Making a Call

In standby mode, press numerical keys to input phone number

to dial. If you're making a long distance call, add the area code preceding the telephone number. After inputting phone number, quickly press * key thrice until the symbol “p” appears, then input the extra number. Press left soft key to save. During a call, press the left/right navigation keys to enter volume adjustment interface, and then press navigation keys to adjust the volume.

3.2 Emergency Service

You can dial an emergency call without the SIM card. Contact your service provider to get the emergency call number.

3.3 Answering a Call

When you receive a call, the phone will ring or vibrate and will display an incoming call indicator. Press dial key/ left soft key to answer. During the calling, you can press left soft key to access options.

3.4 Rejecting a Call

You can press right soft key to make silent or press end key to reject a call.

4. Guide to Menu Operations

4.1 Messaging

4.1.1 Write message

This function can begin a new message. After completing the message:

- Press OK key:
- Enter number: Input number
- Add from Phonebook: Select contact from phonebook
- Press left soft key:

- Send to: Enter number or Add from Phonebook to send message
- Input method: Select input method.
- Advanced: Insert number or name
- Save: Save the message to drafts of SIM1/SIM2

4.1.2 Inbox

After entering the Inbox, press up/down navigation key to select messages. Press OK key to check the details of message, or press left soft key to access Options:

- View: Check the message.
- Reply: Reply text message to the sender.
- Call sender: Select SIM1/2 voice call to call the sender.
- Forward: Send the message to others.
- Delete: Confirm whether to delete the message.
- Delete all: Confirm whether to delete all messages.
- Save to Phonebook: Save the number to the contacts.
- Delete several: Mark one or more messages to delete.

4.1.3 Drafts

You can save unsent and edit incomplete messages in draft box. Press left soft key to access to Options:

- View: Check the message.
- Send: Enter number or Add from Phonebook and select SIM1/2 to send the message.
- Edit: Edit the message.
- Delete: Confirm whether to delete the message.
- Delete all: Confirm whether to delete all messages.
- Delete several: Mark one or more messages to delete.

4.1.4 Outbox

Checks the information of unsuccessfully sent message in Outbox. Press left soft key to access to Options:

- View: Check the message.
- Resend: Send the message once more.
- Edit: Edit the message.
- Delete: Confirm whether to delete the message.
- Delete all: Confirm whether to delete all messages.
- Delete several: Mark one or more messages to delete.

4.1.5 Sent Messages

Check the message in sent box. Select one message to open, or press left soft key to access Options:

- View: Check the message.
- Forward: Send the message to others.
- Delete: Confirm whether to delete the message.
- Delete all: Confirm whether to delete all messages.
- Delete several: Mark one or more messages to delete.

4.1.6 SMS settings

- SIM1/SIM2: Set SMSC address, Delivery report, Reply path and Voicemail server.
- Memory status: Check the message memory of SIM cards and phone.
- Save sent message: Whether to turn on the function to save sent message.
- Preferred storage: Select SIM or Phone as preferred storage.

4.2 File manager

Enter File manager, you can check the files store on phone or memory card. Select one file and press left soft key, you can do some options.

4.3 Services

If your SIM card supports STK function, the phone can display different first level menu according to different STK card. This function needs the network provider support. If user finds STK function can't operate normally, please contact the network provider. If the network provider does not support this function, we do not claim any responsibility whatsoever.

4.4 Multimedia

4.4.1 Image viewer

Enter Image viewer, you can choose photos to view or return. Press left soft key to access to Options: View, Browse style, Send, Use as, Rename, Delete, Storage and Image information.

4.4.2 Video recorder

After enter Video recorder, press OK key to shoot, press left soft key to access Options, press right soft key to back.

4.4.3 Video player

Preview the videos. Press Up and Down navigation key to adjust volume. Press * and # key to switch the play screen mode. Press OK key to play/pause the video. Press left soft key to access Options.

4.4.4 Sound recorder

You can take a recorder in this function. Press left soft key to enter and select New record to record. After record, press left soft key to access Options. After entering the record file list, select one file, press left soft key to access Options.

4.4.5 FM radio

Enter FM radio. Press OK key to turn on/off the radio. Press left/right navigation keys to change channels, press up/down navigation keys to change frequency manually, press * key and # key to adjust volume. Press the left soft key to access Options.

4.5 Music

This function menu is used to store and play the audio files. Press the left soft key or OK key to enter and then use the navigation keys and OK key to operate audio player. Press Up and Down navigation key to adjust volume. Press left soft key you can access List.

4.6 Camera

Press left soft key or OK key to enter. The photo can be pre-viewed in the screen; press OK key to shoot and right soft key to back, left soft key to access Options.

4.7 Profiles

This phone provides several profiles, by pressing left soft key or OK key, you can enter options to set (expect Silent): Activate, Customize, and Reset.

4.8 Symphony D24

This phone provides the Features of SymphonyD24, Contact us and Hotline Number.

4.9 Phonebook

In the Phonebook, you can store contacts' personal information and numbers while also search for previously stored contacts.
— Select Add new contact:

You can save new contact To SIM1/2 or To Phone.

— Select one contact and press left soft key to access options:

- View: Check the detailed information of the contact.
- Send text message: Edit text message and select SIM1/2 to send message.
- Call: Select SIM1/2 voice call to call the number
- Edit: Edit the contact
- Delete: Confirm whether to delete the contact
- Copy: Copy the contact To Phone, To SIM1, To SIM2.
- Add to Blacklist: Refuse the phone number to income a call.
- Phonebook settings: Set Preferred storage, Speed dial, Extra numbers, Memory status, Copy contacts, Move contacts and Delete all contacts.

4.10 Settings

4.10.1 Phone settings

— Time and date

You can select Set home city, Set time/date, Set format and Update with time zone.

— Language

You can choose several languages under this function.

— Pref. input method

Select one input method as preferred input method.

— Display

- Wallpaper

You can set wallpaper under this function.

- Screen auto lock

Set the Screen lock on or off. When it is on, you can set the time to lock the screen automatically.

- LCD backlight

Set the backlight level and time.

- Screen saver

Set the Screen saver on or off.

- Power on Display

Select System or User defined.

- Power off Display

Select System or User defined.

- Show date and time

Select On or Off.

— **Shortcuts**

Set shortcut list.

— **Dedicated keys**

Set shortcut functions for navigation keys.

— **Flight mode**

Turn on the flight mode, the functions about sim cards can't use.

4.10.2 Security settings

— **SIM 1/SIM 2 security**

- PIN lock

PIN number setting can avoid unauthorized usage of SIM card. If PIN number has been wrongly inputted for 3 times, the SIM card will be locked. PUK number is needed to unlock the SIM card. Please contact the network provider if you don't know the PUK number.

- Change PIN

Input old SIM1/2 PIN, and then input new PIN, input the PIN code again to confirm. Before change PIN, you need to turn on PIN lock.

- Change PIN2

Input old SIM1/2 PIN2, and then input new PIN2, input the PIN2 code again to confirm.

— **Phone security**

- Phone lock

Input phone password to turn on/off phone lock. The default

password is 1122.

- Change password

Input old password, and then input new password, input the new password again to confirm.

4.10.3 Network settings

— SIM1/SIM2

- Network Selection

This function can let you select the network Manual or Automatic.

4.10.4 Dual SIM settings

You can select Dual SIM open, Only SIM 1 open, and Only SIM 2 open.

4.10.5 Connectivity

— Bluetooth

This mobile phone support Bluetooth wireless connection. You can establish wireless connection between mobile phone and device to realize voice communication, data exchange and synchronization.

- Power

Press Left soft key or OK key to turn on/off.

- Visibility

Press Left soft key or OK key to show/hide the phone.

- My device

Can searching new device.

- My name

You can view and edit the device's name.

4.10.6 Restore settings

Input default password 1122 to restore factory settings.

Delete user settings and restart the phone.

4.11 Call center

4.11.1 Call history

— Select Call history and press Navigation key to switch the tab of call history.

- Missed calls: Display the latest missed calls list.
- Dialed calls: Display the latest dialed calls list.
- Received calls: Display the latest received calls list.
- All calls: Display the latest all calls list.
- Delete call logs: Can delete the call logs.

4.11.2 Call settings

— SIM1/2 call settings: Set Call waiting, Call divert and Call barring.

- Call Waiting

Set the mode of call waiting, this function need to be activated.

- Call Divert

When the call divert is activated, incoming calls will be diverted to voice mail or other phone numbers according to the call divert settings.

- Call Barring

When the call barring is activated, some of the calls will be barred according to the call barring setting condition. Contact your service provider to sign up for call barring.

— Advanced settings

- Blacklist: To avoid incoming calls of some phone numbers.
- Auto redial: Set: On/ Off.
- Call time reminder: Set: Off/ Single/ Periodic.
- Answer mode: Set: Any key or Auto answer when headset mode.

4.12 Tools

4.12.1 Torch

Press the left soft key to turn on or off the torch light.

In standby mode, long press 0 key to turn on/off it.

4.12.2 Calendar

You can use this feature to view the year, date and term easily.

Use navigation keys to navigate other date. Press left soft key, you can enter to submenu to do options.

4.12.3 Alarm

The alarm clock feature sounds an alert or makes a vibration alert at a time you specify. There are 5 alarm clocks can be edit and set.

4.12.4 World clock

By pressing left/right navigation keys to change time zone on world map, you can check time and date of different cities and regions.

4.12.5 Calculator

This feature can use your phone as a calculator for simple calculations. Press number keys to enter the numbers. Use following keys to calculate:

Navigation keys: +, -, ×, ÷

OK key: Show the calculation result.

* Key: Input two zero.

Key: Decimal point.

5. Care and Maintenance

Battery care

- Your device is powered by a rechargeable battery. When the

power is weak, please charge the battery. In order to extend the lifespan of the battery, use all the battery's power before recharging.

- Unplug the charger from the electrical plug and the device when not in use. Do not leave the battery connected to a charger more than a week. Overcharging may shorten its lifespan.
- Extreme temperatures can affect the ability of your battery to charge. Battery needs the fit temperature. If the surrounding temperature is over 40°C, the battery cannot be charged.
- Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) Short-circuiting the terminals may damage the battery or the connecting object.

- Leaving the battery in hot or cold places, such as in a closed car in summer or a freezer in winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 59°F and 77°F (15°C and 25°C). A hot or cold battery may not function temporarily, even when the battery is fully charged.
- Battery performance is particularly limited in temperatures below freezing.
- Do not dispose of batteries in a fire! Dispose of batteries according to local regulations. Please recycle when possible. Cell phones are not considered household waste.

Mobile phone maintenance

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode

electronic circuits. If your device does get wet, remove the battery and allow the device to dry completely before replacing it.

- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.

All of the above suggestions apply to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

6. Technical Information

Size: 119*49.5*12.6 mm

Battery: 1000 mAh

Networks: GSM

Battery work times refer to the list below (Will not announce if the capacity is changed):

The operation time of the battery depends on conditions such as:

- Transmitting power level
- Signal (distance between the phone and the base station)
- Network parameters defined by the operator
- Phone use (Camera,SMS)
- Charging procedure used

Exclusions:

Subject to the exclusions contained below:

1. Damage due to the improper use.
2. User does not follow the manual.

Explanation:

The company has the final right of the explanation for this document.

Software upgrades will not be announced.

All the configurations mentioned in this user manual is only for reference; please refer to the actual phone.