

**MP-1003**  
**DIGITAL AUDIO PLAYER**

**USER MANUAL**

Thank you for purchasing this product.  
For optimum performance and safety, please read this instruction manual carefully.  
Before connecting, operating or change settings for this product, please read the instructions completely. Moreover, you are suggested to keep this manual for future reference.

We reserve the right to make changes in the specifications and other information contained in this document without prior notification. To get updated product information, please contact the distributor.

**Features:**

- Support format MP3 music file
- Support SD/MMC card up to 1GB
- LCD Screen
- EQ Function: Normal/Jazz/Rock/Classic/Bass
- Hold key
- Battery life time up to 10 hours (with 1xAAA battery)
- Electronics volume control

**System Requirements:**

Pentium 200 MHz  
32MB RAM  
15MB hard disk space  
Available USB port  
CD-ROM or DVD-ROM Drive  
Microsoft Windows 98SE/Me/2000/XP,Mac 9.0 or above

## INDEX

Features.....	1
System requirements.....	1
Index.....	2
Overall view of display.....	3
Operation.....	3
Software installation.....	4
USB storage.....	4
Common malfunction resolve.....	5
Specification.....	6
Care and maintenance.....	7

### Overall View of Display



### Operation

- Key:** Power ON/Power Off/Stop/Play/Pause:
  - Press and hold to power on the player
  - Play/Pause/Stop:
    - Press and hold to power off the player
- Volume Up/Volume Down**
  - Press **+** to increase the volume level
  - Press **-** to decrease the volume level

Note: Do not set the volume level too high. Avoid using the equipment continuously for a long period of time to minimize impairs to your hearing.

- Key:**
  - Press **Key** to skip to next track
  - Press **Key** and hold to fast-forward within the current track
- Key:**
  - Press **Key** to skip to previous track
  - Press **Key** and hold to fast reverse within the current track
- Key:**
  - Press **Key** to select EQ mode : NORMAL ,JAZZ , ROCK , CLASSIC , BASS

**HOLD key:**  
Push right: all key locked and data under protection.

**Battery power display:**



When battery power is too low, device will turn off automatically  
Playing time depends on playing volume, music type and operation frequency.

**Software installation:**

Insert the software installation CD into the CD-ROM drive.  
Run "setup.exe", and then follow installation process step by step.

**USB storage**

- Plug and play as a USB storage device
- Driver need only under windows 98 system.
- When MP3 player connects with PC, all MP3 player functions are disabled, except working as a USB storage device.
- Please safely remove your device from PC when operating.

**Common malfunction resolve:**

Problems	Resolve
Can not turn on the player	Check if the battery is no power
Can not operate	Check if the battery is no power Take out the battery, put it back and turn on the player again.
Can not play music	Check if the battery is no power Check if the HOLD key locked Make sure the volume is not in "o" Make sure the music file type is compatible to the player. Format the player.
Device can not be recognized by PC	Turn on the player and then connect to PC. Install the driver again.

**Specification**

Features	Description
Usb interface	USB2.0
Frequency response range	20Hz-20KHz
SNR	>87dB
Read/write speed	2MBs/2MBs
Earphone output	(L) 10MW + (R) 10MW (32 ohm)
Harmony distortion	<0.05%
Display	Segment display
Power supply	1 x AAA battery
Playing time	About 10 hours
File format	MP3 (8-320Kbps)
System requirement	Window98 / 98SE / ME / 2000 / XP

**Care and maintenance:**

- Do not set the volume level too high. Avoid using the equipment continuously for a long period of time to minimize impairs to your hearing.
- Extreme temperatures may have a temporary effect on the operation of your MP3 player. This is normal and does not indicate a fault.
- Do not modify or disassemble the equipment. There are no user serviceable parts.
- Vibration during walking or exercising will not affect the MP3 player. However, dropping the player or dropping a heavy object on the player may result in distorted sound.
- Avoid contact with liquids, If the equipment becomes wet, remove the power immediately and contact our service center.
- Do not leave the equipment in direct sunlight or a humid, dusty or hot area.
- Keep metallic and magnetic items that may accidentally touch the terminals away from the equipment.
- Do not use this product when driving.