


# Oster®

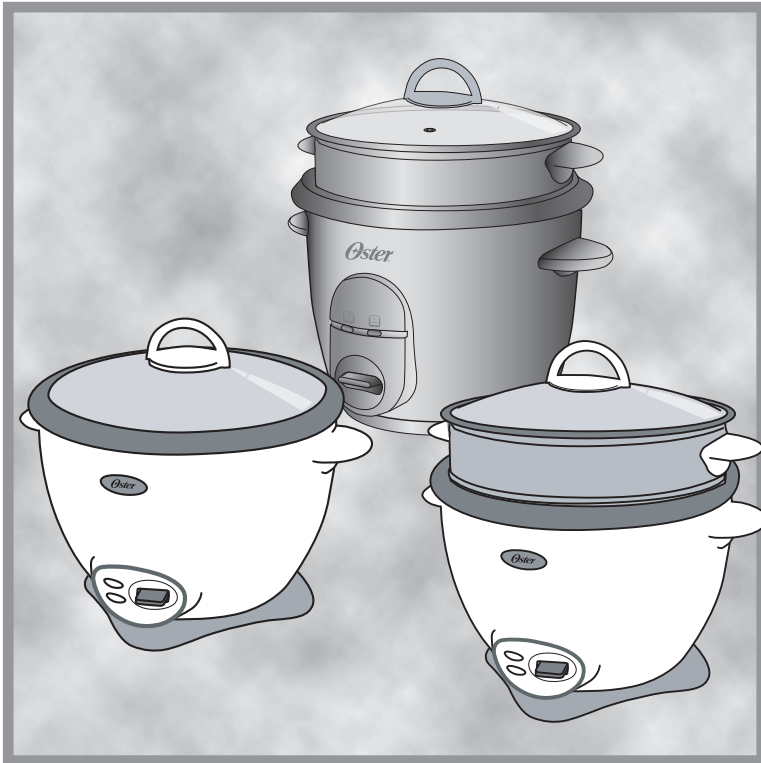

MODELS


**CKSTRC4722-049**  
**CKSTRC4728-049**  
**CKSTRC4731-049**

## INSTRUCTION MANUAL RICE COOKER/ STEAMER

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety instructions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS BEFORE USING YOUR RICE COOKER.**
2. **DO NOT** touch hot surfaces . Use pot holders when removing Lid or handling hot containers to avoid steam burns.
3. To protect against risk of electric shock, do not immerse the Heating Body in water or other liquids.
4. Unplug from outlet when not in use. Unplug before putting on or taking off parts, and allow to cool before cleaning.
5. **DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to an Authorized Oster Service Center for examination, repair or adjustment.
6. **DO NOT** use outdoors.
7. **DO NOT** let Cord hang over edge of table or counter, or touch hot surfaces.
8. **DO NOT** place on or near a hot gas or electric burner, or in a heated oven.
9. Extreme caution must be used when moving an appliance containing hot food or water or other hot liquids.
10. **DO NOT** use appliance for other than its intended use.
11. Lift and open Lid carefully to avoid scalding and allow water to drip into the Inner Pot.
12. **DO NOT** operate this appliance without the Lid in place on the unit. Steam is generated during use.
13. The use of accessory attachments not recommended by this appliance manufacturer may cause hazards.
14. To disconnect, remove plug from outlet.
15. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they **DO NOT** play with the appliance.
16. Close supervision is necessary when any appliance is used by or near children, or incapacitated individuals.
17. This appliance is not intended to be operated by means of an external timer or separate remote-control system.
18. This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments farm houses by clients in hotels, motels and other residential type environments bed and breakfast type environments.


**THIS UNIT IS FOR HOUSEHOLD USE ONLY**

# SAVE THESE INSTRUCTIONS

If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance and the cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

**DO NOT IMMERSE THE HEATING BODY OF THE RICE COOKER IN WATER OR ANY OTHER LIQUID!**

## DESCRIPTION OF THE APPLIANCE

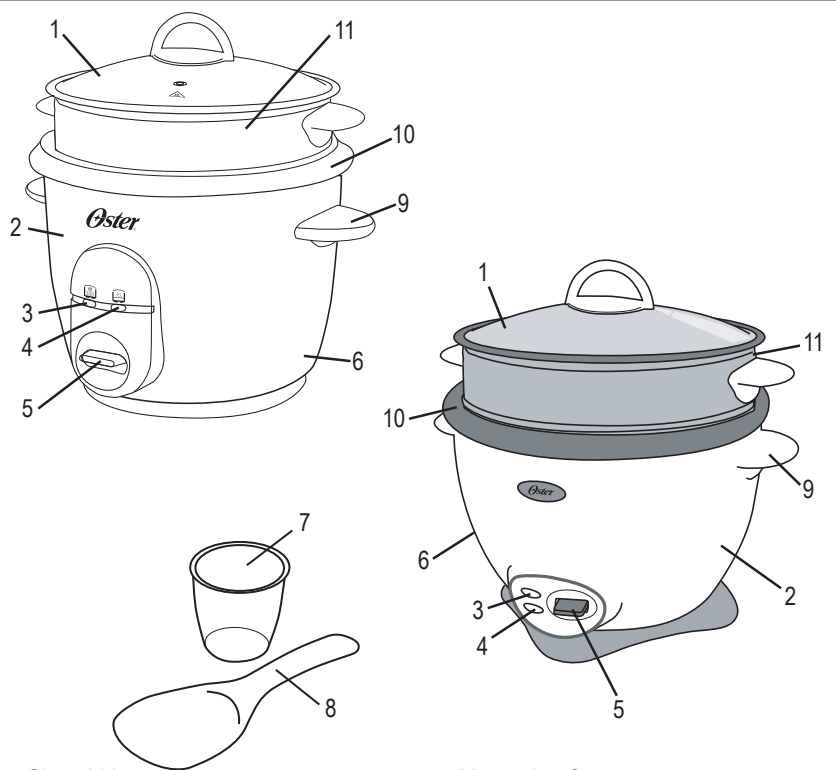

1. Glass Lid
2. Heating Body
3. Keep Warm Light (yellow)
4. Cook Light (red)
5. On-Switch Button
6. Power Cord

7. Measuring Cup
8. Paddle
9. Handle
10. Inner Pot
11. Steaming Tray (models CKSTRC4722, CKSTRC4731 only)

# INSTRUCTIONS FOR USE

## BEFORE USING YOUR OSTER® RICE COOKER

Before using your OSTER® Rice Cooker for the first time, clean the Glass Lid, Inner Pot, Paddle, Steaming Tray (models CKSTRC4722, CKSTRC4731 only) and Measuring Cup according to the user maintenance instructions.

1. Make sure appliance is unplugged.
2. Make sure to use the measuring cup included with the unit.
3. Using the measuring cup (180ml) included with the unit, place 1 measuring cup of uncooked regular rice and 2 measuring cups of water. One measuring cup of uncooked rice will make two measuring cups of cooked rice.  
**NOTE:** The highest marking shown on the measurement cup is 160ml, but the maximum capacity of the measurement cup is 180ml at full cup level.
4. For brown rice, place 1 measuring cup of uncooked brown rice and 3 measuring cups of water. For stickier rice, add slightly more water. For fluffier rice, use slightly less water.
5. The maximum capacity for your rice cooker :  
CKSTRC4722: 3 measuring cups (each 180ml) of uncooked rice makes up to 1L cooked rice  
CKSTRC4728: 7 measuring cups (each 180ml) of uncooked rice makes up to 2.5L cooked rice  
CKSTRC4731: 10 measuring cups (each 180ml) of uncooked rice makes up to 3.6L cooked rice
6. Set the Inner Pot into the Rice Cooker. Make sure that the Inner Pot sits directly in contact with the heating plate by turning it slightly from right to left until it is seated properly.
7. Cover with Lid. **DO NOT OPERATE THIS APPLIANCE UNCOVERED. STEAM IS GENERATED DURING USE.**
8. Plug the Power Cord into an electrical outlet. Activate the Rice Cooker on by pushing down the On-Switch Button down. Make sure the Cook Light (red) is on.
9. After 15 minutes mix the rice. Lift and remove the Lid carefully to avoid scalding and allow water to drip into the Inner Pot. Use the Paddle or another long handheld utensil to scoop and mix the rice. After mixing, cover the Inner Pot with the Lid.
10. When your rice is cooked, the Rice Cooker will automatically switch to the warm function and the Keep Warm Light (yellow) will turn on. The Rice Cooker will keep the rice warm until the unit is disconnected from the wall outlet.
11. The Rice Cooker will automatically keep rice warm at 140°F – 175°F (60°C –80°C).
12. Allow the appliance to cool completely before cleaning.
13. Disconnect the plug from the wall outlet when not in use.

**NOTES:** Wash the rice in a separate bowl, prior to cooking, if desired. For softer rice, we suggest preparing rice and water in the Inner Pot and letting soak for 10 – 20 minutes before cooking.

## INSTRUCTIONS TO REHEAT RICE

To reheat cold rice, add 1/4 cup (4 Tbsp.) of cold water per cup of cooked rice, stir to mix, then press On-Switch Button to start cooking.

When rice is warm, the Rice Cooker will automatically switch to the keep warm function.

## USING THE STEAMING TRAY

(MODELS CKSTRC4722 & CKSTRC4731 ONLY)

Steam cooking vegetables retains more nutrients than boiling or baking, while preserving the bright, natural color.

1. Prepare vegetables by washing, peeling and then cutting into smaller sized pieces.
2. Make sure the unit is unplugged.
3. Fill the Inner Pot with the appropriate amount of water. (See below chart)
4. Set the Inner Pot into the heating body. Make sure that the Inner Pot sits directly in contact with the heating plate.
5. Place vegetables in the Steaming Tray and position the Tray on top of the Inner Pot. Cover with Lid. **DO NOT OPERATE THIS UNIT UNCOVERED. STEAM IS GENERATED DURING USE.**
6. Plug the Power Cord into a wall outlet. Activate the Rice Cooker by pushing down the On-Switch Button. Make sure the red Cook Light is on.
7. Time the cooking manually according to the chart below. The unit will automatically switch to the keep warm cycle once all the water evaporates. If all the water evaporates and you wish to extend the cooking cycle, add more water.
8. Once the vegetables have been steamed according to your personal preference, remove the Steamer Tray from the Rice Cooker.
9. Disconnect from the wall outlet and allow the unit to cool completely before cleaning.

VEGETABLE	QUANTITY	WATER	TIME
Green Beans	10 ounces / 300 g	1/3 Cup / 50 ml	30-35 minutes
Broccoli	10 ounces / 300 g	1/3 Cup / 50 ml	30-35 minutes
Carrots (Sliced)	8 ounces / 200 g	1/3 Cup / 50 ml	30-35 minutes
Cauliflower	8 ounces / 200 g	1/3 Cup / 50 ml	30-35 minutes
Corn (Kernel)	10 ounces / 300 g	1/3 Cup / 50 ml	40-45 minutes
Peas	10 ounces / 300 g	1/3 Cup / 50 ml	30-35 minutes
Spinach	5 ounces / 150 g	1/3 Cup / 50 ml	20-30 minutes
Mixed Vegetables	10 ounces / 300 g	1/3 Cup / 50 ml	30-35 minutes

**NOTE:** These times are approximate. It is recommended that you monitor the steaming process and adjust the cooking time according to your preference. Stir vegetables occasionally during the cooking process. When cooking rice, steaming times may vary.

# USER MAINTENANCE INSTRUCTIONS

**This appliance should be cleaned after every use.**

1. Unplug the Rice Cooker from the wall outlet when not in use or before cleaning. Never immerse the Heating Body in water or any other liquid! Allow the Rice Cooker to cool completely before cleaning.
2. Do not use abrasive cleaners or scouring pads or steel wool to clean the Rice Cooker.
3. Heating Body: lightly wipe the exterior with a damp cloth or sponge. DO NOT IMMERSE HEATING BODY INTO WATER OR ANY OTHER LIQUID. Dry thoroughly with a soft cloth.
4. Inner Pot: fill with hot water and let sit for a while and then wash with hot, soapy water using a sponge and dry thoroughly with a cloth or use dishwasher.
5. Lid, Measuring Cup, Paddle and Steaming Tray (if included): wash in warm, soapy water. Rinse thoroughly and dry. CAUTION: handle the Lid with extreme care, as it may become slippery when wet or use dishwasher.
6. Heating plate: grains of rice or other foreign matter may stick to the heating plate. These must be removed to prevent inadequate cooking. To remove cooked rice, smooth sandpaper can be used. Smooth out and polish the spot for good contact between the heating plate and the bottom of the Inner Pot.
7. There are no user serviceable parts inside this appliance. Do not attempt to repair this appliance yourself as you could render it dangerous to use.

# RECIPES

## SPANISH RICE

250 grams of sausage (chorizo)	1 medium onion
1 tablespoon yellow pepper, ground	1 teaspoon paprika
2 cups tomatoes, diced, without skin or seeds	1 cup green peas
1 red pepper, diced	2 celery stalks, sliced
1 green pepper, diced	2 cups long-grain rice
3 cups chicken broth	Salt and pepper

### Preparation

Chop the onion. In the Oster® Multi-Use Rice Cooker, sauté the sausage cut in slices, add onion, yellow pepper, paprika and tomatoes. Mix together. Add the remaining vegetables, the rice and the broth. Check seasoning, cover and cook until done. Garnish with curly parsley. Serve hot.

## FETTUCCINI WITH APPLE, SHRIMP AND CURRY SAUCE

½ kg fettuccini	4 tablespoons butter
3 tablespoons flour	1 teaspoon curry
½ cup cream	1 cup chicken broth
2 cups apples, peeled and diced	½ kg shrimp
Parmesan cheese to taste	Juice of one lemon (for the apples)

### Preparation

In the Oster® Multi-Use Rice Cooker, melt butter, add flour and curry. Cook for 2 minutes. Add cream, chicken broth, apples and shrimp. Stir until thickened. Remove from heat and keep hot. In the Oster® Multi-Use Rice Cooker, pour sufficient water and salt to cook fettuccini al dente. Serve the fettuccini with the sauce and sprinkle with Parmesan cheese.

## RICE WITH SHELLFISH

453.6 grams (1 lb) saffron rice	12 small clams
113.4 grams (¼ lb) shrimp, shelled and deveined, with or without tails	113.4 grams (¼ lb) oysters
¼ red pepper, diced	1 cup sweet peas

### Preparation

Wash clams, shucking thoroughly, and rinse well. Cook rice in the Oster® Multi-Use Rice Cooker, following the instructions on the package. Add clams, shrimp, oysters, sweet peas and red pepper five minutes before the rice is fully cooked. Mix well, without stirring. Serve with French bread croutons and a fresh salad. Option: The saffron rice may be substituted with brown rice.

## MILANESE MINISTRONE

½ kg chicken breast	2 cloves garlic, chopped
1 tablespoon basil	½ cup celery
½ cup fresh beans	½ teaspoon thyme
½ teaspoon oregano	½ cup onions, sliced
½ cup green pepper, chopped	½ cup mushrooms, sliced
½ cup squash, diced	2 cups tomatoes, diced, without skin or seeds
3 medium potatoes, peeled and diced	½ kg fine noodles
2 teaspoons of Worcestershire sauce	3 tablespoons margarine
1 cup Parmesan cheese	Salt
2 quarts water	

### Preparation

In the Oster® Multi-Use Rice Cooker, pour water and boil chicken with the salt. When chicken is cooked, remove and dice. Reserve the broth. In the Oster® Multi-Use Rice Cooker, melt butter, add garlic, onion, celery, green pepper, mushrooms, beans and squash. Sauté until soft. Add the tomatoes, then the potatoes and sauté for 5 more minutes. Add this mixture to the chicken broth, add Worcestershire sauce, the herbs bouquet (basil, thyme, oregano), salt, chicken and noodles. Cook 10 minutes until the potatoes are cooked, but firm. Add Parmesan cheese while stirring. Cook 2 minutes longer. Serve and sprinkle with more cheese.



## RICE WITH CHICKEN

2 lb rice	1 onion
3 green peppers	2 carrots
4 cloves garlic	celery to taste
4 chicken breasts	3 tablespoons salt
black pepper to taste	oregano to taste
chicken broth, 1 envelope	tomato paste

### Preparation

Cook the chicken in water, salt, black pepper, oregano, chicken broth in the Oster® Multi-Use Rice Cooker. When done, shred the chicken in the water in which it was cooked and add green peppers, onion, garlic, celery and carrots, everything well chopped. Cook 10 minutes, and add tomato paste and shredded chicken. After the sauce is cooked, add the uncooked, washed rice and cover the rice somewhat more than normal.

## RICE AND TUNA SALAD

2 cups cooked rice	2 peppers in vinegar*
1 can tuna	100 gr green olives
3 hard-boiled eggs	Mayonnaise
Salt and pepper	Lettuce leaves
Olive oil	Vinegar

### Preparation

Cook the rice in the Oster® Multi-Use Rice Cooker in the traditional manner, remove and place on a platter until it is completely cool. Dice the cooked peppers and slice the eggs. Shred the tuna and add along with the remaining ingredients to the rice, reserving some of the egg slices and olives to garnish the salad. Season with olive oil, salt, pepper and vinegar. Serve the salad on a platter with lettuce leaves and garnish with hard-boiled egg and olives.

**\* Peppers in vinegar: wash and cut the peppers in two lengthwise. Remove the seeds and cook the peppers in a saucepan with two cups water and one-half cup vinegar with a pinch of salt. After 15 minutes, remove from heat.**

## RICE PUDDING

1 cup rice	3 cups water
1 cinnamon stick	2 whole cloves
1¼ cup evaporated milk	1¼ cup condensed milk
1 teaspoon grated lemon and orange peel	½ cup dark raisins
1 teaspoon vanilla	¼ cup grape brandy
1 egg yolk	Powdered cinnamon

### Preparation

In the Oster® Multi-Use Rice Cooker, cook the pre-washed rice with 3 cups of water, cinnamon stick and cloves. Once the rice is cooked, add evaporated and condensed milk, grated lemon and orange peel, and raisins. Continue stirring until set. Add vanilla, grape brandy and the egg yolk well beaten. Sprinkle with cinnamon and serve.

# WARRANTY

Jarden Consumer Solutions of India Private Limited (hereinafter referred to as “JCS”) warrants that, for a period of two (2) years from the date of purchase of this product as evidenced in the cash memo (“Warranty Period”), this product will be free from defects in material and workmanship (the “Warranty”). Please preserve the warranty card and the cash memo of the product duly stamped and signed by the dealer, as this will be required for any claims under this Warranty.

- The rights and benefits under this Warranty are additional to your statutory rights, which are not affected by this Warranty.
- During the Warranty Period, JCS, at its sole choice, will either repair or replace this product or any component of the product found to be defective free of cost through (the dealer from whom the product was purchased or through the service center listed in the card – business people to confirm), provided that:
  - JCS is promptly informed of the defect;
  - The product has not been altered in any way or subjected to misuse or repair by the person other than a person authorized by JCS;
  - This Warranty, duly filled, stamped and signed by the dealer is made available.
- The Warranty provided herein is towards the original purchaser and is not transferrable to any third party.
- Any repaired or replaced product will be warranted on these terms for the remaining portion of the Warranty in the country where the product was purchased.
- Liability for consequential loss or damage is neither accepted nor is it implied.
- This Warranty is in lieu of all others expressed or implied and does not cover the following:
  - a. If product was use in any manner other than the intended use.
  - b. If the product has not been used according to the instruction manual/user’s manual, included with the product.
  - c. If the defects are caused by improper use or reckless use.
  - d. If the product was altered or repaired by anyone other than those authorized by JCS.
  - e. If installation of the product is not done as per the printed instructions provided along with the product.
  - f. If the defects are caused by fire, flood, and other act of god.
  - g. If the defects are caused by use of incorrect current or voltage or faulty electric power supply.
  - h. Normal wear and tear of parts and accessories resulting from regular use.
  - i. Damage resulting from transportation, accidents, mishandling or negligence on the part of the consumer.
  - j. The following part/components:
    - Broken glass or ceramic parts
    - Light bulb
    - Accessories
  - k. If the product is put to industrial or commercial use.
    - JCS will not be responsible for any delay in servicing due to non-availability of any components or due to reasons beyond the control of JCS.
    - Any failure of the product to perform any purpose other than the intended purpose shall not be considered as a default under this warranty.
    - In any event, if JCS becomes liable for damages incurred in connection with these presents, then the liability of JCS will be limited to the amount equal to the sale invoice amount paid by you.

Waste electrical products should not be disposed off with household waste. Please recycle where facilities exist.

# AUTHORIZED SERVICE CENTERS

Region	State	City	Name	Address	Contact Person	Contact No.
East	West Bengal	Kolkata	Jeeves Consumer Services Pvt Ltd	356, Jodhpur Park, Kolkata - 700068	Someswar Basu	(033) 40012100
	West Bengal	Kolkata	Southern Service	6/19A, Prince Anwarshah Road, Poddar Nagar, Kolkata - 700068	Subrata Manna	(033) 24729651 / 65488822
	West Bengal	Kolkata	Baishanu Service Care	55D, Adaya Nath Saha Road, Lake Town, Near Jaya Cinema, Kolkata - 700048	Piyush Nandan	(033) 40664210
	West Bengal	Howrah	Time n Service	37 & 38, Mohenath Lane, Salkia, Howrah - 711106	Tapas Hazra	(033) 65639720
	West Bengal	Hooghly	DNP Enterprises	52, Sahaganj Main Road, PO. Sahaganj, Near Bandel Station, Hooghly - 712104	Indrajit Bag	(0) 9163668360
	West Bengal	Barrackpore	Balaji Enterprise	4/E/A Barasat Road, Barrackpore, Dist. North 24 Parganas, Near 15 No. Rail Gate, Barrackpore - 700122	Pradip Kr Ghosh	(033) 25451224
	West Bengal	Siliguri	S D Electronics	Deys Lodge,138/69/57, Nazrul Sarani, Ashrampara, Siliguri - 734001	Arup Dey	(0353) 2526028
	West Bengal	Asansol	Yes Service	Hutton Road, Near Mahal Banquet Marriage Hall, Asansol - 713301	Sarfaraz Ahmed	(03228) 2280029
	Assam	Guwahati	Multi Track Services	G S Road, Ground Floor, Bora Service Station, Ulubari, Guwahati - 781007	Kallol Dutta	(0361) 2457296

# AUTHORIZED SERVICE CENTERS

North	Delhi	Delhi	Jeeves Consumer Services Pvt Ltd.	# E-10, Arya Samaj Road, School Road, Uttam Nagar, Delhi - 1100059	Md Khalid Pervez	(011) 45785915
	Delhi	Delhi	Jeeves Consumer Services Pvt Ltd.	R-32, 2nd Floor, Vikas Marg, Shakarpur, Opp. Heera Sweets, Metro Pillar # 46 , Delhi - 1100092	Manjeet Singh	(011) 47754764
	Delhi	Delhi	S T Services	M-131, 1st Floor, Guru Harkrishan Nagar, Paschim Vihar, New Delhi - 110041	Vipin Yadav	(011) 32958438 / 45586987
	Haryana	Gurgaon	Jeeves Consumer Services Pvt Ltd.	4/18 A, 1st Floor, Laxmi Garden, Behind Police Chowki, Khandsa Road, Gurgaon-122001	Karamvir Fogaat	(0124) 4073434
	Haryana	Faridabad	Jeeves Consumer Services Pvt Ltd.	5H-49,1st Floor, NIT Faridabad -121001	Manoj Kumar Panwar	(0129) 4163003
	Uttar Pradesh	Noida	Jeeves Consumer Services Pvt Ltd.	1st Floor, Above Punjab ATM, Sector-22, Chaura More Main Road, Near Oriental Bank of Commerce, Opp.Rajkiya Inter College, Noida, U.P - 201301	Devender Singh	(0120) 4162644
	Uttar Pradesh	Lucknow	Swastik Customer Care	A-1/3, SEC-H Aliganj, Near Kendriya Bhawan, Lucknow - 226020	Uma Shankar Mishra	(0522) 3298003 / 4102581 / 4102582
	Uttar Pradesh	Kanpur	Shubham Electronics	192,Manohar Nagar Barra -3 , Opp Deepshika Guest House, Kanpur - 208027	Suman Gupta	(0512) 2283394 / 2602029
	Uttar Pradesh	Agra	Sai Electronics	25/113, Gandhi Nagar, Agra - 282 003	Ajay Singhal / Sunil	(0562) 3297005
	Haryana	Ambala	Telecare	Old Hospital Road, Bara Thakur Dwara, Opp. Polytechnic, Ambala City - 134003	Devinder Sharma	(0171) 25567369
	Haryana	Sonipat	Saibaba Enterprises	House No. 1510, Sector - 13, Sonipat - 131001	Pramod Sharma	(0130) 6411206
	Haryana	Karnal	Jeeves Consumer Services Pvt Ltd.	Shop # 50, Ground Floor, Mayapuri, Rajiv Gandhi Marg/ Near Raj Palace, Meeraghati Chowk, Karnal - 132001	Neeraj Sharma	(0184) 4022201
	Punjab	Mohali	Jeeves Consumer Services Pvt Ltd.	# SCF-4, Basement, The High Land Society, NAV, Baltana, Zirakhpur, Mohali-140603	Shiv Dhanda	(0176) 2652574
	Punjab	Ludhiana	Jeeves Consumer Services Pvt Ltd.	Shop # 18B, Dhyan Singh Commercial Complex, Opp. Bus Stand, Ludhiana - 141001	Gurbeer Singh	(0161) 2444002
	Punjab	Jalandhar	Jeeves Consumer Services Pvt Ltd.	EH-31, Laddowali Road, Opposite Gurudwara, Jalandhar - 144001	Ashok Kumar	(0181) 2221707
	Punjab	Amritsar	Keerat Electronics	Naraingarh Bazar, Shaheed Bhagat Singh Road, Chheharta, Amritsar - 143 001	Sukhdeep / Mantreet Singh	(0183) 2450095
	Himachal	Shimla	Suvidha Electronics	Mehta Niwas, Ground Floor, Near Himfead Building, B C S, New Shimla - 171009	Rajesh Kumar	(0) 9816457886

# AUTHORIZED SERVICE CENTERS

North	Himachal	Mandi	Kuldeep Electro Care	Near FCI Godown, Kehanwal Road, Ram Nagar, Mandi - 175001	Kuldeep Singh	(01905) 222140 / 329574
	Rajasthan	Jaipur	Jeeves Consumer Services Pvt Ltd.	A-79,Subash Nagar Shopping Centre, Jaipur - 302016	Vipendra Singh	(0141) 4035102
West	Maharashtra	Mumbai	S P Services	Shop No. 10, Abdul Sattar Compound, Fitwala Road, Opp. Satguru Darshan Bldg., Near Railway Station, Elphinston Road (West), Mumbai - 400013	Palsingh Panyari	(022) 24326726 / 24312623
	Maharashtra	Mumbai	Jeeves Consumer Services Pvt Ltd.	Plot No 27/5, Pawani Chowk, Opp Mulund Darshan Building, Mulund Colony, Mulund (W), Mumbai - 400082	Ramesh Yadav	(022) 65288597
	Maharashtra	Mumbai	Jeeves Consumer Services Pvt Ltd.	Shop No.1-1A, Ground floor, Kirti Co-Op Housing Society, Ramachandra Extn Lane, Near Movie Time, Evershine Nagar, Malad(W), Mumbai-400064	Murali Joshi	(022) 65278590
	Maharashtra	Pune	Jeeves Consumer Services Pvt Ltd.	No. 337, Sai Leela, 1st Floor, Datt Wadi, Mhasoba Chowk, Pune - 411030	Saket Dubey	(020) 24321679
	Maharashtra	Nagpur	Technic Services	Khare Building, Hanuman Lane, Sitabuildi, Nagpur - 440 012	Dilip Panda	(0712) 2550076
	Maharashtra	Chandrapur	Suvidha Electronics	No. 1, Devt Appartment, Church Road, Hanuman Nagartukum, Chandrapur - 442401	Subash Deashkar	(07172) 258966 / 256453
	Maharashtra	Kolhapur	Sikir Mobiles	1492 C Ward, Laxmipuri, Opp. TATA Brand Stores, Kolhapur - 416001	Sukir Bakare	(0) 9372555011
	Maharashtra	Aurangabad	Emperor Services	S-5,Manik Arcade Kalda Corner, Opp Chowbey Hospital, Chetna Nagar, Aurangabad -31005	Mr. Willy Bento Colaco	(0240) 2350606
	Maharashtra	Nashik	Harsha Electronics	3, Talak Complex, Rachna Vidyalaya Road, Sharanpur Roda, Nashik - 422002	Pravin Patil	(0) 9422254240
	Goa	Salcete	Jolly Enterprises	Shop # G-2, 78/A Nuvem Enclave, Along NH-17 Highway, Belloy Nuvem, Salcete - 403604	John Gonzanalves	(0832)2791800
	Gujarat	Ahmedabad	Jeeves Consumer Services Pvt Ltd.	No. 37, Om Tower, Near Star Bazar, Jodhpur Cross Road, Satellite, Ahmedabad - 380015	Girish Parmar	(079) 40080485
	Gujarat	Baroda	Uday Refrigeration	G/3 Nandanvan Complex, Atma Jyoti Ashram Road, Behind Citizen Society, Ellora Park, Baroda	Shailesh	(0265) 6590948
	Gujarat	Surat	Sadgurudev	Shop No. L/6, Shankutal Complex, Beside Sangvi Tower, Near Gujarat Gas Circle, Adajan Patia, Surat - 395009	Manoj Rana	(0261) 6540417

# AUTHORIZED SERVICE CENTERS

West	Gujarat	Rajkot	PC Systems	4-Sardar Nagar (West), Tagore Road, Near Astron Circle, Rajkot-360001	Manoj Gohil	(0281) 2480479
	Madhya Pradesh	Indore	Cool Home Refrigeration	LG-70, Trade Centre, 18, South Tukogunj, Indore-452 001	Husain Anjum	(0731) 4076404
	Madhya Pradesh	Bhopal	Jeeves Consumer Services Pvt Ltd.	Ward no 47, Goyal Vihar, Ground floor, Flat no-G-1, 31-C, Zone-2, MP Nagar, Bhopal	Ram Ashish Prasad	(0755) 4059310
South	Tamil Nadu	Chennai	Jeeves Consumer Services Pvt Ltd.	New No.3, Old No.1-A, Sripuram, 2nd Lane, Royapetah, Chennai-600014	Dinesh Kumar	044-42632371
	Tamil Nadu	Chennai	G C Services	Old No. 12, New No. 37, 1st Floor, Sattanna Naichen Street, Nehru Timber Market, Choolai, Chennai - 600112	Naval R	(044) 26690084 / 42822868
	Tamil Nadu	Coimbatore	V K Engineering	108-A/92, West Ponnurangam Road, Ground Floor (Near Telephone Exchange), R.S.Puram, Coimbatore - 641002	Selvadurai	(0422) 2541172
	Pondicherry	Pondicherry	Bestronics	49, Saint Theresa Street, Pondicherry - 605001	B Jayashankar	(0) 9443728020
	Andhra Pradesh	Hyderabad	Jeeves Consumer Services Pvt Ltd.	Flat No. 205, Karan Centre, Opp. IBP Petrol Pump and Karan Hotel, Park Lane, S.D.Road, Near Paradise Circle, Secunderabad - 500003	Kumararajan	(040) 64591168
	Andhra Pradesh	Vijaywada	Jeeves Consumer Services Pvt Ltd.	Door No.25-10-10A, G.S.Raju Road, Gandhi Nagar, Near Gymkhana Road, Vijaywada - 520003	Rahamatullah Gouse Khan	(0866) 6591168
	Karnataka	Bangalore	Jeeves Consumer Services Pvt Ltd.	No. 126, 1st Floor, 8th Main J.P.Nagar, 3rd Phase, Bangalore - 560078	Ramesh Kumar	(080) 41209331
	Karnataka	Bangalore	Jeeves Consumer Services Pvt Ltd.	First Floor, Khan Bldg, 7 & 8th Cross, Jakkasandra Extension, Bangalore - 560032	Surulivel	(080) 25520424
	Karnataka	Mangalore	Jeeves Consumer Services Pvt Ltd.	1st Floor, Quadra compound, Bejai, kapikad, Kavoov Road, Mangalore -575004	Divakar Shetty	(0824) 2213699
Karnataka	Mysore	Jeeves Consumer Services Pvt Ltd.	No.1095, 1st Floor, C&D Block, Lalithadri Road, Kuvempunagar, Mysore - 570023	Venkatesh.S.Kulkarni	(0821) 4191094	



## WARRANTY CARD

© 2015 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved. Distributed by Jarden Consumer Solutions of India Private Limited, Unit B-204, Universal Business Park, Off Saki Vihar Road, Chandivali Farm Road, Andheri (E) Mumbai 400 072, India. 2 Year Limited Warranty - see inside for details. Sunbeam Products, Inc. and Jarden Consumer Solutions of India Private Limited are subsidiaries of Jarden Corporation (NYSE: JAH).  
1-800-102-6300

[www.oster.in](http://www.oster.in)

Model No. : \_\_\_\_\_

Date of Purchase : \_\_\_\_\_

Dealer's Stamp : \_\_\_\_\_

Printed in PRC

P.N. 9100990000355  
CKSTRC4722\_4728\_4731-049\_15EM1  
GCDS-OST37900-SL