



1602100

26" LCD TV



Instruction Manual

Read all of the instructions before using this TV and keep the manual in a safe place for future reference.

Contents

Caution.....	3
Safety Information	4
What's Included	5
Getting Started	6-7
Front / Side View	6
Rear View	7
Wall Mounting.....	7
Remote Control Key Functions	8-9
Operating Your Television.....	10-15
Select Your Onscreen Language Preference	10
Navigating the Onscreen Display.....	11
Choosing a TV Channel	11
Selecting Input Source	12
Video Menu Options	12
Picture Mode.....	12
Audio Menu Options	13
TV Menu Options	13
Channel Skip	14
Setup Menu Options	14
Caption.....	15
Parental Menu Control Options	16-17
Connecting to External Devices.....	18
Troubleshooting	19-20
FCC.....	21
Specifications	21
Warranty	22

Caution



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of un-insulated “dangerous voltage” within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to the persons.

Safety Information

To ensure reliable and safe operation of this equipment, please read carefully all the instructions in this user guide, especially the safety information below.

Electrical safety

 
- The TV set should only be connected to a main power supply with voltage that matches the label at the rear of the product.
- To prevent overload, do not share the same power supply socket with too many other electronic components.
- Do not place any connecting wires where they may be stepped on or tripped over.
- Do not place heavy items on them, which may damage the leads.
- Hold the main plug, not the wires, when removing from a socket.
- During a thunderstorm or when not in using the television for long periods, turn off the power switch on the back of the television.
- Do not allow water or moisture to enter the TV or power adapter. Do NOT use in wet, moist areas, such as bathrooms, steamy kitchens or near swimming pools.
- Pull the plug out immediately, and seek professional help if the main plug or cable is damaged, liquid is spilt onto the set, if accidentally exposed to water or moisture, if anything accidentally penetrates the ventilation slots or if the set does not work normally.
- Do not remove the safety covers. There are no user serviceable parts inside. Trying to service the unit yourself is dangerous and may invalidate the product's warranty. Qualified personnel must only service this apparatus.
- To avoid battery leakage, remove exhausted batteries from the remote control, or when not using for a long period.
- Do not break open or throw exhausted batteries on a fire.

Physical safety


- Do not block ventilation slots in the back cover. You may place the TV in a cabinet, but ensure at least 5cm (2") clearance all around.
- Do not tap or shake the TV screen, or you may damage the internal circuits. Take good care of the remote control.
- To clean the TV use a soft dry cloth. Do not use solvents or petroleum based fluids.
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong, the wide blade, or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs.
- Unplug the apparatus during lightning storms or when unused for long periods.
- Refer all servicing to a qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled, or objects have fallen into the apparatus, has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Please always connect your television to a power outlet with protective ground connection.

What's Included


Unit and Accessories

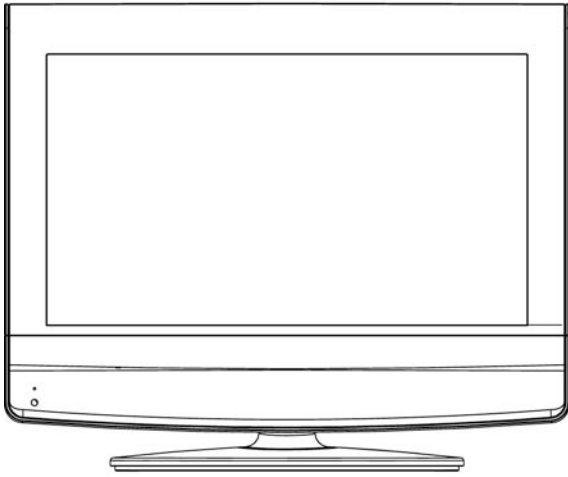


TV Set

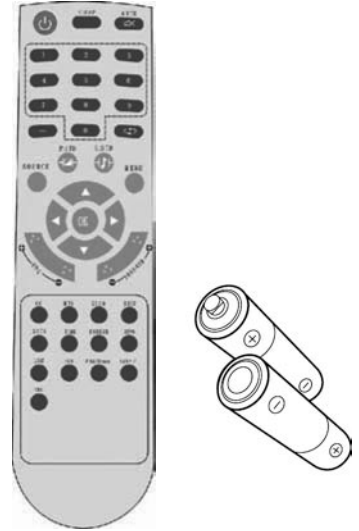 


Remote control with batteries

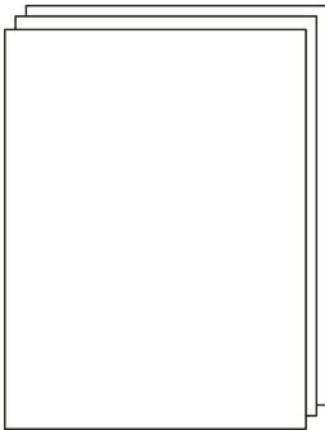 

User's Manual

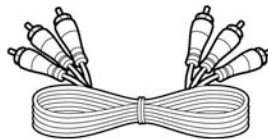 

AV connection cable

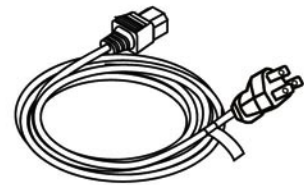 


AC Power Cable

Getting Started

Front View

 Side View

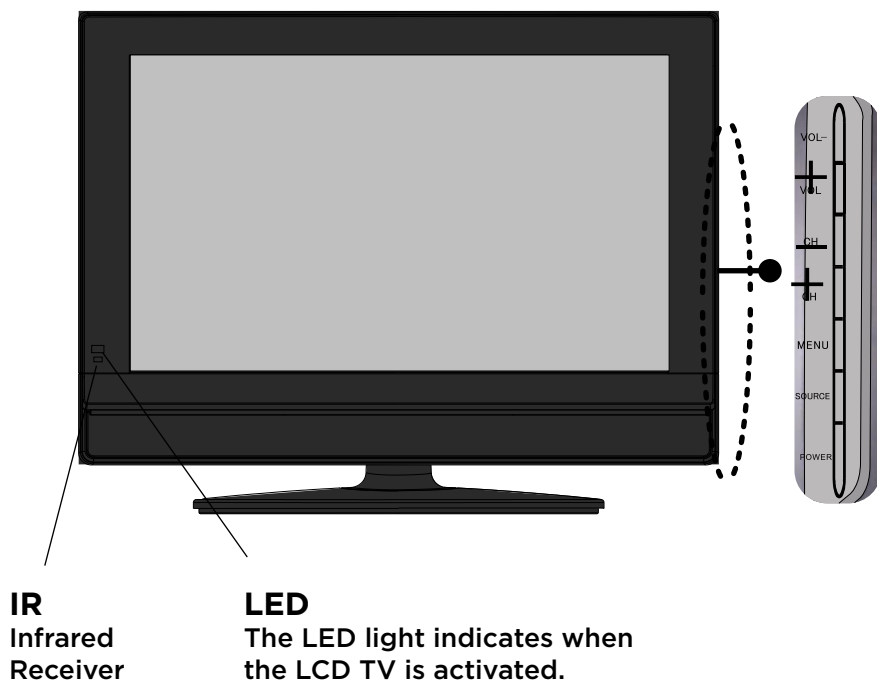

The function of the buttons are described below:

POWER: Turn on/standby the TV set.

SOURCE: Press to display the input source menu.

 
MENU: Press to display the OSD menu, press again to exit the menu

CH +/-: Press to scan through channels.

VOL +/-: Press to adjust the volume.

Getting Started

Rear View

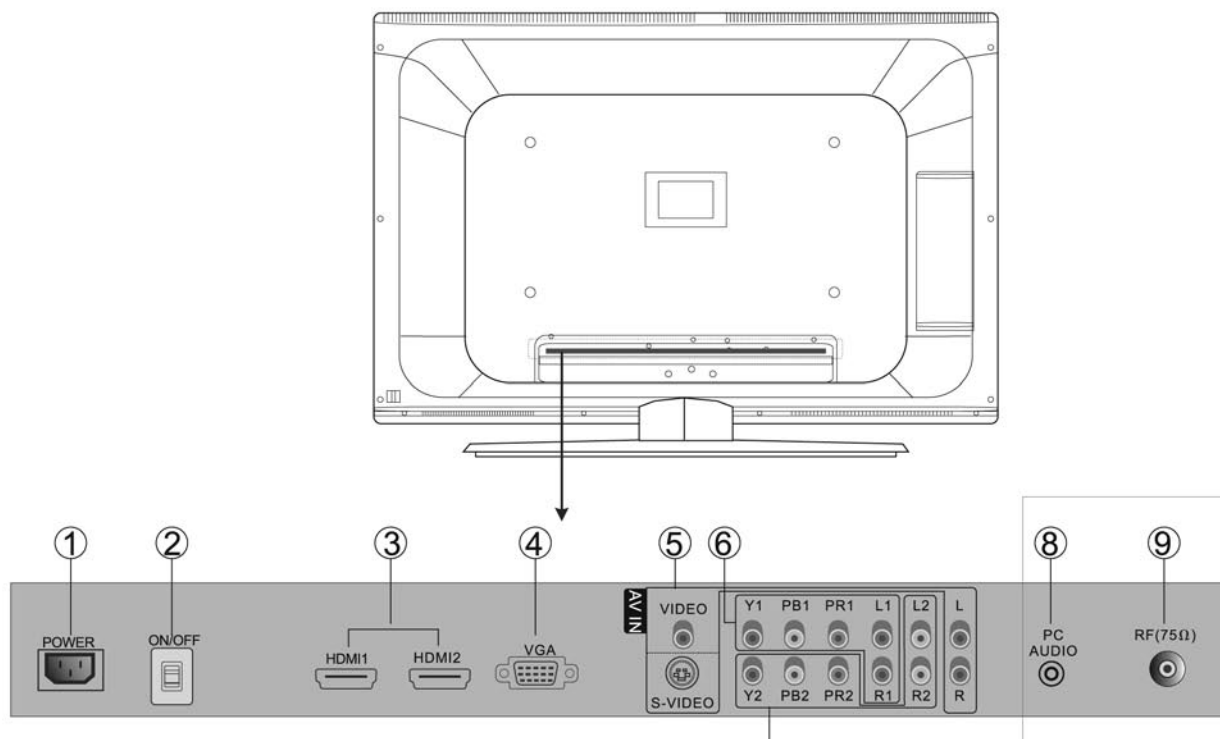


- | | |
|---------------------------------|--|
| 1. POWER : | AC Power input terminal |
| 2. ON/OFF : | Power On/Off |
| 3. HDMI1/HDMI2 : | High definition multimedia interface |
| 4. VGA : | Input terminal of simulation signal of PC |
| 5. S-VIDEO : | Colour and brightness separation input terminal |
| 6. AV IN L/R : | Input terminal and audio input terminal |
| 7. Y1PB1PR1 L1/R1 : | Difference component input terminal and audio input terminal |
| 7. Y2PB2PR2 L2/R2 : | Difference component input terminal and audio input terminal |
| 8. PC AUDIO : | Sound input terminal of VGA input and DVI |
| 9. RF (75^Ω) : | Antenna /closed circuit TV network port (75 ohm VHF/UHF) |

Wall Mounting

The TV is provided with mounting holes for a VESA approved wall mounting bracket (NOT SUPPLIED). Remove the screws holding the base to the base bracket and lift the base away (do not remove the base mounting brackets). Mount the VESA bracket using 4 x M4x8 isometric threaded screws (not supplied). Do not use screws longer than 8mm; damage will occur to the internal parts.

Caution: Your new TV is heavy; please consult with a professional wallmount installer to perform this installation.

 Remote Control Key Functions

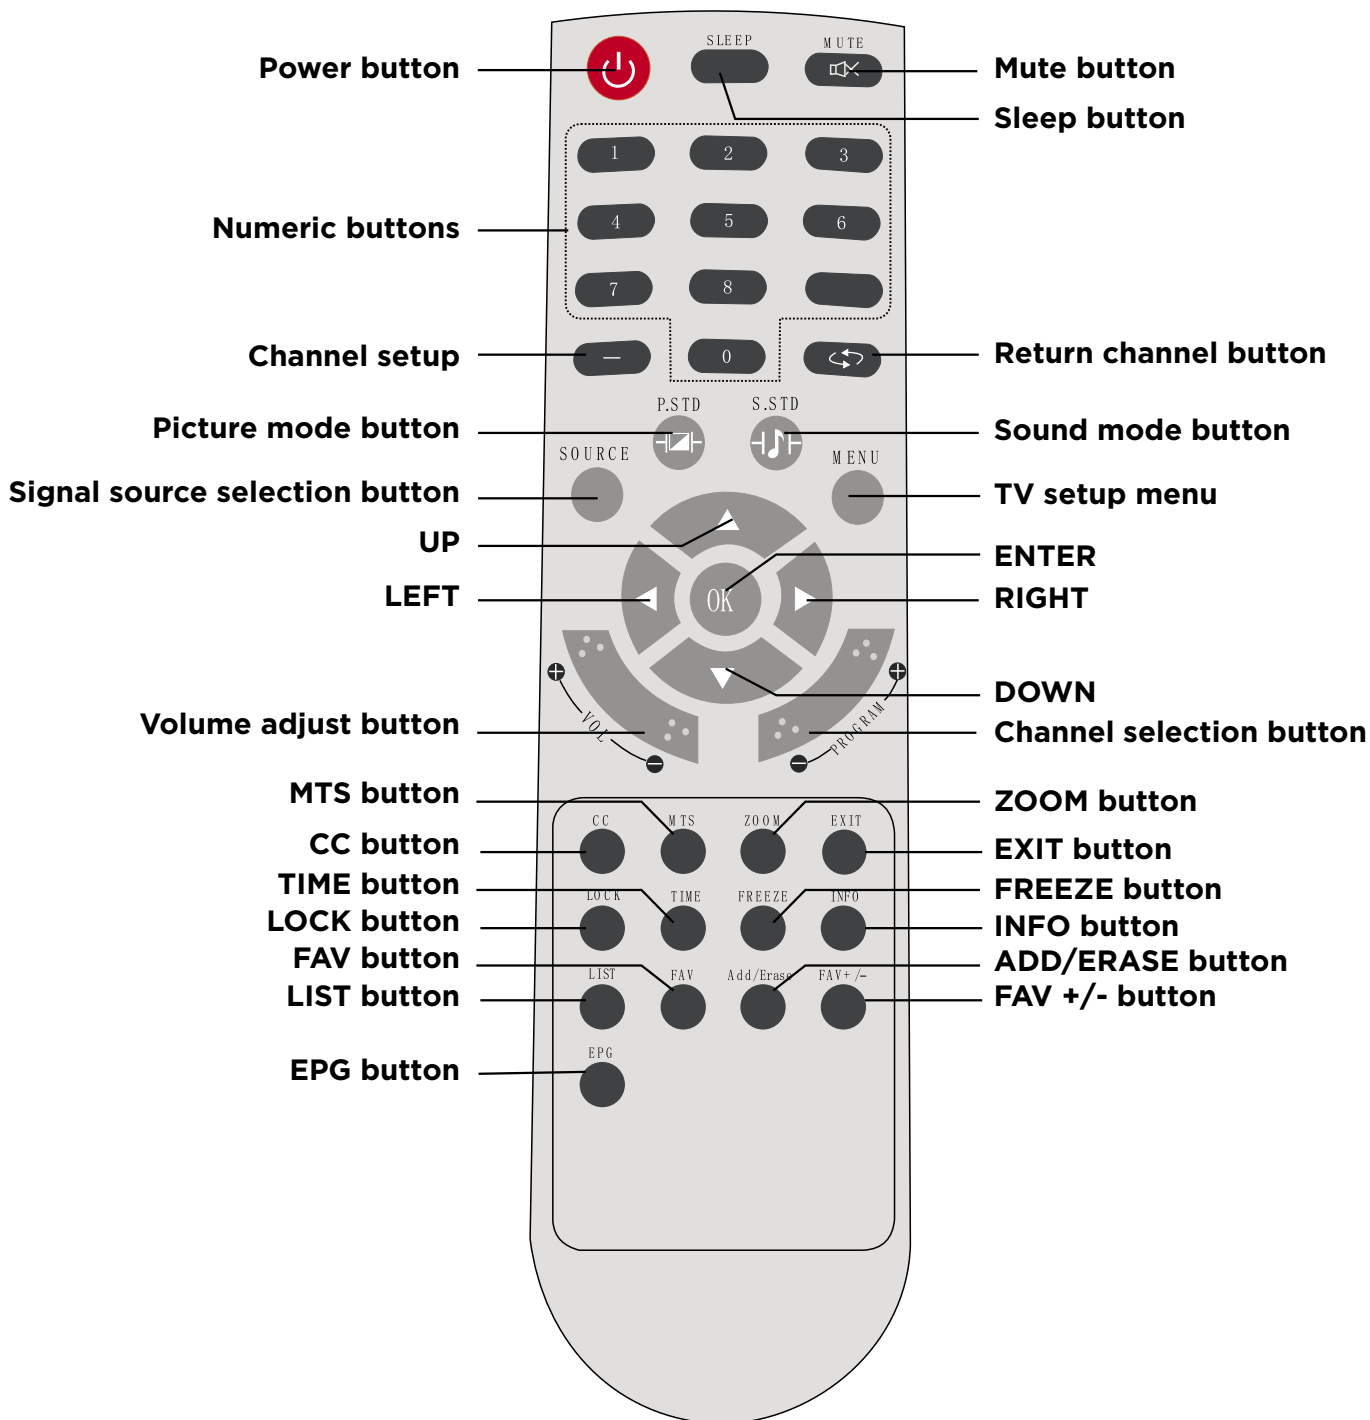

If there is light around the TV, the remote control may fail or work abnormally.
If not using the remote for a long period of time, please remove the batteries.

Remote Control Key Functions

TV Functions

POWER: Power on/off button, press once to turn TV on and press again to turn TV off.

SLEEP: Sleep button, Setting TV power off time.

MUTE: Mute button, press once to disable the audio and press again to enable the audio.

0, 1-9: TV channel selection button.

-/-- CHANNEL SETUP: Press this button to enter a program number for multiple program channels such as 2-1, etc.

↶↷: Previous channel button, return to the previous channel watched.

SOURCE: Signal source selection button (TV, AV, S-VIDEO, YBPPR2, VGA, HDMI1, HDMI2).

P.STD: P.STD button, setting the picture mode.

S.STD: S.STD button, setting the sound mode.

INFO: Press info button to view the current channel. Press again to remove the channel information.

MENU: OSD menu button, to enter the TV set up menu.

▲/▼: (Up/Down) Up and Down button of OSD menu. To change the OSD menu items.

◀/▶: (Left/Right) Left and right button of the OSD menu. To select the OSD menu items.

VOL +/-: Volume adjusting button, to increase and decrease the volume.

Program +/-: Channel selection button, to increase or decrease the channel.

LOCK: Setting up Parental control.

CC: Closed Caption select button CC1, CC2, CC3, CC4, TEXT 1, TEXT2, TEXT3, TEXT 4, OFF.

EXIT: Return to the screen.

ZOOM: Select display mode: FULL /4:3/AUTO/PANORAMA.

MTS: Press to select the audio channels.

TIME: Display timer for TV.

FREEZE: Freeze picture (note: YPBPR, HDMI, VGA source this is invalid key) for TV.

LIST: Display the program list.

FAV: Display favourite of program list

ADD/ERASE: Add or delete favourite channel.

FAV+/-: Scrolls through favourite channel memory.

EPG: Electronic Program Guide Function.

Operating Your Television

Basic Operations

Turning Your TV On and Off

TURN ON LCD TV

1. Connect to power with the main adapter and power cable, at this time the TV will enter STANDBY mode and the LED will be red.

IMPORTANT: BE SURE TO TURN THE MAIN POWER SWITCH LOCATED ON THE REAR OF THE UNIT OR YOUR TV WILL NOT POWER ON.

 
2. From the STANDBY mode, use the POWER button either on the main unit or on the remote to turn your television on.

TURN OFF LCD TV

From ON mode, use the POWER button either on the main unit or on the remote to turn your television to STANDBY mode.

Select Your Onscreen Language Preference

Note: If using your LCD TV for the first time, you should select the language which will be used for displaying menus and information boxes.

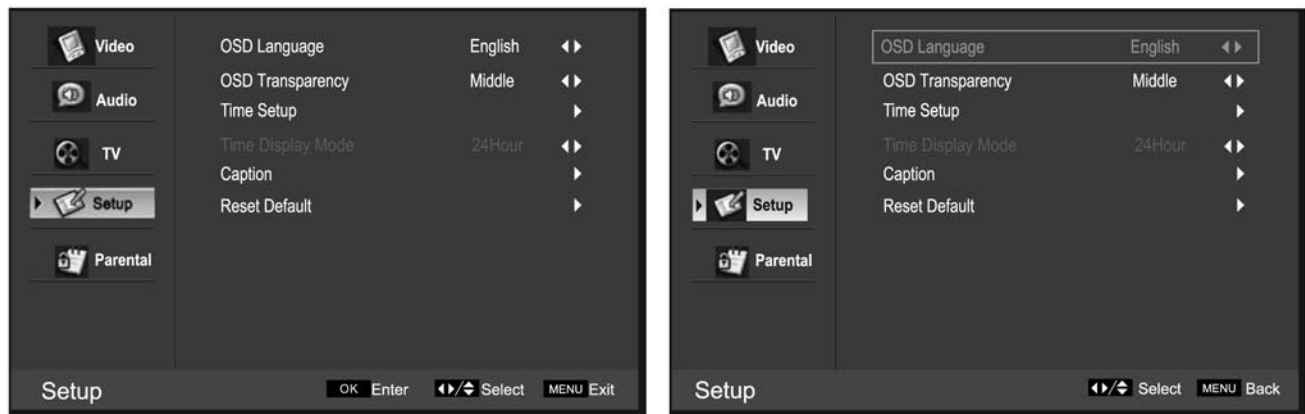

- Press MENU to display the main menu.
- Press ▲/▼ repeatedly to select the **SETUP** (left picture), press **OK** or ► button to enter (picture right).
- Select **OSD LANGUAGE**.
- Press ◀/▶ button to select your desired language.
- When you are satisfied with your choice, press the **MENU**.

 
Volume Adjustment

1. Press **VOL +/-** to adjust the volume
2. If you want to switch the sound off, press the **MUTE** , Press again to resume.

Operating Your Television

Navigating the Onscreen Display

- Press the MENU button to display the main menu.
- Use ▲/▼ buttons to navigate and select the available menus.

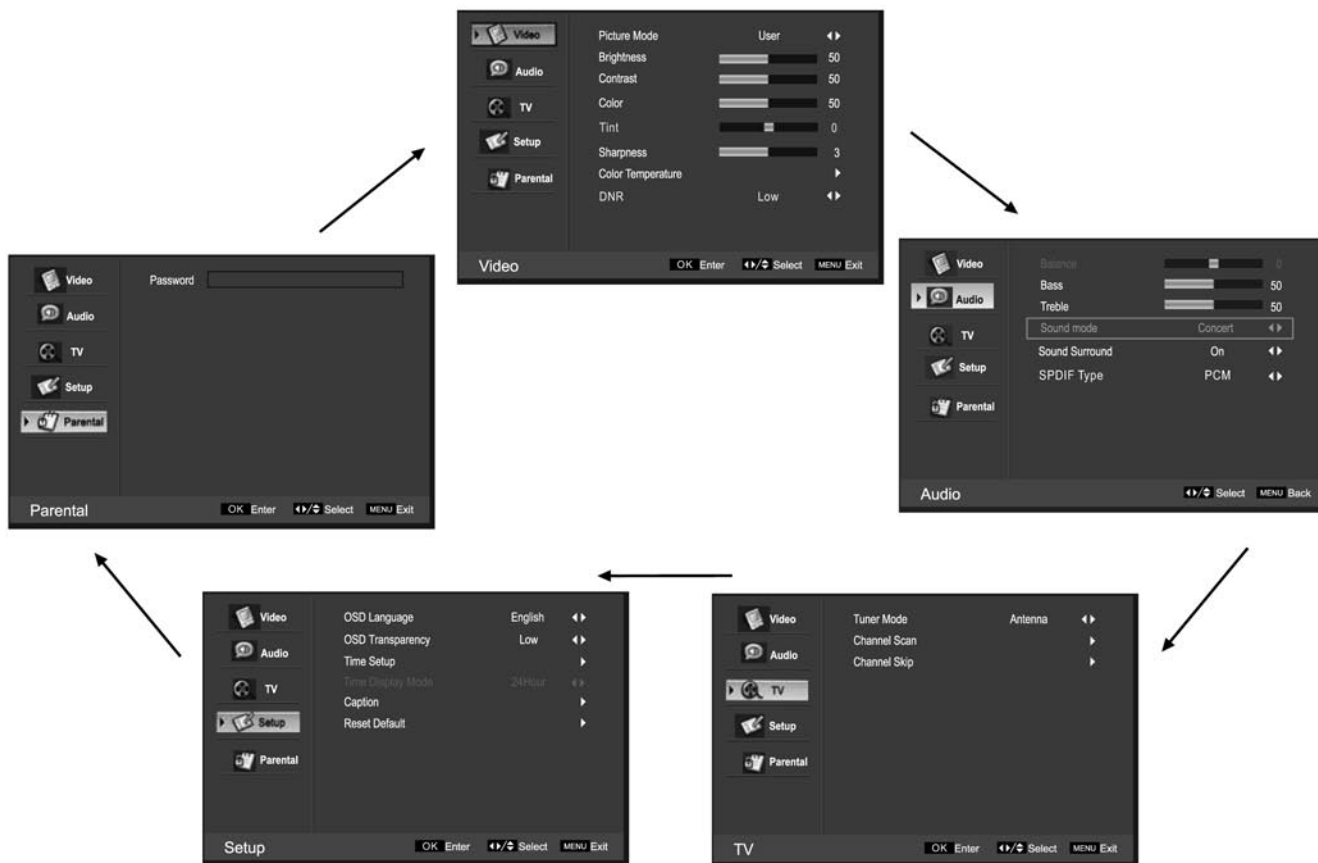

Choosing a TV Channel

1. Using the **CH+/CH-** on the front panel or on the remote control.

- Press **CH+** to increase the channel.
- Press **CH-** to decrease the channel.

2. Using **0-9** remote keys

Enter the channel number with the 0-9 remote keys, then press “**OK**” to select the channel.

For example:

1. Press 4, then press “**OK**” to select channel 4.
2. Press 4, then press 5, then press “**OK**” to select channel 45.
3. Press 1, then press 2, then press 1, finally press “**OK**” to select channel 121.

Operating Your Television

 
Selecting Input Source

You can display the input screen menu by pressing **SOURCE** on the remote control or **SOURCE** on the front panel, press **▲/▼** button to select, press **“OK”** to confirm.



Video Menu Options

Press the **MENU** on the front panel or **MENU** on the remote control and then use **▲/▼** to select the Video menu, press **►** or **OK** to enter (see picture below).

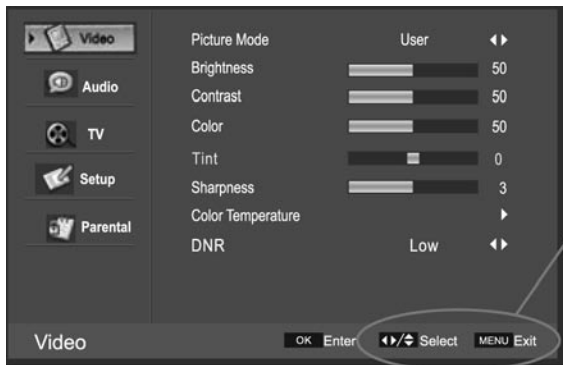

1. Use **▲/▼** to select what you want to adjust in the Video menu.
2. Press **OK** or **◀/▶** to adjust (according to the hint below)
3. When you are satisfied with your adjustment, press **MENU**.

Picture Mode

Select the type of picture which best corresponds to your viewing preferences by selecting Picture Mode in the **PICTURE** menu. You may select the picture mode directly by pressing the **P.STO** button on the remote control.

Brightness

Press **▲/▼** and then use **◀/▶** to adjust the brightness of the picture.

Contrast

Press **▲/▼** and then use **◀/▶** to adjust the contrast of the picture.

Colour

Press **▲/▼** and then use **◀/▶** to adjust the sharpness of the picture.

Tint

Press **▲/▼** and then use **◀/▶** to adjust the tint of the picture.

Sharpness

Press **▲/▼** and then use **◀/▶** to adjust the tint of the sharpness of the picture.

 
Colour Temperature

Press **“OK”** to enter the submenu for Colour Temperature press **◀/▶** to select mode
----- User, Cool, Standard, Warm

Then press **▲/▼** to select the “R Gain, G Gain, B Gain” in “User” mode.

DNR


Press **▲/▼** and then use **◀/▶** to adjust the DNR of the picture.

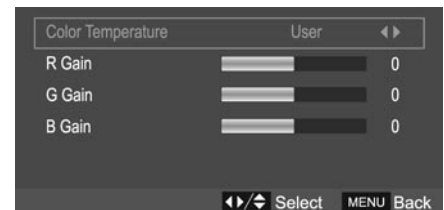

Operating Your Television

Audio Menu Options

 Press the **MENU** on the front panel or **MENU** on the remote control and then use **▲/▼** to select the **AUDIO** menu, press **▶** or **OK** to enter (see picture below).

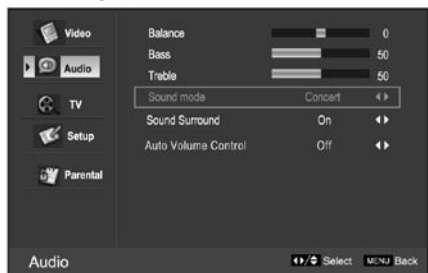

1. Use **▲/▼** to select the option you want to adjust in the Audio menu.
2. Press **OK** or **◀/▶** to adjust (according to the hint below)
3. When you are satisfied with your adjustment, press **MENU**.

Audio Mode

You can select the type of sound which best corresponds to your listening requirements by selecting Sound in SOUND menu.

Balance

Press **▲/▼** and then use **◀/▶** to adjust the audio output between left and right speakers.

Bass

Press **▲/▼** and then use **◀/▶** increase or decrease the level of the lower-pitched sounds.

Treble

Press **▲/▼** and then use **◀/▶** to increase or decrease the level of higher-pitched sounds

Sound Mode

Press **◀/▶** to select one of the modes options: Concert, Jazz, User, Voice

Sound Surround

 
Press **◀/▶** to switch Sound Surround On or Off

Auto Volume Control

Press **◀/▶** to select auto volume control On or Off

TV Menu Options

Press the **MENU** on the front panel or **MENU** on the remote control and then use **▲/▼** to select the **TV** menu, press **>** or **OK** to enter (see picture below).

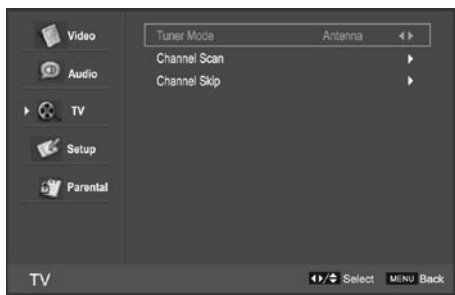


1. Use **▲/▼** to select the option you want to adjust in the TV menu.
2. Press **OK** or **◀/▶** to enter the desired function.
3. When you are done, press **MENU** to exit.

Tuner Mode

Select the signal input mode: Antenna or Cable

Channel Scan

 
Select **"Channel Scan"**; press **OK** to start the channel scan. Press **MENU** to stop or continue until the scan is complete; Stopping in the middle of a scan will save the scanned channels up to the stop point.

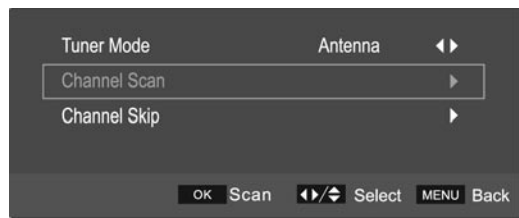

Operating Your Television


Channel Skip

 Select “**Channel Skip**”; press **OK** to enter the submenu.

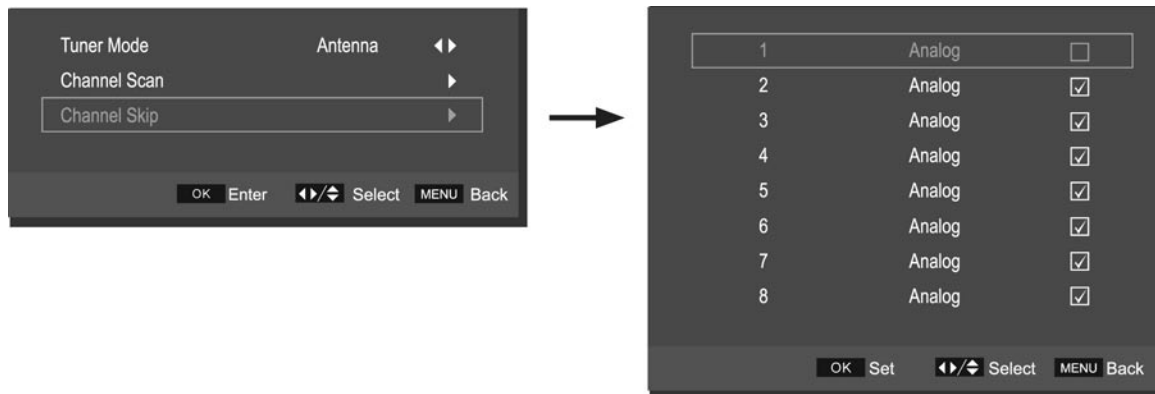

Setup Menu Options

 Press the **MENU** on the front panel or **MENU** on the remote control and then use **▲/▼** to select the TV menu, press **>** or **OK** to enter (see picture below).

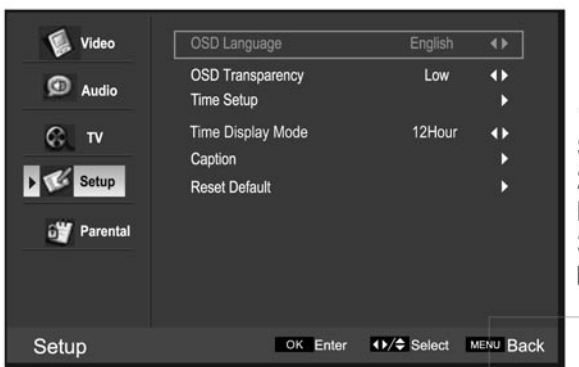

1. Use **▲/▼** to select the option you want to adjust in the TV menu.
2. Press **OK** or **◀/▶** to adjust (according to the hint below).
3. When you are done, press **MENU** to exit.

OSD Language

 
To select language of the OSD menu

OSD Transparency

Press **◀/▶** to select the transparency mode Low, High or Middle.

Timer Setup

Select: “**Timer Setup**”, Press **OK** to enter the submenu.

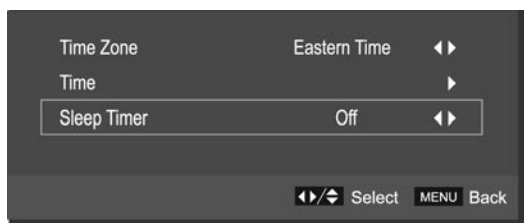

Time zone

To select time zone

Time

To set power on and power off times

Sleep timer

To select the sleep timer

Time Display mode

To select the Time Display Mode in 12 or 24 hour mode

Caption

(See next page)

 
Reset Default

Select “**Reset Default**”, Press **OK**, and it will display “Are you sure”, select “**OK**” to default set.

Operating Your Television

Caption

Select “Caption”, press **OK** to enter the submenu (see below)

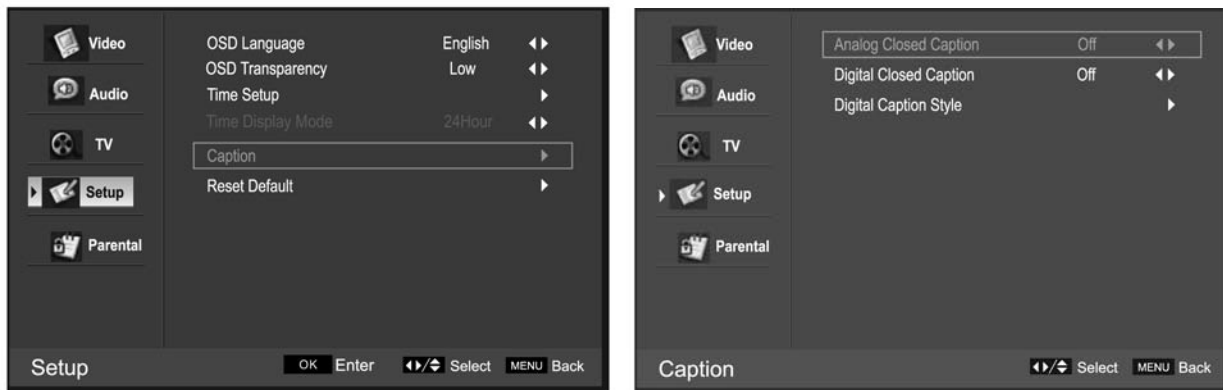

Analog Closed Caption

 
Press ◀/▶ to select CC1/CC2/CC3/CC4/TEXT1/TEXT2/TEXT3/TEXT4, or select Off.

Digital Closed Caption

Press ◀/▶ to select Service1/Service2/Service3/Service4/Service5/Service6, or select Off.

Digital Caption Style

This item allows you to set the closed caption, press **OK** to enter Digital Caption style menu:

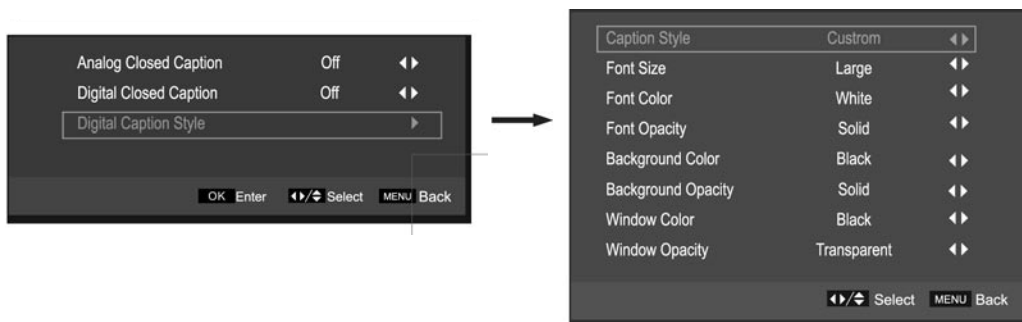


- Caption Style: press ◀/▶ to select Automatic or Custom. When you select automatic, others are disabled and can not be adjusted.
- Font Size: press ◀/▶ to select Medium/Large or Small.
- Font Colour press ◀/▶ to select Red/Green/Blue/Yellow/Magenta/Cyan/Black or White.
- Font Opacity: press ◀/▶ to select Solid/Transparent or Translucent.
- Background Colour: press ◀/▶ to select Black/White/Red/Green/Blue/Yellow/Magenta/ or Cyan.
- Background Opacity: press ◀/▶ to select Solid/Transparent or Translucent.
- Window Colour: press ◀/▶ to select Black/White/Red/Green/Blue/Yellow/Magenta/ or Cyan.
- Window Opacity: press ◀/▶ to select Solid/Transparent or Translucent.


Parental Menu Options

Parental Menu Options

 Press the **MENU** on the front panel or remote control and then use **▲/▼** to select the Parental menu, Press **►** or **OK** to enter (see picture below).

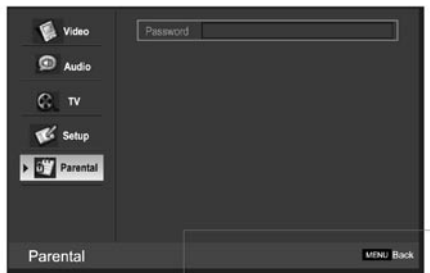

 Enter code **0000** to enter the parental menu.

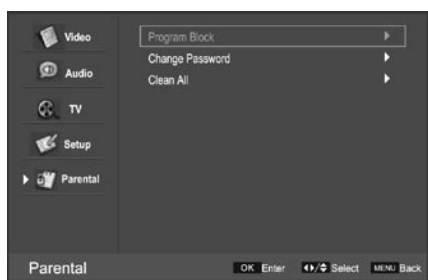



Program Block

Change Password: select “**Change Password**”, press **OK** to enter the submenu, and change the password. Press **MENU** to cancel.

Clean All: Select “**Clean All**”, Press **OK** and it will display “Are you sure”, select “**OK**” to set default.

Program Block

  Rating Enable: Press **◀/▶** to select On/Off.

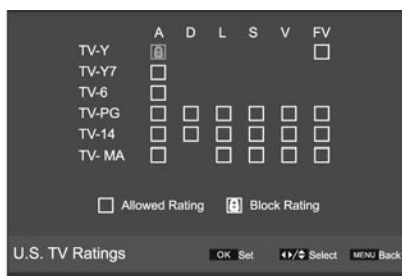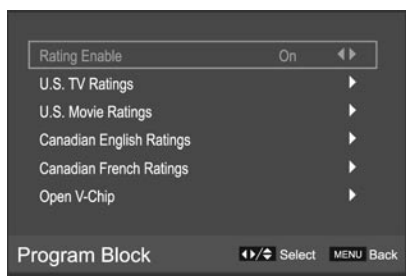

U.S. TV Rating: Press **OK** to enter, and use **◀/▶** and **▲/▼** to select, and press **OK** to confirm.


U.S. Movie Ratings: Press **OK** to enter, and use **▲/▼** to select, and press **OK** to confirm.

Canadian English Ratings: Press **OK** to enter, and use **▲/▼** to select, and press **OK** to confirm.

Canadian French Rating: Press **OK** to enter, and use **▲/▼** to select, and press **OK** to confirm.

Open V-Chip

 Select “**V-Chip**”, Press **OK** to enter, you will see an item “U.S. (50 states + possessions)”, and press **OK** again to enter the V-Chip menu (picture below).

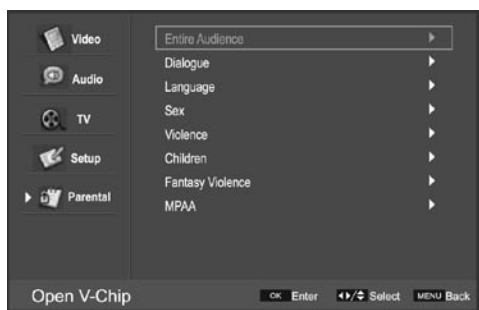

You can select any item, press **OK** to enter, use **▲/▼** to select, press **OK** to confirm.

Parental Menu Options

Parental Control

Press Enter to enter the sub-menu and then use the 0-9 to enter the correct password: 0,0,0,0. If used, this option feature can “block” undesirable programming from appearing on the TV. Parental Control offers the user a wide variety of options and settings that restrict or “block” the programming that can appear on the TV. Parental Control allows the user the capability of defining which program rating they consider acceptable, to the younger more sensitive viewer. It can be preset and turned either on or off by the user who specifies the secret 4-number code, the password. The number of hours blocked are specified. General audiences and children blocks should be both programmed into the TV’s memory. Viewer ratings are specified for both TV and the motion picture industry; both rating systems should be used, for complete coverage. The ratings are based on the ages of children.

Overview

To ensure complete coverage for all TV programs, (movies and regular TV shows) choose a rating for MPAA, from the selections below, as well as ratings from the TV Parental Guidelines Rating Systems below, using the Age Block option for General Audiences, and for children. In addition to those, you may wish to add additional restrictions from the content block menu, and submenus examples below.

Things to Consider before Setting up Parental Control

Determine which rating you consider acceptable to the viewer. (For example, if you choose TV-PG, more restrictive ratings will be automatically blocked; the viewer will not be able to see: TV-PG, TV-14, or TV-MA rated programming.) Do you want to block the auxiliary video source entirely? (Blocks the signal sent by the equipment, such as VCR, connected to the TV Audio/Video input jacks) Or leave unblocked, then choose allowable ratings. Block program “Content” based on individual parameters such as: Strong Dialog, Bad Language, Sex Scenes, Violence Scenes, or Fantasy. Violent Scenes; in Content Blk option. Select a secret password, in the Set Password option, using the numbers keys on the remote. Do not forget the password, it is the only way you can access the Parental Control menu and change rating selections, or turn Parental Control off. Do you want the Parental Control to be active at all times? If not, you can turn it on or off with the Lock On/Off option.

- You can set different Parental Control viewing restrictions for general audiences and for children, both can be active at the same time.
- Simply specifying one content block such as Sex Scenes, will not automatically restrict the programming that appears from the video sources.
- Even if you choose to leave the AUX inputs unblocked, the ratings you specify will automatically restrict the programming that appears from the video sources.
- You can not disable Parental Control by disconnecting the TV from power. Block hours will be automatically reset to the original block time setting specified if power is disconnected.

Information

Motion Picture Association of America (MPAA) Rating System

Grade		Meaning
G	General Audiences	Content not offensive to most viewers
PG	Parental Guidance Suggested	Content is such that parents may not want their children to view the program
PG-13	Parental Guidance Cautioned	Program is inappropriate for preteens, with a greater degree of offensive material suggested than a PG rated program
R	Restricted viewing	Not for children under 17, Strong element of sex and/or violence
NC-17	No Children Under age 17	Not for children under 17 under any circumstances. Strong sexual content
X	Hard Core Films	Same as NC-17 rating
No Rating	No Rating	MPAA Not Rated

TV Parental Guideline Rating System

Grade		Meaning
TV-Y	Young Children	Content not offensive to most viewers
TV-Y7	Children 7 and over	Considered suitable for children over 7, may contain Fantasy Violence Scenes
TV-G	Parental Audience	Considered suitable for all audiences; children may watch unattended
TV-PG	Parental Guidance	Suggested Unsuitable for younger children, may contain; Suggestive Dialogue, Bad Language, Sex, and Violence Scenes
TV-14	Parents Strongly Cautioned	Unsuitable for children under 14, may contain: Strong Dialogue, Bad Language, Sex, and Violence Scenes
TV-MA	Mature Audience Only	Adults only, may contain Strong Dialogue, Bad Language, Sex, and Violent Scenes

Canadian Rating: Canadian English is used throughout all English-speaking Canada (C, C8+, G, PG, 14+, 18+).

 
Canadian French is used in Quebec (G, 8 ans+, 13 ans+, 16 ans+, 18 ans+)

Note: The V-Chip will automatically block certain categories that are “more restrictive”. If you block TV-Y category, then TV-Y7 will be automatically blocked. Similarly, if you block TV-G category, then all the categories in the “young adult” will be blocked (TV-G, TV-PG, TV-14, and TV-MA).


Connecting to External Devices

Connecting your TV to Set-top Boxes and DVD players


For Full HD Quality Picture and Sound,
connect your set-top box or Blu-ray/HD/DVD player using a digital HDMI cable.

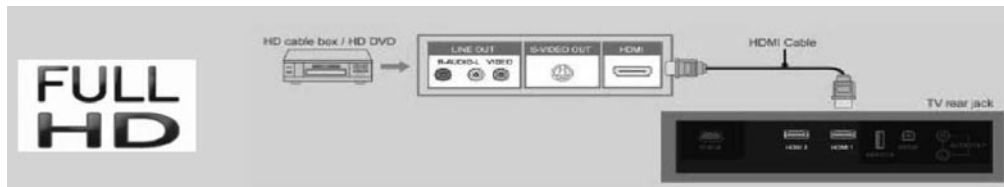

 For HD and Better Quality Picture and Sound,
you can connect your TV to the set-top box or DVD recorder using a component cable for video and L/R audio cable for sound as shown in the figure below.

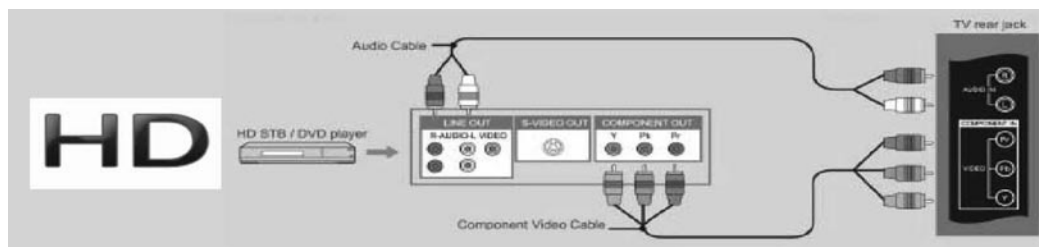

 For Standard Definition Devices – Most Set-top boxes and VCRs have an AV or S-Video connector that you can connect to your TV as shown in the figure below. We do not recommend this type of connection since the video and audio quality will not be as good as digital HDMI or Component signals.

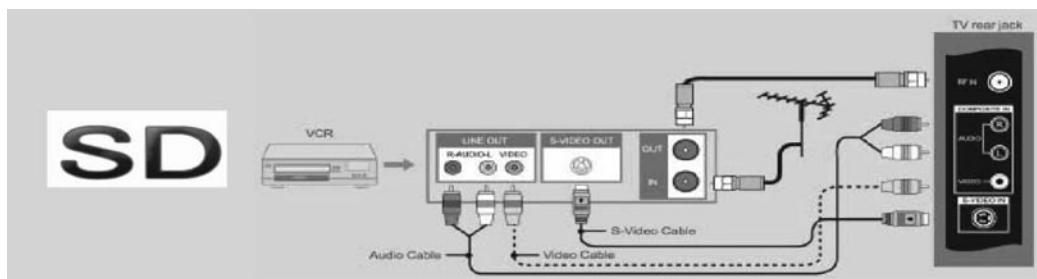

NOTE: Full HD reproduction is dependent on the resolution of your screen. Your television screen must be full HD resolution (1920x1080). If your television screen is HD resolution (1366x768), your picture will still be high quality when using a full HD source input.

Troubleshooting

If your television does not operate normally or does not turn on, please check the following troubleshooting questions. Remember to also check the other connected electronic devices, such as DVDs or Blu-ray players to pinpoint any problem. If the television still fails to operate normally, please contact Customer Service (refer to Warranty page).

PROBLEM	POSSIBLE SOLUTION
No sound and picture	- Check that the main plug has been connected to a wall outlet - Check that you have pressed the POWER button on the front of the TV set - Check the picture contrast and the brightness setting
Red LED indicator light	Set in standby mode. Press either the POWER button or the Standby button on the remote control
Normal picture but no sound	- Check the volume - Sound muted? Press the MUTE button - Try another channel, the problem may be with the broadcast - Are the audio cables installed properly?
The remote control does not work	- Check to see if there are any objects between the TV and remote control causing obstruction - Are batteries installed with correct polarity (+ / -) - Correct remote operating mode set: TV, VCR, etc? - Install new batteries
Power suddenly turns off	- Is the sleep timer set? - Check the power control settings. Power may be interrupted - No broadcast on the station tuned
Picture appears slowly after switching on	- This is normal, the image is muted during the product start up process. Please contact a service provider if the picture has not appeared after 5 minutes
Poor colour or picture	- Adjust the color in Menu option - Keep a sufficient distance between the product and the VCR - Try another channel, the problem may be with the broadcast - Are the VIDEO cables installed properly? - Activate any function to restore the brightness of the picture
Horizontal/vertical bars or picture shaking	- Check for local interference, such as an electrical appliance or power tool
Blue Screen	- Press INPUT button to select correct source
Poor reception on some channels	- Station or cable experiencing problems. Tune to another station - Station signal is weak, reorient antenna to receive better reception - Check for sources of possible interference
Lines or streaks in pictures	- Check the antenna (change the direction of the antenna)
No output from one of the speakers	- Adjust balance in the Menu option

Troubleshooting

NOTE: When there is a problem in VGA mode (only when VGA mode is applied)

PROBLEM	POSSIBLE SOLUTION
The signal is out of range	- Adjust resolution, horizontal frequency, or vertical frequency - Check whether the signal cable is connected or loose - Check the input source
Vertical bar or stripe on background, horizontal noise and incorrect position	Set the auto configure or adjust clock, phase or H/V position
Screen colour is unstable or is a single colour	- Check the signal cable - Re-install the PC video card

Maintenance

Early malfunctions can be prevented. Careful and regular cleaning can extend the amount of time you will have with your new TV. Be sure to turn the power off and unplug the power cord before you begin any cleaning.

Cleaning the screen

1. A great tip to dust off your screen. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then use to wipe the screen.
2. Make sure the excess water is off the screen, then let air-dry before you turn on the TV.

Cleaning the Cabinet

To remove dirt or dust, wipe the cabinet with a soft, dry, lint-free cloth. Please be sure not to use a wet cloth.

Extended Absence



If you expect to leave your TV dormant for a long time (such as a vacation), it is a good idea to unplug the power cord to protect against possible damages from lightning or power surges.

The FCC Wants You To Know



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

Canadian DOC statement

DOC Class B Compliance - This Class B digital apparatus complies with Canadian ICES-003.

Specifications

Panel Size	26 inches
Display Type	LCD
Panel Technology	TFT
Panel 60 Hz vs 120 Hz	60 Hz
Display Resolution	1080P
Panel Resolution (min.)	1366*768
Aspect Ratio	16:9
Contrast Ratio (Typ.) - panel	650 : 1 ~ 1000:1
Brightness (Centre Typ.) cd/m2	400 - 500
Response Time (G to G)	5-8 ms
Lamp Life (Typ. Hours)	50 000 hours
Horizontal Viewing Angle (At CR>10)	176
Vertical Viewing Angle (At CR>10)	176

Warranty



LIMITED WARRANTY

ORBYX ELECTRONICS WARRANTY

ORBYX Electronics warrants that this product will be free from defects in materials and workmanship for a period of two (2) years from the date of purchase. Within this period, simply take the product and your proof of purchase to any ORBYX Electronics store or dealer and the product will be repaired without charge for parts and labour. ORBYX Electronics reserves the right to charge for transportation. Any product which has been subject to misuse or accidental damage is excluded from this warranty.

This warranty is only applicable to a product purchased through ORBYX Electronics' company owned stores and dealers and to a product that is presented for repair in a country where ORBYX Electronics offers the product for sale. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, province and other governmental entities in which ORBYX Electronics operates. This warranty is subject to all statutory rights you may have in the country of purchase.



Imported in Canada for
Orbyx Electronics,
Concord, Canada, L4K 4M3

Manufactured in China

For product support please contact
www.orbyxelectronics.com

Limited Warranty



© 2009 ORBYX Electronics.
All Rights Reserved.