



SY-PV18
Professional Steam Iron
User Manual

Welcome

Congratulations on the purchase of your new steam iron SY-PV18. In order to fully benefit from this product please read the following instructions carefully. Store this user manual in a safe place for future references.

Safety Instructions

- Use the iron only for its intended use.
- Make sure that the voltage on the rating label of the iron is the same as the place where the unit will be used.
- When using the iron for the first time, test it on an old piece of fabric to ensure that the soleplate and boiler are completely clean.
- To protect against the risk of electric shock, do not immerse the iron in water or other liquids.
- The temperature setting must always be turned to “min” before plugging or unplugging from the mains outlet.
- Never pull the cord to disconnect from the mains: instead, grasp the plug and pull to disconnect.
- Do not allow the cord to touch hot surfaces. Allow the iron to cool completely before storing away.
- Always disconnect the iron from the electrical outlet when filling with water or emptying and when not in use
- Keep the sole plate smooth at all times, avoid hard contact with a metal object.
- Do not operate the iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron. Contact Sytech Service Centre. Incorrect re-assembly can cause a risk of electric shock when the iron is used.
- If the supply cord is damaged, contact Sytech Service Centre
- If the iron is not operating normally, disconnect it from the power supply. Contact Sytech Service Center.
- Close supervision is necessary for any appliance being used by or near children. Do not leave the iron unattended when connected to the mains or on an ironing board.
- Children should be supervised to ensure that they do not play with the appliance.
- Burns can occur from touching the hot metal parts, hot water or steam.
- Be extremely careful when you turn a steam iron upside down as there may be hot water in the reservoir.
- Your iron is designed to rest on the heel. Do not leave the iron unattended when switched on. Do not place the iron on an unprotected surface even if it is on its heel rest.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep electrical appliances out of reach from Children or infirm persons. Do not let them use the appliances without supervision.
- Power supply:
230V ~ 50/60Hz 2200W

Descriptions of Parts



- A. Soleplate**
- B. Spraying nozzle**
- C. Water tank**
- D. Water tank inlet cover**
- E. Spray button**
- F. Shot of steam button**
- G. Handle**
- H. Flexible cord protector**
- I. Heel rest**
- J. Power indicator light/Auto shut-off indicator light**
- K. Self-clean button**
- L. Steam control**
- M. Temperature control knob**

Filling water

1. Make sure the switch is not connected to the wall outlet before filling water.
2. Set the steam control to the minimum position.
3. Pull down the cover of the water filling mouth, and then fill water until the reservoir is filled up.
4. Never exceed the MAX level as marked on the unit.

Setting the temperature

- * → Synthetics/Silk
- ** → Wool
- *** → Cotton/Linen

Ironing with Steam

Set the temperature control (M) to position (*) or (**) for moderate steam and to (***) for maximum steam. With conventional steam irons, water may leak from the soleplate if a low temperature has been selected.

- Ensure that there is enough water in the water reservoir.
- Rest the iron on its heel
- Insert the mains plug into the wall socket.
- Wait a little while for the indicator light to go off and come on again
- Adjust the steam using the steam control knob

Burst of Steam

- Press the (F) button to emit an intense burst of steam from the soleplate.
- In order to avoid water leaking from the soleplate, do not press the steam button for too long.

Spraying

Press the spray button (E) and water will be sprayed out from the spraying nozzle. Make sure there is water in the reservoir at all times.

Dry ironing

1. Turn the variable steam knob (L) to the lowest position ("0") and set the temperature control to the desired position.
2. Once the indicator light is on, place the iron on a smooth and stable vertical surface for easy and efficient ironing.
3. Once the indicator light goes off, wait for a while before you continue ironing.

Self Cleaning

It is important to apply "self-cleaning" at least every two months to remove impurities etc. The harder the water the more the iron should be self-cleaned.

- Set the temperature control to MAX level.
- Insert the mains plug into the wall socket.
- Allow the iron to heat up until the temperature pilot light goes out. Then set the temperature dial to position MIN.
- Hold the iron horizontally over the sink, then remove the variable steam control knob from the body enabling the iron to self clean.
- Boiling water and steam will now be ejected from the holes in the soleplate. Impurities are washed away with it. Move the iron forwards and backwards while this occurs.
- Set the steam control to "0" position when the water reservoir has become empty.
- Repeat self-cleaning if you notice that there is still impurities or residue left over. .
- Move the iron over a (preferably) old piece of cloth. This is to ensure that the soleplate will be dry during usage
- Unplug and allow the iron to cool down before storing it.

Vertical Steam

The appliance is capable of generating steam even when in the vertical position; this function is especially useful for refreshing clothes and curtains.

Anti-Drip

The appliance is fitted with an anti-drip device to enhance steaming and prevent drips of water from the soleplate

Anti-Calc

The appliance is fitted with an anti-calc device to reduce the lime-scale build up in the water tank and extend the product life.

Cleaning & Maintenance

- Set the steam control to the lowest position and remove the plug from the wall socket allowing for the unit to cool down completely
- Once it has cooled down, wipe the soleplate with a damp cloth and a non-abrasive (liquid) cleaning agent.
- To keep the soleplate smooth, avoid contact with hard metal objects. Never use a scouring pad, vinegar or other chemicals to clean the soleplate.
- Clean the upper part of the iron with a damp cloth.
- Regularly rinse the water tank with water. Empty the water tank after you have rinsed it.

Storage

- Set the steam control position to the lowest position and remove the plug from the wall socket allowing for the unit to cool down completely.
- Pour out any remaining water left in the water tank.
- Wind up the mains cord.
- Store the iron on its heel and in a safe and dry place.

Specifications

Power Consumption:	2200W
Voltage:	220-240V
Rated Frequency:	50/60Hz
Water tank capacity:	300ml
Steam Capacity:	15 -20 g
Max temperature:	200°C- 250°C
Exterior measurements:	29.5X11.9X14.5 CM
Soleplate measurements:	23.1X11.9CM

Environment



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Declaration of Conformity

Manufacturer name: Satyatrade S. L.

Address: Pol. Ind. La Raya. C/ Guadalquivir, 2.

Camarma de Esteruelas, 28816 Madrid

Tel: 902 430 967

Fax: 91 8864285

NIF: B83254763

Manufacturing country: China

Sytech® SY-PV18 complies with the following directives.

This product complies with the following directives:

LVD: Low Voltage Directive: 2006/95/EC

RoHS standard: 2011/65/EU. Restriction of Hazardous Substance.

Signed: Ajeet Nebhwani Utamchandani

Sole Administrator

