


ARGtek ARG-1211 1500mW DD-WRT AP Router

POWER KING-X TRIPLE

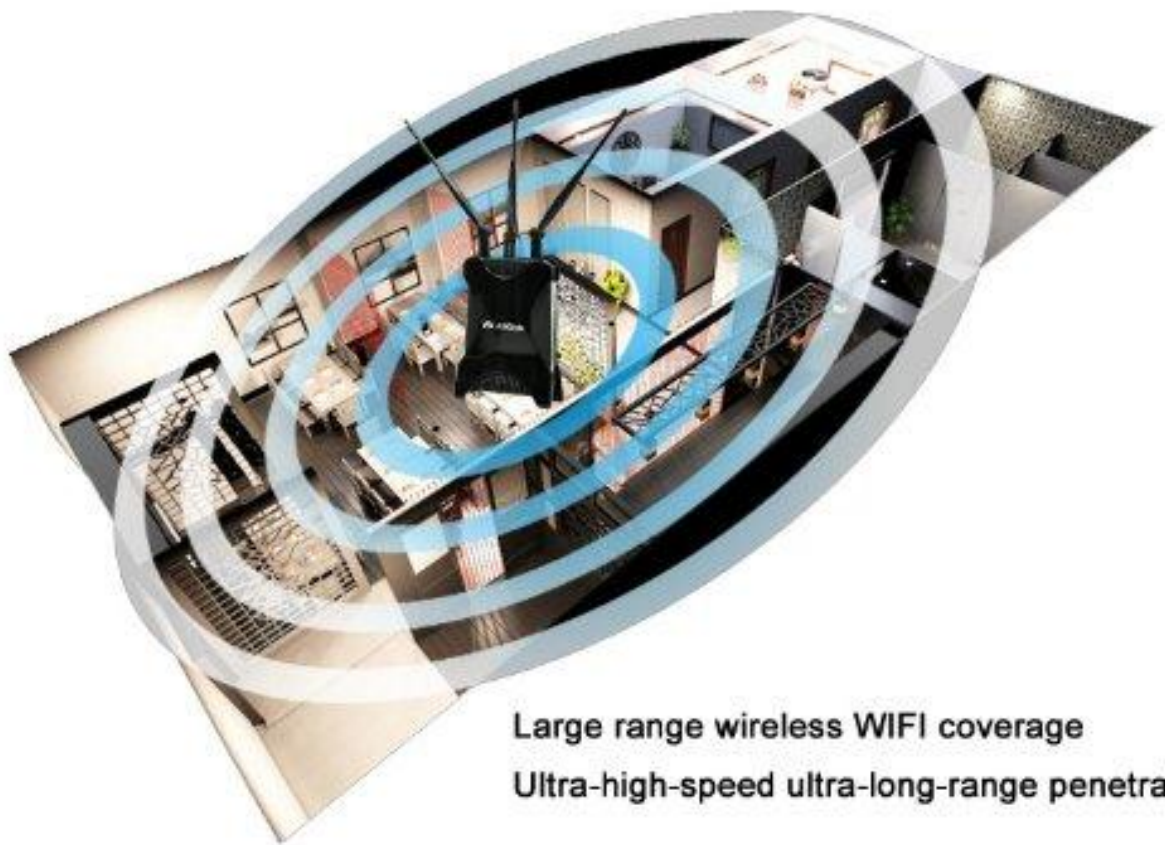

Large range wireless WIFI coverage
Ultra-high-speed ultra-long-range penetration

Quick Installation Guide

The AP Router is delivered with the following factory default parameters on the Ethernet LAN interfaces.

Default IP Address: 10.10.10.254

Default IP subnet mask: 255.255.255.0


Web login User Name: admin

Web login Password: admin

- I. Connect Antenna, plug the power adapter, and locate the Ethernet cable to the LAN port (1~4)

And the end port connect to PC or Notebook.

Waiting for like 10~20 to power on.

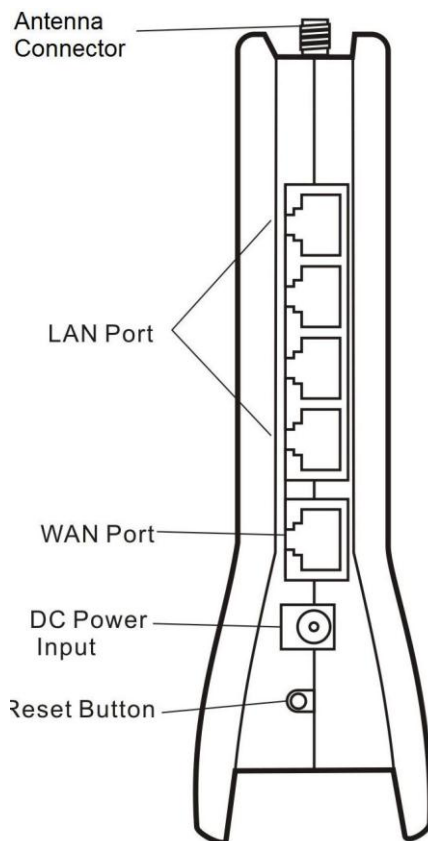


LAN Port : Four local Ethernet ports for connecting the local computers

WAN port for connecting to a cable or ADSL modem


Reset Button -Factory default reset button

DC Power Input – Connect Power Adapter


II. Setting to DHCP

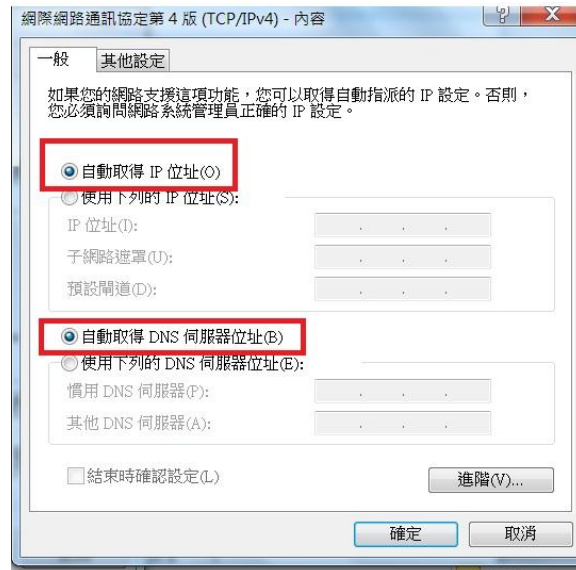

III. Go Default IP: 10.10.10.254, input admin, admin for the user name and password

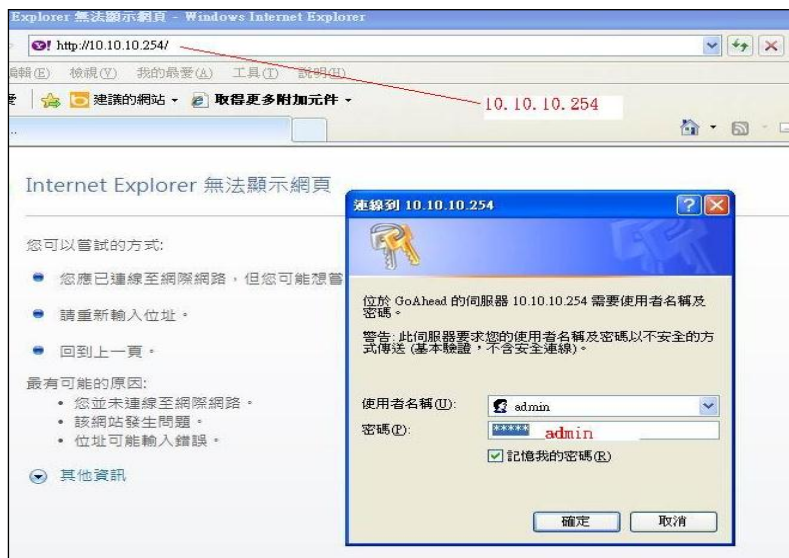

IV. Enter User WEB interface –Select language

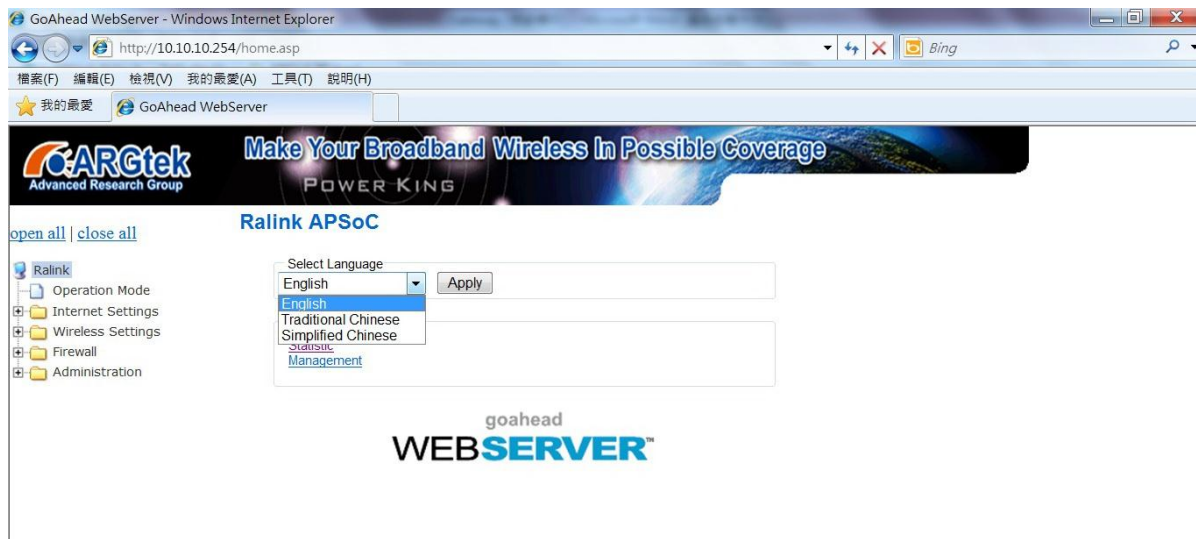

Only ARGtek Title is the original product, others are faked

V. ARG-1211 provides four operation modes: **(Gateway 、 Bridge 、 WISP 、 AP Client)**

With 7 Applications:

1. Gateway	AP mode(enable Router function)
2. Bridge (disable Router function)	
2-1. Bridge AP	AP mode(disable Router function)
2-2. Bridge Client	Client mode(disable Router function)
2-3. Bridge WDS	Wireless Distribution System Bridge
2-4. Bridge WDS + Repeater	WDS and repeater(AP)
3. WISP	Client mode(enable Router function)
4. AP Client(Universal Repeater)	WISP and repeater(AP)

1. Gateway (AP Router) : (enable Router function)

This feature is often used when connect PPPoE broadband operators offer, DHCP (dynamic) or Static (fixed) IP and use port forwarding (NAT) and routing functions



2-1. Bridge AP : AP mode (disable Router function)




2-2. Bridge Client: Client mode (disable Router function)

This function use in the receiving Wi-Fi signals do forwarding and routing functionality and allows users to access the network cable wired Internet



2-3. Bridge WDS: Wireless Distribution System Bridge

This function is used between two or multi- points in each ARG-1211 using WDS Transfer Protocol (Image transfer is often used in this mode)

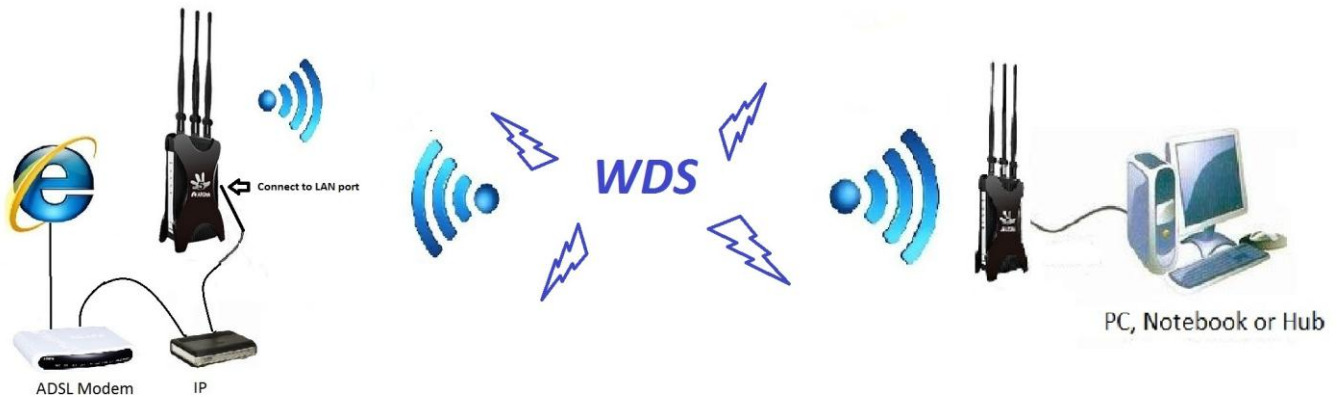

2-4. Bridge WDS + Repeater: WDS and repeater (AP)

This function is used between two or multi- points in each ARG-1211 using WDS transfer protocol wireless bridge through ARG-1211 at various points forwards wireless signal allows users around to have wireless access.



3. WISP: Client mode (enable Router function)

This function is used in the receiving Wi-Fi signals do forwarding and routing functions and allows users to access the network cable wired Internet




4. AP Client: WISP and repeater (AP)

This function is used in the receiving Wi-Fi signals do forwarding and routing functions and allows users to access the network cable wired Internet and wireless signal forwarding allows users wireless Internet access




****For DD-WRT Interface***

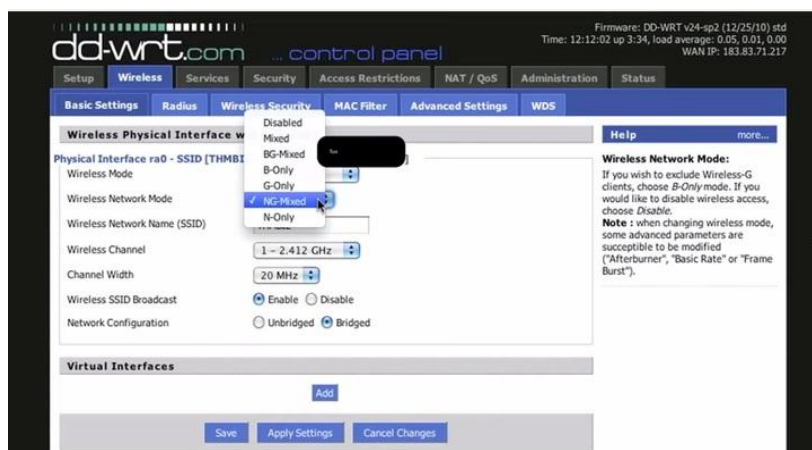

Our ARG-1211 works with the DD-WRT 3rd party software, for more details you can check Our YouTube Channel.

<https://www.youtube.com/user/ARGtek100>

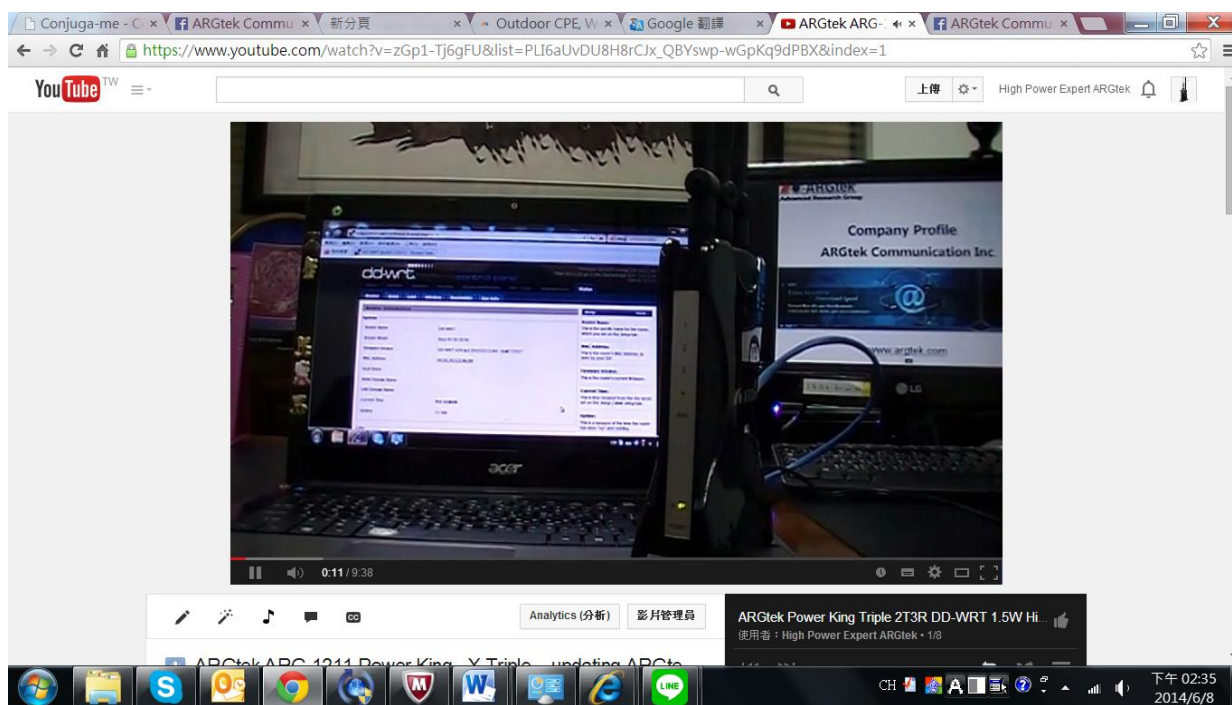

Note: You can check the User Manual of ARG-121 for 7 applications Web Interface configuration. *Download it from our website at www.argtek.com*

Remark:

1. How to export the Configuration file?

For this function, you can export the configuration file, so you don't need to make the setting from the start again for the 2nd one/ or others ARG-1211

Go To Administrator → Settings Management → Export Settings → Export

10.10.10.254/home.asp

ARGtek
Advanced Research Group

Make Your Broadband Wireless In Possible Coverage
POWER KING

open all | close all

Settings Management

You might save system settings by exporting them to a configuration file, restore them by importing the file, or reset them to factory default.

Export Settings

Export Button Click "Export" to download the setting file

Import Settings

Settings file location 未選擇檔案

Click "Chose" & "Import" to upload the setting file

Load Factory Defaults

Load Default Button

Ralink


- Operation Mode
- Internet Settings
 - WAN
 - LAN
 - DHCP clients
 - Advanced Routing
 - QoS
- Wireless Settings
 - Basic
 - Advanced
 - Security
 - WDS
 - WPS
 - Station List
 - Statistics
- Firewall
 - MAC/IP/Port Filter
 - Port Forwarding
 - DMZ
 - System Security
 - Content Filtering
- Administration
 - Management
 - Upload Firmware
 - Settings Management**
 - Status
 - Statistics
 - System Command
 - System Log

2. How to import the Configuration file?

For this function, you can save the configuration file to the 2nd one/ or others ARG-1211

Go To Administrator → Settings Management → Import Settings → Select file *the file you download from the 1st above → Import

Enjoy your wireless environment with our high power AP – Power King – X Triple

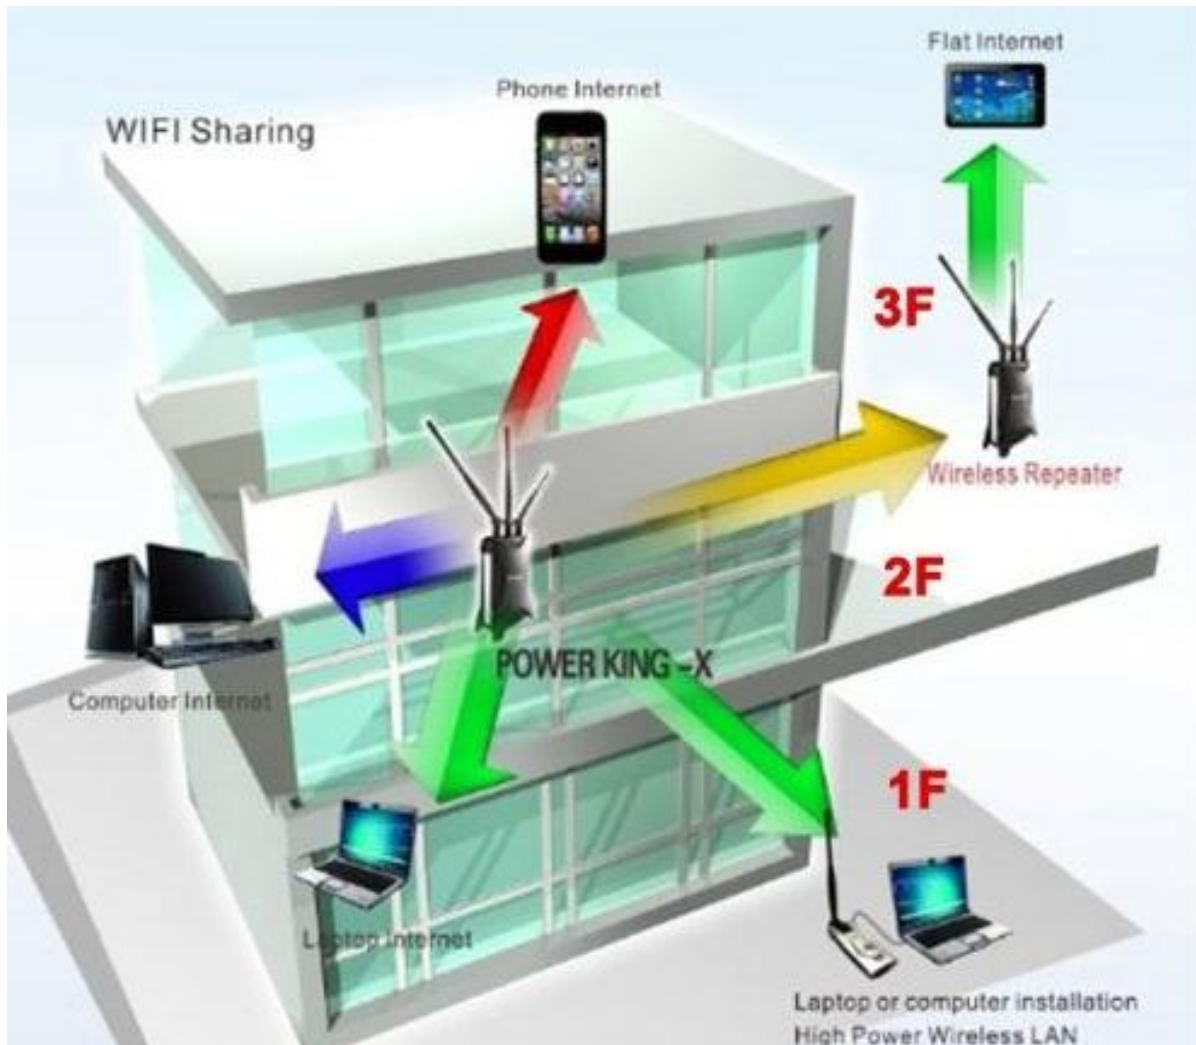

For more queries, please write email to : sales@argtek.com Or

Visit : www.argtek.com

<https://www.youtube.com/user/ARGtek100>

<https://www.facebook.com/pages/ARGtek-Communication-Inc-Ltd/137452079672104>