J Series User Manual

Version : 1.1 (May, 2008)

Index

1.1	Hardware Introduction	3
1.2	Hardware Installation	6
1.3	Hard Disk Formatting	8
1.4	Important Notice	10
1.5	Description of Application	10

1.1 Hardware Introduction

J4-4S-SB2



Status Indications of LEDs:

- When the power is ON, Power LEDs on both sides will light up in blue.
- When the hard disk is being accessed, the HDD Access LED flashes blue.
- In case of overheating, the Temp Fail LED will light up in red.
- When the fan fails, the Fan Fail LED will flash red.





DC Adapter Specifications: Input: AC 100 ~ 240V Output: DC12V - 4.16A / 50W Plug OD Ø 5.5mm, ID Ø 2.1mm

J1-1S-B2



Status Indication of LED:

When the hard disk is being accessed, HDD Access LED flashes blue.

Instruction of Injecting J1 Tray



Notice : When injecting the tray, please do not have the opening face down to avoid data damage due to accidental dropping of the hard disk.



Package Contents

After you open the outer package, make sure that the following items are contained in the package:

- User Manual
- ٠CD
- USB2.0 Cable
- eSATA Cable
- · USB Y Cable (J5 Only)
- · Adapter
- Power Code

1.2 Hardware Installation

Step 1 First push the hard disk locking switch to the "Open" position, and then remove the hard disk tray by pressing the hard disk ejection button.



Step 2 Remove the dummy hard disk from the hard disk tray, and install your hard drive into the carrier. Secure the hard disk with supplied screws to avoid any damage to the hard drive due to unnecessary movement.



Step 3 After the hard disk installation is completed, please insert the tray back into place, and push the hard disk locking switch back to the "Lock" position.



- Step 4 Connect all the related cables and connect the power cable.
- Step 5 After the hardware installation is completed, you can then turn ON the power for further configurations and applications.
 - Notice : If you connect the system with a USB cable, there must be a hard disk installed in HDD-1, or the system cannot operate properly.

1.3 Hard Disk Formatting

After the hardware is installed successfully, the OS will identify the hard drive automatically. You will need to format the hard disk before storing data in it. For Windows users, please refer to the following OS instructions to format the hard drive.

Step 1 After the computer and J4 boot properly, please go to "Device Manager", and you will find the newly connected hard disk.



Step 2 Access "disk management" to select the newly connected hard disk, and start initializing the hard disk. After the initialization is done, you can format the hard disk to a type according to your preference or need. After the formation, you can start using the hard disk.

Solver Tools Churk Vever Shared Tobles For Cool Uners and Groups For Decord Uners and Groups Could Wanger Strange Resolution Strange Could Stranger Could Stranger	(t:) Patton (t:) Patton (t:) Patton (t:) Patton (t:) Patton			NTPS NTPS NTPS NTPS	Status Healthy Healthy Healthy Healthy (Solom) Healthy (Solom) Healthy	7.81 68 7.81 68 15.63 68 15.63 68	4.53 GB 3.63 GB 36 MB 7.82 GB 741 MB 4.55 GB	No Top Foul 521 % Mo 45 % Mo 0 % Mo 0 % Mo 90 % Mo 90 % Mo 93 % Mo 2 % Mo		Tolerance Overhead DNs DNs DNs DNs DNs DNs DNs DNs DNs	a]
	GPDask 0 Bosic 74.53 GB Online	Windows XP-C 7.81 GBNTP5 Healthy [System]		INNES XP-E 21 NTPS W (Boot)	(EI) 7.83 GBINTES Healthy	(FI) 7.81 cz NTPS Healty		Windows Vista H 15.63 GB MTP5 Healthy		040 15.63 GBNITS Healthy	00000 (10) 12.03 GB MTPS Healthy
	@P0isk 1 basic 74.53 GB Criline	24.53 GB Unalisated			New Partition	on					
	Bosic 74.53108 Online			Help	_						
	GPOIsk 3 Exerc 74.53 GB Crites	74.53 GB Unalocated									
	OPbak 4 Bosk 74.53 GB Online	74.50.08 - Urałkozzed									

Edit Yew Favorites Iools	Fields					
) exx - 🖸 - 🎓 🔎	Search 🜔 Folders	·				
(3 m) W Computer						
	Nerve	Тура	Total Stre	Pres Space	Comments	¥ 🕀
iyətem Taəkə 🙁	Files Stored on Th	is Computer				
Were system of an addar Add or mesorie program Charge a setting	Hard Disk Drives	Tile Folder Tile Folder				
Other Places *	Windows XP-C (CI)	Local Disk	7.81 GB	740 MB		
	Windows XP-E (01)		7,81 GB	4.55 GB		
Hy Network Places	Set Disk (E)	Local Disk	7,81 GB	4.53 GB		
Phy Documents	Local Disk: (Fi)	Local Disk	7.81 GB	3.62 GB		
Stared Documents	Windows Vista x3.		15.6 GB	7.82 GB		
ControlPanel	Local Disk (H)	Local Disk Local Disk	15.6 GB	86.0 MB		
	New Volume (3)	Local Disk	12.0 GB 74.5 GB	326 MB 74.4 GB		
atala 8	West Volume 0(1)	LocalDisk	74.5 GB	74.4 GB		
	When Volume (L)	Local Dels	74.5 GB	74.4 GB		
My Computer System Folder	When Volume (MI)	LocalDek	74.5 GB	74.4 GB		
New Vo	lume (J:)	Local Disk			74.5 GB	74.4 GB
Sew Vo	lume (K:)	Local Disk			74.5 GB	74.4 GB
Sew Vo	lume (L:)	Local Disk			74.5 GB	74.4 GB
Sew Vo	lume (M:)	Local Disk			74.5 GB	74.4 GB

1.4 Important Notice

- 1. If you connect the system with a USB cable, there must be a hard disk installed in HDD-1, or the system cannot operate properly.
- Hot-Swap will also be supported, if a USB cable is connected to the system. However, whenever there is a removal or installation of a hard disk, the system will reset itself, which might result in data damage or access failure if there is any other hard disk being accessed.

1.5 Description of Application

If you wish to carry and use the data everywhere, all you need is to remove the hard disk from J4 and install into J1, as an external hard drive.



Memo

AL
I VO'LR

Memo

A
I VO'LR