



©2008 DPS-Promatic srl ITALY
www.boccadellaverita.com

BOCCA DELLA VERITA' MAXIMA

USER MANUAL

Revision 1.31 EN

Page intentionally left blank

Table of contents

IMPORTANT! READ CAREFULLY!.....	4
Electrical safety.....	4
Thermal printer and paper.....	4
Disposal of this machine.....	4
Contacts.....	4
PAPER MOUNTING.....	5
AUTOMATIC LOADING.....	6
Manual Loading.....	7
Note about the printer cutter.....	7
ADJUSTMENTS AND CONTROLS.....	8
Volume adjustment.....	8
Push-Buttons.....	8
PROGRAMMING MENU.....	9
LCD display indications.....	10
Technical specifications.....	11
Declaration of conformity.....	12
Manual revision and contacts.....	13

IMPORTANT! READ CAREFULLY!

Electrical safety

This machine is powered with mains power and it is dangerous to the user if the AC network to which it is connected is not earthed properly and is not made according to the laws.

Thermal printer and paper

This machine prints a ticket using thermal paper. We recommend that you use the original paper supplied by us for longer life of the printing head.


Disposal of this machine

This is an electronic equipment and needs to be disposed according to the laws. You can return it to us for disposal at no cost.

Contacts

If anything is not clear or in case you may need additional information or inform us about a mistake, please contact us using the details on last page of this manual.

PAPER MOUNTING

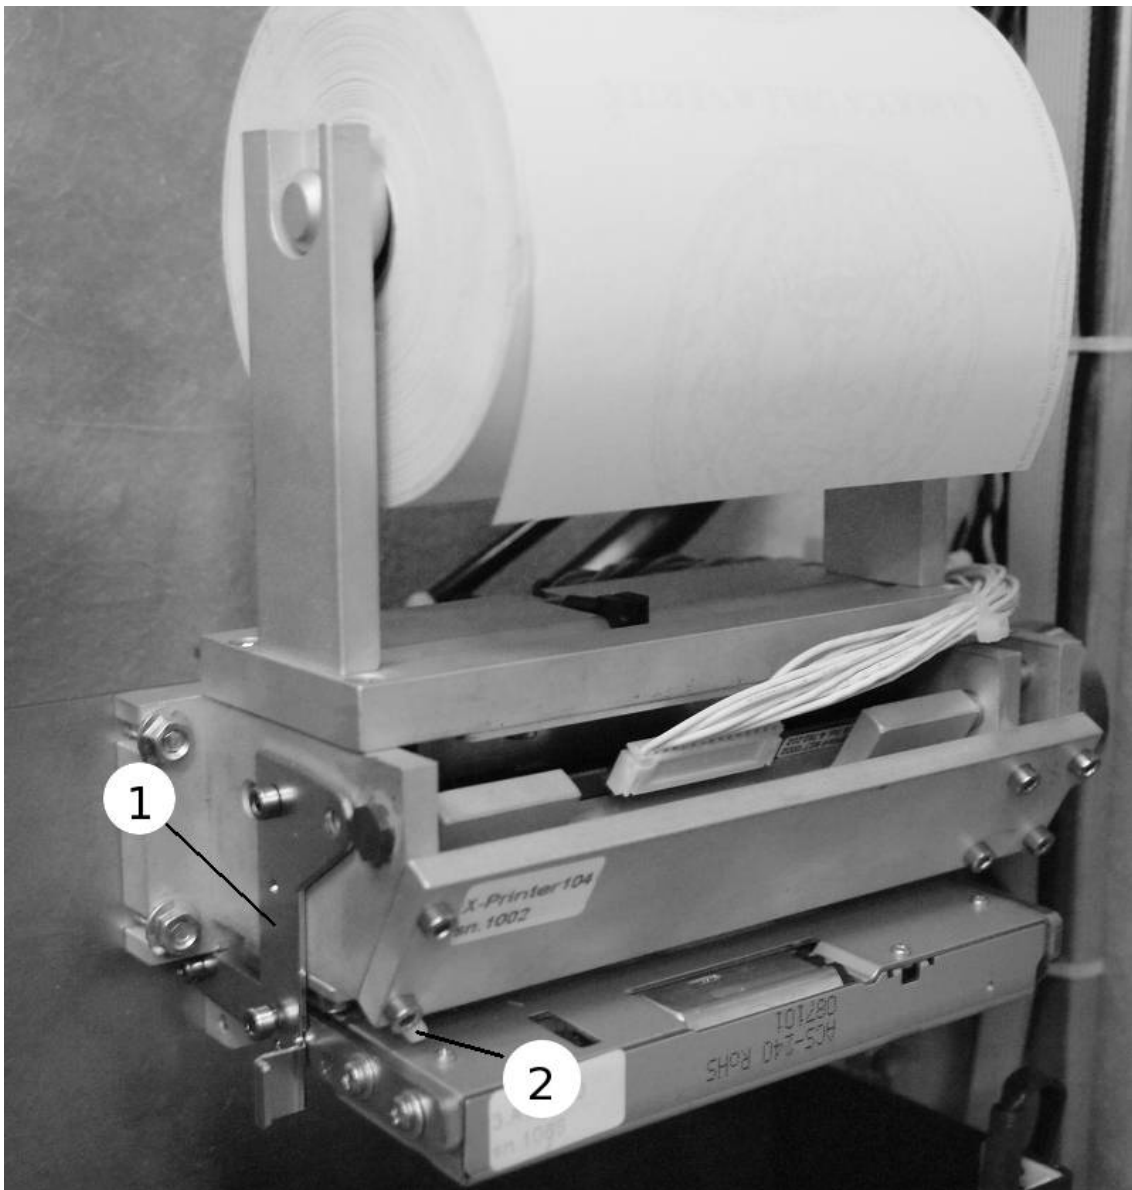


Paper can be mounted in 2 ways: automatic loading or manual loading.

In either way you need to mount the roll correctly with the sensitive side facing you (if it is original paper, the side with the bocca logo must face you).

In either way you must cut the paper evenly before presenting it to the printer.

AUTOMATIC LOADING

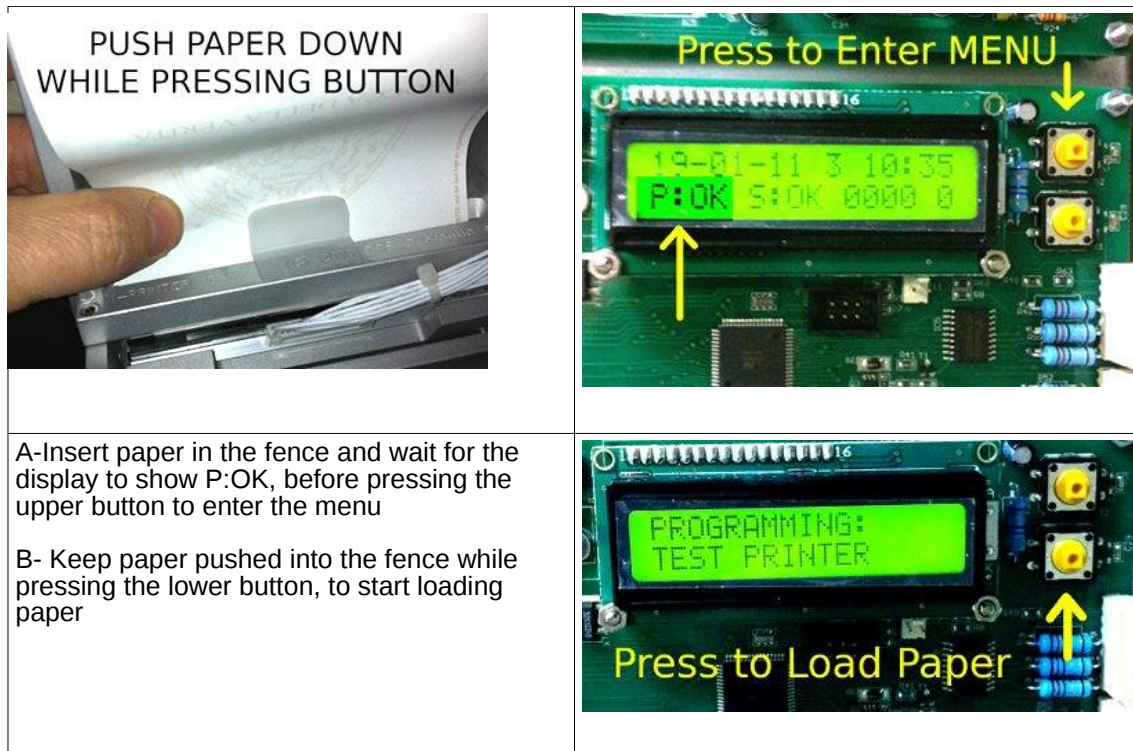

1-Cut paper in a straight line and insert it into the fence.

2-Push paper down until it stops


3-Check that the displays shows P:OK (not P:!))

4-Enter the programming menu with the upper button and press it until you see TEST PRINTER

5-With the left hand keep the paper pressed down in the fence, with the right hand press the lower button

Machine will load paper and print a test ticket

Manual Loading

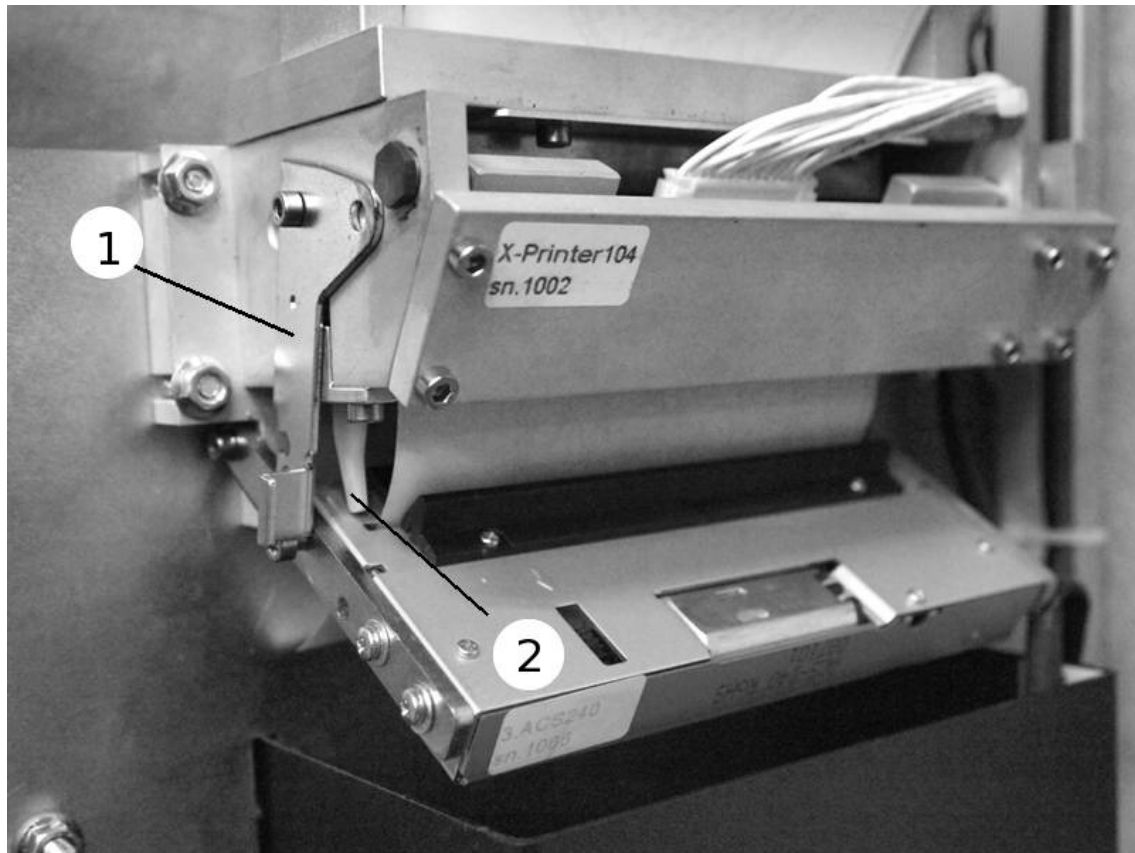


- Open the cutter by means of the lever 1
- Release the printer head using the lever 2
- Feed the paper through the printer and through the cutter.
- Close the printer lever 2
- Close the cutter and latch lever 1

Note about the printer cutter

Never touch the cutter blade with a screwdriver or a metal device. Doing so will certainly break it.

ADJUSTMENTS AND CONTROLS

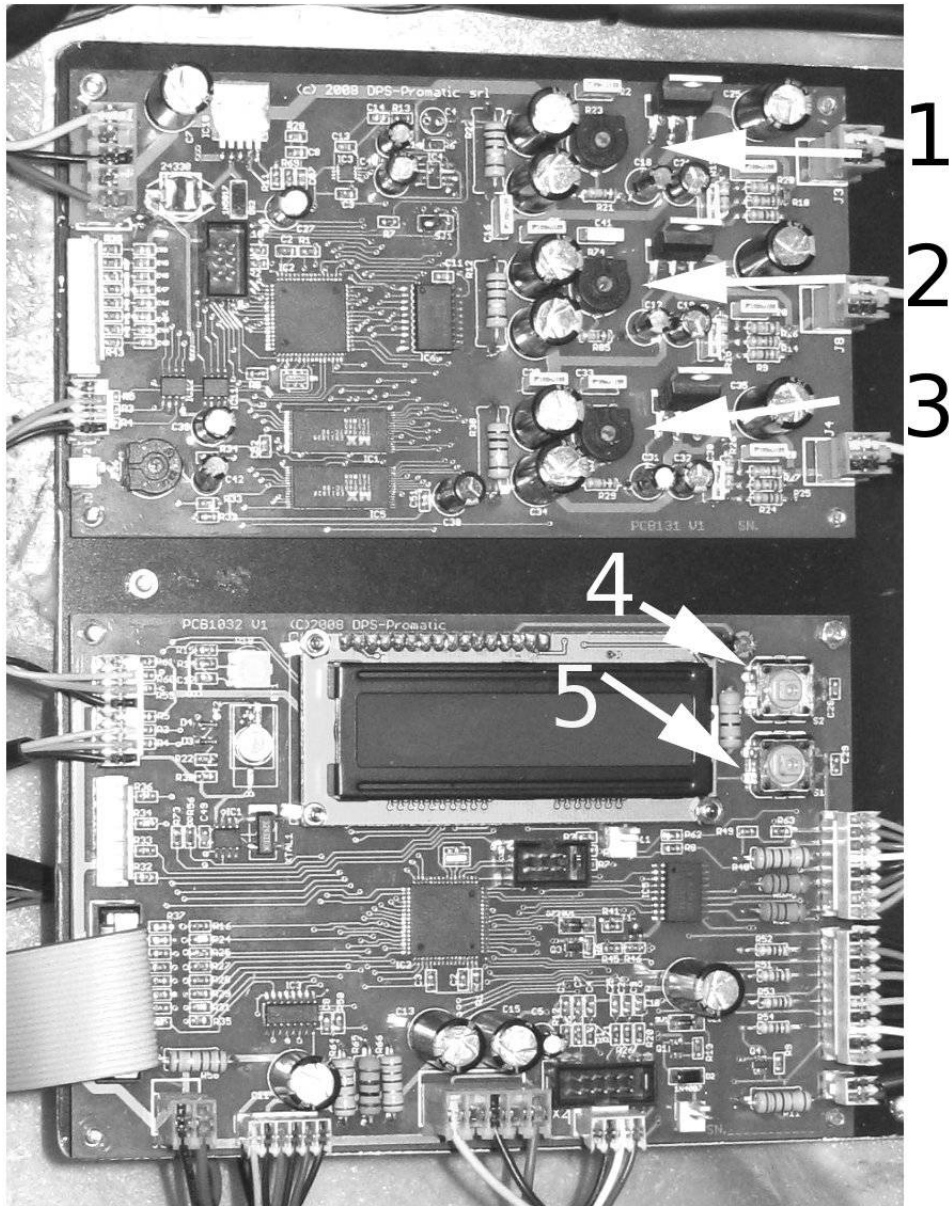

Volume adjustment

The machine has 3 amplifiers with individual volume adjustments.

Adjust volume 1 for upper left speaker

Adjust volume 2 for voice speaker

Adjust volume 3 for upper right speaker

Push-Buttons

Button 4 is called SET and used to enter the menu and move into it

Button 5 is called SELECT and used to choose a function in the menu

PROGRAMMING MENU

To access and use the programming menu, it is necessary to use the SET and SELECT buttons that are shown in the picture with number 4 and 5.

Press SET to enter the programming menu and again press SET to move through the various options.

Once you have found the option that interests you, press SELECT to confirm it.

Via the programming menu you can:

1- Read cash counter. The number you read is in cents. If you programmed vend price 1 Euro, that is 100 cents, here you will read 1000 for an income of 10.00 Euro.

2- Program clock

With this menu you can program date and hour

3- Set Vend Price

The machine will sum the pulses received from the channels and start the play when the vend amount is reached.

4- Change acceptor channels

There are 6 acceptor channels. Standard setting is 005,010,020 050,100,200.

Note: If your machine has a comparator acceptor (that only accepts 1 type of coin) the value is the one shown in channel 2.

5- Enable or disable the attract voice

6- Test printer (and load paper)

7- Check sound board

8- Test software versions

9- Exit

LCD display indications



When machine is in attract mode, waiting for a customer, the upper line shows the time and date.

Second line shows P:OK and S:OK and this means that the printer board and sound board are working fine. Otherwise you would see a '!' instead of OK. For example, this happens if there is no paper.

Next you see 0000 that is the money currently available as credit. If the play costs 200 and you insert 100, you would see 0100 here.

After inserting the second 100, the play would start and the amount reset to 0000. This amount will be cleared after 5 minutes.

The rightmost number (0 in the example) is the hexadecimal value read by the hand sensors. When there is the hand in, this sensor should normally read F.

Without and hand inserted, correct values here are 0,1,2,3,4.

If you read an higher value, check for dirt on the sensors.

When the hand is in, you should read any of the following values:

A,B,C,D,E,F

Technical specifications

Power supply: 115 or 230V 50/60Hz
(selection of power voltage is made with 2 jumpers inside the power supply box)

Consumption: 70 VA
Fuses 1 x 1 A

Declaration of conformity



Manufacturer: DPS-Promatic srl
via Edison 21
47122 Forlì Italy

declares that the following product

Product: Coin operated machine
type BOCCA DELLA VERITA' MAXIMA

conforms to the following directives

EMC: Directive 89/336/EEC

Low Voltage Directive 73/23

Forlì 15-01-2009

DPS-Promatic srl
Massimo Portolani

A handwritten signature in black ink, consisting of a stylized 'M' and 'P' intertwined.

Manual revision and contacts

This is revision 1.31 en
of user manual
of BOCCA DELLA VERITA' MAXIMA

Edited on 18-01-11

by the manufacturer

DPS-Promatic srl
via Edison 21
47122 Forlì Italy

E-mail: dps1@dps-promatic.com
Fax: 0543-796725



This is an electronic device and must be disposed
according to the existing laws.
Do not throw it in the normal trash.

