# USER MANUAL CP810

Nanjing Corewise Smart Technology Inc.

Support

Hotline: 0086-13851413726, 13851629242 Skype: xiafan\_max (software), cruise.xiao (hardware) E-mail: bi.chuanrong@corewise.cn







## **Profile Picture**







## **Pictorial Illustrations**









1) Press DOWN of the button until mobile phone inserted into its right place.



2) This is the right way of inserting mobile phone.



3) Release button and check if mobile phone is locked to the button. If not, repeat step 1) and 2).

• Operational Guide of Unplugging Mobile Phone Out of Base:

1) Press DOWN of the button until mobile phone is unplugged out of the base machine.



2) Unplugging the mobile phone out of the base machine.



3) Release the button.

• Operational Guide of Inserting Printing Paper:

1) Open cover of printer compartment, put paper roll inside.



2) Press F1 (paper rolling) button and check if paper goes smoothly.





• Operational Guide of Testing RFID Function:

1) Ensure mobile phone is communicating fine with base machine, and then enter into DEMO software, select RFID button.

2) Put RFID smart card in the place as shown below.

3) Select "Read" function, information will be shown on the screen.



ISE

• Operational Guide of Testing Fingerprint Function:

1) Ensure mobile phone is communicating fine with base machine, and then enter into DEMO software, select Fingerprint button.

2) Press your finger on the sensor, finger tip should touches the metal frame.

3) Select "Read" function, information will be shown on the screen.



• Operational Guide of Testing IC Card Function:

1) Ensure mobile phone is communicating fine with base machine, and then enter into DEMO software, select IC Card button.

2) Insert IC card (with chipset side) into the base machine.

3) Select "Read" function, information will be shown on the screen.

# **Technical Specifications**

Dimensions	220 x 92 x 49(mm) (8.7" x 3.7" x 1.9")		
Weight	0.5Kg (1.1lbs) with batteries		
3G	WCDMA R99: maximum data rate of 384 kbps, 2100Mhz		
	GSM R99: Supports CS SMS, 900/1800Mhz		
	GPRS : CS schemes – CS1, CS2, CS3, and CS4		
	EDGE : Downlink coding schemes – CS 1-4, MCS 1-9		
	CDMA 1X 2000/EVDO 800Mhz		
CPU	Qualcomm MSM 8625, Dual Core, 1.2GHz		
Internal Memory	4GB Nand Flash ROM + 4Gb LPDDR RAM		
External Storage	T-Flash/Micro SD card, up to 32 GB		
Operating System	Google Android 4.0.4		
Display	TFT LCD 5 inch, sunlight readable, capacitive touch screen		
	with resolution: 480 x 800		
Camera	Front 0.3M, rear 5.0M, LED, auto focus		
Network Interface	Integrated WLAN 802.11 b/g, integrated Bluetooth 2.1		
	EDR, 10m		
GPS	Supported, 10m		
USB	Mini USB 10-pin, OTG supported		
UART & RS232	Supported		
Battery	DC 3.7V, 2500mAh/DC 7.4V, 5000mAh		
Features			
	58mm standard thermal printer		
IC Card	Contact IC card, ISO 7816-3		
MSR	2 tracks supported		
	Build-in biometric fingerprint sensor, capacitive touch screen, 508 DPI, registration/matching/verification<1s		
	HF RFID 13.56Mhz, ISO/IEC 14443 A, ISO/IEC 14443 B, ISO 15693, 3-5cm reading range		

# Functionalities





# **Fingerprint Sensor**

	TCS2SS	TCS1ST	
Picture			
	AuthenTec Inc. (On 27 July	AuthenTec Inc. (On 27 July 2012,	
Vendor	2012, AuthenTec was acquired	AuthenTec was acquired	
	by Apple Inc.	by Apple Inc.	
Size	10.4*14.4mm array (imaging	12.8*18.0mm array (imaging	
	area)	area)	
Туре	Capacitive touch chip	Capacitive touch chip	
DPI	208*288pixel array, 508DPI,	256*360pixel array, 508DPI,	
	8bits per pixel	8bits per pixel	
Lifetime	4M finger placements	4M finger placements	

肯麦思 CP810 User Manual COREWISE

Imaging Mode	<=20mA @ 5.0V	<=20mA @ 5.0V
Standard IM	4.4V to 5.5V	4.4V to 5.5V
Supply		
EIM Modes	4.5V to 4.6V	4.5V to 4.6V
Supply		
Operating	-30 ºC to +85 ºC	-30 ºC to +85 ºC
Temperature		
Storage	-40 ºC to +85 ºC	-40 ºC to +85 ºC
Temperature		
Compliant	RoHS, FIPS 201	RoHS, FIPS 201

**Caution:** The sensor surface is hard and extremely robust and will withstand years of normal wear-and-tear. However, do not subject the sensor to sharp or hard objects since this might cause permanent damage. Cleaning should be done with a lint-free cotton textile. Do not subject the sensor surface to mechanical force.

	High Frequency (HF)	Ultra-High Frequency (UHF)	
Picture			
Bands	13.56Mhz(HF)	865-868 MHz (Europe)	
		902-928 MHz (North America)	
Range	10cm-1m	1-10m	
Standards	ISO/IEC 14443 Type A, ISO/IEC	ISO18000-6C	
	14443 Type B, ISO/IEC 15693		
Vendor	Corewise	Impinj R2000	

#### **RFID (Radio-Frequency Identification)**

### **Free SDK for Further Development**

Nanjing Corewise Smart Technology Inc. is basically a hardware manufacturer, producing various smart terminals. There handheld devices are semi-finished products, which are technically ready for miscellaneous applications in Windows Mobile OS or Google Android OS, however request further development on basis of our hardware.

Google Android downloadable apps or tailor-made software can work in conjunction with our powerful terminals to create most controllable and versatile solutions to bring human, financial, material resources as well as vehicles under absolute control

Best support will be provided by Corewise to help our buyers to code & program software on basis of our products. We offer free SDK to the purchasers for their purpose; programmers can take whatever they want from the software kit for secondary development.

<b>.</b>			-
퉬 .externalToolBuilders			2
퉬 .settings			2
퉬 .svn			2
퉬 assets			2
퉬 bin			2
퉬 gen			2
퉬 libs			2
퉬 res			2
퉬 src			2
classpath	507	225	¢
project	854	264	T
AndroidManifest.xml	3,657	1,016	1
lint.xml	53	53	1
project.properties	361	248	L
sh.exe.stackdump	1,086	408	1

For any technical issues, our technical software engineers can support online via Skype or emails to enable our purchases to make full use of the machine.

## **Printer Development Help**

#### com.corewise.asynctask:

#### 1.Construators

public AsynPrinter(Looper looper, CommunicateManager communicateManager);

#### 2. Callback interface

```
AsynPrinter printer;
```

```
printer.setOnPrinterListener(new OnPrinterListener() {
```

```
@Override
public void onPrinterSuccess() {
```

}

@Override
public void onPrinterFail(int code) {

if (code == Printer.PRINT\_NO\_PAPER) {

} else if (code == Printer.PRINT\_TIMEOUT) {

}

}

});

3. public void Printf(String Buffer); Print the string

/\*\*

- \* @param bold
- \* @param underline
- \* @param height
- \* @param width

\*/

4. public void setFontFormat(boolean bold,boolean underline,boolean height,boolean width ); Set the font bold, underline, double higher, double width.

5. public void printImage(byte[] data)

*Print bitmap, width is less than 384 pixels, 500 pixels high not more than, 1bit on behalf of 1 pixels.* 

6. public void setBarCodePosition(int position) Position(1:left 2:middle 3:right)

Note: Can communicate via Bluetooth and serialport.

## **Remove Installed Demo**



Press this icon to enter into main menu

On the main menu page, gently press on "CP810\_V2.9" Icon and drag to the screen up side to remove the pre-installed Demo



Gently press on "CP810\_V2.9" Icon and drag to the screen up side to remove the pre-installed Demo



#### Press and drag the icon to upside until the screen shows as the following:



Press and drag the icon to upside until the screen shows red "Un-install", drop the icon into it.

## Install a New Demo

Step 1: Copy the new files (for instance "CP810-V2.9) into a "T-Flash/Mini SD Card"; Step 2: Unscrew rear cover of the mobile phone (A160);

Step 3: Insert the "T-Flash/Mini SD Card" into the mobile phone and screw the rear cover up;

Step 4: Press "ES File Explorer" to enter into its file manager





#### 作麦思 CP810 User Manual **COREWISE**



#### Step 5: In its file manager, find "external\_sd" icon and click it

Step 6: In external sd file, you can find "CP810\_En.apk", double click it to run it.



## **Upgrade for CP810 Barcode Printing**

1. Please check the File and find the file named " CP810\_Upgrade", copy those four files inside to 2G T-Flash card root directory(T-Flash Card must be 2G).

2. Insert the "T-Flash Card" to the base, then with battery loaded.

3. Press the button "Power key" to power on, the software will update automatically. The power light turns green and will last for a few minutes. Around 5 minutes , it will be successfully updated, then the power light turns flashing.

4. Power off the base, and take out the T-Flash Card (T-Flash Card must be taken out, otherwise it'll keep updating again next time you power it on).

5. Please check the File and find the file named "CP810\_En". Then ready to install the file to the Phone A160.

6. Once finished all the installations of barcode printing, then put the Phone back on the base and power on the unit to run the software.

You can see a button of checking the software version on the software interface.Click it to see the current version number.If it shows V2.7, it means that you've already upgraded successfully.

(P.S.: Battery Power: More than 50% or full status. )

## **Packaging & Transportation**

**Maintain:** Please use a soft and dry cloth to wipe and clean the device gently regularly, especially display screen.

**Packaging and Transportation**: For long-distance transportation, packaging must be done with protective measures. Do NOT allow rain, snow or liquid to be poured directly on the device during transportation, as this may result in mechanical damage.

**Storage Ambience**: ventilated, dry and free of sharp temperature changes, without affecting the surrounding magnetic field, no acid, alkali or other harmful gases in the air.

Packing List:

- POS Machine: 1pc
- Charger: 2 sets
- Batteries: 2pcs
- Data Cable: 1pc
- User Manual 1pc



肯麦思 CP810 User Manual COREWISE



![](_page_17_Picture_3.jpeg)

![](_page_18_Picture_0.jpeg)