

# **User Manual**

## **Lava iris 460**

## ALL RIGHTS RESERVED


---

©2014. All rights are reserved. No part of this document can be reproduced without permission. All trademarks and brand names mentioned in this publication are property of their respective owners.

While all the efforts have been made to ensure the accuracy of contents in this manual, we presume no responsibility for errors or omissions or statements of any kind, whether such errors are omissions or statements resulting from negligence, accidents, or any other cause. We operate a policy of continuous development and reserve the right to make changes, modifications and improvements to the device, device features/ specifications or any of its parts without prior notice.

Your device may have preinstalled bookmarks and links for third party internet sites and may allow you to access third party sites. These are not affiliated with us, and we do not endorse or assume liability for them. If you access such sites, take precautions for security or content.

The limited warranty does not cover user manuals or any third party software, settings, content, data or links, whether included/downloaded in the product, whether included during installment, assembly, shipping or any other time in the delivery chain or otherwise and in any way acquired by you. To the extent permitted by applicable law(s), we do not warrant that any our software will meet your requirements, will work in combination with any hardware or software applications provided by a third party, that the operations of the software will be uninterrupted or error free or that any defects in the software are correctable or will be corrected.

 *User's Manual is provided just to guide the user about the functionality of the device. This does not seem to be any certificate of technology. Some functions may vary due to modifications and up-gradations of software or due to printing mistake.*

## SAFETY PRECAUTIONS

---

Please read the following safety guidelines before using the device.


- Do not use the phone while you are driving.
- Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.
- Keep your phone and its accessories away from children.
- Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. People having active medical implants should keep their cell phone at least 15 cm away from the implant.
- Permanent hearing loss may occur if you use earphones or headphones at high volume.
- Use a wireless hands-free system (headphone/headset) with a low power Bluetooth emitter.
- Make sure the cell phone has a low SAR.
- Keep your calls short or send a text message (SMS) instead. This advice applies specially to children adolescents and pregnant women.
- Use cell phone when the signal quality is good.

### **Notice:**

- Do not dismantle the device or accessories otherwise, manufacturer is not liable to pay for damages as the device and accessories are not covered by warranty.
- Use only original batteries and charging devices.
- Please back up your important data timely and keep them properly. The company is not liable for any failure to call or loss of data due to mis-operation, poor signal or power cut, etc.
- All the screens in this manual are for reference only, and some contents actually displayed may depend upon the presetting of the service provider or the

network operator, or the SIM card. If any functions referred to in this manual are different from those of your device, please follow your device.

- Do not put use it in a place with flammable gas such as a petrol pumps. The temperature recommended for using the device is 5-35°C. Do not touch the charger, power cable or socket with wet hands. This may cause an electric shock.

 ***If your phone or any of its accessories do not function normally, then please visit your nearest authorized service facility. The qualified personnel will assist you, and if necessary, will arrange for the service.***

# TABLE OF CONTENTS

---

---

<b>ALL RIGHTS RESERVED</b> .....	1
<b>SAFETY PRECAUTIONS</b> .....	2
<b>TABLE OF CONTENTS</b> .....	4
<b>1. UNDERSTANDING YOUR DEVICE</b> .....	7
1.1 GENERAL INFO.....	7
1.2 DEVICE OVERVIEW.....	8
<i>Position of Keys</i> .....	8
<b>2. GETTING STARTED</b> .....	10
2.1 INSTALLING CARDS & BATTERY.....	10
<i>Installing SIM Card and Battery</i> .....	10
<i>Installing Memory Card</i> .....	10
<i>Charging the Battery</i> .....	11
2.2 POWERING ON/OFF THE DEVICE.....	11
<i>Turning On the Device</i> .....	11
<i>Turning Off the Device</i> .....	12
<b>3. BASIC OPERATIONS</b> .....	13
3.1 CALLING.....	13
<i>To Make Calls</i> .....	13
<i>Answer/Reject an Incoming Call</i> .....	13
<i>Other Options during the call</i> .....	13
<i>To put a call on hold</i> .....	13
<i>To set up conference calls</i> .....	13
3.2 MESSAGING.....	14
<i>Creating a Message</i> .....	14
<i>Receiving and Managing Messages</i> .....	14
<i>To forward a text message</i> .....	14
<i>To copy message text</i> .....	14
<b>MULTIMEDIA MESSAGE</b> .....	15
3.3 CONTACTS.....	15
<i>To add a Contact</i> .....	15
<i>To import contacts</i> .....	15
3.4 EMAIL.....	16
3.5 BROWSER.....	16
<b>4. HOME SCREEN</b> .....	17
4.1 STATUS BAR.....	17
4.2 CUSTOMIZING SCREEN.....	17

<i>Shortcuts</i> .....	18
<i>Widgets</i> .....	18
<i>Setting the wallpaper</i> .....	18
<i>Rotating Your Mobile Phone Screen</i> .....	18
<b>5. MULTIMEDIA</b> .....	<b>19</b>
5.1 FILE MANAGER .....	19
5.2 MUSIC .....	19
5.3 CAMERA.....	19
5.4 SOUND RECORDER .....	19
5.5 GALLERY .....	19
5.6 FM RADIO .....	20
<b>6. NETWORK</b> .....	<b>21</b>
6.1 WI-FI.....	21
<i>Note:</i> .....	21
6.2 3G .....	21
6.3 BLUETOOTH .....	21
<b>7. SETTINGS</b> .....	<b>22</b>
7.1 SIM MANAGEMENT .....	22
7.2 WIRELESS & NETWORKS .....	22
7.3 AUDIO PROFILES.....	22
7.4 DISPLAY.....	22
7.5 STORAGE .....	22
7.6 BATTERY .....	23
7.7 APPS .....	23
7.8 LOCATION.....	23
7.9 SECURITY .....	23
7.10 LANGUAGE & INPUT .....	24
7.11 BACKUP & RESET .....	24
7.12 ACCOUNTS .....	24
7.13 DATE & TIME .....	24
7.14 SCHEDULE POWER ON & OFF.....	24
7.15 ACCESSIBILITY .....	24
7.16 ABOUT PHONE .....	24
<b>8. APPLICATIONS &amp; UTILITIES</b> .....	<b>26</b>
8.1 CALCULATOR.....	26
8.2 CLOCK.....	26
8.3 GMAIL.....	26
8.4 PLAY STORE .....	26



<b>ENVIRONMENTAL CONCERN.....</b>	<b>27</b>
<b>E-WASTE DISPOSABLE MECHANISM.....</b>	<b>29</b>
<b>SAR INFORMATION.....</b>	<b>30</b>
<b>TROUBLE SHOOTING .....</b>	<b>31</b>
<b>LAVA WARRANTY CERTIFICATE.....</b>	<b>32</b>

# 1. UNDERSTANDING YOUR DEVICE

---

## 1.1 GENERAL INFO

---

Iris 460 is a dual SIM phone that encloses features, such as **Android version 4.4, Wi-Fi, 1.3G Dual core Processor, 5 MP digital Camera**.etc. This phone is provided with two SIM slots for two different SIM cards. The SIM card inserted in the slot1 is called SIM1, and the other one in the slot2 is known as SIM2. You can select to operate SIMs as per your needs.



## 1.2 DEVICE OVERVIEW

---



### Position of Keys

1. Earphone Jack

2. Earpiece

3. Volume control key

4. Touch Screen

5. Menu Key

6. Home Key

7. Back Key

8. Front camera lens

9. USB port

10. Camera lens

---

11. Torch

12. Battery cover

13. Power Key

14. Speaker

---

## 2. GETTING STARTED

---

### 2.1 INSTALLING CARDS & BATTERY

---

Please switch off your device before inserting or removing the battery/ SIM card or memory card.

#### **Installing SIM Card and Battery**

Your device is provided with two SIM slots for two different SIM cards. In order to install battery and SIM card in the device, please follow the steps mentioned below:

- Remove the back cover of the device.
- Hold the device with the front facing downwards and pull the battery cover.
- Insert the SIM cards in the device.
- Attach the battery.
- Push the battery cover until it clicks into place.



#### **Installing Memory Card**

Your device supports T-Flash card, which is a multimedia memory card used to multiply the memory of the device. The T-flash card is small and should be pulled out and installed carefully and prudently in order to avoid any kind of damage. Please follow the steps mentioned below to install the memory card in the device:

- Switch off your device.
- Remove the battery cover.
- Slot the T-Flash memory card into the slot.
- Attach the battery.

- Fix the battery cover until it mount properly into place.



### Charging the Battery

The device prompts a warning tone and message stating insufficient battery when the battery power is low.

Please follow the instructions mentioned below to charge your device:

- Plug the connector of the charger into the jack of the device.
- Plug the charger into a standard AC wall outlet.

Charging.....  Fully Charged..... 

You should fully charge the battery before using the device for the first time. It is recommended to charge the battery for three hours before using the device for the first time.

## 2.2 POWERING ON/OFF THE DEVICE

---

### Turning On the Device

After installing the SIM cards and charging the battery, you are now ready to turn on your device.

- Long press and hold the Power Key to turn on the device.
- The first screen that appears is known as the home/idle Screen.
- Drag the lock icon sideways to unlock the screen.
- If the screen turns off, then short press the Power Key to turn on the display.

## Turning Off the Device

- Press and hold the Power Key for 3 seconds.
- A pop-up window appears, select Power off.
- Select OK to confirm.


## 3. BASIC OPERATIONS

---





### 3.1 CALLING

---


#### To Make Calls


If the icon  appears on the screen, then you can make or receive calls.

To make a call, please follow the steps mentioned below:

- Enter the Main Menu, select Phone.
- Tap , enter the phone number using the on-screen keyboard.
- Tap  to delete a wrong number. Tap and hold it to erase the entire number.
- After entering phone number, tap .
- To end the call, tap .

#### Answer/Reject an Incoming Call

When you receive an incoming call, a notification message appears on the screen. In order to accept the call, drag  towards right.

If you wish to reject the call, drag  towards left.

#### Other Options during the call

##### To put a call on hold

If you are having a call conversation and there is another incoming call, select hold to put the first call on hold. To unhold the call, select unhold.

##### To set up conference calls



- If you are already having a call conversation, select Hold to put the call on hold.
- Select Add Call to make another call. .
- After connecting to the second call, select merge calls to set up the conference call.

## 3.2 MESSAGING

---

Your device features, sending and receiving of SMS (Short Message Service) and MMS (Multimedia Message Service). Go to Main Menu and then select Messaging.


### Creating a Message

- Tap  Compose new message.
- In To field; enter the recipient's phone number.
- Type message in the Type to compose field.
- Tap  to Send.

### Receiving and Managing Messages

When you send and receive messages to or from a contact, these messages are grouped as a message thread. A message thread looks like an exchanged conversation.

#### To forward a text message

- Enter the Main Menu, select Messaging.
- Tap to view a message thread.
- Press and hold a message to view the message options.
- Select Forward.
- In the To field, enter the recipient's phone number.
- Tap  to Send.



#### To copy message text

You can use this function to copy the text from a message to a new message you are composing.

- Enter the Main Menu, select Messaging.
- Select a message thread to open it.
- Press and hold the message to view the submenu options.
- Select 'Copy'.
- Go to Compose new message.
- Press and hold Type to compose.
- Select 'Paste' to paste the copied text to your new message.

## MULTIMEDIA MESSAGE

A Multimedia message or MMS can contain letters, an image, an audio or video file. To create and send a MMS, please follow the steps mentioned below:


- Enter the Main Menu, select Messaging.
- Tap  Compose new message.
- Select Menu > Add subject.
- In the To field, enter the recipient's phone number or and enter the Subject.
- To insert a picture or video file, etc, tap .
- To insert text, tap Type to Compose, and then enter your message.


## 3.3 CONTACTS

---

Contacts refer to the phonebook that lets you store names, phone numbers.

### To add a Contact

- Enter the Main Menu select Phone.
- Tap , Enter number > Tap Menu key > New contact.
- Select the storage
- You can enter contact information such as name, phone number.
- Tap Done to save the contact.

**Tip:** Or enter the Main Menu and select People, tap  create New contact.

### To import contacts

- Enter the Main Menu select People.
- Tap Menu key > Import/Export.
- Select to import contacts from Phone contact/ Phone storage/ SIM Card/ SD Card.
- Select a particular source to import the contacts from.
- Select Next.
- Select the destination, such as Phone to copy contacts to.



- Select Next.
- Select “Select All” to import all contacts or mark the required contacts.
- Select OK.

### **3.4 EMAIL**

---

Your device allows you to compose, read and send emails.

### **3.5 BROWSER**

---

Browser is a tool which enables you to access the Internet.

## 4. HOME SCREEN










---

From Home screen, you can quickly access common features, view notifications of missed calls, received messages and check connection status.

### 4.1 STATUS BAR

---

The Status bar icons indicate different types of information. The table below lists various icons that might appear on the status bar of the device.

	Network intensity of SIM card 1 or SIM card 2
	Battery level of the device
	New short message
	Missed call notification
	Headset is plugged in
	USB connected
	Wi-Fi is connected.
	Bluetooth is activated
	GPRS network is in use.

### 4.2 CUSTOMIZING SCREEN

---

The device features a touch screen with idle displays and access to utilities at just one-touch. So swipe right or left to navigate through various screens accessing your favorite features without entering the main menu. Each screen can be customized by adding various

widgets, shortcuts and folders.

### **Shortcuts**

In order to add a shortcut on the screen: Long press on the desired application to add on the screen.

### **Widgets**

Save time with live updates right on Home screen and get all of your personalized updates at one place.

### **Setting the wallpaper**

You can customize the wallpaper of your Home screen with default wallpaper or with pictures taken from your device.

- In the idle mode, tap Menu Key > Wallpapers.

### **Rotating Your Mobile Phone Screen**

- The orientation of most screens will change to landscape or portrait view when you rotate your phone sideways.
- On the Home screen, Settings > Display > Auto-rotate screen to disable this function.

## 5. MULTIMEDIA

---

Your device features various multimedia options, such as Music, Camera and Sound Recorder, etc.

### 5.1 FILE MANAGER

---

You can browse, open and manage the data saved in the Device and Memory card by accessing the File Manager sub-menu. The device provides a certain space for users to manage files and supports the T-Flash card. You can use the file browser to conveniently manage various directories and files on the T-Flash card.

### 5.2 MUSIC

---

Use the Music to play music files. The songs saved in your SD Card can be played using the Music of the device.


### 5.3 CAMERA

---

Your device is equipped with camera and camcorder, which enables you to capture photos and videos.

### 5.4 SOUND RECORDER

---

You can use the sound recorder to record sounds and also select to save the recordings in your phone. Tap  select Application tab > Sound Recorder. When in the sound recorder interface, press menu key to select recording mode.

### 5.5 GALLERY

---

You can view the captured images, recorded video clips, and downloaded images in the Gallery.




The picture folder and video folder will be displayed.

Select to view the camera pictures or camera videos. The images or videos will be displayed in thumbnails.

## 5.6 FM RADIO

---

You can use your phone to listen to FM radio stations once the original Headset is plugged into the connector. Please press the side key to adjust music volume.

Tap  to exit FM radio function. Tap the (   ) to search the channels.


## 6. NETWORK

---

### 6.1 WI-FI

---

Connect to a wireless network to browse Internet.

- Enter Main Menu and tap Settings.
- Tap 'ON' to activate Wi-Fi.
- Tap  Wi-Fi > Network notification to start detecting networks. The available networks will then be listed.
- Tap Add Wi-Fi network to add a connection.

#### Note:

- If the device before the connection is successful, the equipment information will be saved in the pop-up window selected connection, select forget to remove device information.
- If the device does not encrypt selected connection in the pop-up window to connect.
- If the device is encrypted, the pop-up window will appear, enter the password.
- Network connection is successful; the status bar icon appears Wi-Fi connection.

### 6.2 3G

---

The device supports WCDMA protocol. Please make sure that you device is turned off, then insert or remove the SIM card.

### 6.3 BLUETOOTH

---

You can transfer data, such as music to other device using Bluetooth. Search the device and accept/transfer data. The received data is automatically stored in the directory.

- Access Settings by entering the main menu
- Check Bluetooth to turn on Bluetooth
- To make your device discoverable, select bluetooth settings and check discoverable.

## 7. SETTINGS

---

---

Select Settings to view and adjust the settings of your device. The Settings menu is categorized into: Wireless & networks, Audio profiles, Display, Storage, Battery, Apps, Location, Security, Language & input, Backup & reset, Accounts.

### 7.1 SIM MANAGEMENT

---

Your device supports two SIM cards, which can be managed by accessing the SIM Management sub-menu. You can view/change the roaming settings of the cards using this menu.



### 7.2 WIRELESS & NETWORKS

---

Access this sub-menu to change/view the Wi-Fi, Bluetooth, Mobile Networks, etc. Please refer to network section for detailed information on Wi-Fi and bluetooth.

### 7.3 AUDIO PROFILES

---

Your device provides four pre-defined user profiles that allow the operations of the device to best suit the environment you are in. The profiles are General, Silent, Meeting and Outdoor. The Touch  icon adds a new profile; tap the  icon to select Reset to restore the default settings.

### 7.4 DISPLAY

---

With this function you can configure the display characteristics of the device including brightness, Auto-rotate screen, etc.

### 7.5 STORAGE

---

View and manage the data storage of your device:

Total Space and Available Space: Lists the amount of space on the microSD card installed in your device and the amount you have used to store photos, videos, music, and other files.

Un-mount SD Card: Un- mounts the microSD card from your device so that you can format the card or safely remove it when the device

is on.

Available Space: The amount of internal phone storage used by the operating system, its components, applications (including those you downloaded), and their permanent and temporary data.

## 7.6 BATTERY

---

You can check the battery status of the device by accessing this sub-menu.

## 7.7 APPS

---

This sub-menu enables you to manage all the installed, running and applications saved in the device memory and SD card. You can remove and manage installed applications, view and control running applications, allow installation of non we build in market applications.

## 7.8 LOCATION

---

Your device supports Global Positioning System.

## 7.9 SECURITY

---

You can protect your device from unauthorized users by setting the PIN code or entering a password.

### **Enable or Disable SIM card PIN**

- Go to Application Drawer > Settings > Security.
- On the SIM card lock tab, select Set up SIM card lock.
- Select a SIM card.
- Tap Lock SIM card to use PIN. Check to enable, uncheck to disable.
- Enter the current PIN code.
- To change the PIN code, select Change PIN.
- Enter the old PIN code.
- Enter the new PIN code and confirm.

### **Setup Screen Lock**

You can set up a lock for your screen in form of Pattern, PIN code or password.

- Go to Settings > Security
- Set up screen lock



- Select a desired form (None, Slide, Pattern, PIN or password)

## **7.10 LANGUAGE & INPUT**

---

Use the Language & Keyboard settings to select the language for the text on your device and for configuring the onscreen keyboard, including words that you've added to its dictionary.

## **7.11 BACKUP & RESET**

---

You can use the Privacy settings to manage your personal information, such as back up my data, automatic restore and factory date reset.

## **7.12 ACCOUNTS**

---

Use the Accounts to add, remove, and manage your Google and other supported accounts. You also use these settings to control how and whether all applications send, receive, and sync data on their own schedules, and whether all applications can synchronize user data automatically.

## **7.13 DATE & TIME**

---

You can select to set date, time and time zone using this sub-menu.

Use Automatic unless you need to override the network values.

Use 24-hour format: Select to set 24-hour formats on or off.

Choose Date format: Select from a variety of formats.

## **7.14 SCHEDULE POWER ON & OFF**

---

You can set the time for auto power on /off. Do turn the status on before using that function, and then the time.

## **7.15 ACCESSIBILITY**

---

You can use the Accessibility settings to configure any accessibility plug-ins you have installed on your device.

## **7.16 ABOUT PHONE**

---

You can view system information Including System updates, Status,

Legal information, Model number, Android version and so on.

## 8. APPLICATIONS & UTILITIES

---

### 8.1 CALCULATOR

---

Calculator helps you perform basic arithmetic functions, such as addition, subtraction, multiplication and division.

### 8.2 CLOCK

---

This function gives you an access to the alarm clock.

- Go to  → Clock, tap  to add alarm clock.

### 8.3 GMAIL

---

Gmail is Google's web-based email service. Google Mail is configured when you first set up your device. Depending on your synchronization settings, Google Mail on your device is automatically synchronized with your Google Mail account on the web.

- Go to Main Menu > Gmail.
- Select "Existing" or "New" start the Gmail.
- Follow the on screen instructions to login or create your Gmail username and password.
- Once logged in, you can begin reading and sending emails from your Gmail account.

### 8.4 PLAY STORE

---

Play store allows you to find and download applications and fun games for your device.

- Go to Main Menu > Play Store and setup your Google account.
- Select "NEW" to create a new account or "Existing" sign in your existing account.

Once you are signed in you can begin searching and downloading programs from the market. Tap Apps to view the list of applications available and tap Games to view the list of games available.



## ENVIRONMENTAL CONCERN

---

Help us save Our Environment...GO GREEN..!!

All our endeavors are directed towards providing environment friendly products to you. The materials used in our devices are recyclable and can be reused to make new products. We strive to make products that are safe for our consumers as well as the environment. Come join hands with us and make world a better place to live.

Preserve natural resources for future generations by recycling your phone. The phone contains some metals, when recycled properly; these can be put back into circulation, decreasing the need for new metal mining. Recycling reduces the need for raw materials, saves energy, helps mitigate Global Warming and reduces pollution, reduces waste products in landfills; therefore preserving natural resources for the future and saving the planet.

Follow some simple steps and contribute towards saving the planet.

DOs

Recycle your handset and its accessories.

To protect natural resources and to promote re-use of the material, kindly separate batteries from other type of waste.

DON'Ts

Do not dispose off your mobile and its battery in fire.

Do not dispose your mobile with the regular waste.

Do not over charge your handset. Remove the charger when battery is full.

Don't trash your phone, instead RECYCLE it

This logo signifies that this product and/or its constituents should not be disposed off with other household waste.



Hazards of Improper handling, accidental breakage, damage and /or improper recycling of hazardous elements

If this product is improperly handled, broken or damaged or carelessly recycled or disposed off in the fire, can result in environmental and data security concerns, including the following:

Affect nearly every system in the human body and result in birth defects, brain, heart, liver, kidney and skeletal system damage. They will also significantly affect the nervous and reproductive systems of the human body;

When burned, create cancer-producing dioxins which are released into the air we breathe; If thrown in landfills, may leach into groundwater affecting your local community;

In warm climates, the oxidation of mercury in the environment can be accelerated, leading to the creation of oxidized Hg atoms that are known to be associated with ozone depletion; and Improper recycling additionally results in data security issues, as private electronic information remains on hard drive, if not properly removed before disposal.

#### How to Recycle

Please get your electronics products recycled only through authorized recyclers, approved by Pollution Control Board. We provide facility of recycling of our products. For details of our collection centers, please visit our website or call our customer care. Help us to GO GREEN.

#### Constitution of Hazardous Elements in your Device:

Your device does not contain the following hazardous elements in a proportion higher than the limits provided hereunder: maximum concentration value of 0.1% by weight in homogenous materials for lead, mercury, hexavalent chromium, polybrominated biphenyls and polybrominated diphenyl ethers; and maximum concentration value of 0.01% by weight in homogenous materials for cadmium.

## E-WASTE DISPOSABLE MECHANISM

---

'E-waste' means waste electrical and electronic equipment (WEEE). In other words E-waste is a popular, informal name for electronic products nearing the end of their "useful life". For more details about e-waste please refer e-waste rules, 2011 [www.moef.nic.in](http://www.moef.nic.in)

Do's and Don'ts for disposal e-waste

### Do's:

- a. Ensure that an Authorized Person repairs your Lava products
- b. Call Our Local Authorized Collection Centers to Dispose Lava products
- c. Always drop your used electronic products, batteries or any accessories thereof after the end of their life at nearest Authorized Collection Point or Collection Center.
- d. Separate the packaging material according to responsible waste disposal options and sorting for recycling.
- e. Always remove the battery from the product, when you do not intend to use the product anymore it in future.

### Don'ts:

- a. Do not Dismantle your Lava Product on your own
- b. Do not give your e-waste to KabbadiWala / Scrap Dealer/ Rag Pickers.
- c. Do not dispose-off the e-waste in landfills.
- d. Never dump E-waste in garbage bins.
- e. Do not dispose of your product at municipal waste bins or rooms.
- f. Do not throw used batteries into household waste.
- g. Consequences of improper handling and disposal of E-Waste
- h. Improper disposal of waste prevents natural resources from being re-used.
- i. Some waste contains hazardous chemicals and if not disposed of properly may release toxins into the soil and water, and also releases greenhouse gases into the environment
- j. If e-waste is not properly disposed of, it can threaten the health and well-being of humans and animals and it also has an adverse effect on the environment.
- k. Placing of batteries or devices on or in heating devices, such as microwave, ovens, stoves, or radiators and improper disposal of batteries may lead to explosion.
- l. If the battery terminals are in contact with metal objects, it may cause a fire.
- m. For more details on how to dispose of your Lava products at the end of life, Please refer the list of our Services Centers on Pan India basis on our website [www.lavamobiles.com](http://www.lavamobiles.com) or please view this link for the details of Service Centers <http://www.lavamobiles.com/support>

## SAR INFORMATION

---

The highest SAR value for this mobile phone is <1.6 W/Kg, in accordance with the requirements of the ICNIRP, which recommended the limit for exposure to radio waves is 1.6 watts/kilogram(W/kg) averaged over 1 gram of tissue. For more information, please visit Lava's website [www.lavamobiles.com](http://www.lavamobiles.com) to query Safety precautions:

- a. Use a wireless hands-free system ( Headphone, headset) with a low power Bluetooth emitter
- b. Make sure the cell phone has a low SAR
- c. Keep your calls short or send a text message (SMS) instead. This advice applies especially to children, adolescents and pregnant women
- d. Use cell phone when the signal quality is good
- e. People having active medical implants should preferably keep the cell phone at least 15cm away from the implant

## TROUBLE SHOOTING

---

Check [www.Lavamobiles.com](http://www.Lavamobiles.com) web site for additional information, downloads, and services related to your LAVA product.

To check for the nearest LAVA service center location for maintenance services, you may like to visit [www.lavamobiles.com/support-services](http://www.lavamobiles.com/support-services)

### **Service Center number**

**No.:+919560394002**

Kindly note please send area code of place through SMS to this No. and in return you will get address of service center nearest to you by SMS.

### **Lava Customer Care Service**

**No: 1860-200-7500**



# LAVA WARRANTY CERTIFICATE

---

## Limited warranty:

LAVA international Ltd. (LAVA) provides limited warranty for your mobile phone and original accessories delivered with your mobile phone (hereinafter referred to as "product")

The warranty period for the transceiver is one (1) year and for battery, charger and headset is six (6) months from the date of purchase.

## LAVA Warranty

Subject to the conditions of this Limited Warranty, LAVA warrants a product to be free from defects in design, material and workmanship at the time of its original purchase by you, and for a subsequent period of one (1) year for transceiver and six (6) months for battery & charger.

You shall have to coverage or benefits under this warranty in the event that any of the following conditions are applicable:

- The product has been subjected to abnormal use or conditions, improper storage, exposure to 1.excessive moisture or dampness, exposure to excessive temperature, unauthorized modification, unauthorized repair (including but not limited to use of unauthorized spare parts in repairs),abuse, accidents, Acts of God, spills of food or liquids, improper installation
- You have not notified Lava of the defect in the product during the applicable warranty period.
- The product serial no. code or the accessories date code has been removed, defaced or altered.
- The product has been used with or connected to an accessory (i) Not supplied by Lava or its affiliates, (ii) Not fit for use with the product or (iii) Used otherwise than in manner intended.
- The seals of the product's battery enclosure have been broken or shown evidence of tempering or the product's battery has been used in equipment other than that for which it has been specified usable by LAVA.
- All plastic surfaces and all other externally exposed part that is scratched or damaged due to normal use.

To get maximum of your new product, we recommend you to:

- Read the guidelines for safe and efficient use as mentioned in the manual.
- Read the terms and conditions of your Lava warranty in the manual.
- Keep your original receipt; you will need it for warranty services if asked to produce.
- Present this Lava Warranty Certificate along with original proof of purchase whenever you require any warranty services.

In case Lava product needs service, please visit the nearest Lava service centers given in the service guide. Please visit our Website [www.lavamobiles.com](http://www.lavamobiles.com) for updated list of Authorized Service Centers near to

your location.

Important note: for your warranty to be valid, all information on the warranty certificate has to be completed including the stamp from the authorized distributor/retailer.

All warranty information, product features and specifications are subject to change without notice.

IMEI No. ....

Dealers Stamp .....

Date of purchase .....

Model No. ....