



Users Manual & Warranty

AQP-3TAP-D



CUSTOMER CARE LINE:

1300 764 325

aquaport@aquaport.com.au

TECHNICAL DETAILS

Model	Power Supply	Water Capacity		Rated Power		Net Weight
		Hot	Cold	Heating	Cooling	
AQP-3TAP-D	240V/50Hz	5 Lph	2 Lph ≤10°C	650W	90W	13Kg

User Manual & Warranty

Please read through the instructions carefully before using the product and ensure the manual is kept in a safe place for future reference.

CUSTOMER CARE LINE: 1300 764 325

aquaport@aquaport.com.au



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed.

- Read all instructions carefully.
- To protect against fire, electric shock and personal injury, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or personal injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or any other heat source.
- Turn all switches to “off” then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance should always be used in conjunction with an approved electrical safety switch.


SAVE THESE INSTRUCTIONS

FUNCTION

Produced with advanced technology and assembled with high quality materials, this product is safe and hygienic, it works fast but consumes little energy, it is also very stylish and modern.


OPERATION

1. If using a spring water bottle, vertically insert the bottle into the bottle supporter on top of the machine, the spike will pierce the bottle cap. Dispenser 500ml of water from all 3 taps, do not turn the unit on unless water dispenses from all 3 taps. If you are using a filter bottle, the bottle support and spike must be removed. The bottle support and spike are connected together, to remove grab hold of the outer rim of the bottle supporter and turn anti-clockwise and lift up. When removed you should be able to see inside the stainless cooling tank.
2. Insert the plug into the wall socket, then turn the power switch ON.
3. Vertically pull out the water bottle with two hands when the bottle is empty, and replace it with another bottle.

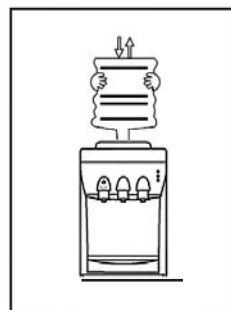


OPERATION

1. Keep this machine in a dry and cool place and avoid direct sunlight. Never put the machine on paper or foam, which may store water and cause creepage. Never put anything flammable beside this machine.
2. **Do not turn on the red heating switch unless water can be dispensed from the hot tap first otherwise the machine could be damaged.**

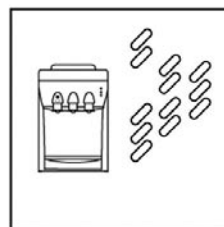

3. In the case the hot or cold water is not needed for a prolonged period, turn off the heating & cooling switches in order to conserve energy.
4. In the case you won't be using this machine for a long period, turn off the heating & cooling switches, unplug this machine from the power socket and drain the water tank through the opening.
5. Clean the outside of the machine by wiping it with a clean dry cloth. Never use harsh, abrasive or organic solvents on the machine or any of its parts. Never disassemble or touch the inside of the machine, this could result in electric shock.
6. Never unplug by pulling the power cord as it will cause cord damage. Always turn off the machine by switching the heating or cooling switches on the machine.
7. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
8. Never turn this machine upside down or tilt is at more than 45°.
9. The thermostat has been adjusted, there is no need to adjust it by yourself.
10. This machine should not be turned on within 3 minutes of turning the machine off.

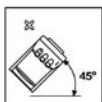

CLEANING

Switch off the power supply and unplug the power cord from the wall socket before following the instructions below.

Cleaning & Draining:

It is recommended that the unit is disassembled and cleaned every 2-3 months.

- Remove bottle supporter and spike, twist anti-clockwise and lift and Hand wash
- Pull out inner float (or baffle) and hand wash.
- Wash the stainless steel tank reservoir and rinse out. Drain all water out through the rear drain plug with a bucket. **DO NOT GET ANY WATER ON THE UNIT.**

Attention:

The machine heats water to a temperature of approximately 90°C, it can cause severe burns. Please operate the machine carefully.

Sanitation:

The machine should be sanitized with bi-carb soda or AquaPort Sanitising Sachets. This should be done every 3 months.

Contact AquaPort on 1300 764 325 should you wish to purchase sanitising sachets.

To Remove Mineral Deposits:

Mix 4 litres of water with 200g citric acid crystals, pour into machine and make sure the water can flow out of the hot tap. Switch on the power and heat for about 10 minutes. 30 minutes later, drain off the liquid and clean the machine with water 2 to 3 times. Generally this should be done every 3 months. Never disassemble the machine by yourself to avoid damaging the machine.

YOUR AQUAPORT 12 MONTH REPLACEMENT WARRANTY & WATER CHILLER WARRANTY REGISTRATION

Aquaport warrants this appliance to the first purchaser as follows and subject to the stated conditions:

Any fault in the appliance occurring within the first 12 months from the date of purchase (3 months commercial use) will be repaired or the unit will be replaced at our discretion.

Conditions of this Warranty

1. This appliance must be installed in accordance with the User's Manual.
2. The Warranty extends only to repairing or replacing any component that proves to be defective in material or workmanship.
3. The Warranty does not cover defects occasioned by misuse, alterations or accident.
4. In the unlikely event of malfunction of our product please phone our customer service line for advice on 1300 764 325 in Australia or take it to your nearest Service Centre. Alternatively, simply return the faulty appliance to your place of purchase, along with your purchase receipt.

Register your warranty online at www.aquaport/warranty



AquaPort Corporation Pty Ltd
PO Box 81 Findon SA 5023 Australia
Telephone: 1300 764 325 Facsimile: +61 8 8354 0722
Email: aquaport@aquaport.com.au Web: www.aquaport.com.au