

Samsung GALAXY MEGA™

4 G L T E S M A R T P H O N E

User Manual

Please read this manual before operating your
phone, and keep it for future reference.



Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Open Source Software

Some software components of this product incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit:

<http://opensource.samsung.com>.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Modification of Software

SAMSUNG IS NOT LIABLE FOR PERFORMANCE ISSUES OR INCOMPATIBILITIES CAUSED BY YOUR EDITING OF REGISTRY SETTINGS, OR YOUR MODIFICATION OF OPERATING SYSTEM SOFTWARE.

USING CUSTOM OPERATING SYSTEM SOFTWARE MAY CAUSE YOUR DEVICE AND APPLICATIONS TO WORK IMPROPERLY. YOUR CARRIER MAY NOT PERMIT USERS TO DOWNLOAD CERTAIN SOFTWARE, SUCH AS CUSTOM OS. IF YOUR CARRIER PROHIBITS THIS, IF YOU ATTEMPT TO DOWNLOAD SOFTWARE ONTO THE DEVICE WITHOUT AUTHORIZATION, YOU WILL BE NOTIFIED ON THE SCREEN THAT UNAUTHORIZED SOFTWARE HAS BEEN DETECTED. YOU SHOULD THEN POWER DOWN THE DEVICE AND CONTACT YOUR CARRIER TO RESTORE THE DEVICE TO THE CARRIER AUTHORIZED SETTINGS.

SAFE™ (Samsung Approved For Enterprise)

SAFE™: "SAFE™" (Samsung for Enterprise) is a mark for a Samsung device which has been tested against Samsung's own internal criteria for interoperability with certain third party security-related solutions for MDM and VPN. The testing includes field testing with local network connection and menu tree testing which tests functionality of the solutions in conjunction with the Samsung device. During the testing, the device is tested with the security solutions to see if the solutions work with the device as described by the third party security solution providers. The testing, for example, includes field testing with local network connection and menu tree testing which tests functionality of the solutions in conjunction with the Samsung device. For more information about Samsung's SAFE™ program, please refer to www.samsung.com/us/safe.

Disclaimer of Warranties: EXCEPT AS OTHERWISE PROVIDED IN THEIR STANDARD END USER LICENSE AND WARRANTY, TO THE FULL EXTENT PERMITTED BY LAW SAMSUNG ELECTRONICS CO., LTD., SAMSUNG TELECOMMUNICATIONS AMERICA, LLC, AND THEIR AFFILIATES (COLLECTIVELY REFERRED TO HEREIN AS THE "SAMSUNG ENTITIES") EXPRESSLY DISCLAIM ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, INTEROPERABILITY OR NON-INFRINGEMENT, WITH RESPECT TO INFORMATION TECHNOLOGY SECURITY PROTECTION, SAFE™ DEVICES AND APPLICATIONS TESTED WITH SAFE™ DEVICES. IN NO EVENT SHALL THE SAMSUNG ENTITIES BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES OF ANY KIND WHATSOEVER WITH RESPECT TO INFORMATION TECHNOLOGY SECURITY PROTECTION, SAFE™ DEVICES OR APPLICATIONS TESTED WITH SAFE™ DEVICES. In addition, information technology security protection will be affected by features or functionality associated with, among other things the e-mail platform, master data management, and virtual private network solutions selected by the software provider, solution provider or user. Choice of an e-mail, master data management, and virtual private network solution is at the sole discretion of the software provider, solution provider or user and any associated effect on information technology security protection is solely the responsibility of the software provider, solution provider or user. For complete statement of limited warranty, please refer to www.samsung.com/us/safe, available on the web and where Samsung smartphone and Galaxy Tab™ devices are sold. [101212]

Nuance[®], VSuite[™], T9[®] Text Input, and the Nuance logo are trademarks or registered trademarks of Nuance Communications, Inc., or its affiliates in the United States and/or other countries.

The Bluetooth[®] word mark, figure mark (stylized “B Design”), and combination mark (Bluetooth word mark and “B Design”) are registered trademarks and are wholly owned by the Bluetooth SIG.

microSD[™] and the microSD logo are Trademarks of the SD Card Association.

Openwave[®] is a registered Trademark of Openwave, Inc.

LTE is a trademark of ETSI.

 and  are trademarks of SRS Labs, Inc. CS Headphone and WOW HD technologies are incorporated under license from SRS Labs, Inc.

Wi-Fi is a registered trademark of the Wireless Fidelity Alliance, Inc.

Google, the Google logo, Android, the Android logo, Google Play, Gmail, Google Mail, Google Maps, Google Music, Google Talk, Picasa, YouTube and other marks are trademarks of Google Inc.

Swype and the Swype logos are trademarks of Swype, Inc. © 2010 Swype, Inc. All rights reserved.



Your phone features earSmart[™], an intelligent voice processor that delivers a clear voice experience, allowing you to **hear and be heard[™]** in nearly any environment. earSmart technology uses the science of human hearing to distinguish sounds, identify your voice and suppress surrounding noise, for clear conversations just about anywhere.

How Does It Work?

- The earSmart voice processor in your phone captures your voice and all the sounds around you.
- Working like the human ear, it processes and distinguishes these sounds, isolates your voice conversation, and removes background noise - from both ends of a call.
- It also automatically equalizes and adjusts voice volume so you can hear and talk naturally, even in the noisiest places.
- With earSmart technology, you can talk where you want, and have clear conversations for mobile calls, video chats, even speakerphone calls, without worrying about surrounding noise.

IC Notice

This Class B digital apparatus complies with Canadian ICES-003.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Table of Contents

Section 1: Getting Started 1

Setting Up Your Phone	1
Charging the Battery	3
Switching the Phone On or Off	5
Locking and Unlocking the Touch Screen	5
Configuring your Phone	6
Creating a Samsung Account	7
Creating a New Google Account	8
Retrieving your Google Account Password	8
Setting Up Your Voice Mail	9

Section 2: Understanding Your Phone 10

Features of Your Phone	10
Front View of Your Phone	11
Side Views of Your Phone	12
Rear View of Your Phone	13
Display Layout	14
Menu Navigation	18
Using Motions and Gestures	19
Using the Multi Window	21
Customizing Your Home Screen	25

Notification Bar	29
Memory Card	30
Entering Text	31

Section 3: Call Functions35

Displaying Your Phone Number	35
Making a Call	35
Making Emergency Calls	36
Making a Call Using Speed Dial	37
Making a Call from the Address Book	37
Answering a Call	38
Dialing Options	39
Call Log	39
Call Duration	41
Options During a Call	42
Call Settings	46

Section 4: Contacts and Your Address Book 47

Adding a New Contact	47
Editing an Existing Contact	49
Using Contacts	49
Linking Contacts	50

Synchronizing Accounts	52	Google+	79
Address Book Options	52	Messenger	80
Groups	54	ChatON	80
Address Book Favourites	55	Section 7: Changing Your Settings	82
Managing Address Book Contacts	56	Accessing Settings	82
Section 5: Pictures and Videos	59	Settings Tabs	82
Using the Camera	59	Wi-Fi Settings	83
Camera Modes	60	Bluetooth settings	84
Quick Settings	61	Data Usage	84
Camera and Camcorder Settings	62	More networks	85
Editing a Photo	63	NFC	89
Using the Camcorder	65	S Beam	89
Gallery	66	Nearby devices	90
Section 6: Messaging	69	Screen Mirroring	90
Types of Messages	69	Kies via Wi-Fi	91
Creating and Sending Messages	69	Lock Screen Settings	91
Message Options	70	Display Settings	93
Viewing New Received Messages	72	LED indicator	94
Deleting Messages	73	Sound Settings	94
Message Search	74	Home screen mode	96
Messaging Settings	74	Call Settings	96
Using Email	76	Blocking Mode	102
Using Gmail	78	Power saving mode	102

Accessory Settings	103
Accessibility	103
One-handed operation	105
Language and input	105
Motions and Gestures	109
Smart screen	110
Air view	111
Voice control	111
Add Account	112
Cloud	113
Back up and reset	113
Location services	114
Security	115
Application Manager	119
Battery	121
Storage	121
Date and time	122
About Device	122
Section 8: Connections	125
Wi-Fi	125
NFC	128
Bluetooth	129
PC Connections	132

Section 9: Applications	133
Calculator	133
Camera	134
ChatON	134
Chrome	134
Clock	135
Contacts	138
Downloads	138
Dropbox	138
Email	138
Flipboard	138
Gallery	139
Gmail	139
Google	139
Google Settings	139
Google+	139
Group Play	140
Hangouts	140
Help	141
Internet	141
Local	147
Maps	147
Messaging	148

Messenger	148
Music	148
My Files	150
Navigation	151
Phone	152
Play Books	152
Play Magazines	152
Play Movies	152
Play Music	153
Play Store	153
S Memo	153
S Planner	155
S Translator	156
S Voice	157
Samsung Apps	157
Samsung Hub	158
Samsung Link	160
Settings	163
Story Album	163
TripAdvisor	163
Video	163
Voice Recorder	164
Voice Search	164

WatchON	165
YouTube	168
Section 10: Health and Safety	170
Getting the Most Out of Your Reception	170
Maintaining Safe Use of and Access to Your Phone	170
Caring for the Battery	172
Acknowledging Special Precautions and Industry	
Canada Notice	173
Owner's Record	175
Index	176

Section 1: Getting Started

This section explains how to start using your phone by configuring your hardware, setting up accounts, and setting up your voice mail.

Setting Up Your Phone

Prior to use it is necessary to install both the battery and SIM into their corresponding internal compartments. The microSD™ card slot is also located in this same internal area.

Removing the Back Cover

1. Remove the back cover by inserting a fingernail into the slot on the top of your phone (1) then lift the cover up (2).



Caution! Do not bend or twist the back cover excessively. Doing so may damage the cover.


Installing the SIM Card and MicroSD card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, available optional services, and many others features. You can also install a MicroSD card (memory card) to hold additional media (optional).

Important! The plug-in SIM card information and its contacts can be easily damaged by scratching or bending, so be careful when handling, inserting, or removing the card. Keep all SIM cards out of reach of small children.

1. Carefully slide the SIM card under the bottom metal plate into the SIM card socket (as shown) until the card locks into place.

- Make sure that the card's gold contacts face into the phone and that the upper-left angled corner of the card is positioned as shown.

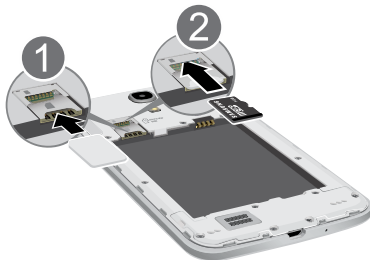

Note: If the card is not inserted correctly, the phone will not detect the SIM card. Re-orient the card back into the slot if the SIM is not detected.

2. To insert a MicroSD card (optional), carefully slide the MicroSD card under the top metal plate into the MicroSD card socket (as shown) until the card locks into place.


Installing the Battery

1. Insert the battery into the opening on the back of the phone, making sure the connectors align (1).
2. Gently press down to secure the battery (2).



Installing the Back Cover

1. Place the battery cover onto the back of the phone (1) and press down (2).

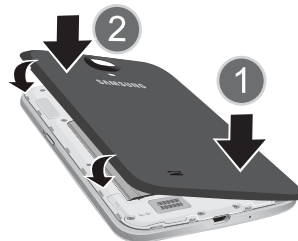

2. Press along the edge of the back cover (3) until you have a secure seal.



Note: Make sure the battery is properly installed before switching on the phone.

Charging the Battery

Your device is powered by a rechargeable Li-ion battery. The Travel Charger that is used to charge the battery is included with your device. Use only Samsung-approved batteries and chargers.


Note: You must fully charge the battery before using your phone for the first time. A discharged battery recharges fully in approximately 4 hours.

Note: Long backlight settings, searching for service, vibrate mode, web browser use, and other variables may reduce the battery's talk and standby times.

Although you can use the phone while the battery is charging, doing so will require additional charging time.

Using the Travel Charger

Important! Verify that the handset battery is installed prior to connection. If the battery is not properly installed and the wall charger is connected, the handset may power off and on continuously, preventing proper operation.

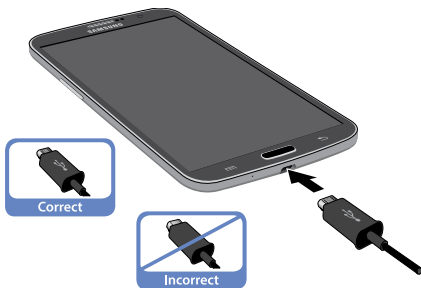

1. Plug the flat end of the Travel Charger into the Power/Accessory Interface connector and the other end into a standard AC wall outlet.
2. When charging is finished, remove the flat end from the interface connector jack on the phone.

Warning! If your handset has a touch screen display, please note that a touch screen responds best to a light touch from the pad of your finger. Using excessive force or a metallic object when pressing on the touch screen may damage the tempered glass surface and void the warranty.

Note: Failure to unplug the wall charger before you remove the battery, can cause damage to the phone.

Low Battery Indicator

When the battery is weak and only a few minutes of talk time remain, the battery icon () blinks and the device sounds a warning tone at regular intervals. In this condition, your phone conserves its remaining battery power, not by turning off the backlight, but by entering the dimming mode. For a quick check of your battery level, glance at the battery charge indicator located in the upper-right corner of your device's display. Solid color () indicates a full charge.


When the battery level becomes too low, the phone automatically turns off.

You can also choose to display a percentage value. Having a percentage value on-screen can provide a better idea of the remaining charge on the battery.

- From the Home screen, tap  → **Settings** →  **My device** → **Display** → **Display battery percentage**.

Switching the Phone On or Off

1. Press and hold  until the phone switches on.

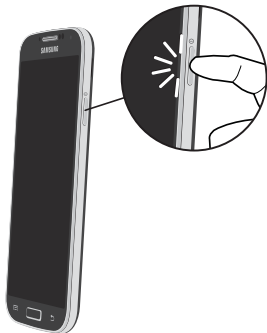

2. Swipe your finger across the screen to unlock the phone.

Note: The display language is preset to English at the factory. To change the language, use the Language menu. For more information, refer to “*Changing Your Settings*” on page 82.

3. To switch off the phone, press and hold , until the **Device options** screen displays.
4. Tap **Power off** to switch off the phone.
5. At the **Power off** prompt, tap **OK**.

Locking and Unlocking the Touch Screen

1. Press  to lock the touch screen.
2. Press  again to display the lock screen then swipe your finger across the screen to unlock.

Note: Swipe is the default screen locking method. To change your screen lock, see “*Lock Screen Settings*” on page 91.

Configuring your Phone

When you first turn on your phone, you will need to set up a few things.

1. The **Welcome!** screen displays. The default language for your phone is English. If you would like to select another language, tap **English** and scroll up or down to select one of the listed languages.
2. If you are visually impaired or hard of hearing, tap **Accessibility** to change the accessibility settings.
3. Tap **Next**.
4. At the **Wi-Fi** screen, set up a Wi-Fi connection if you would like to do that now. For more information, refer to “*Wi-Fi*” on page 125.
5. Tap **Next**.
6. At the **Date and time** screen, tap “Automatic date and time” to use network-provided time or tap “Set date”, “Set time” and “Select time zone” and configure the settings.
7. Tap **Next**.
8. At the **End user licence agreement** screen, tap “I understand and agree to the terms and conditions above” to place a checkmark in the selection box. Tap “Yes” to allow Samsung to collect error log data or “No thanks” to prevent data collection.
9. Tap **Next**.
10. At the **Samsung account** display, tap “Create a new account” if you don’t have one yet, tap “Sign in” if you have already set up your Samsung account, or tap “Skip” to set up an account later.
11. At the **Got Google?** display, tap **Yes** if you already have a Google account or **No** if you do not.
12. Follow the on-screen instructions to create a new Google account or sign in to an existing account. If you want to wait until later to create a Google account, tap **Not now**.

Note: In order to utilize your device to the fullest extent, you will need to create a Google™ Account when you first use your device. With a Google Account, you will have access to more Google applications and applications will always be in sync between your phone and computer.

13. At the **Google & location** screen, a blue checkmark displays next to the text that explains that you allow Google's location service to collect anonymous location data from your phone. If you disagree, tap the checkmark to remove it.
14. A blue checkmark also displays next to the text that explains that you allow your location to be used for Google search results and other Google services. If you disagree, tap the checkmark to remove it. Tap the **Next** icon .
15. At the **This phone belongs to...** display, enter your **First** and **Last** names in the provided fields so that your phone can personalize some applications. Tap  or **Done**.

16. At the **Dropbox** screen, tap **Create account** if you don't have one yet, tap **Sign in** if you have already set up your Dropbox account, or tap "Skip" to set up an account later. For more information see "*Dropbox*" on page 138.
17. At the **Learn about key features** display, tap each function to learn more about them.
18. Tap **Next**.
19. At the **Thank you** screen, enter a device name (optional) and tap **Finish** to complete your setup.
The main Home screen displays.

Creating a Samsung Account

An active Samsung account is required to begin accessing applications such as ChatON and Samsung Hub. If you did not create a Samsung account when you first set up your phone, follow these steps:

1. From the home screen, tap  → **Settings**  →  **Accounts** → **Add account**.
2. Tap  **Samsung account**.
3. Tap **Create new account**.

4. Follow the on-screen instructions to create and activate your account.

Creating a New Google Account

In order to utilize your device to the fullest extent, you will need to create a Google™ Account when you first use your device. With a Google Account, Google applications will always be in sync between your phone and computer.

If you did not create a new account during the setup procedure when you first turned your phone on, follow these steps:

1. From the home screen, tap  → **Settings**  →  **Accounts** → **Add account** → **Google**.

The **Add a Google Account** screen displays.

2. Tap **New** to create a new Google account.

– or –

If you already have a Google account, tap **Existing** to sign in and add the account to your phone.

3. Follow the on-screen instructions to add a Google Account.

Note: Once you have created a Google account, you only need to sign in.

Retrieving your Google Account Password

A Google account password is required for Google applications. If you misplace or forget your Google Account password, follow these instructions to retrieve it:

1. From your computer, use an Internet browser and navigate to <http://google.com/accounts>.
2. Follow the password recovery procedure.

Setting Up Your Voice Mail

1. From the Home screen, tap , then tap .
2. Follow the tutorial to create a password, record a greeting, and record your name.

Note: These steps may be different depending on your network.

Accessing Your Voice Mail

1. From the Home screen, tap , then tap .
- You may be prompted to enter a password.
2. When connected, follow the voice prompts from the voice mail center.

Accessing Your Voice Mail From Another Phone

1. Dial your wireless phone number.
2. When you hear your voicemail greeting, press the asterisk key (*) on the phone you are using.
3. Enter your password.

Section 2: Understanding Your Phone

This section outlines some key features of your phone and describes the screen and the icons that appear when the phone is in use. It also shows how to navigate through the phone and provides information on using a memory card.

Features of Your Phone

Your phone is lightweight, easy-to-use and offers many useful features. The following list outlines a few of the features included in your phone.

- LTE network with 1.7 gigahertz quad-core processor
- Android v 4.2.2, Jelly Bean Platform
- Brilliant 6.3" HD PLS TFT display
- Touch screen provides quick response to a variety of in-phone menus and options including applications, multi windows and up to seven home screens.
- Smart Switch™ compliant. For more information, see www.samsungsmartswitch.com.
- Ready access to the Internet
- Built-in Bluetooth and advanced Wi-Fi® technology
- Mobile Hotspot and USB Tethering capability
- 8 Megapixel camera and camcorder with Front Facing camera
- Smart Remote using WatchON
- GPS Navigation functionality provides real-time navigation
- Delivers data faster using 4G LTE and High Speed Packet Access Plus (HSPA+).
- Up to 64GB expandable memory slot
- Corporate and Personal Email
- Sync and update social network applications
- Over 750,000 Apps available to download via Google Play Store™ and Samsung Hub
- Full Integration of Google Mobile™ Services (Gmail, YouTube, Google Maps, Google Voice Search)
- Multiple Messaging Options: Text/Picture/Video Messaging, and Instant Messaging with Google Talk™
- DivX Certified® to play DivX® video up to HD 720p, including premium content
- Samsung Link to share your media content across DLNA certified devices

Front View of Your Phone




1. **External speaker:** allows you to hear the caller.
2. **Application icons:** you can place shortcuts to your favorite applications on the Home screen.

3. **Primary shortcuts:** allows quick access to important features such as Phone, Contacts, Messaging, Internet, and Apps. For more information, refer to “Primary Shortcuts” on page 14.
4. **Menu key:** allows you to access sub-menus with additional options for different features and applications such as Home screen, Phone, Contacts, Messaging, and Web.
5. **Home key:** allows you to return to the main Home screen from any Home screen or menu. Press and hold to display Recent apps, Task Manager, and Google Search. Quickly press twice to activate the S Voice application.
6. **Back key:** allows you step backwards when navigating a menu or web page.
7. **Home screen indicator:** shows which Home screen is presently displayed.
8. **Google Quick Search bar:** a shortcut to Google Search that allows you to search for items on the internet.

- 9. **Weather widget:** displays Time, Day, Date, Temperature and weather conditions for your area. This can be deleted if desired and other widgets placed on Home screen.
- 10. **Indicator icons:** shows the information needed to operate your phone, such as the received signal strength, phone battery level, time, unread Emails, missed calls, etc.
- 11. **Front facing camera:** allows you to take pictures of yourself when you set the camera shooting mode to Self shot.
- 12. **Proximity and Light sensors:** uses the ambient light level to adjust keypad access. If the light path is blocked, for example, when holding the phone close to your ear, the touch screen will turn off.


Side Views of Your Phone

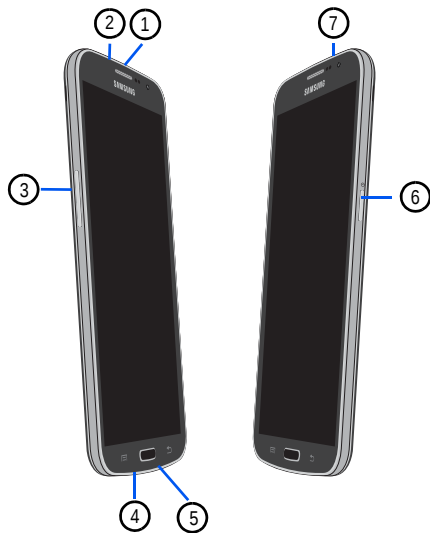

- 1. **Microphone:** used for noise cancellation and stereo recording.

2. **3.5mm Headset jack:** allows you to plug in headphones.
3. **Volume keys:** allow you to adjust the ringer volume while in standby mode or adjust the voice volume during a call. When receiving an incoming call, briefly press down either volume key () to mute the ring tone. Adjusts text size when reading a message.
4. **Microphone:** allows other callers to hear you when you are speaking to them. It is also used for the Speakerphone.
5. **Power/Accessory Interface connector:** allows you to connect a Travel Charger or other optional accessories such as a USB/data cable or a hands-free headset for convenient, hands-free conversations.
6. **Power/Lock key:** () lets you power your phone on and off. Also allows you to lock or unlock the touch screen. For more information on locking your phone, see “*Locking and Unlocking the Phone*” on page 20.
7. **Infrared Blaster:** Used to emit infrared signals used for controlling external devices.

Rear View of Your Phone

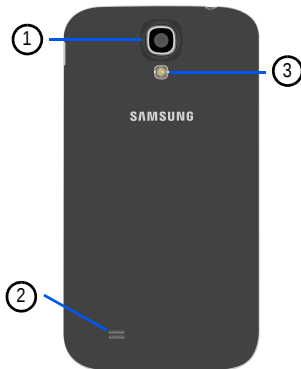

1. **Camera lens:** is used to take pictures and shoot videos.
2. **External speaker:** allows you to hear when the Speakerphone is turned on.
3. **Flash:** is used to provide additional light when taking pictures in dark places.

Display Layout

Your display screen provides a wealth of information about the phone's status and options, as well as providing access to application icons. For more information, refer to “*Front View of Your Phone*” on page 11.

Primary Shortcuts

There are four non-movable Application Shortcuts that appear at the bottom of all Home screens. The default shortcuts are:

- **Phone**  for dialing a number.
- **Contacts**  for managing your daily contacts in your Address Book.
- **Messaging**  for creating and viewing Messages.
- **Internet**  for surfing the Internet.
- **Apps**  for accessing the applications on your phone.

You can change the Phone, Contacts, Messaging, and Internet application shortcuts to any icon that is displayed in the Apps menu.

For more information, refer to “*Adding and Removing Primary Shortcuts*” on page 26.

Indicator Icons

This list identifies the symbols you'll see on your phone's display and Indicator area:



Displays your current signal strength. The greater the number of bars, the stronger the signal.



Indicates that the Airplane Mode is active. You cannot send or receive any calls or access online information.



Displays when there is no SIM card in the phone.



Displays when there is no network available.



Displays when your phone is in Blocking mode.



Displays when there is a system error or alert.



Displays when the Smart stay feature is activated. The screen stays on as long as you are looking at it.



Displays to indicate a security warning. You are prompted to set a screen lock password.



Displays when a call is in progress.



Displays when a call is on hold.



Displays when the speakerphone is on.



Displays when a call has been missed.



Displays when a call has been muted.



Displays when Call forwarding is set to Always forward. For more information, refer to “*Call forwarding*” on page 46.



Displays your battery charge level. Icon shown is fully charged.



Displays when your battery is charging. Also displays battery charge level.



Device Power Low – Shows your current battery only has between 15 and 28 percent power remaining.



Device Power Very Low – Shows your current battery only has between 5 and 15 percent power remaining.



Device Power Critical – Shows your current battery only has less than 5 percent power remaining and will immediately shutdown.



Displays when your connection to an EDGE network is active.



Displays when your phone is communicating with the EDGE network.



Displays when your connection to a UTMS network is active.



Displays when your phone is communicating with a UTMS network.



Displays when your connection to an HSDPA, HSPA, or HSPA+ network is active.



Displays when your phone is communicating with the HSDPA, HSPA, or HSPA+ network.



Displays when your connection to a 4G LTE network is active.



Displays when your phone is communicating with a 4G LTE network.



Displays when your phone is downloading or has downloaded a file. It will blink green when it is installing.



Displays when the an outbound file transfer is in progress.



Displays when a Play Store download has completed.



Displays when updates are available for download.



Displays when the phone is connected to a computer via a supported USB cable connection.



Displays when the phone is tethered via a supported USB cable connection.



Displays when a new text or multimedia message is received.



Displays when a new voice mail is received.



Displays when Email is received.



Displays when the time and date for a Calendar Event has arrived. For more information, refer to “*S Planner*” on page 155.



Displays when you set an alarm to ring at a specified time. For more information, refer to “*Alarm*” on page 135.



Displays when the Sound profile is set to Mute.



Displays when the Sound profile is set to Vibrate.



Displays when Bluetooth is activated.



Displays when a Bluetooth device has been paired with the phone.



Displays when Wi-Fi is connected, active, and communicating with a Wireless Access Point (WAP).



Displays when there is a Wi-Fi access point available but you are not connected to it. May also display if there is a communication issue with the target Wireless Access Point (WAP).



Displays when Wi-Fi Direct is active and your phone is connected to another device.



Displays when your phone has been configured as a portable Wi-Fi hotspot.



Displays when GPS is active and acquiring a signal.



Displays when data synchronization and application sync is active and synchronization is in progress for Gmail, Calendar, and Contacts.



Displays when your phone is connecting to the Device Management server when you first turn on your phone.



Displays when Near Field Communication (NFC) has been activated.



Displays when your device is connected being used to control streaming media and is connected to a Digital Living Network Alliance (DLNA) certified device using the Samsung Link application.



Displays when a file is being uploaded or sync'd between your device and an external Web storage location.



Displays when the uploaded or transferred file was successfully delivered.



Displays when a screen capture has been taken.



Displays when the keypad is active.

For more details on configuring your phone's settings, see *"Changing Your Settings"* on page 82.

Google Search Bar

The Google Search Bar provides you an on-screen Internet search engine powered by Google™.

1. From the main Home screen, tap the Google Search bar .
2. Use the on-screen keypad to enter the item you want to search for, then tap .
3. Tap  to use Google Voice Search. Follow the on-screen instructions.

Menu Navigation

You can tailor the phone's range of functions to fit your needs using both menus and widgets. Menus, sub-menus, and features can be accessed by scrolling through the available on-screen menus. Your phone originally has three home screens but you can expand up to seven home screens.

Command Keys

Menu Key

Press  **Menu** to display a context-sensitive menu of options for the current screen or feature.

Home Key

Press  **Home** to display the main Home screen. Press and hold to display recently used apps and access the Task manager.

Back Key

Press  **Back** to return to the previous screen, option or step.

Terms used in this user manual

Tap

Lightly touch items to select or launch them. For example:

- Tap the on screen keyboard to enter characters or text.
- Tap a menu item to select it.
- Tap an application's icon to launch the application.

Touch and Hold

Activate on-screen items by a touch and hold gesture. For example:

- Touch and hold a widget on the home screen to move it.
- Touch and hold on a field to display a pop-up menu of options.

Swipe and Palm Swipe

To swipe, lightly drag your finger vertically or horizontally across the screen. Use swipe when:

- Unlocking the screen
- Scrolling through the Home screen or a menu

To palm swipe, swipe the side of your hand horizontally across the screen. Use palm swipe when:

- Capturing the screen

Panning

To pan, touch and hold a selected icon, then move the device to the left or right to reposition it to another page. You must first activate Motion on your device. Use panning to:

- Move icons on your Home screens or Application Menus to another page.

Tilt

To activate the tilt feature, press and hold two points on the screen then tilt the device back and forth to reduce or enlarge the screen. Use tilt to:

- Reduce or enlarge the screen in the Gallery or Browser.

Turn over

Turn your phone over so that the screen faces downward. For example:

- Mute incoming calls and playing sounds by turning your phone over.

Using Motions and Gestures

By activating the various motion and gesture features, you can access a variety of time saving functions.

Caution! Excessive shaking or impact to the device may cause unintended results. To learn how to properly control motions, tap  **Apps → Settings →**  **My device → Motions and gestures.** When tapped, each entry comes with an on-screen tutorial.

- **Motion:** Allows you to control your device using natural movements (on the screen).
- **Palm motion:** Allows you to control your device by touching the screen with your entire hand.
- **Gyroscope calibration:** Allows you to properly calibrate your device's touch screen.

To activate Motion:

1. From the Home screen, press  and then tap **Settings** →  **My device → Motions and gestures.**
2. Tap the ON/OFF slider located to the right of **Motion** to turn it on .
3. Read the on-screen notification and tap **OK**.

4. Tap the ON/OFF slider located to the right of each feature to turn it on .

To activate Palm Motion:

1. From the Home screen, press  and then tap **Settings** →  **My device** → **Motions and gestures**.
2. In a single motion touch and slide the **Palm motion** slider to the right to turn it on.
3. Read the on-screen notification and tap **OK**.
4. Tap the ON/OFF slider located to the right of each feature to turn it on .

For more information, refer to “*Motions and Gestures*” on page 109.

Locking and Unlocking the Phone

To unlock your phone:

1. Press the lock button   located on the upper right side of your phone.
2. The lock screen will display with **Swipe screen to unlock** displayed at the bottom of the screen.
3. Swipe the touch screen in any direction.
4. The Home screen will be displayed.

Note: There are several additional ways you can lock your screen. For more information, refer to “*Lock Screen Settings*” on page 91.

Home Screen Overview

The main home screen is the starting point for many applications and functions, and it allows you to add items like application icons, shortcuts, folders, or Google widgets to give you instant access to information and applications. This is the default page and accessible from any menu by pressing .

Navigating Through the Home Screens

Your phone originally has three home screens but you can expand up to seven home screens. If you like, you can place different applications on each of the home screens.

- From the main Home screen, sweep the screen with your finger in either direction. The main Home Screen is located in the middle with a Home screen on each side.

Navigating Through the Application Menus

Your phone initially has three Application Menus available. Follow these steps to navigate through the Application Menus:

1. At the Home screen, tap . The first Application Menu will be displayed.
2. Sweep the screen left or right to access the other two menus.
3. Tap one of the application icons.

Note: As you add applications, the number of Application menus that you have available will increase.

Navigating Using Sub-Menus

Sub-menus are available when you are at any Home screen or have selected a feature or application such as Phone, Contacts, Messaging, or Internet.

To access a sub-menu:

1. Press .
A sub-menu will appear at the bottom of the phone screen.
2. Tap an option.

Accessing Recently-Used Apps

1. Press and hold  from any screen to open the recently-used applications window.

2. Tap an icon to open the selected application.
– or –

Tap  to go to the Task manager.

– or –

Tap  to go to Google Search.

– or –

Tap  to delete the record of all recently used applications.

Using the Multi Window

This feature allows you to run multiple applications on the current screen at the same time.

Note: Only applications found within the Multi window panel can be active atop another current application on the screen. When launching applications that contain multimedia files (music/video), audio from both files will be played simultaneously.

Activating and Deactivating Multi window

To activate Multi window:

1. From the Home screen, tap  → **Settings** →  **My device** → **Display** → **Multi window**.
A checkmark will appear.
2. Tap **Home**  to return to the Home screen.
3. Tap the  tab to open the application panel showing all the available Multi window apps.

Note: Initially upon activation, the entire apps panel is briefly displayed, then minimized to only show the tab.

To deactivate Multi window:

- Press and hold the **Back** key (). This action hides the Multi window tab from view.

Note: Once you have set the Multi window option on in step 1, you only need to press and hold the **Back** key () to re-activate the Multi window feature.

Repositioning the Multi Window

The Multi window contains two components: tab and apps panel. The tab can be manually moved across the screen. The apps panel (containing the scrollable apps) can be relocated to lock onto the different sides of the screen (top/bottom/left/right).

To move the tab:

1. Activate the Multi window feature.
2. In a single motion, touch and hold the tab  for approximately one-second, then slowly drag it to its new location **along the current** screen edge.

Note: This is a quick way to get the tab out of the way if you can't get to a button or option behind it.

To relocate the Multi window apps panel:

1. Activate the Multi window feature.
2. Tap the tab to display the apps panel (containing the scrollable apps).

3. In a single motion, touch and hold the tab  for approximately one-second to detach it from the screen, then slowly drag it to its new location **along any other** available screen edge. You can move it to the top, bottom, or either side.

Customizing the Multi Window apps

The applications found within the apps panel of the Multi window can be organized by either being rearranged or removed.

To rearrange the Multi window applications:

1. Activate the Multi window feature.
2. Tap the tab to display the apps panel (containing the scrollable apps).
3. In a single motion, touch and hold a desired app until it detaches from the panel, then carefully drag it to a new location in the list of apps. Lift your finger or stylus off the screen to let go of the app and drop it into its new location.

To remove a Multi window application:

1. Activate the Multi window feature.
2. Tap the tab to display the apps panel (containing the scrollable apps).
3. Tap the **Edit** button (located at the bottom of the list) to reveal a staging area that can house any removed applications from the Multi window panel.
4. Tap **Done** once you have completed the removal process.

To restore a Multi window application:

1. Activate the Multi window feature.
2. Tap the tab to display the apps panel (containing the scrollable apps).
3. Tap the **Edit** button (located at the bottom of the list) to reveal the staging area containing any previously removed apps.
4. Locate the desired application.
5. In a single motion, touch and hold a desired app until it detaches from the staging area, then carefully drag it to a new location in the current list of apps.

Using Multi Window to run multiple apps on the same screen

Any of the apps found within the Multi window panel can be run at the same time as a current on-screen app.

Once multiple apps are running on the same screen, you can then choose to either swap their positions or maximize a desired app.

Note: Only applications found within the Multi window panel can be active atop another current application on the screen. When launching applications that contain multimedia files (music/video), audio from both files will be played simultaneously.

In this example we will be launching both the Internet and Maps applications.

1. Launch an application such as Maps.
 - From the Home screen, tap **Internet** .
2. Activate the Multi window feature.
3. Tap the tab to display the apps panel.
4. Touch and hold the desired app, such as Maps, until it detaches from the panel.

5. In a single motion, drag it over the current app and drop the new Multi window app over either the top or bottom area of the current on-screen app.

Note: Once two applications are running, the device displays a split screen view containing both the initial app and the new Multi window app. Each application is still independent of the other.

To switch the arrangement of the applications:

1. With the two applications shown in a split screen, tap the Border bar in the middle of the screen to show the on-screen icons.
2. Tap the desired application area (top or bottom).
3. Locate and tap  (**Switch app location**). The current apps are switched.

To increase the size of a desired application window:

1. With the two applications shown in a split screen, locate the Border bar indicating the edge of the app window.
2. In a single motion, touch and hold the Border bar then drag it to resize the desired window.

To split the current applications:

1. With the two applications shown in a split screen, tap the Border bar to show the on-screen icons.
 2. Tap the desired application area (top or bottom).
 3. Locate and tap  (**Maximize the app**). The current apps are the both maximized.
- To exit the Multi window app, tap .

Customizing Your Home Screen

You can customize your Home screen by doing the following:

- Creating Shortcuts
- Adding and Removing Primary Shortcuts
- Adding and Removing Widgets
- Moving Icons in the Apps Menu
- Creating Application Folders
- Adding a New Page to the Application Menu
- Changing the Wallpaper
- Adding and Deleting Home Screens
- Moving Home Screens

Creating Shortcuts

Shortcuts are different than the current Home screen Widgets that only launch an application. Shortcuts activate a feature, action, or launch an application.

Adding a shortcut from the Apps Menu

1. Press  to activate the main Home screen.
2. Navigate to the desired Home Page.
3. Tap  to display your current applications.
4. Scroll through the list and locate your desired application.
5. Touch and hold the application icon. This creates an immediate shortcut of the selected icon and closes the **Apps** tab.
6. While still holding the on-screen icon, position it on the current page. Once complete, release the screen to lock the new shortcut into its new position on the current screen.

Adding a shortcut via the Add to Home screen

1. Press  to activate the main Home screen.
2. Navigate to the desired Home Page.
3. Touch and hold on an empty area of the Home screen.

4. Tap **Apps and widgets**, **Folder**, or **Page**.
5. Press and hold a shortcut from the available list and position it on the current screen.

Deleting a shortcut

1. Press  to activate the main Home screen.
2. Touch and hold the desired shortcut. This unlocks it from its location on the current screen.
3. Drag the icon over the **Remove** icon  and release it. As you place the shortcut into the Trash, both items turn red.

Note: This action does not delete the shortcut, it just removes it from the current screen.

Adding and Removing Primary Shortcuts

You can change any of your primary shortcuts with the exception of the **Apps**  shortcut.

1. Press  to activate the main Home screen.
2. Scroll through the App menu to find the shortcut you want to add as the new primary short cut.
3. Touch and hold the new shortcut, then drag and drop it on the primary shortcut you want to replace.

The new primary shortcut will now appear on all Home screens.

Adding and Removing Widgets

Widgets are self-contained applications that reside in either your Widgets tab or on the main or extended Home screens. Unlike a shortcut, the Widget appears as an on-screen application.

Adding a Widget

1. Press  to activate the main Home screen.
2. Navigate to the desired Home Page.
3. Touch and hold on an empty area of the screen.
4. Tap **Apps and widgets**.
5. Tap the **Widgets** tab at the top of the screen.
6. Press and hold an available Widget to position it on the current screen, then release the Widget.

Removing a Widget

1. Touch and hold a Widget until you can move it around on the screen.
2. Drag the Widget up to the **Remove** icon  and release it.

As you place the Widget into the Trash, both items turn red.

Note: This action does not actually delete the Widget, it just removes it from the current Home screen.

Moving Icons in the Apps Menu

1. Press  to activate the main Home screen.
2. Tap  to display your current applications.
3. Tap the **Apps** tab at the top of the screen if it is not already selected.
4. Press  and tap **View type**.
5. Tap **Customizable grid**. A green circle will appear next to the option.
6. Press  and tap **Edit**.
7. Scroll through the list and locate the icon you wish to move.
8. Touch and drag the icon to the position that you want. To move to a different page, drag the icon to the edge of the page until the page scrolls to the desired page.
9. Tap **Save**.

10. Press  to return to the Home screen.

Creating Application Folders

You can create application folders to hold similar applications if you wish.

To create a folder follow these steps:

1. Press  to activate the main Home screen.
2. Tap  to display your current applications.
3. Tap the **Apps** tab at the top of the screen if it is not already selected.
4. Press  and tap **Edit**.
5. Touch and hold the first application that you would like to move to a folder.
6. Drag the icon to the **Create folder**  icon.
7. Enter a folder name and tap **OK**.
A folder is displayed in the original place of the application icon with the application icon displayed on top of it. You can now drag other Apps into the folder.
8. To view information about an application, drag the App icon to the **App info**  icon.
9. Tap **Save**.

Adding a New Page to the Application Menu

You can add a new page to your application menu by following these steps:

1. Press  to activate the main Home screen.
2. Tap  to display your current applications.
3. Tap the **Apps** tab at the top of the screen if it is not already selected.
4. Press  and tap **Edit**.
5. Touch and hold the first application that you would like to move to a new page.
6. Drag the icon to the **Create page**  icon.
7. Tap **Save**.

The app will appear on a new page.

Changing the Wallpaper

You can change the Wallpaper (background) of your home screens by following these steps:

1. From any Home screen, touch and hold on an empty area of the screen.
The **Home screen** window is displayed.
2. Tap **Set wallpaper**.

3. Select the location where you would like to change the wallpaper. Tap **Home screen**, **Lock screen**, or **Home and lock screens**.
4. Tap one of the following options:
 - **Gallery**: select a wallpaper from photographs you have taken with your camera.
 - **Live wallpapers**: select an animated wallpaper. This option is not available for the Lock screen option.
 - **Wallpapers**: select from many still-life wallpapers.
5. Select a wallpaper and tap **Set wallpaper**, **Done**, or **Cancel**.

Adding and Deleting Home Screens

You can add and delete Home screens. You can have up to seven Home screens.

To add a new Home screen:

1. Press  to activate the main Home screen.
2. Press  and tap **Edit page**.
3. Tap the Home screen that contains .
A new screen is added.
4. If desired, touch and hold the new screen and drag it to a different location.

5. Press  to return to the main Home screen.
You can now add items to your new Home screen.

To delete a Home screen:

1. Press  to activate the main Home screen.
2. Press  and tap **Edit page**.
3. Touch and hold the Home screen you want to delete.
4. Drag it to the trash can located at the top of the screen.
The page will turn red.
5. If there are items on the Home screen, the **Remove home screen page** prompt is displayed.
6. Tap **OK** to delete the page and its contents, otherwise tap **Cancel**.
7. Press  to return to the main Home screen.

Moving Home Screens

You can arrange your Home screens in any order that you want.

To move a Home screen, follow these steps:

1. Press  to activate the main Home screen.
2. Press  and tap **Edit page**.
3. Touch and hold the Home screen you want to move.

4. Drag it to the location that you would like to place it.
When you move a Home screen, the other Home screens are re-ordered automatically.
5. Press  to return to the main Home screen.

Notification Bar

The Notification Bar includes a pull-down list to show information about processes that are running, recent notifications, and alerts.

- On the Home screen, touch and hold the Notification Bar at the top of your screen until the pull-down displays, then drag down vertically.

Clearing Notifications

To clear all notifications from the Notification panel:

1. From the Home screen, touch and hold the Notification Bar until the pull-down displays, then drag down vertically.
2. Tap the **Clear** button.
The notifications are cleared and the panel closes.

Accessing Additional Panel Functions

In addition to notifications, the Notification panel also provides quick and ready access to separate device functions. These can be quickly activated or deactivated by toggling them on or off. You can choose the functions that will be displayed.

1. From the notification panel, tap  to display additional options.

The following functions (default) can either be activated (green) or deactivated (gray): Wi-Fi, GPS, Sound, Screen rotation, Bluetooth, Mobile data, Blocking mode, Power saving, Multi window and Screen Mirroring.

2. Tap  then locate the Available Buttons area located at the bottom of the Notifications panel screen.
3. In a single motion, touch and hold a desired function then drag it over an existing button in the Notification Panel. The buttons change places. Additional functions are Wi-Fi hotspot, S beam, NFC, Air view, Smart stay, Sync, and Flight mode.
4. Tap **Brightness adjustment** to create a checkmark if you want to be able to adjust the screen brightness via the Notification panel.

Memory Card

Your device lets you use a microSD™ (SD) or microSDHC™ card to expand available memory space. This secure digital card enables you to exchange images, music, and data between SD-compatible devices. This section addresses the features and options of your device's SD functionality.

Mounting the SD Card

To store additional photos, music, videos, and other applications, you must mount (install) the SD card prior to use. Mounting the SD card establishes a USB connection with your computer.

1. Insert the SD card into the external, SD card slot. For more information, refer to “Installing the SIM Card and MicroSD card” on page 1.
2. Your SD card is scanned to see the available information on it.

Unmounting the SD card

Unmounting the SD card prevents corruption and damage to the SD card while removing it from the slot.

1. From the Home screen, tap  → **Settings** →  **More** → **Storage**.

2. Scroll to the bottom of the display and tap **Unmount SD card**.
3. Tap **OK**.

For more information, refer to “*Installing the SIM Card and MicroSD card*” on page 1.

SD card Available Memory Status

To view the memory allocation for your external SD card:

1. From the Home screen, tap  → **Settings** →  **More** → **Storage**.
2. The available memory for Device and SD card displays under the **Total space** and **Available space** headings.

Erasing All Files from the SD card

You can erase all files from the SD card using the phone.

1. Ensure the SD card is mounted. For more information, refer to “*Mounting the SD Card*” on page 30.
1. From the Home screen, tap  → **Settings** →  **More** → **Storage**.
2. Tap **Format SD card**.
3. At the **Format SD card** confirmation prompt, tap **Format SD card**.

Warning! Performing the next step erases all data stored on the SD card.

4. Tap **Erase everything** to format or press  to cancel.

Entering Text

This section describes how to select the desired text input method when entering characters into your phone.

Your phone comes equipped with an orientation detector that can tell if the phone is being held in an upright (Portrait) or sideways (Landscape) orientation. This is useful when entering text.

Text Input Methods


There are three text input methods available:

- **Samsung keyboard (default):** Samsung's on-screen QWERTY keypad that can be used in both portrait and landscape orientation.
- **Google Voice typing:** allows you to enter text by speaking.

To change the input method, see “*Keyboards and Input Methods*” on page 105.

Entering Text Using the Samsung Keyboard

From a screen where you can enter text, rotate your phone counterclockwise to a Landscape orientation. The on-screen QWERTY keypad will display.

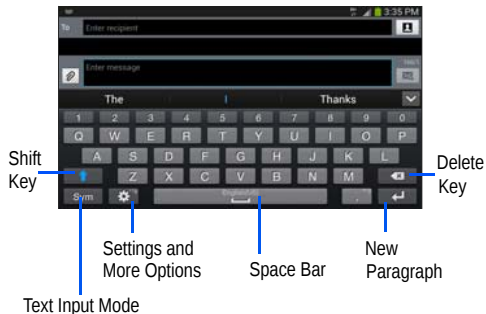

Changing the Text Input Mode - Keypad

There are two main keypad layout keys that will change the on-screen keys within the QWERTY keypad.

The available Text Input modes are: **Sym** and **Abc**.

Sym

Symbol/Numeric Mode: activates the number, symbol, and emoticon keys.

ABC

ABC Mode: activates the default alphabet keys. Can also be set to **Abc** or **abc** by using the shift () key.

Note: When in **Abc** mode, the **Sym** button will appear. When in **Sym** mode, the **Abc/ABC/abc** button will appear.

Using ABC Mode

1. If desired, rotate your phone counterclockwise to a Landscape orientation.
2. Tap the **Enter message** field.
3. Tap the desired alphabetic characters.
4. The screen initially opens in ABC mode. After typing the first letter, the shift key () will change to  and following letters will be lowercase.

5. Tap  to input another upper-case letter or tap  twice to switch to ABC mode. The shift key will change to  in ABC mode. All following letters will be uppercase until you tap the shift key again.

Using Symbol/Numeric Mode

Use Symbol/Numeric Mode to add numbers, symbols, or emoticons.

1. Rotate your phone counterclockwise to a Landscape orientation.
2. Tap  at the bottom of the screen. The Symbol/Numeric keyboard is displayed.
3. Tap the desired number, symbol, or emoticon characters.
4. Tap the  button to access additional symbols.
5. Tap  to return to Abc mode.

Predictive Text

By using the Predictive Text option, you can have next-letter prediction and regional error correction, which compensates for pressing the wrong keys on the QWERTY keyboard. Predictive text is turned on by default.

1. Tap  on the keyboard (if voice typing is on, press and hold  on the keyboard, then tap ).
2. Tap the ON/OFF slider, located to the right of the **Predictive text** field, to change the setting to .
3. In the text portion of the message screen, begin typing a word. A list of word options is displayed. Tap one of the words to replace the word that has already been typed or scroll the line of words to the left for more word choices.
4. Continue typing your message. Tap  to send the message or press  for more options. For more information, refer to “Creating and Sending Messages” on page 69.

Entering Text Using Handwriting

You can enter text simply by using your finger to handwrite letters on your screen.

1. Press and hold  on the keyboard (if voice typing is on, press and hold  on the keyboard, then tap .
1. From the keypad, tap .

2. Use your finger tip to write out each character. You can print or use cursive.
3. You can write out your entire message using the Handwriting feature or tap  to switch back to Samsung keyboard mode.

Samsung Keyboard Settings

For information on how you can configure your Samsung keyboard settings, see “*Samsung Keyboard settings*” on page 106.

Using the Google Voice Typing Feature

You can use your voice to enter text using the Google Voice typing feature.

1. Tap  on the keyboard.
2. At the **Speak now** prompt, speak clearly and distinctly into the microphone.
3. If the red microphone turns gray, then the feature has timed out and you should tap the microphone icon to start again.

The text is displayed in the message as you are speaking.

4. After you have quit speaking for several seconds, tap  to return to the keyboard.

Note: The feature works best when you break your message down into smaller segments.

Section 3: Call Functions

This section describes how to make or answer a call. It also includes the features and functionality associated with making or answering a call.

For more information, refer to “*Call Settings*” on page 96.

Displaying Your Phone Number

- Tap  → **Settings** →  **More** → **About device** → **Status**. Your phone number is displayed in the **My phone number** field.

Making a Call

1. From the Home screen, tap  and use the on-screen keypad to enter the number you wish to dial.
2. Tap  to make the call.

Note: When you activate the **Auto redial** option in the Voice Call menu, the phone will automatically redial up to 10 times when the person does not answer the call or is already on the phone. For more information, refer to “*Call Settings*” on page 46.

Making an International Call

1. From the Home screen, tap , then touch and hold . The + character appears.
2. Use the on-screen keypad to enter the country code, area code, and phone number.
 - If you make a mistake, tap  until the desired numbers have been deleted.
3. Tap  to make the call.

Manual Pause Dialing

To manually call a number with pause(s) without storing it in your Contacts list:

1. From the Home screen, tap , and use the on-screen keypad to enter the phone number.
2. Press  to display the dialer sub-menu.
3. Tap **Add 2-sec pause** to add a three second pause, and use the keypad to enter the additional numbers.

Tip: You can create pauses longer than two seconds by entering multiple two second pauses.

4. Select **Add wait** to add a wait. A wait will pause the calling sequence until you enter a number or press a key.
5. Tap  to make the call.

For more information, refer to “Adding Pauses to Contact Numbers” on page 48.

Correcting an Entered Number

Use the following steps to correct a mis-typed entry when dialing.

- After entering a number using the keypad:
 - If you make a mistake, tap  to erase a single character.
 - Press and hold  to erase the entire string of numbers.

Ending a Call

- Tap the  key.

Dialing a Recent Number

All incoming, outgoing and missed calls are recorded in the **Call log**. If the number or caller is listed in your Address Book, the associated name is also displayed.

1. From the Home screen, tap .
2. Tap the **Logs**  tab.

A list of recent calls is displayed.

3. Tap the desired Contact to enter the **Details** page, then tap  to make a call.

Making Emergency Calls

If you do not have a SIM card installed the first time you turn on the phone, the **Insert SIM card to make calls** message displays and an animated tutorial shows you how to install the SIM card.

Without a SIM card, you can only make an emergency call with the phone; normal cell phone service is not available.

Making an Emergency Call without a SIM card

1. Tap **Emergency call** from the on-screen display to make an emergency call.
2. Enter 9-1-1 and tap . Complete your call. During this type of call, you will have access to the Speaker mode, Keypad, and End Call features.
3. Tap  to exit this calling mode.

Making an Emergency Call with a SIM card

1. From the Home screen, tap .
2. Enter the emergency number (example: 911) and then tap .
3. Complete your call. During this type of call, you will have access to the Speaker mode, Keypad, and End Call features.

Note: This mode can drain your battery power more rapidly than normal calling mode.

Making a Call Using Speed Dial

You can assign a short cut number to a phone number in your Contacts List for speed dialing.

1. From the Home screen, tap **Contacts**  to display your Contacts List.
2. Press  to display the Contacts List sub-menu.
3. Tap **Speed dial setting**.
4. The **Speed dial setting** screen displays showing the numbers 1 through 9. The number 1 is reserved for Voicemail.

5. Tap an unused number and the **Contacts** screen displays.
6. Tap a contact to assign to the number. The selected contact number will display in the speed dial number box.
7. To remove a speed dial number or change the order, press  to display the Speed dial setting sub-menu.
8. Tap **Change order** or **Remove**.
9. To make a call using Speed Dial, tap  → **Keypad** and from the Dialer, touch and hold the speed dial number.

Making a Call from the Address Book

You can store phone numbers that you use regularly on the SIM card or in the phone's memory. These entries are collectively called the **Address Book**.


For further details about the **Address Book** feature, see “Finding an Address Book Entry” on page 49.

Answering a Call

When a call is received the phone rings and displays the caller's phone number, or name if stored in the Address Book.

1. At the incoming call screen:

- Touch and drag  in any direction to answer the call.
- Touch and drag  in any direction to reject the call and send it to your voicemail.
- Touch and drag the **Reject call with message** tab upward and tap a predefined text message to send to the caller.
 - I'm driving
 - I'm at the cinema
 - I'm in class
 - I'm in a meeting
 - Sorry, I'm busy. Call back later.
- or –
- Tap **Create new message** to compose a new message.

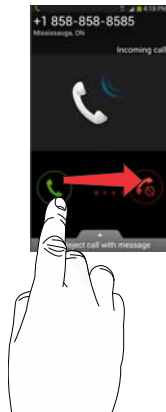

2. Tap  to end the call.

Note: You can answer a call while using the Address Book or other menu feature. After ending the call, the phone returns to the previously active function screen.

Dialing Options

From the Home screen and Application menus, you have the option to access the Dialer and initiate a call by tapping

 → **Keypad**. From the Dialer and the Contacts screen, the following tabs are located at the top of your screen:

- **Keypad**: dials the current number entered using the on-screen keypad.
- **Logs**: displays a list of all dialed, received, and missed calls.
- **Favourites**: displays your contacts that you have marked as Favourites.
- **Contacts**: takes you to your Address Book where you can select a contact to call.

After you begin to enter numbers, the **Add to Contacts** option appears so you can save the Contact if needed.

Call Log

The phone stores the numbers of the calls you've dialed, received, or missed in the Call log. The Call log displays the details of the call.

1. From the Home screen, tap .
2. Tap the **Logs**  tab.

A list of recent calls is displayed. If the number or caller is listed in your Address Book, the associated name is displayed.

All calls made, received, and missed are listed. Types of calls are identified by the following icons:

- **Incoming Calls**: 
- **Outgoing Calls**: 
- **Missed Calls**: 
- **Rejected Calls**: 
- **Auto Rejected Calls**: 

Calling Back a Missed Call

To call back a missed call number:


1. From the Home screen, tap  → **Logs** .

A list of recent calls is displayed. If the number or caller is listed in your Address Book, the associated name is displayed.

2. Swipe the desired missed call to the right to call.
– or –
Swipe the desired missed call to the left to message.

Saving a Recent Call to your Address Book

1. From the Home screen, tap  → **Logs** .
A list of recent calls is displayed.
2. Tap the call you want to save to your Address Book.
3. The call detail page is displayed. Tap **Create contact** to add the call to your Address Book.
The Create contact screen is displayed.
– or –
If you want to replace the number for an existing contact, tap **Update existing**.

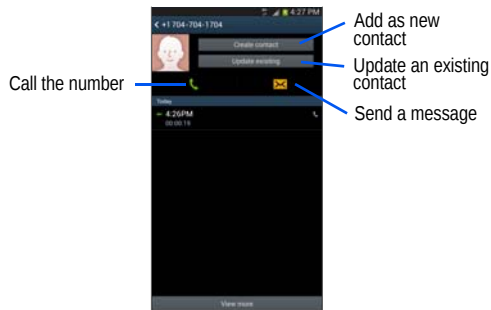

4. Enter information into the various fields using the keypad.
5. Tap **Save** to save when you are finished.

For further details about the **Address Book** feature, see “Adding a New Contact” on page 47.

Sending a Message to a Recent Call

1. From the Home screen, tap  → **Logs** .
A list of recent calls is displayed.
2. Swipe the entry you want to message to the left.

3. At the Message screen, tap the empty text field and use the on-screen keypad to type in a message.
4. When you are done with your message, tap  to send.

For more information, refer to “*Creating and Sending Messages*” on page 69.

Deleting a Call from the Call Log

1. From the Home screen, tap  → **Logs**  .
A list of recent calls is displayed.
2. Touch and hold the call you want to delete from the Call log.
3. Tap **Delete**.
4. At the **Delete log** prompt, tap **Delete**.
The call is deleted from the Call log.

Adding a Call to the Reject List

1. From the Home screen, tap  → **Logs**  .
A list of recent calls is displayed.
2. Touch and hold the call you want to add to the Reject List.

3. Tap **Add to reject list**.
4. At the **Add to reject list** prompt, tap **OK**.
Future calls from this number will be rejected and sent to your voicemail.

Call Duration

1. From the Home screen, tap  → **Logs**  .
2. Press  → **Call duration**.
3. The following times are displayed for Voice and Data:
 - **Last call**: shows the length of time for the last call.
 - **Dialled calls**: shows the total length of time for all calls made.
 - **Received calls**: shows the total length of time for all calls received.
 - **All calls**: shows the total length of time for all calls made and received.
4. You may reset these times to zero by pressing  then tapping **Reset**.

Options During a Call

Your phone provides a number of control functions that you can use during a call.

Adjusting the Call Volume

During a call, to adjust the volume, use the **Volume** keys on the left side of the phone.

- Press the **Up** volume key to increase the volume level and press the **Down** volume key to decrease the volume level.

– or –

Quickly add more volume to the incoming audio by tapping the on-screen **Extra volume** button .

From the Home screen, you can also adjust the ringer volume using these same keys.

In-Call Options

During an active call there are several functions available by tapping a corresponding on-screen button.

- **Hold**: place the current active call on hold.
- **Add call**: displays the dialer so you can call another person.
- **Keypad**: displays the on-screen keypad, where you can enter number using DTMF (Dual Tone Multi-Frequency).

- **End call**: terminates the call.
- **Speaker**: routes the phone's audio through either the speaker or through the earpiece.
 - Tap **Speaker** to route the audio through the speaker. (You can adjust the speaker volume using the volume keys.) A green line will appear under the Speaker button.
 - Tap **Speaker** again to use the phone's earpiece (see “Using the Speakerphone During an Active Call” on page 45). The green line will disappear when Speaker is not activated.
- **Mute/Unmute** turn the onboard microphone either on or off.
 - Tap **Mute** during a call to mute the microphone. A green line will appear under the Mute button.
 - Tap **Mute** again to unmute the microphone. The green line will disappear when Mute is not activated.
- **Headset** connects to a Bluetooth headset.
 - Tap **Headset** during a call to activate a Bluetooth headset. A green line will appear under the Headset button.
 - Tap **Headset** again to de-activate the Bluetooth headset. The green line will disappear when the Headset is not activated.
- Press  for more options:
 - **Contacts**: allows you to go to your Contact list.
 - **Memo**: allows you to write a memo.
 - **Message**: allows you to write a message during a call.

- **One-handed operation on/off:** Allows you to operate the device with one hand.

Personalizing the Call Sound Setting

During a call it may be necessary to adjust the sound of the incoming call by selecting an audio equalizer setting for the current call.

1. From the call screen, tap .
2. Confirm the option is enabled .
3. Select an available option. Choose from: Off, Soft sound, Clear sound, and Adapt Sound left, or Adapt Sound right.

Activating Noise Reduction

During a call it may be necessary to activate the noise reduction feature. Activating this feature can improve the quality of your conversation by reducing ambient noise. Noise reduction is on by default.

1. Press  to turn **Noise reduction off**.
2. Press  to turn **Noise reduction on**.

Placing a Call on Hold

You can place the current call on hold at any point during a conversation. You can also make another call while you have a call in progress if your network supports this service.

1. While on a call, tap **Hold** . This action places the current caller on hold.
2. You can later reactivate this call by tapping **Unhold** .

To make a new call while you have a call in progress

1. Tap **Hold** .
2. Tap **Add call**  to display the dialer.
3. Enter the new number and tap .

Once connected, the active call will appear in a large box at the top of your screen and the call on hold will appear in a smaller box in the middle of your screen.

Switching Between Calls

When you have an active call and a call on hold, you may switch between the two calls, changing the one on hold to active and placing the other on hold.

1. Tap **Swap**.

The current call (caller #2) is placed on hold and the previous call on hold (caller #1) is then reactivated so that you can continue conversing with that person. The active call will appear in a green box.

2. Tap  to end the currently active call.

To end a specific call

1. Tap **Swap** until the call you want to end appears in a green box.
2. Tap  to end the specific call.
3. Tap  to end the remaining call.

To answer a call while you have a call in progress

You can answer another call while you have a call in progress if you have activated your Call waiting feature. Otherwise, the other call will go to your Voicemail box. For more information, refer to “Additional settings” on page 98.

1. Tap  and slide to the right to answer another call.
2. Tap **Putting “Name/Number” on hold** to put the first call on hold.
– or –
Tap **Ending call with “Name/Number”** to end the first call.
3. To switch between the two calls, tap **Swap**.

- **Swap**: Places the current call on hold and then activates the previous call. The active call will appear in a green box. Tap **Swap** again to switch back.

To end a call on hold

1. Tap  to disconnect the active call.
2. The call on hold will now become the active call. Tap  to end the call.

3-Way Calling (Multi-Party Calling)

The 3-Way or Multi-Party feature allows you to answer a series of incoming calls and place them on hold. If this service is supported by the network, all calls can be joined together. You are notified of an incoming call by a call waiting tone.

Note: The **Merge** option combines all of the calls you have established with your phone (both active and on hold). **Swap** places the current call on hold and then activates the previous call.

This feature joins all of the calls you have established with your phone (both active and on hold) into a multi-party call.

1. Tap  and slide to the right to answer the call.
2. Tap  and slide to the right to answer the next call.

3. Tap **Putting "Name/Number" on hold** to put the first call on hold.
4. Join the first two callers into a single multi-party call by tapping **Merge** .
5. To temporarily leave the conference call, tap **Hold** . To rejoin the conference call tap **Unhold** .
6. Tap  to end the call.

Using the Speakerphone During an Active Call

While in an active call, it is possible to enable the speakerphone feature.

1. Tap **Speaker** . The **Speaker** button now appears as  and the speakerphone is activated.
2. Use the **Volume** keys (located on the left side of your phone) to adjust the volume.
3. To deactivate the speakerphone, tap **Speaker** .

Switching off the Microphone (Mute)

You can temporarily switch your phone's microphone off, so that the other person cannot hear you.

Example: You wish to say something to person in the room, but do not want the person on the phone to hear you.

To mute your phone during a call

1. Tap **Mute** . The **Mute** button now appears as  and Mute is activated.
2. Tap **Mute**  to deactivate the Mute function and reactivate the microphone.

Bluetooth headset

1. Tap **Headset** .
2. The phone will scan for your Bluetooth headset. When found, connect to the headset. The **Headset** button now appears as  and the Bluetooth headset is activated.
3. Tap **Headset**  to deactivate the Bluetooth headset and reactivate the phone speaker.

Searching for a Number in Address Book

1. During the active call, press  then tap **Contacts**.
2. Tap the Address Book entry.

For further details about the **Address Book** feature, see “Finding an Address Book Entry” on page 49.

Call waiting

The Call Waiting feature allows you to answer an incoming call while you have a call in progress, if this service is supported by the network, and you must first activate the Call Waiting feature:

- From the Home screen, tap  →  → **Call settings** → **Additional settings** → **Call waiting**.

You are notified of an incoming call by a call waiting tone.

Call forwarding

1. From the Home screen, tap  →  → **Call settings** → **Additional settings** → **Call forwarding**.
2. Tap one of the following options:
 - **Always forward**: allows you to forward all voice calls.

- **Forward when busy** allows you to forward voice calls to a designated number instead of your voice mail number if you are on another phone call.
- **Forward when unanswered**: allows you to forward voice calls to a designated number instead of your voicemail number when there is no answer on your phone. You can also select the amount of time that the phone delays before forwarding.
- **Forward when unreachable**: allows you to forward voice calls to a designated number instead of your voicemail number when you are not in an area covered by your service provider or when your phone is switched off.

Call Settings

To access the Call settings menu:

- From the Home screen, tap  →  → **Call settings**.
– or –
- From the Home screen, tap  → **Settings** →  **My device** → **Call**.

For detailed information on all of the call settings, see “Call Settings” on page 96.

Section 4: Contacts and Your Address Book

This section allows you to manage your daily contacts by storing their name and number in your Address Book. Address Book entries can be sorted by name, entry, or group.

Adding a New Contact

Use the following procedure to add a new contact to your Address Book.

Saving a Number from the Home screen

1. From the Home screen, tap **Contacts**  → .
2. At the **Save contact to** prompt, tap **Device**, **SIM**, or Account name.
3. Tap the image icon and assign a picture to the new entry by choosing one of three options:
 - **Image**: retrieve a previously stored image from your Gallery or from your My files folder and assign it to this entry. Tap an image to assign the image to the contact, then tap **Done**.
 - **Pictures by people**: retrieve a previously shared image from your Gallery.
 - **Take picture**: use the camera to take a new picture and assign it to this entry, then tap **Done**.

- **S Memo**: use an image from one of your S Memos.
- **Remove**: deletes any previously assigned image on an existing contact.

4. Tap the **Name** field and use the on-screen keypad to enter the full name. For more information, refer to “Entering Text” on page 31.
– or –

Tap  next to the **Name** field to display additional name fields.

5. Tap the **Phone number** field.
The numerical keypad is displayed.

The **Mobile** button  initially displays next to the **Phone number** field. If you want to add a phone number that is not a mobile number, tap the **Mobile** button and select another phone number type.

6. Enter the phone number.

Tap  to add another Phone number field or tap  to delete a field.

7. Tap the **Email address** field.

The keypad is displayed.

The **Home** button  initially displays next to the **Email address** field. If you want to add an email address that is not a home email address, tap the **Home** button and select another email address type.

8. Enter the email address.

Tap  to add another email address field or tap  to delete a field.

9. Tap any of the following fields that you want to add to your new contact:

- **Groups**: assign the contact to Not assigned, ICE - emergency contacts, Co-workers, Family, or Friends.
- **Ringtone**: adds a field used to assign a message tone that will sound when messages are received from this contact.
- **Message alert**: allows you to set the ringtone for your message alerts.
- **Vibration pattern**: allows you to set the specific type of vibration.
- **Add another field**: tap this button to add additional fields.

10. Tap **Save** to save the new contact.

Adding Pauses to Contact Numbers

When you call automated systems, you are often required to enter a password or account number. Instead of manually entering the numbers each time, you can store the numbers in your Contacts along with special characters called pauses and waits. A pause will stop the calling sequence for two seconds and a wait will pause the calling sequence until you enter a number or press a key.

To add a pause or a wait to an existing Contact:

1. From the Home screen, tap **Contacts** , and then tap the name or number to open the Contact.
2. Tap  to edit.
3. Tap the phone number field.
4. Tap the screen at the position where the pause or wait needs to be added.
5. Tap .
6. Tap **Pause(,)** to add a two-second pause or tap **Wait(;)** to add a wait, and use the keypad to enter the additional numbers. A pause will be displayed as a comma (,) and a wait will be displayed as a semi-colon (;).

7. Tap **Save** to save your changes, or tap **Cancel** to discard.

Editing an Existing Contact

When editing an existing contact, you can tap a field and change or delete the information, or you can add additional fields to the contact's list of information.

1. From the Home screen, tap **Contacts** .
2. Press and hold the Contact that you want to edit.
3. Tap **Edit**.
4. Tap any of the fields to add, change, or delete information.
5. Tap **Save** to save the edited information.

Using Contacts

Dialing or Messaging from Address Book

Once you have stored phone numbers in the Address Book, you can dial them easily and quickly by either using their SIM card location number or by using the Search field to locate the entry.

From the Address book, you can also send messages.


Finding an Address Book Entry

You can store phone numbers and their corresponding names onto your SIM card and phone's onboard memory. The two locations are physically separate but are used as a single entity, called the Address Book.

Depending on your particular SIM card, the maximum number of phone numbers the SIM card can store and how they are stored may differ.

1. From the Home screen, tap **Contacts** .
2. Within the Contacts list (sorted alphabetically), tap a letter on the right side of the display to quickly jump to the contacts beginning with that letter.
3. Tap the contact you wish to call or message.

4. Tap the phone icon to make a phone call or tap the message icon to send a message.

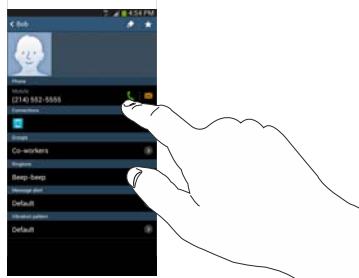

For more information, refer to “*Creating and Sending Messages*” on page 69.

Tip: From the Contact list, sweep right over a listing to make a call. Sweep left over a listing to send a message.

Linking Contacts

Linking Contact Information

Many people now maintain multiple email accounts, social networking logins, and other similar account information. For example, a Facebook account login name might differ from a corporate email account login because they are maintained separately and for different groups of people.

This device can synchronize with multiple accounts such as Facebook, Twitter, MySpace, Corporate email, and Google. When you synchronize your phone with these accounts, each account creates a separate contact entry in the Contacts list.

If one of your contacts (Amy Smith, for example) has a regular email account that you maintain in Gmail, but also has a Facebook account under her maiden and married name, as well as a Yahoo! chat account, when you merge these accounts into your Contacts list you can link all of her entries and view the information in one record.

The next time you synchronize your phone with your accounts, any updates that contacts make to email account names, email addresses, etc. automatically update in your contacts list.

For more information about synchronizing accounts, see “Synchronizing Accounts” on page 52.

1. From the Home screen, tap **Contacts** .
2. Tap a contact name (the name you want to link to another entry). Typically this is the same contact with a different name or account information.
3. Press  → **Link contact**.
The contact list is displayed.

Note: Only contacts stored on your phone can be linked.

4. Tap the second contact entry (the entry in which to link).
The second contact is now linked with the first and the account information is merged into one screen.

Note: The information is still maintained in both entries, but displays in one record for easier viewing when you link the contacts.

5. Tap  to view the contact information you linked. The contacts and information displays with an icon next to the contact name to indicate what type of account information is contained in the entry.

Separating Linked Contact Information

1. From the Home screen, tap **Contacts** .
2. Tap a contact name (the account name from which you want to separate an entry). **Note:** typically this is the same contact with a different name or account information.
3. Tap .
4. Tap the minus sign  next to entry in which you want to separate.
5. At the **Separate contact** prompt, tap **OK**.
The contact is now separated and no longer displays in the merged record screen.

Marking a Contact as Default

When you use messaging type applications, the application needs to know which information is primary (default) in a contact entry list. For example, you may have three different contact records for John Smith, so the application will be looking for the “default” number or entry.

1. From the Home screen, tap **Contacts** .
2. Tap a Contact name.

3. Press  → **Mark as default**. The Mark as default screen displays radio buttons next to the contact names or phone numbers of all the linked contacts. The radio button next to the default contact will be green.
4. To change the default contact, tap the radio button next to another entry that you want to be the default. The radio button will turn green, then tap **Done**.

5. Tap **Sync now** to synchronize the account.
The account is synchronized.
6. Press  to return to the Contacts list.

Note: You can also synchronize your accounts using the Settings menu. For more information, refer to “Synchronizing Accounts” on page 112.

Synchronizing Accounts

From the Accounts menu you decide if you want applications to synchronize, send, and receive data at any given time, or if you want the applications to synchronize automatically. After determining how you want the accounts to synchronize, indicate which account to synchronize with your Contacts list.

1. From the Home screen, tap **Contacts** .
2. Press  then tap **Settings** → **Accounts**.
If you have previously added any accounts, the **Sync settings** prompt is displayed with your current accounts listed.
3. Tap an account that you would like to synchronize.
4. At the **Sync settings** screen, tap the options that you would like to synchronize for that account.

Address Book Options

You can access Address Book options while at the main Address Book page or while in the details page for a specific entry.

Options in Address Book

1. From the Home screen, tap **Contacts**  then press .
2. The following options are displayed:
 - **Delete:** allows you to delete 1 or more of your contacts.
 - **Import/Export:** allows you to move contacts to or from your memory card, USB storage or SIM card.
 - **Share namecard via:** allows you to share the contact's namecard via Bluetooth, ChatON, Email, Gmail, Messaging or Wi-Fi Direct.

- **Merge accounts:** allows you to merge contact information with your Google or Samsung account.
- **Speed dial setting:** allows you to set up speed-dialing. For more information, refer to “*Making a Call Using Speed Dial*” on page 37.
- **Send message/email:** allows you to send a text or message.
- **Contacts to display:** You can choose to display all of your contacts or only display contacts on your Device, SIM, or contacts stored to other accounts. You can also tap Customized list to change other options on how your contacts are displayed.
- **Settings:** allows you to choose set the following options:
 - **Only contacts with phones:** allows you to only display contacts that have phone numbers.
 - **Sort list by:** allows you to sort by Given name or Family name.
 - **Display contacts by:** allows you to sort by Given name or Family name.
 - **Service numbers:** allows you to display or edit your service numbers.

- **Contact sharing settings:** allows you to send all or individual contacts via Bluetooth in the form of namecards.
- **Accounts:** allows you to add and manage your Samsung, ChatON, Google, LDAP (Lightweight Directory Access Protocol), Microsoft Exchange ActiveSync and Server accounts. Tap Add account and then follow the on-screen instructions.
- **Help:** provides additional information on using your contacts.

Options at Selected Contact Screen

1. From the Home screen, tap **Contacts** .
2. Tap a contact and at the contact's display screen, press .
3. The following options are displayed:
 - **History:** allows you to view the phone and message history for the contact.
 - **Edit:** allows you to edit the contact's information.
 - **Delete:** allows you to delete the contact from your Address Book.
 - **Link contact:** allows you to join contacts with other contacts.

- **Separate contact:** allows you to separate contacts that have been joined. This option only appears if the contact has been joined.
- **Mark as default:** when you have multiple contacts linked together, you can mark one of them as default (only displays when contact is saved to the phone). For more information, refer to “*Marking a Contact as Default*” on page 51.
- **Share namecard via:** allows you to send the contact's information via Bluetooth, ChatON, Email, Gmail, Messaging, or Wi-Fi Direct.
- **Add to/Remove from reject list:** allows you to add or remove the contact from your reject list. If they call while being on the reject list, the call will be sent directly to voice mail.
- **Print contact info:** allows you to print the contact's namecard to a Samsung printer using Wi-Fi.
- **Add shortcut to home:** allows you to place a shortcut for this contact on your Home screen.

Groups

Adding a Contact to a Group

1. From the Home screen, tap **Contacts** .

2. Press and hold a contact that you would like to add to a group.
3. Tap **Add to group**.
4. Tap a group entry.
5. Tap **Save**.

The contact is added to the group.

Removing a Contact From a Group

1. From the Home screen, tap **Contacts**  → **Groups** .
2. Tap a group entry.
3. Press  → **Remove member**.
4. Tap all of the contacts you want to remove from this group. A green checkmark will appear next to their name.
5. Tap **Done**.

The contacts are now removed from the group.

Creating a New Group

1. From the Home screen, tap **Contacts**  → **Groups**  →  → **Create**.

2. Tap the **Group name** field and use the on-screen keypad to enter a new group name. For more information, refer to “*Entering Text*” on page 31.
3. Tap **Group ringtone** to choose a ringtone for assignment to this new group. Tap a ringtone to hear how it sounds, then tap **OK**.
– or –
Tap **Add** to select a ringtone from your music files.
4. Tap **Message alert** to choose an alert tone for assignment to this new group, then tap **OK**.
5. Tap **Vibration pattern** to choose a vibration audio file for assignment to this new group, then tap **OK**.
– or –
Tap **Create** and follow the on-screen instructions to create your own vibration pattern.
6. Tap **Add member** to add contacts to the new group.
7. Tap each contact you want to add to create a checkmark. You can also tap **Select all**.
8. Tap **Done**.
9. Tap **Save** to save the new Group category.

Editing a Caller Group

To edit a Group entry, there must be at least one member as part of the selected group.

1. From the Home screen, tap **Contacts**  → **Groups**  .
2. Tap a group entry.
3. Press  → **Edit**.
4. Make modifications to the **Group name**, **Group ringtone**, **Message alert** or **Vibration pattern** fields.
5. Tap **Add member** to add more contacts to this group.
6. Tap **Done**.
7. Tap **Save** to save the edited Group category.

Address Book Favourites

Once you have stored phone numbers in the Address Book, you can add them to your Favourites list.

To view your Favourites list:

- From the Home screen, tap **Contacts**  → **Favourites**  .

Adding Favourites to your Address Book

1. From the Home screen, tap **Contacts**  .

2. Within the Contacts list, touch and hold a contact that you want to add to your favorites list.
3. Tap **Add to favourites** on the displayed list.
4. A gold star will appear next to the contact in the Address Book.

Removing Favourites from your Address Book

1. From the Home screen, tap **Contacts** .
2. Within the Contacts list, touch and hold a contact that you want to remove from your favourites list. Contacts in your Favourites list will have a gold star.
3. Tap **Remove from favourites** on the displayed list.
4. The gold star will no longer appear next to the contact in the Address Book.

Managing Address Book Contacts

You can copy, delete, and view the memory status for the Phone and SIM contacts on your phone.

Copying Contacts to the SIM Card

Note: When storing an Address Book entry into the SIM card, only the name, phone number, and email address are available as fields. Also, if you move the SIM card to another phone that does not support additional fields on the SIM card, this additional information may not be available.

1. From the Home screen, tap **Contacts**  →  → **Import/Export**.
2. Tap **Export to SIM Card**.
The phone then displays a list of your current phone contacts.
3. Tap the contacts to place a checkmark adjacent to those entries you wish to have copied to the SIM card.
 - Repeat this step for all individual entries you wish copied to the SIM or tap **Select all** to place a checkmark alongside all entries.
4. Tap **Done** to copy.
5. At the **Copy to SIM** display, tap **OK**.
The selected numbers are copied to the SIM card.

Copying Contacts to the Phone

1. From the Home screen, tap **Contacts**  →  → **Import/Export**.
2. Tap **Import from SIM Card**.
3. At the **Save contact** prompt, tap on **Device** or an account name that you would like to copy the contact to. The phone then displays a list of your current contacts stored on your SIM card.
4. Tap the contacts to place a checkmark adjacent to those entries you wish to have copied to your phone.
 - Repeat this step for all individual entries you wish copied to your phone or tap **Select all** to place a checkmark alongside all entries.
5. Tap **Done** to copy.
The selected numbers are copied.

Deleting a Contact

You can delete Phone or SIM entries.

1. From the Home screen, tap **Contacts** .
2. Within the Contacts list, touch and hold a contact that you want to delete.

3. Tap **Delete** on the displayed list.
4. At the **Delete** prompt, tap **OK** to delete the contact or **Cancel** to exit.

Deleting Multiple Contacts

1. From the Home screen, tap **Contacts**  →  → **Delete**. The phone displays a list of your current contacts.
2. Tap the contacts to place a checkmark adjacent to those entries you wish to delete.
 - Repeat this step for all individual entries you wish deleted or tap **Select all** to place a checkmark alongside all entries.
3. Tap **Delete**.
4. At the **Delete Contact** prompt, tap **OK**.
The selected contacts are deleted.

Using the Service Dialing Numbers

You can view the list of Service Dialing Numbers (SDN) assigned by your service provider. These numbers may include emergency numbers, customer service numbers, and directory inquiries.

1. From the Home screen, tap **Contacts**  →  → **Settings**.

2. Tap **Service numbers**.
3. Scroll through the available numbers (if available).
4. Tap a number and the call is made.

Note: This menu is available only when your SIM card supports Service Dialing Numbers.

Section 5: Pictures and Videos

This section explains features related to the use of the camera and camcorder on your phone. You can take photographs and shoot video by using the built-in camera functionality. Your 8 megapixel camera produces photos in JPEG format.


Important! Do not take photos of people without their permission.
Do not take photos in places where cameras are not allowed.
Do not take photos in places where you may interfere with another person's privacy.

Using the Camera

Taking Photos

Taking pictures with your device's built-in camera is as simple as choosing a subject, pointing the camera, then pressing the camera key.

1. From the main Home screen, tap **Camera**  to activate the camera mode.
2. Using the phone's main display screen as a viewfinder, adjust the image by aiming the camera at the subject.
3. Before you take a picture, use the **Up** and **Down** Volume keys to zoom in or out. You can magnify the picture up to x4 (400 percent).
– or –
Pinch the screen to zoom out or pinch outwards to zoom in.
4. If desired, before taking the photo, you can tap on-screen icons to access various camera options and settings.
5. You can also tap the screen to move the focus to the area you touch.
6. Press and release the Camera key (). The picture is automatically stored in your designated storage location. If no microSD is installed, all pictures are stored on the Phone.

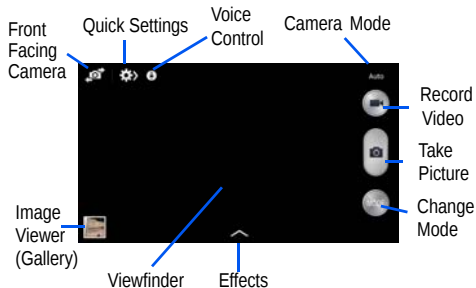

7. While viewing a picture after you have taken it, pinch the screen outwards to zoom in or pinch the screen inwards to zoom out.

You can magnify the picture up to x4.

8. Press  to return to the viewfinder.

Camera Modes

There are many different camera modes that you can use to help optimize your photos depending on the conditions and your experience.

1. From the camera viewfinder, tap the Mode button  to change the mode to one of the following:
 - **Auto:** Automatically adjust exposure to optimize color and brightness. This is the default setting.
 - **Beauty face:** Use this to take photos with softened faces for gentler images.
 - **Best photo:** Use this to take multiple photos in a short time, and then choose the best photos among them. Press the Shutter button to take multiple photos. When Gallery opens, tap and hold thumbnails of photos to save, and then tap **Save**.
 - **Continuous shot:** Use this to take pictures continuously at a rate of 3 per second. You can take up to 20 continuous pictures at a time.
 - **Best face:** Use this to take multiple group shots at the same time and combine them to create the best possible image. Press the Shutter button to take multiple photos. When Gallery opens, tap the yellow frame on each face, and choose the best individual face for the subject. After choosing a pose for each individual, tap Done to merge the images into a single photo, and tap **Save**.

- **Sound & shot:** Use this mode to enrich pictures by adding background sounds for a few seconds. The background sound is recorded for up to 9 seconds after taking the photo.
- **Rich tone (HDR):** Use this to take photos with richer colors and contrasts (High Dynamic Range).
- **Panorama:** Use this to take wide panoramic photos. Press the Shutter button to take a photo, and then move the camera in any direction. When the blue frame aligns with the preview screen, the camera automatically takes another shot in the panoramic sequence. To stop shooting, press the Shutter button again.
- **Sports:** Use this to take fast action photos.
- **Night:** Use this to take photos in low-light conditions, without using the flash. Press the Shutter button to take multiple photos. Photos are automatically merged into a single photo.

Quick Settings

Tap  at the top of the display to quickly change Camera settings. Not all of the following options are available in both still camera and video camera modes. The available options vary by mode.



Configure Camera settings.



Activate or deactivate the flash.



Activate or deactivate the voice control to take photos.



Set a time delay.



Select a resolution for videos.



Activate or deactivate the sharing options.



Hide Quick settings.

Camera and Camcorder Settings

This section describes the different settings that you can configure on your camera. Not all of the following options are available in both still camera and video camera modes. The available options vary by mode.

1. From the viewfinder, tap  > (Quick Settings) →  (Camera Settings).
2. The follow settings are located under the Camera, Camcorder and General tabs. The settings that are displayed will depend on what camera mode you are in.

Camera:

- **Photo size:** Select a resolution for photos. Use higher resolution for higher quality. Higher resolution photos take up more memory.
- **Face detection:** allows you to adjust the camera focus based on face detection technology.
- **Metering:** allows you to set how the camera measures or meters the light source: Centre-weighted, Matrix, or Spot.

- **ISO:** determines how sensitive the light meter is on your digital camera. Choose from Auto, 100, 200, 400, or 800. Use a lower ISO number to make your camera less sensitive to light, a higher ISO number to take photos with less light, or Auto to let the camera automatically adjust the ISO for each of your shots.

- **Anti shake:** compensates for camera movement.
- **Save as:** allows you to assign rich tone usage to an image.

Camcorder:

- **Video size:** Select a resolution for videos. Use higher resolution for higher quality. Higher resolution videos take up more memory.

Settings:

- **GPS tag:** attach a GPS location tag to the photo. To improve GPS signals, avoid shooting in locations where the signal may be obstructed, such as between buildings or in low-lying areas, or in poor weather conditions. Your location may appear on your photos when you upload them to the Internet. To avoid this, deactivate the GPS tag setting.
- **Review:** set this option if you want to view each picture after you take it. Select a time value.

- **Volume key:** assigns a function to the volume key. Choose from The zoom key, The camera key, or The record key.
- **Timer:** Use this for delayed-time shots. You can set the timer to Off, 2 sec, 5 sec, or 10 sec.
- **White balance:** Select an appropriate white balance, so images have a true-to-life colour range. The settings are designed for specific lighting situations. These settings are similar to the heat range for white-balance exposure in professional cameras.
- **Exposure value:** allows you to adjust the brightness level by moving the slider.
- **Guidelines:** Display viewfinder guides to help composition when selecting subjects.
- **Flash:** activate or deactivate the flash.
- **Voice control:** activates/deactivates voice control feature that allows you to verbally take a photo.
- **Contextual filename:** allows you to have your location added as part of the filename. You must first activate GPS tag described above.
- **Storage:** Select the memory location for storage.
- **Reset:** Reset the camera settings.

Viewing your Pictures

After you take a photo, you can access various options from the Image Viewer. The Image Viewer uses your Gallery. For more information, refer to “*Gallery*” on page 66.

Editing a Photo

You can edit your photos using the built-in Photo editor application on your device. The photo editor application provides basic editing functions for pictures that you take on your phone. Along with basic image tuning like brightness, contrast, and color it also provides a wide variety of effects used for editing the picture.

1. From the Home screen, tap  → **Gallery** .
2. Select a folder location and tap a file to open it.
3. With the image displayed, tap **Edit**  at the top of the screen to launch the Photo editor.

Note: To select the picture area, touch and hold the current picture.

4. Select an image area by touching and holding the image and then selecting an available option:

- **Selection mode:** provides several on-screen selection options such as: Select area, Inverse selection, Selection size, and Selection mode (Magnetic, Lasso, Brush, Round, and Square).
- **Select all:** select the entire area of the current image.
- **Clipboard:** copies the currently selected area to your device's clipboard.

5. Use the following editor controls to edit your picture:



Previous: move to previous photo project.



Next: move to next photo project.



Rotate: allows you to rotate a photo in all 4 directions. You can also mirror image a photo.



Crop: allows you to crop (cut-out) an area of a photo.



Colour: allows you to Auto adjust colour, Brightness, Contrast, Saturation, Adjust RGB, Temperature, Exposure, and Hue of a photo.



Effects: allows you to add various effects to your photo.



Portrait: allows you to apply various face correction effects such as: Red-eye fix, Airbrush face, Face brightness, Out-of-focus, Beauty face, Face reshaping, or Spot healing.



Sticker: allows you to place various pre-created on-screen stickers atop your current image.



Drawing: allows you to add draw directly on your current picture by using either a brush/pen or eraser.



Frame: places a pre-created border style atop your current image.

6. Press to access the following options:

- **Save as:** allows you to rename your current image and save it to your gallery.
- **Select image:** allows you to select a new image for editing.
- **Take picture:** allows you to activate the camera and take a new image for editing.

- **Share via:** allows you to share your saved photo via Add to Dropbox, Bluetooth, ChatON, Email, Flipboard, Gmail, Google+, Group Play, Hangouts, Messaging, Picasa, S Memo, or Wi-Fi Direct.
- **Set as:** assigns the currently saved image as either a: Contact photo, Home and lock screens, Home screen, or Lock screen.

Using the Camcorder

In addition to taking photos, the camera also doubles as a camcorder that also allows you to record, view, and send videos.

Note: The camera may not be able to properly record videos to a memory card with a slow transfer speed.

Shooting Video

Tip: When shooting video in direct sunlight or in bright conditions, it is recommended that you provide your subject with sufficient light by having the light source behind you.

1. From the main Home screen, tap **Camera**  to activate the camera mode.

2. Using the camera's main display screen as a viewfinder, adjust the image by aiming the camcorder at the subject.
3. Before you take a video, use the Volume control buttons to zoom in or out. You can magnify the video up to x4 (400 percent).
– or –
Pinch the screen to zoom out or pinch outwards to zoom in.
4. Tap the Video key () to begin shooting video. The red light will blink while recording.
5. You can tap the screen to move the focus to the area you touch.
6. To capture an image from the video while recording, tap . This feature is not available while the anti-shake feature is activated.
7. Tap the Pause key () to pause the recording. To resume recording, tap the Resume key ().
8. Tap the Stop key () to stop the recording and save the video file to your Camera folder.

9. Once the file has been saved, tap the image viewer, then tap  to play your video.
10. Press  to return to the viewer.

Viewing your Videos

After you take a video, you can access various options from the Image Viewer. The Image Viewer uses your Gallery and the Video player. For more information, refer to “*Gallery*” on page 66. Also, see “*Video*” on page 163.

Gallery

The Gallery is where you view photos and play back videos. For photos, you can also perform basic editing tasks, view a slideshow, set photos as wallpaper or contact image, and share as a picture message.

1. From the Home screen, tap  → **Gallery** .
All of the Albums that hold your pictures and videos will be displayed with folder name and number of files.
2. Tap an Album and thumbnails of the contents will be displayed.

Note: If your device displays that the memory is full when you access Gallery, delete some of the files by using **My Files** or other file management applications and try again. For more information, refer to “*My Files*” on page 150.

Viewing Pictures

1. From the main gallery, press  → **Slideshow** to see a slideshow of all of your pictures.
2. Tap a thumbnail to view a single picture.

Note: If no control icons are displayed on the screen in addition to the picture, tap anywhere on the screen to display them.

3. The following options are available at the top of the screen:
 - **Select a device** : allows you to select another device.
 - **Share via** : allows you to share the picture via Group Play, Bluetooth, ChatON, Dropbox, Email, Flipboard, Gmail, Google+, Hangouts, Messaging, Picasa, S Memo, or Wi-Fi Direct.

- **Edit** : allows you to edit the picture, including Rotate, Crop, Colour, Effect, Portrait, Sticker, Drawing, and Frame.
 - **Delete** : allows you to delete the picture.
4. Press  for additional options.

Viewing Videos

Note: If no control icons are displayed on the screen in addition to the picture, tap anywhere on the screen to display them.

1. Tap a video to select it.
 2. Tap  to play the video.
 3. Press  for additional options.
- For video player controls, see “Video” on page 163.

Using S Beam to Share Pictures

This feature (when activated via NFC) allows you to beam large files directly to another compatible device that is in direct contact. These files can be larger, such as Videos, HD pictures, and other large files. You can beam images and videos from your gallery, music files from your Music, and more.

1. From the Home screen, tap  → **Settings**.

2. If not already active, in a single motion touch and slide the **NFC** slider to the right to turn it on .
3. Tap **S Beam** and make sure the feature is turned on.
4. If not already active, in a single motion touch and slide the **S Beam** slider to the right to turn it on .
5. On the source device (containing the desired image or video), tap  → **Gallery** .
6. Locate and tap the selected image to open it in the preview window.

Important! Both devices must not be in Lock mode or displaying the Lock screen. They must both be active and unlocked. It is recommended that the target device be on the Home screen.

7. Place the two active NFC-enabled devices back to back to begin.

Note: If the **Touch to beam** screen does not appear on the source device:

- Pull them apart
 - Verify the image is visible in the preview window on the source device (providing the file)
 - Place them together again
-

8. From the **Touch to beam** screen, tap the reduced image preview to begin the transfer.
9. When prompted, separate the two devices. After a few seconds (depending on file size) the recipient will then see the transferred file displayed on their screen.

To share multiple pictures via S Beam:

1. On the source device (containing the desired image or video), tap  → **Gallery** .
2. Locate the selected folder.
3. Touch and hold the first image and place a checkmark on it and all desired images.
4. Place the two active NFC-enabled devices back to back to begin.

5. From the **Touch to beam** screen, tap the reduced image preview to begin the transfer.
6. When prompted, separate the two devices.
7. The picture(s) is transferred to the other device.

Section 6: Messaging

This section describes how to send and receive different types of messages. It also includes the features and functionality associated with messaging.

Types of Messages

Your phone provides the following message types:

- Text Messages
- Multimedia (Picture, Video, and Audio) Messages
- Email and Gmail Messages
- Google Talk
- Google+ and Messenger Messages
- ChatON

The Short Message Service (SMS) lets you send and receive text messages to and from other mobile phones or email addresses. To use this feature, you may need to subscribe to your service provider's message service.

The Multimedia Messaging Service (MMS) lets you send and receive multimedia messages (such as picture, video, and audio messages) to and from other mobile phones or email addresses. To use this feature, you may need to subscribe to your service provider's multimedia message service.

Important! When creating a message, adding an image, a sound file, or a video clip to a text message changes the message from a text message to a multimedia message.

Messaging icons are displayed at the top of the screen and indicate when messages are received and their type. For more information, refer to “Indicator Icons” on page 14.

Creating and Sending Messages

1. From the main Home screen, tap **Messaging**  →  **Compose**.
2. Tap on the **Enter recipient** field to manually enter a recipient or tap  to select a recipient from your Contacts. You can also select the recipient based on Groups, Favourites, or Logs.
3. If adding a recipient from your Contacts, tap the contact to place a checkmark then tap **Done**.

The contact will be placed in the recipient field.

Note: Enter additional recipients by separating each entry with a semicolon (;) then using the previous procedure.

4. Tap the **Enter message** field and use the on-screen keypad to enter a message. For more information, refer to “*Entering Text*” on page 31.
5. Add more recipients by tapping the recipient field.
6. Review your message and tap **Send** .

Note: If you exit a message before you send it, it will be automatically saved as a draft.

Message Options

Options before composing a message

1. From the main Home screen, tap **Messaging** .
2. Before composing a message, press  to reveal additional messaging options:
 - **Search:** allows you to search through all of your messages for a certain word or string of words. Enter a search string in the Messaging Search window and tap .

- **Delete threads:** allows you to delete any message thread. Select the messages to delete and a green checkmark will appear next to the message. Tap **Delete**.
- **Draft messages:** displays the draft messages folder and its contents.
- **Locked messages:** displays the locked messages folder and its contents.
- **Scheduled messages:** displays the scheduled messages folder and its contents.
- **Spam messages:** displays the spam messages folder and its contents.
- **Settings:** allows you to access Messaging settings. For more information, refer to “*Messaging Settings*” on page 74.

Options while composing a message

1. While composing a message, press  to reveal additional messaging options.

Note: Available options will slightly differ between new messages and messages composed within a thread.

- **Insert smiley:** allows you to add emoticons, such as a happy face to your message.

- **Add text:** allows you to copy text from your contacts, calendar, or from a memo to add to your message. This is a convenient feature for adding names, phone numbers, events, etc. to your message. For more information, refer to “Adding Additional Text” on page 72.
- **Add to Contacts:** allows you to add the recipient to your Contacts list. This option only appears if the recipient is not already in your Contacts list.
- **View contact:** allows you to see information on the recipient. This option only appears if the recipient is in your Contacts list.
- **Add slide:** allows you to add a new page to a message.
- **Add subject:** allows you to add a subject line.
- **Scheduling:** allows you to assign the current message for scheduled delivery at a designated time.
- **Discard:** allows you to delete the message.
- **Translate:** allows you to use S Translator to translate the message.

Adding attachments to a message

To add an attachment to your message, tap  and select one of the following options:

- **Image:** allows you to tap an existing image from your Gallery or Samsung Link and add it to your message.
- **Take a picture:** allows you to temporarily exit the message, take a photo with phone's camera, and then add it to your message by tapping **Save**.
- **Video:** allows you to choose an existing video from the Videos list, then add it to your message.
- **Record video:** allows you to temporarily exit the message, record a video clip using the phone's camera, and then add it to your message by tapping **Save**.
- **Audio:** allows you to choose an existing audio file from the Audio list, then add it to your message by tapping the circle to the right of the audio so that it turns green, then tapping **Done**.
- **Record audio:** allows you to temporarily exit the message and record an audio clip using the phone's microphone. It is then automatically attached to the message.
- **S Memo:** allows you to add an S Memo that you have created.
- **S Planner:** allows you to add an event from your calendar. Select the desired event and tap **Done**.
- **Location:** allows you to attach a thumbnail of a map showing your location.

- **Contacts:** allows you to tap on an existing Address Book entry, then add it to your message by tapping **Done**.

Adding Additional Text

You can copy text such as names, phone numbers, and events from your Contacts, Calendar or a Memo.

1. While composing a message, press  → **Add text**.
2. At the Add text screen, select one of the following:
 - **S Memo:** allows you to insert text from an existing S Memo.
 - **S Planner:** allows you to add the name, date, and time of a calendar event to your message.
 - **Location:** allows you to add an address and the link to the location on Google Maps.
 - **Contacts:** allows you to add the name and phone number of any of your contacts to your message.
 - **Text templates:** allows you to add pre-defined phrases and sentences.

The information is added to your message.

Viewing New Received Messages

1. When you receive a new message, the new message  icon will appear at the top of your screen.

2. Open the Notification Bar and select the message. For more information, refer to “*Notification Bar*” on page 29.
– or –

From the main Home screen, tap **Messaging**  then tap the new message to view it.

The selected message appears in the display.

3. To play a multimedia message, tap  .
 - To pause playback of the multimedia message, tap  .
4. To scroll through the message (if additional text pages have been added), touch the screen and in a single motion, scroll up or down the page.

Message Threads

Sent and received text and picture messages are grouped into message threads. Threaded messages allow you to see all the messages exchanged (similar to a chat program) and displays a contact on the screen. Message threads are listed in the order in which they were received, with the latest message displayed at the top.

To access message thread options:

- From the main Messaging screen, touch and hold the message to display the following options:

- **View contact:** displays the Contact's Overview page.
- **Add to contact:** Adds a new number to your Contacts list. This option is only displayed if the number is not already in your Contacts list.
- **Delete thread:** deletes the currently selected message thread.
- **Add to spam numbers:** adds the current sender to a spam list. Any new texts from this sender are automatically blocked.

To access additional Bubble options:

- Touch and hold the message bubble within an active message conversation to display the following options:
 - **Delete message:** deletes any currently selected message bubble from the thread.
 - **Copy message text:** copies the currently selected message bubble from the thread.
 - **Lock/Unlock message:** locks or unlocks the currently selected message bubble from being accidentally deleted.
 - **Forward:** allows you to forward the currently selected message bubble to an external recipient.
 - **Copy to SIM:** copies the currently selected message bubble as a single text message within the SIM card.

- **View message details:** displays details for the currently selected message bubble.
- **Translate:** Use S Translator to translate the message.

Deleting Messages

Deleting a single message thread

1. From the main Home screen, tap **Messaging** .
2. Touch and hold a message, then tap **Delete thread**.
3. At the **Delete** prompt, tap **OK** to delete or **Cancel** to cancel.

Deleting multiple message threads

1. From the main Home screen, tap **Messaging** .
2. Press  → **Delete threads**.
3. Tap each thread you want to delete. A checkmark will appear beside each thread you select.
4. Tap **Delete**.
5. At the **Delete** prompt, tap **OK** to delete or **Cancel** to cancel.

Message Search

You can search through your messages by using the Message Search feature.

1. From the main Home screen, tap **Messaging** .
2. Tap  → **Search**.
3. Use the on-screen keypad to enter a word or phrase to search for, then tap .
4. All messages that contain the search string you entered are displayed.

Messaging Settings

To configure the settings for text messages, multimedia messages, Voice mails, and Push messages.

1. From the main Home screen, tap **Messaging**  →  → **Settings**.
2. The following Messaging settings are available:

General settings:

- **Delete old messages:** deletes old messages when the limit is reached, rather than having them overwritten.
- **Text message limit:** allows you to set a limit on how many text messages can be in one conversation.

- **Multimedia message limit:** allows you to set a limit on how many multimedia messages can be in one conversation.
- **Text templates:** allows you to edit or add new text templates to use in your messaging.

Text message (SMS) settings:

- **Delivery reports:** Request a delivery report for each message sent.
- **Manage SIM card messages:** allows you to manage the messages that you have stored on your SIM card.
- **Message centre:** allows you to enter the number of your Message centre where your messages reside while the system is attempting to deliver them.
- **Input mode:** allows you to set the input mode for your text messages. Choose between GSM Alphabet, Unicode, or Automatic.

Multimedia message (MMS) settings:

- **Delivery reports:** Request a delivery report for each message sent.
- **Read reports:** Request a read report for each message sent.
- **Auto-retrieve:** allows the message system to retrieve messages automatically.

- **Roaming auto-retrieve:** allows the message system to retrieve messages automatically when roaming.
- **Creation mode:** allows you to select the creation mode (Restricted, Warning or Free).
 - **Restricted:** you can only create and submit messages with content belonging to the Core MM Content Domain.
 - **Warning:** the phone will warn you via pop up messages that you are creating a multimedia message which does not fit the Core MM Content Domain.
 - **Free:** you may add any content to the message.
- **MMS alert:** allows you to receive an alert when MMS mode becomes active.

Display:

- **Bubble style:** allows you to choose from several bubble styles for your messages. Bubbles are the rounded boxes that surround each message.
- **Background style:** allows you to choose from several background styles for your messages.
- **Split view:** enable split view on landscape screen.
- **Use the volume key:** allows you to change the text size by using the up or down volume keys.

Push message settings:

- **Push messages:** allows you to receive push messages from the network.
- **Service loading:** Select Always, Prompt or Never.

Cell Broadcast (CB) settings:

- **CB activation:** allows you to receive Cell Broadcast (CB) messages.
- **Channel configuration:** allows you to set up the channel that you will receive CB messages on.

Notifications settings:

- **Notifications:** allows you to see message notifications on your status bar.
- **Select ringtone:** allows you to set the ringtone for your message notifications.
- **Vibrate:** allows you to configure the vibration mode associated with message alerts.
- **Message alert repetition:** allows you to set the interval for new message alerts. Choose from: Once, Every 2 minutes, or Every 10 minutes.

- **Preview message:** when enabled, allows you to view a preview of new message text on the Status bar.

Signature settings:

- **Add signature:** when enabled, this feature allows you to create a signature at the end of your outgoing text messages.
- **Signature text:** allows you to enter a desired signature for your message.

Spam message settings:

- **Spam settings:** when enabled, allows you to configure available spam settings such as:
- **Add to spam numbers:** allows you to manually enter and assign a phone number as being sent from a spam source.
- **Add to spam phrases:** allows you to assign a specific text phrase as belonging to a spam message. Ex: Dear friend.
- **Block unknown senders:** when active, automatically blocks incoming messages from unknown sources or blocked numbers.

Using Email

Email enables you to review and create email using various email services. You can also receive text message alerts when you receive an important email.

Creating an Email Account

1. From the Home screen, tap **Email**  .
Your accounts screen displays with an Email setup screen displayed.
2. Enter your email address in the **Email address** field.
3. Enter your password in the **Password** field.
4. If you want to see your password as it is being typed, tap **Show password** to create a checkmark.
5. Tap **Next**.
6. At the **Account options** screen, configure the options as required.
7. Tap **Next**.
8. Enter a name for this email account (optional).
9. Tap **Done**.

Creating a Corporate Email Account

Use the following procedure to configure your phone to synchronize with a corporate email account.

1. From the Home screen, tap **Email** .
Your accounts screen displays with an Email setup screen displayed.
2. Enter your email address in the **Email address** field.
3. Enter your password in the **Password** field.
4. If you want to see your password as it is being typed, tap **Show password** to create a checkmark.
5. Tap **Manual setup**.
6. Tap the **Microsoft Exchange ActiveSync** field.
7. Enter all the Exchange server information, Domain, User name and Password, then tap **Next**.
8. At the **Activation** prompt, tap **OK**.
The **Account options** screen is displayed.
9. Enter the desired information in the different fields, then tap **Next**.
10. Enter an Account name for this account (Optional) and tap **Done**.

Wait for the Inbox to synchronize before use.

11. Press  → **Settings** to change the account settings.

Creating Additional Email Accounts

To create additional email accounts after setting up your first account, follow these steps:

1. From the Home screen, tap **Email** .
Your Email screen displays showing your emails from the active account.
2. Press  → **Settings**.
3. Tap **Add account** to add another email account.
4. Enter the information required to set up another account. For more information, refer to “*Creating an Email Account*” on page 76.

Switching Between Email Accounts

1. From the Home screen, tap **Email** .
Your Email screen displays showing your emails from the active account.
2. Tap the Inbox button  at the top of your screen.
Your Email accounts screen is displayed.

3. Tap the Email account **Inbox** you would like to switch to. You can also select **Combined inbox** which will display email messages from all accounts.
4. The new Email account is displayed.

Using Gmail

Gmail is Google's web-based email. When you first setup the phone, Gmail is configured. Depending on the synchronization settings, Gmail is automatically synchronized with your Gmail account.

Signing into Your Gmail

Note: You must sign in to your Gmail account in order to access Gmail.

1. Sign on to your Google account if you are not already signed on. For more information, refer to “*Creating a New Google Account*” on page 8.
2. From the Home screen, tap  → **Gmail** .
3. Follow the on-screen instructions.
The Inbox loads conversations and email.

Creating a Gmail Message

1. From the Gmail Inbox, tap  at the top of the screen to create a new message.
2. Enter the recipients Email address in the **To** field. Separate multiple recipient email addresses with a comma.
3. To add a carbon or blind copy, tap  and select **Add Cc/Bcc**.
4. Enter the subject of this message in the **Subject** field.
5. Tap the **Compose email** field and begin composing your message.
6. Tap  to send.

Viewing a Gmail Message

1. From the Gmail Inbox, tap a message to view it.
2. The following options are available at the top of the screen after a message has been selected:
 - **Archive**  : archives the selected message.
 - **Delete**  : deletes the message.
 - **Labels**  : allows you to attach labels to a message. This is similar to putting it in a folder.

- **Mark Unread** : after reading a message, marks as unread (Note: appears when device is held in landscape mode only).
 - **Newer**: swipe your screen to the right to see newer messages.
 - **Older**: swipe your screen to the left to see older messages.
3. Press  to select one of the following additional options:
- **Mark Unread** : after reading a message, marks as unread (Note: appears when device is held in portrait mode only).
 - **Mark important/not important**: allows you to set the importance of a message.
 - **Mute**: allows you to mute the sound in a message if applicable.
 - **Report spam**: allows you to report a message as spam. Tap the UNDO option if you change your mind.
 - **Report phishing**: allows you to report a message that you feel is trying to improperly get information from you.
 - **Settings**: displays Gmail settings that you can modify.
 - **Send feedback**: allows you to send feedback or report a problem.

- **Help**: displays the Gmail support webpage so you can search the web for help.

Other Gmail Options

1. Tap  at the top of the screen to refresh the screen, send and receive new emails, and synchronize your email with the Gmail account (Note: only appears when device is held in landscape mode).
2. Tap  at the top of the screen to set up and manage Labels for your Gmail messages.
3. Tap  at the top of the screen to search through your Gmail messages.

Google+

Google+ makes messaging and sharing with your friends a lot easier. You can set up Circles of friends, visit the Stream to get updates from your Circles, use Messenger for fast messaging with everyone in your Circles, or use Instant Upload to automatically upload videos and photos to your own private album on Google+.

1. Sign on to your Google account. For more information, refer to “Creating a New Google Account” on page 8.
2. From the Home screen, tap  → **Google+** .

3. Select the account you want to use to sign in to Google+.
– or –
Tap **Add account** to create another account.
4. Follow the on-screen instructions to use Google+.
5. Visit www.google.com/mobile/+/ for more information.

Messenger

Messenger allows you to bring groups of friends together into a simple group conversation. When you get a new conversation in Messenger, Google+ sends an update to your phone.

1. Sign on to your Google account. For more information, refer to “*Creating a New Google Account*” on page 8.
2. From the Home screen, tap  → **Messenger** .
– or –
From the Google+ application, select **Messenger**.
3. Select the account you want to use to sign in to Google+ and tap **OK**.
– or –
Tap **Add account** to create another account.

4. Follow the on-screen instructions to add or follow people.
5. Tap **Next** at the bottom of the screen.
6. At the **Messenger** screen, tap  to start a new message.
7. In the upper text field, enter a name, email address, or circle.
8. In the bottom message field, enter a message then tap .
9. From the **Messenger** screen, tap **Learn more** for more detailed information.

ChatON

Provides a global mobile communication service where you can chat with more than 2 buddies via a group chat. Share things such as pictures, videos, animation messages (Scribbles), audio, Contacts, Calendar entries, and Location information.

For more information, visit: <https://web.samsungchaton.com>.

1. From the Home screen, tap  → **ChatON** .

2. Select your country code from the drop-down list, enter your phone number in the registration box, then tap **Register**.
3. Enter the verification code sent to your device (if not automatically entered), then tap **Next**.
4. Enter your real name and tap  **OK**.
5. Follow the on-screen instructions to add a buddy and begin your chat session.

Section 7: Changing Your Settings

This section explains the settings used for customizing your device.

Accessing Settings

1. From any Home screen, tap  → **Settings** .

– or –

From any Home screen, press  → **Settings**.

Settings Tabs

The Settings are divided into 4 main groups. When the Settings screen displays, the following 4 tabs are located at the top of the screen:



Connections:

This tab allows you to see all of settings related to the connection of your device to external sources. Features include: Wi-Fi, Bluetooth, Data usage, More networks (Flight mode, Mobile networks, Tethering and portable hotspot, and VPN), NFC, S Beam, Nearby devices, Screen Mirroring, and Kies via Wi-Fi.



My device:

This tab provides access to device configuration and customization features. Features include: Lock screen, Display, LED indicator, Sound, Home screen mode, Call, Blocking mode, Power saving mode, Accessory, Accessibility, One-handed operation, Language and input, Motions and gestures, Smart screen, Air view, and Voice control.



Accounts:

This tab provides both the ability to create and modify your accounts (Samsung account, Email, Google account, etc.) and access Cloud and Backup and reset features.



More:

This tab provides access to the remaining set of device settings not listed under the other three tabs. These include Location services, Security, Application manager, Battery, Storage, Date and time, and About device.

Note: The settings for your device are described below in the order that they appear within the Settings menu. Options under the Connections tab are listed first, followed by My device, Accounts, and More settings.

Wi-Fi Settings

This section describes the Wi-Fi settings. For information on how to use Wi-Fi, see “*Wi-Fi*” on page 125.

Activating Wi-Fi

1. From the Home screen, tap  → **Settings** →  **Connections** → **Wi-Fi**.
2. Tap the ON/OFF slider, located to the right of the Wi-Fi field, to turn Wi-Fi ON .
3. Tap **Scan** to scan for available Wi-Fi networks. For more information, refer to “*Connect to a Wi-Fi Network*” on page 125.

Activating Wi-Fi Direct

Wi-Fi Direct allows device-to-device connections so you can transfer large amounts of data over a Wi-Fi connection.

1. From the Home screen, tap  → **Settings** →  **Connections** → **Wi-Fi**.

2. Tap the ON/OFF slider, located to the right of the Wi-Fi Direct field, to turn Wi-Fi Direct ON .
3. At the bottom of the Wi-Fi screen, tap the **Wi-Fi Direct** button.

For more information, refer to “*Wi-Fi Direct*” on page 127.

Advanced Wi-Fi Settings

The advanced Wi-Fi settings allow you to set up and manage wireless access points.

1. From the Home screen, tap  → **Settings** →  **Connections** → **Wi-Fi**.
2. Press  → **Advanced**.

The following options are available:

- **Network notification:** alerts you when a new WAP is available.
- **Passpoint:** allows you to connect to passpoint-enabled Wi-Fi Access Points automatically. Touch and slide the slider to the right to turn it on .
- **Keep Wi-Fi on during sleep:** allows you to specify when to disconnect from Wi-Fi.

- **Check for Internet service:** Checks if Wi-Fi internet service is available when connected to an AP (Access Point).
- **MAC address:** view your device's MAC address, required when connecting to some secured networks (not configurable).
- **IP address:** view your device's IP address.

Bluetooth settings

In this menu you can activate Bluetooth, view or assign a device name, activate your phone so other Bluetooth devices can discover it, or scan for other, available Bluetooth devices with which to pair.

Activating Bluetooth

1. From the Home screen, tap  → **Settings** →  **Connections**.
2. Tap the ON/OFF slider, located to the right of the Bluetooth field, to turn Bluetooth ON .
The Bluetooth icon  is displayed on the status bar.

Additional Bluetooth Settings

When Bluetooth is on, additional settings are available.

1. From the Home screen, tap  → **Settings** →  **Connections** → **Bluetooth**.

2. Tap **Scan** to scan for nearby discoverable devices. After searching, tap a device to pair with it. For more information, refer to *"Pairing Bluetooth Devices"* on page 130.
3. Press  and select a Bluetooth setting to configure:
 - **Visibility timeout:** Use this setting to control when to automatically turn off the Discoverable option: 2 minutes, 5 minutes, 1 hour, or Never timeout.
 - **Received files:** Shows the list of files received by using Bluetooth.
 - **Help:** Provides additional information on Bluetooth and Bluetooth settings.
4. Tap the checkbox next to **SGH-I527M** if you do not want your phone visible to other Bluetooth devices.

Data Usage

From this screen you can view your Mobile data usage and turn your Mobile data capability On or Off.

1. From the Home screen, tap  → **Settings** →  **Connections** → **Data usage**.
2. Tap **Mobile data** to create a checkmark and turn Mobile data usage on.

3. Tap **Set mobile data limit** to create a checkmark and allow a data limit to be set.
4. Touch and drag the red limit bar to the GB limit that you desire.
5. Touch and drag the orange limit bar to set a warning point.
6. Tap the **Data usage cycle** drop-down menu and select a date.

The data usage displays as a visual (chart) and also displays a list of each application with a breakdown of how much data was used per application.

Note: Data is measured by your device. Your service provider may account for data usage differently.

7. Press  to display additional options. Tap to activate.
 - **Data roaming:** enables data roaming on your device.
 - **Restrict background data:** restricts some apps and services from working unless you are connected to a Wi-Fi network.
 - **Auto sync data:** allows your accounts to automatically sync
 - **Show Wi-Fi usage:** displays a Wi-Fi tab that shows Wi-Fi usage.

- **Mobile hotspots:** displays available mobile hotspots.

More networks

This option displays additional Connectivity information.

- From the Home screen, tap  → **Settings** →  **Connections** → **More networks**.

Options display for Flight mode, Mobile networks, Tethering and portable hotspots, and VPN.

Flight mode

Flight mode allows you to use many of your phone's features, such as Camera, Games, and more, when you are in an airplane or in any other area where making or receiving calls or data is prohibited.

Important! When your phone is in Flight Mode, it cannot send or receive any calls or access online information or applications.

1. From the Home screen, tap  → **Settings** →  **Connections** → **More networks**.
2. Tap the **Flight mode** checkbox to create a checkmark and activate the feature.
3. At the **Enable Flight mode** prompt, tap **OK**.

The Flight mode icon  is displayed at the top of your screen.

Mobile networks

Before you use applications such as Google Maps and find your location or search for places of interest, you must enable the Mobile networks options.

Mobile data

To enable data access over the mobile network, this option must be selected. It is set on by default.

1. From the Home screen, tap  → **Settings** →  **Connections** → **More networks** → **Mobile networks**.
2. Tap **Mobile data** to create a checkmark and activate the feature.

Data Roaming

Data roaming allows you to connect to your service provider's partner networks and access data services when you are out of your service providers area of coverage.

1. From the Home screen, tap  → **Settings** →  **Connections** → **More networks** → **Mobile networks**.
2. Tap **Data roaming** to create a checkmark and activate the feature.

Access Point Names

To access to a wireless access point:

1. From the Home screen, tap  → **Settings** →  **Connections** → **More networks** → **Mobile networks**.
2. Tap **Access Point Names**.

A list of the Access Point names display. The active access point displays a green, filled circle to the right of the name.

Network Mode

Set the type of network connection your phone will use: LTE/WCDMA/GSM (Auto mode), WCDMA/GSM (Auto mode), WCDMA only, GSM only.

- From the Home screen, tap  → **Settings** →  **Connections** → **More networks** → **Mobile networks** → **Network mode**.

Network Operators

Using this feature you can view the current network connection. You can also scan and select a network operator manually, or set the network selection to Automatic.

Important! You must deactivate data service prior to searching for an available network.

1. From the Home screen, tap  → **Settings** →  **Connections** → **More networks** → **Mobile networks**.
2. Tap **Network operators**.
All available networks are displayed, with the current network connection at the top of the list.
3. Tap **Search networks** to manually search for all networks.
4. Tap **Select automatically** to automatically select a network connection.
5. Tap a network operator to manually register on the network.

Note: Connecting to 2G networks slows the data transfer speed and time.

Tethering & portable hotspot

This option allows you to share your phone's mobile data connection via USB or as a portable Wi-Fi hotspot.

USB tethering

1. From the Home screen, tap  → **Settings** →  **Connections** → **More networks** → **Tethering and portable hotspot**.
2. Connect your phone to your PC using a USB cable.
3. Tap **USB tethering** to add a checkmark and activate the feature. The USB tethering icon  is displayed at the top of your screen.

Mobile Hotspot

From the Home screen, tap  → **Settings** →  **Connections** → **More networks** → **Tethering and portable hotspots** → **Mobile Hotspot**.

4. Turn Mobile Hotspot on by tapping the slider so that it changes to the ON position .
- The Mobile Hotspot icon  is displayed at the top of your screen.
5. Tap **Configure**.
6. Enter or edit the Network SSID, Hide my device, Security setting, and Password.
7. Tap **Show password** and **Show advanced options** to see them displayed.

8. Tap **Save**.
9. Press  for the following option:
 - **Timeout settings:** allows you to set the time your device will be available as a portable Wi-Fi hotspot.

Connecting to Portable Wi-Fi hotspot from other devices

1. Activate Wi-Fi on the device that wants to connect to your phone.
2. Find **Galaxy_Mega_XXXX** in the Wi-Fi network list and connect to it. XXXX are four randomly generated digits that will appear when you set up a Portable Wi-Fi hotspot on your device.

The connected device can now use internet through your Portable Wi-Fi hotspot.

Note: Activating Wi-Fi and connecting to your phone will be different depending on the type of the other device.

Help

- From the **Tethering and portable hotspot** menu, tap **Help** for additional information

VPN

The VPN settings menu allows you to set up and manage Virtual Private Networks (VPNs).

Important! Before you can use a VPN you must establish and configure one.

Adding a VPN

1. Before using VPN, you must first set up a screen unlock PIN or password. For more information, refer to “*Lock Screen Settings*” on page 91.
2. From the Home screen, tap  → **Settings** →  **Connections** → **More networks** → **VPN**.
3. Tap  (**Add**).
4. Enter a name for the VPN network in the **Name** field.
5. Select a VPN type from the **Type** drop-down menu. The options are:
 - PPTP (Point-to-Point Tunneling Protocol)
 - L2TP/IPSec PSK (Layer 2 Tunneling Protocol / Internet Protocol Security Pre-Shared Key)
 - L2TP/IPSec RSA
 - IPSec Xauth PSK

- IPsec Xauth RSA
 - IPsec Hybrid RSA
6. Enter the Server address and any other required fields that are dependent upon the **Type** you entered previously.
 7. Tap the **Show advanced options** check box to display additional VPN options.
 8. Tap **Save** to save your VPN settings.

NFC

NFC (Near Field Communication) allows data exchange when you touch your device with another compatible device. This is used for applications such as Android Beam and S Beam.

To activate NFC, follow these steps:

1. From the Home screen, tap  → **Settings** →  **Connections** → **NFC**.
2. Tap the ON/OFF slider, located to the right of the NFC field, to turn NFC ON .

Android Beam

When Android Beam is activated, you can beam app content to another NFC-capable device by holding the devices close together. You can beam browser pages, YouTube videos, contacts, and more.

1. From the Home screen, tap  → **Settings** →  **Connections** → **NFC** → **Android Beam**.
2. Tap the **OFF / ON** slider to turn Android Beam ON .
3. Touch the back of your device with another NFC-capable device and the content is transferred.

S Beam

When S Beam is activated, you can beam files to another NFC-capable device by holding the devices close together. You can beam images and videos from your Gallery, music files from your Music app, and more.

1. From the Home screen, tap  → **Settings** →  **Connections** → **S Beam**.
2. Tap the **OFF / ON** icon to turn S Beam on .
3. Touch the back of your device with another NFC-capable device and the content is transferred.

Nearby devices

This option allows you to share your media files with nearby devices using DLNA and connected to the same Wi-Fi.

1. Connect to a Wi-Fi network. For more information, refer to *“Activating Wi-Fi” on page 83*.
2. From the Home screen, tap  → **Settings** →  **Connections** → **Nearby devices**.
3. Tap the **File sharing** checkbox to create a checkmark and activate File sharing.
4. Verify  (**Nearby devices**) appears at the top of the screen.
5. At the Nearby devices prompt, tap **OK**.
6. Tap **Shared contents**, then check the media you would like to share. Tap **OK**.
7. Tap **Allowed devices list**, then select the connected devices you would like to allow.
8. Tap **Not-allowed devices list**, then select the connected devices you would like to not allow.
9. Tap **Download to**, then select the destination of any downloaded (shared) content. Choose from Device or SD card.

10. Tap **Upload from other devices**, then select the actions you'll take when you upload content from other devices. Choose from either Always accept, Always ask, or Always reject.

Screen Mirroring

The Screen Mirroring feature allows you to share the media files on your device screen with an HDMI device such as an HDMI TV.

Note: This feature requires the optional AllShare Cast dongle which is available as an accessory. See your Customer Service Representative for more information.

1. From the Home screen, tap  → **Settings** →  **Connections** → **Screen Mirroring**.
2. Connect the AllShare Cast dongle to the HDMI device using an HDMI A-to-A cable.
3. Press  → **Help** for information on using Screen Mirroring.

Kies via Wi-Fi

Kies via Wi-Fi allows you to sync your PC wirelessly with your device provided they are both on the same Wi-Fi network. You can view and share videos, photos, music, ringtones, and more.

1. From your PC, download the Samsung Kies application if you don't already have it. You can find it at samsung.com.
2. From your PC, launch the Samsung Kies application.
3. From your PC, connect to a Wi-Fi network.
4. From the Home screen, tap  → **Settings** →  **Connections** → **Kies via Wi-Fi**.
5. From your device, connect to the same Wi-Fi network that your PC is connected to if you have not already done so. For more information, refer to “*Connect to a Wi-Fi Network*” on page 125.

Lock Screen Settings

Choose settings for unlocking your screen. For more information about using the lock and unlock features, see “*Locking and Unlocking the Touch Screen*” on page 5.

Screen Lock

1. From the Home screen, tap  → **Settings** →  **My device** → **Lock screen**.
2. Tap **Screen lock** for these options then follow the on-screen instructions to set up your Screen lock:
 - **Swipe**: Swipe the screen to unlock it.
 - **Face unlock**: Look at your phone to unlock it.
 - **Face and voice**: Look at your phone and speak to unlock.
 - **Pattern**: A screen unlock pattern is a touch gesture you create and use to unlock your device. Follow the prompts to create or change your screen unlock pattern.
 - **PIN**: Select a PIN to use for unlocking the screen.
 - **Password**: Create a password for unlocking the screen.
 - **None**: No pattern, PIN, or password is required. The screen will never lock.

Lock screen options

Activate or deactivates various Unlock screen functions.

Note: The Lock screen options will differ depending on what type of Screen Lock you have selected in step 2.

1. From the Home screen, tap  → **Settings** →  **My device** → **Lock screen**.
2. The following options are available depending on the Screen Lock type that you have selected:

Swipe options

- **Multiple widgets** allows you to display multiple widgets on your lock screen. Appears as an options after a lock mode is enabled.
- **Lock screen widgets** allows you to lock the widgets that are displayed on your home screens.
- **Shortcuts** sets shortcuts to appear at the bottom of the Lock screen. Touch and slide the slider to the right to turn it on .
- **Unlock effect** sets the effect you receive when unlocking the phone. You can select None, Ripple effect, or Light effect.
- **Help text** shows help information on the Lock screen.
- **Wake up in lock screen** requires that you say a command to wake-up your phone.
- **Set wake-up command** designates your wake-up commands. Tap Set wake-up command and follow the on-screen prompts to create a new verbal command.

Face unlock options

- **Lock screen widgets** allows you to lock the widgets that are displayed on your home screens.
- **Improve facial recognition** allows you to improve your device's face matching capability by capturing your face in different lighting, with or without glasses, and bearded or clean-shaven. Follow the on-screen instructions.
- **Presence check** requires that you blink when using the Face unlock feature. This will increase the security of the feature.
- **Make pattern visible** allows you to see the pattern as you draw it.
- **Lock automatically** locks the screen 5 seconds after the screen automatically turns off.
- **Lock instantly with power key**: screen locks when power key is pressed to turn screen off.

Pattern options

- **Lock screen widgets** allows you to lock the widgets that are displayed on your home screens.
- **Make pattern visible** allows you to see the pattern as you draw it.

- **Lock automatically** locks the screen 5 seconds after the screen automatically turns off.
- **Lock instantly with power key:** screen locks when power key is pressed to turn screen off.

PIN and Password options

- **Lock screen widgets** allows you to lock the widgets that are displayed on your home screens.
- **Lock automatically** locks the screen 5 seconds after the screen automatically turns off.
- **Lock instantly with power key:** screen locks when power key is pressed to turn screen off.

Display Settings

In this menu, you can change various settings for the display.

- From the Home screen, tap  → **Settings** →  **My device** → **Display**.

The following options display:

- **Wallpaper:** allows you to set the Wallpaper for your Home screen, Lock screen, or both. For more information, refer to “Changing the Wallpaper” on page 28.

- **Notification panel:** allows you to set the brightness of your notification panel and also select the quick setting buttons that you want to display at the top of the notification panel. For more information, refer to “Notification Bar” on page 29.
- **Multi window:** tap this option to enable/disable the automatic Multi window feature.
- **Screen mode:** allows you to select from several different color modes.
- **Brightness:** configures the LCD Brightness levels. Tap Automatic brightness to allow the phone to self-adjust or drag the slider and tap OK.
- **Auto-rotate screen:** allows you to switch the display orientation automatically when you rotate the phone.
- **Screen timeout:** adjusts the delay time before the screen automatically turns off. Selections are: 15 seconds, 30 seconds, 1 minute, 2 minutes, 5 minutes, 10 minutes and 30 minutes.
- **Daydream:** allows you to control what your screen does when your device is docked or sleeping. Tap the OFF / ON icon next to Daydream to turn it on . Follow the on-screen instructions.

- **Font style:** allows you to set the font style that your phone will use. You can also tap Get fonts online to choose from a wider selection.
- **Font size:** allows you to select which size of font is displayed.
- **Increase legibility:** enhance the clarity of text.
- **Touch key light duration:** allows you to adjust the delay before the Touch key light automatically turns off.
- **Display battery percentage:** allows you to see the battery charge percentage next to the battery charge icon at the top of the display.
- **Edit after screen capture:** allows you to go edit a screen immediately after taking a screen capture.

LED indicator

This option allows you to turn on your LED lights for charging, missed events, and incoming notifications. The light will turn on by default unless you turn them off.

- From the Home screen, tap  → **Settings** →  **My device** → **LED indicator**.
- 3. Tap the following LED indicator options to turn them on or off:

- **Charging:** LED lights up when the device is connected to the charger.
- **Low battery:** LED lights up when the battery level is low.
- **Notifications:** LED lights up when you have missed calls, messages, or application events.
- **Voice recording:** LED lights up when you are recording voice. The LED only lights up when the screen is off.

Sound Settings

From this menu you can control the sounds on the phone.

- From the Home screen, tap  → **Settings** →  **My device** → **Sound**.

The following options display:

Volume

The Volume option allows you to change the volume for all phone sounds in one easy location.

1. From the Home screen, tap  → **Settings** →  **My device** → **Sound** → **Volume**.
2. Touch and drag the slider to adjust the sound volume for Media, Ringtone, Notifications, and System.
3. Tap **OK**.

Vibration intensity

Vibration intensity allows you to select how intense the vibration is for different options.

1. From the Home screen, tap  → **Settings** →  **My device** → **Sound** → **Vibration intensity**.
2. Touch and drag the slider to adjust the Vibration intensity for Incoming call, Notification, and Haptic feedback.

Ringtones

This option allows you to set the ringtone.

1. From the Home screen, tap  → **Settings** →  **My device** → **Sound**.
2. Tap **Ringtones**.
3. Tap a ringtone and tap **OK**.
– or –
Tap **Add** to select a file from your music files.

Vibrations

This option allows you to set your phone to vibrate and ring.

1. From the Home screen, tap  → **Settings** →  **My device** → **Sound**.

2. Tap **Vibrations**.
3. Select a vibration pattern and tap **OK**.
– or –
Tap **Create** and follow the on-screen instructions to create your own vibration.

Default notification sound

This option allows you to set the ringtone that will sound for notifications and alarms.

1. From the Home screen, tap  → **Settings** →  **My device** → **Sound**.
2. Tap **Default notification sound**.
3. Tap a ringtone and tap **OK**.

Vibrate when ringing

This option allows you to enable your phone to vibrate whenever it rings.

1. From the Home screen, tap  → **Settings** →  **My device** → **Sound**.
2. Tap **Vibrate when ringing** to create a checkmark and enable the feature.

System Tone Settings

The System tone settings are used when you use the dialing pad, make a screen selection, lock your screen, or tap the screen.

1. From the Home screen, tap  → **Settings** →  **My device** → **Sound**.
2. Tap any of the following options to create a checkmark and activate the feature:
 - **Dialling keypad tone**: makes a sound when you tap a key on the keyboard.
 - **Touch sounds**: makes a sound when you touch the screen.
 - **Screen lock sound**: makes a sound when your screen is locked or unlocked.
 - **Haptic feedback**: makes a vibration when you tap soft keys and on certain UI interactions.

Adapt sound

The Adapt sound feature allows you to customize your call sounds.

1. From the Home screen, tap  → **Settings** →  **My device** → **Sound** → **Adapt sound**.
2. Read the instructions and tap **Start**.

3. Follow the on-screen instructions to set up your personal call sound.

Home screen mode

Home screen mode allows you to set your display to the conventional layout of **Standard mode** or provide an easier user experience for the first-time smartphone users using **Easy mode**.

1. From the Home screen, tap  → **Settings** →  **My device** → **Home screen mode**.
2. Tap the pull-down dropbox and select one of the following options:
 - **Standard mode**: provides conventional layout for the apps and widgets on your home screens.
 - **Easy mode**: provides easier user experience for first-time smartphone users on the home screens.
3. Tap **Apply**.

Call Settings

To access the Call settings menu:

- From the Home screen, tap  → **Settings** →  **My device** → **Call**.
– or –

- From the Home screen, tap  →  → **Call settings**.

Call rejection

1. From the Home screen, tap  → **Settings** →  **My device** → **Call** → **Call rejection**.
2. Tap **Auto reject mode** and tap one of the following options:
 - **Off**: to turn Auto reject mode off.
 - **All numbers**: to reject all calls.
 - **Auto reject numbers**: to reject all calls in your Reject list.
3. Tap **Auto reject list**.
4. Tap  to manually add numbers to the Reject list.
5. Tap **Unknown**, to create a checkmark and automatically reject all calls that are not in your Contacts list.

Set rejection messages

1. From the Home screen, tap  → **Settings** →  **My device** → **Call** → **Set up call reject messages**.
2. Tap  to manually add a reject message.
– or –

Tap one of the pre-written messages to be displayed when you want the call to be rejected. You can edit the message if desired.

3. Tap **Save** to save the reject message.

Answering/ending calls

1. From the Home screen, tap  → **Settings** →  **My device** → **Call** → **Answering/ending calls**.
2. The following options are available:
 - **The home key answers calls**: Tap this option to be able to accept incoming calls by pressing the Home key.
 - **Voice control**: Tap this option to be able to accept incoming calls by using your voice.
 - **The power key ends calls**: This option will allow you to end a call by pressing the power key without turning off the screen.

Turn off screen during calls

This option turns on the proximity sensor during calls so that your phone will know to turn the screen off to save power.

- From the Home screen, tap  → **Settings** →  **My device** → **Call** → **Turn off screen during calls** to create a checkmark and enable the feature.

Call alerts

1. From the Home screen, tap  → **Settings** →  **My device** → **Call** → **Call alerts**.
2. Tap the following options to create a checkmark and activate the features:
 - **Answer vibration:** enables your phone to vibrate when the called party answers the phone.
 - **Call end vibration:** enables your phone to vibrate when the call ends.
 - **Call connect tone:** plays a tone when a call is connected.
 - **Minute minder:** beeps twice every minute that you are on a call.
 - **Call end tone:** plays a tone when a call is ended.
 - **Alerts during calls:** turns on alarm and message notifications during a call.

Call Accessories

1. From the Home screen, tap  → **Settings** →  **My device** → **Call** → **Call accessories**.
2. The following options are available:
 - **Automatic answering:** configures the device to automatically answer an incoming call when a headset is detected.

- **Automatic answering timer:** configures the time delay before the device automatically accepts an incoming call.
- **Outgoing call conditions:** allows you to make calls even when the device is locked.

Additional settings

1. From the Home screen, tap  → **Settings** →  **My device** → **Call** → **Additional settings**.
2. Tap one of the following options:
 - **Caller ID:** allows you to choose how your Caller ID will be displayed. Select Network default, Hide number, or Show number.
 - **Call forwarding:** allows you to forward your calls to another number.
 - **Auto area code:** allows you to automatically prepend a specific area code to all outbound calls.
 - **Call barring:** allows automatically blocking All outgoing calls, International calls, Int'l (International) calls except home, All incoming calls, or Incoming when roaming.
 - **Call waiting:** the network service informs you when someone is trying to reach you during another call. Tap to activate.

- **Auto redial:** automatically redials the last number if the call was either cut off or was unable to connect. Tap to activate.
- **Fixed Dialling Numbers:** allows you to restrict outgoing calls to a limited set of phone numbers.

Using Fixed Dialling Numbers

Enabling FDN

1. From the Home screen, tap  → **Settings** →  **My device** → **Call** → **Additional settings** → **Fixed Dialling Numbers**.
2. Tap **Enable FDN**.
3. At the prompt, enter your PIN2 code and tap **OK**.
FDN is enabled.
4. To enable FDN after it has been disabled, tap **Disable FDN**, enter your PIN2 code and tap **OK**.

Important! Not all SIM cards use a PIN2 code. If your SIM card does not, this menu does not display.
The PIN2 code is provided by your carrier. Entering an incorrect PIN2 code could cause the phone to lock. Contact customer service for assistance.

Changing the PIN2 Code

1. From the Home screen, tap  → **Settings** →  **My device** → **Call** → **Additional settings** → **Fixed Dialling Numbers**.
2. Tap **Change PIN2**.
3. At the prompt, enter your old PIN2 code.
4. At the prompt, enter a new PIN2 code.
5. Confirm your PIN2 code.

Managing the FDN List

When this feature is enabled, you can make calls only to phone numbers stored in the FDN list on the SIM card.

Note: Before you can manage an FDN list a list must be created.

1. From the Home screen, tap  → **Settings** →  **My device** → **Call** → **Additional settings** → **Fixed Dialling Numbers**.
2. Tap **FDN list**.
3. A list of all existing FDN numbers will be displayed.

Ringtones and keypad tones

1. From the Home screen, tap  → **Settings** →  **My device** → **Call** → **Ringtones and keypad tones**.
2. Tap **Ringtones**, select a ringtone, and tap **OK**.
3. Tap **Vibrations**, select a vibration type, and tap **OK**.
4. Tap **Vibrate when ringing** to create a checkmark if you want your phone to vibrate when a call is incoming.
5. Tap **Keypad tones** to create a checkmark if you want tones to play when the keypad is pressed.

Personalize call sound

This option allows you to personalize the sounds you hear during a call with and without earphones.

1. From the Home screen, tap  → **Settings** →  **My device** → **Call** → **Personalise call sound**.
2. At the Personalise call sound display, tap one of the following options:
 - **In-call sound EQ**: set in-call sound equalization
 - **Off**: turns off your customized call sound and plays the default sounds.
 - **Soft sound**: plays a softer sound when the other party is in a noisy environment.

- **Clear sound**: plays a clearer sound when the other party sounds unclear or muffled.
- **Adapt sound left/right**: allows you to customize your sounds. Follow the on-screen instructions to set up your personal call sound.
- **Adapt Sound**: customize your sound level for calls and music.

Noise reduction

This option helps to suppress background noise from your side during a call.

- From the Home screen, tap  → **Settings** →  **My device** → **Call** → **Noise reduction** to create a checkmark and enable the feature.

Increase volume in pocket

This option increases the ringtone volume when the device is in a pocket or a bag. It uses the proximity sensor to detect its location.

- From the Home screen, tap  → **Settings** →  **My device** → **Call** → **Increase volume in pocket** to create a checkmark and enable the feature.

Vicemail service

1. From the Home screen, tap  → **Settings** →  **My device** → **Call** → **Vicemail Service**.
Voicemail service provided by your carrier is the default.
2. Tap **My carrier** to remove the carrier Voicemail service.

Vicemail settings

You can view or modify your voicemail number from this menu.

1. From the Home screen, tap  → **Settings** →  **My device** → **Call** → **Vicemail settings**.
2. Tap the **Voice mail number** field, backspace to erase the digits, and enter a new voicemail number using the keypad, then tap **OK**.
3. Tap **OK**.

Sound

You can select a unique ringtone for Voicemail alerts.

1. From the Home screen, tap  → **Settings** →  **My device** → **Call** → **Sound**.
2. Tap a ringtone to hear it played.
3. Select a ringtone and tap **OK**.

Vibrate

This option allows you select vibration settings for Voicemail alerts.

1. From the Home screen, tap  → **Settings** →  **My device** → **Call**.
2. Tap **Vibrate** to create a checkmark and activate the Vibrate feature.

Internet call settings

Accounts

1. From the Home screen, tap  → **Settings** →  **My device** → **Call** → **Accounts**.
2. Tap **Receive incoming calls** to enable reception of incoming Internet calls.

Use Internet calling

Choose when to use Internet calling.

1. From the Home screen, tap  → **Settings** →  **My device** → **Call** → **Use Internet calling**.
2. Select **For all calls when mobile network available**, **Only for Internet calls**, or **Ask for every call**.

Blocking Mode

When Blocking mode is enabled, notifications for selected features will be disabled. You will only receive notifications of incoming calls from people on your allowed list.

1. From the Home screen, tap  → **Settings** →  **My device** → **Blocking mode**.
2. In a single motion touch and slide the **Blocking mode** slider to the right to turn it on  .
Confirm that the Blocking mode active icon  appears in the Status bar.
3. Place a green checkmark adjacent to those features you would like to enable. Choose from: Block incoming calls, Disable notifications, Disable alarm and timer, Turn off LED indicator.
4. Configure a timeframe for these features to be active. Remove the checkmark from the **Always** field to configure the **From** and **To** time fields.

5. Tap **Allowed contacts** to assign those contacts that are exempted from these rules. Choose from None, All contacts, Favourites, or Custom. Allowed contacts will then appear in the **Allowed contact list**.

Power saving mode

Power saving mode allows you to manage your phone to conserve power.

1. From the Home screen, tap  → **Settings** →  **More** → **Power saving mode**.
2. Tap the **OFF / ON** icon next to **Power saving mode** to turn Power saving mode on  .
3. Tap the following options to create a checkmark and conserve power:
 - **CPU power saving**: allows you to limit the maximum performance of the CPU.
 - **Screen power saving**: allows you to lower the screen power level.
 - **Turn off haptic feedback**: allows you to turn off vibration when you tap or touch the screen.
4. Tap **Learn about Power saving mode** to learn about various ways to conserve battery power.

Accessory Settings

This menu allows you to select the Audio output mode when using a car or desk dock.

1. From the Home screen, tap  → **Settings** →  **My device** → **Accessory**.
2. Tap **Dock sound** to play sounds when inserting or removing the phone from the dock.
3. Tap **Audio output mode** to use the external dock speakers when the phone is docked.
4. Tap **Desk home screen display** to display the desk home screen whenever the phone is docked.
5. Tap **Automatic unlock** if you are using a phone cover and you want your phone to unlock when you open the cover.
6. Tap **Audio output** to set your Audio output to Stereo or Surround.

Accessibility

Accessibility services are special features to make using the device easier for those with certain physical disabilities. Use the Accessibility settings to activate these services.

Note: You can download accessibility applications from Play Store and manage their use here.

1. From the Home screen, tap  → **Settings** →  **My device** → **Accessibility**.
2. The following options are available:
 - **Auto-rotate screen:** automatically rotate the screen from landscape to portrait when you rotate your phone.
 - **Screen timeout:** timeout the accessibility feature after a defined amount of time.
 - **Lock automatically:** lock the screen after the selected amount of inactivity time. Note: Secured lock time option only appears after you set a Screen Lock other than Swipe or None. (see “*Lock Screen Settings*” on page 91).
 - **Speak passwords:** reads out password information.
 - **Answering/ending calls:** accept incoming calls by pressing the home key or end calls using the power key.
 - **Show shortcut:** allow the accessibility shortcut under the device options to be used by pressing and holding the power key.

- **Manage accessibility:** save and update your accessibility settings or share them with another device. You can export your settings, import a previously saved file, or share your file with another device.
- **TalkBack:** activate the TalkBack feature.

Note: TalkBack, when installed and enabled, speaks feedback to help blind and low-vision users.

- **Font size:** change the size of the fonts used on the device within menus, options, etc. Choose from: Tiny, Small, Normal, Large, or Huge.
- **Magnification gestures:** use exaggerated gestures such as triple-tapping, double pinching, and dragging two fingers across the screen.
- **Negative colours:** reverse the display of on-screen colours from White text on a Black background to Black text on a White background.
- **Colour adjustment:** allows you to adjust the display colours if you are colour blind and have difficulty reading the display because of the colours. Touch and slide the slider to the right to turn it on . Follow the on-screen instructions.

- **Accessibility shortcut:** allows you to quickly enable accessibility features in 2 quick steps. Touch and slide the slider to the right to turn it on . Follow the on-screen instructions.
- **Text-to-speech options:** allows you to adjust your text-to-speech settings. For more information, refer to “*Speech Settings*” on page 108.
- **Enhance web accessibility:** allows apps to install scripts from Google that make their Web content more accessible. Tap Allow.
- **Sound balance:** allows you to use the slider to set the Left and Right balance when using a stereo device.
- **Mono audio:** allows you to enable stereo audio to be compressed into a single mono audio stream for use with a single earbud/earphone.
- **Turn off all sounds:** allows you to mute every sound made by the device during taps, selections, notifications, etc.
- **Flash notification:** allows you to set your camera light to blink whenever you receive a notification.

- **Assistant menu:** allows you to improve the device accessibility for users with reduced dexterity. Touch and slide the slider to the right to turn it on . Follow the on-screen instructions.
- **Tap and hold delay:** allows you to select a time interval for this action. Choose from: Short, Medium, or Long.
- **Interaction control:** allows you to enable or disable motions and screen timeout. You can also block areas of the screen from touch interaction. Touch and slide the slider to the right to turn it on . Follow the on-screen instructions.

One-handed operation

Enable one-handed operation.

1. From the Home screen, tap  → **Settings** →  **My device** → **One-handed operation**.
 - **Keypad and in-call buttons:** Adjust the position of the dialing keypad and in-call buttons.
 - **Calculator:** adjust calculator position.
 - **Unlock pattern:** adjust the scale of the unlock pattern.
 - **Learn about one-handed operation:** a tutorial on one-handed operation.

Language and input

This menu allows you to configure the language in which to display the menus. You can also set on-screen keyboard options.

Language

You can change the language used by your device by following these steps:

1. From the Home screen, tap  → **Settings** →  **My device** → **Language and input** → **Language**.
2. Tap a language from the list.

Keyboards and Input Methods

You can change the keyboard used by your device by following these steps:

1. From the Home screen, tap  → **Settings** →  **My device** → **Language and input**.
2. Tap **Default** and select a keyboard.
Samsung keyboard is the only pre-installed keyboard.
3. Tap **Set up input methods**.
4. Tap the  icon next to the input method that you would like to configure the settings for.

5. Based on your selection of input method, the appropriate settings will appear and are explained below.

Google voice typing settings

From this menu you can set Samsung keyboard options.

1. From the Home screen, tap  → **Settings** →  **My device** → **Language and input**.
2. Tap the  icon next to **Google voice typing**.
3. The following options are available:
 - **Choose input languages:** tap on a language that you want to input. Select Automatic to use the local language or select a language from the list.
 - **Block offensive words:** tap to create a checkmark and enable the blocking of recognized offensive words from the results of your voice-input Google typing.
 - **Download offline speech recognition:** Enables voice input while offline.

Samsung Keyboard settings

From this menu you can set Samsung keyboard options.

1. From the Home screen, tap  → **Settings** →  **My device** → **Language and input**.

2. Tap the  icon next to **Samsung keyboard**.
 - **Alphabets** allows you to choose a keyboard configuration for text entry (Qwerty keyboard [default] or 3x4 keyboard).
 - **Numbers and symbols** allows you to choose a keyboard configuration for number and symbol entry (Qwerty keyboard [default] or 3x4 keyboard).
 - **Input languages** sets the input language. Tap a language from the available list. The keyboard is updated to the selected language.
 - **Predictive text** enables predictive text entry mode. This must be enabled to gain access to the advanced settings. Touch and hold to access the advanced settings. Touch and slide the slider to the right to turn it on .
 - **Continuous input** allows you to type words by swiping between on-screen keys.
 - **Cursor control** allows you to move the cursor by sliding your finger across the keyboard.
 - **Key-tap vibration:** enables vibration feedback when you tap an on-screen key.
 - **Key-tap sound:** enables auditory feedback when you tap an on-screen key.

- **Handwriting** enables the device to recognize on-screen handwriting and convert it to text.
- **Advanced** displays the following advanced options:
 - **Auto capitalisation** automatically capitalizes the first letter of the first word in each sentence (standard English style).
 - **Auto spacing** automatically inserts spaces between words.
 - **Auto-punctuate** automatically inserts a full stop in a sentence by tapping the space bar twice when using the on-screen QWERTY keyboard.
 - **Character preview** provides an automatic preview of the current character selection within the text string. This is helpful when multiple characters are available within one key.
- **Help** launches a brief on-screen tutorial covering the main concepts related to the Samsung keyboard.
- **Reset settings** resets the keyboard settings back to their original configuration.

Predictive Text Settings

From this menu you can set Predictive Text settings.

1. From the Home screen, tap  → **Settings** →  **My device** → **Language and input**.
2. Tap the  icon next to **Samsung keyboard**.

3. Tap the ON/OFF slider, located to the right of the Predictive text field, to turn it ON .
4. Tap **Predictive text**.
5. The following options are available:
 - **Auto replacement:** Complete or replace the word you are typing by the most probable word when you tap the space bar or a punctuation mark.
 - **Personalised data:** allows you to use personal language that you have added to make your prediction results better.
 - **Learn from Facebook:** allows you to login to your Facebook account so your phone can learn your Facebook style.
 - **Learn from Gmail:** allows you to login to your Gmail account so your phone can learn your Gmail style.
 - **Learn from Twitter:** allows you to login to your Twitter account so your phone can learn your Twitter style.
 - **Learn from Messaging:** allows your device to learn from your Messages.
 - **Learn from Contacts:** allows your device to learn from your Contacts.
 - **Clear remote data:** deletes anonymous data that is stored on the personalization server.

- **Clear personalised data:** removes all personalized data that you have entered.
- **Privacy policy:** click the link to read the privacy policy. Follow the on-screen instructions.

Speech Settings

This menu allows you to set the speech settings for Voice input.

1. From the Home screen, tap  → **Settings** →  **My device** → **Language and input**.
2. Tap **Voice search** to configure the following:
 - **Language:** Choose a language for your voice input.
 - **Speech output:** Sets whether you will use speech output always or only when using hands-free.
 - **Block offensive words:** Enable or disable blocking of recognized offensive words from the results of your voice-input Google searches.
 - **Download offline speech recognition:** Enables voice input while offline.
 - **Bluetooth headset:** allows you to record audio through a Bluetooth headset if available.

3. Tap **Text-to-speech options** and select **Google Text-to-speech Engine** or **Samsung text-to-speech engine**.
4. Tap  next to the preferred TTS engine configure the following settings:
 - **Language:** allows you to set the language for spoken text.
 - **Settings for Google Text-to-speech Engine:** allows you to view Open Source Licenses.
 - **Settings for Samsung text-to-speech engine** allows you to view Open Source Licenses.
 - **Install voice data:** allows you to install voice data for speech synthesis.
5. Scroll down to the **General** section to access the following options:
 - **Speech rate:** Set the speed at which the text is spoken.
 - **Listen to an example:** Play a sample of speech synthesis (available if voice data is installed).

Pointer speed

This option sets your Pointer speed.

1. From the Home screen, tap  → **Settings** →  **My device** → **Language and input**.

2. Tap **Pointer speed** then drag the slider to the right to go faster or to the left to go slower.
3. Tap **OK** to save your setting.

Motions and Gestures

The Motions and Gestures settings allow you to set up various Motion activation services. For more information on using gestures, see “Using Motions and Gestures” on page 19.

- From the Home screen, tap  → **Settings** →  **My device** → **Motions and gestures**.

Motion

Motion allows you to control your device by performing natural movements.

1. From the Motions and gestures screen, tap **Motion**.
2. Tap the ON/OFF icon  at the top of your screen to activate Motion.
3. The following options are available:
 - **Direct call:** Once enabled, the device will dial the currently displayed on-screen Contact entry as soon as you place the device to your ear. Tap the ON/OFF icon  to turn it on.

- **Smart alert:** Once enabled, pickup the device to be alerted and notified of you have missed any calls or messages. Tap the ON/OFF icon  to turn it on.
 - **Zoom:** Once enabled, you must be on a screen where content can be zoomed. In a single motion, touch and hold two points on the display then tilt the device back and forth to zoom in or out. Tap the ON/OFF icon  to turn it on.
 - **Move an icon:** Once enabled, touch and hold a desired on-screen icon to move it to another page. Move the device left or right to move to other pages. Tap the ON/OFF icon  to turn it on.
 - **Browse an image:** Once enabled, touch and hold a desired on-screen image to pan around it. Move the device left or right to pan vertically or up and down to pan horizontally. Tap the ON/OFF icon  to turn it on.
 - **Mute/Pause:** Once enabled, mute incoming calls and any playing sounds by turning the device display down on a surface. Tap the ON/OFF icon  to turn it on.
4. Press  → **Help** for additional information.

Palm motion

Palm motion allows you to control your device by touching your screen with the palm of your hand.

1. From the Motions and gestures screen, tap **Palm motion**.
2. Tap the ON/OFF icon  at the top of your screen to activate Palm motion.
3. The following options are available:
 - **Capture screen:** Once enabled, you can capture any on-screen information swiping across the screen. In a single motion, press the side of your hand on the screen and swipe from left to right. The image is then copied to the clipboard. Tap the ON/OFF icon  to turn it on.
 - **Mute/Pause:** Once enabled, you can pause any on-screen video or mute any current sound by simply covering the screen with your hand. Once you remove your hand from the screen, the device goes back to normal by either continuing to play the current video or unmuting the current sound. Tap the ON/OFF icon  to turn it on.
4. Press  → **Help** for additional information.

Gyroscope calibration

Gyroscope calibration allows you to calibrate motion correctly using the device's built-in gyroscope.

1. From the Motions and gestures screen, tap **Gyroscope calibration**.
2. Place your device on a flat surface.
3. Tap **Calibrate**.
4. When finished, **Calibrated** will appear on your screen. Tap  to return to the previous screen.

Smart screen

The Smart screen options allow you to customize your screen settings to make the screen more responsive and easier to use.

1. From the Home screen, tap  → **Settings** →  **My device** → **Smart screen**.
2. Tap the following option to create a checkmark and activate the feature:
 - **Smart stay:** disables the screen timeout if your phone detects that your face is watching the screen.

Air view

With the Air view feature, you can hover your finger over the screen and Air view features will be displayed. For example, you can hover your finger over a scheduled item in your calendar to see more details.

1. From the Home screen, tap  → **Settings** →  **My device** → **Air view**.
2. Tap the ON/OFF icon  at the top of your screen to activate Air view.
3. The following options are available. Tap an option to create a checkmark and activate the feature.
 - **Information preview:** allows you to see information previews, extended text, and enlarged images when you hover your finger over the screen.
 - **Progress preview:** allows you to preview a scene or show elapsed time when you hover your finger over the progress bar while watching a video.
 - **Speed dial preview:** allows you to see the contacts and their speed dial numbers when you hover your finger over them in your contacts list.

- **Webpage magnifier:** allows you to see magnified links on webpages when you hover your finger over them.
- **Sound and haptic feedback:** allows you to play sound and feel vibration when you hover your finger over Air view items.

Voice control

The Voice control settings allow you to set up voice commands to control your device.

1. From the Home screen, tap  → **Settings** →  **My device** → **Voice control**.
2. Tap the ON/OFF icon  at the top of your screen to activate Voice control.
3. The following options are available. Tap an option to create a checkmark and activate the feature.
 - **Incoming calls:** allows you to answer or reject calls using the commands **Answer** and **Reject**.
 - **Alarm:** allows you to stop or snooze an alarm by using the commands **Stop** and **Snooze**.
 - **Camera:** allows you to take pictures using the voice commands **Capture**, **Shoot**, **Smile**, or **Cheese**.

- **Music:** allows you to control your Music app using the voice commands **Next**, **Previous**, **Play**, **Pause**, **Volume Up**, and **Volume Down**.

Note: If you set the alert type for calls or alarms to vibration, voice control will not be available.

Add Account

This menu allows you to set up, manage, and synchronize accounts, including your Google and email accounts.

Adding an Account

1. From a Home screen, tap  → **Settings** →  **Accounts** → **Add account**.
2. Tap one of the account types.
3. Use the keyboard and follow the prompts to enter your credentials and set up the account.

A green circle will appear next to the account type once you have created an account. Your email account will also be displayed in the **My accounts** section of the main Accounts menu.

Removing an Account

Important! Removing an account also deletes all of its messages, contacts, and other data from the device.

1. From a Home screen, tap  → **Settings** →  **Accounts**.
2. In the **My accounts** section, tap the account type.
3. Tap the account name.
4. At the bottom of the screen, tap **Remove account**, then tap **Remove account** at the prompt to remove the account and delete all its messages, contacts, and other data.

Synchronizing Accounts

Select the items you want to synchronize on your account such as Books, Calendar, Contacts, and more.

1. From a Home screen, tap  → **Settings** →  **Accounts**.
2. Tap the account type.
3. Tap the account name.

4. Tap the Sync items that you want to synchronize to add a checkmark in the selection box then tap **Sync now** to synchronize your account.

Cloud

Back up your personal data using your Samsung Account or use a Dropbox account to sync your device content.

1. From a Home screen, tap  → **Settings** →



Accounts → **Cloud**.

2. Under **Personal data management**:

If you have not signed in to your Samsung Account, touch **Add account**.

If you have signed in to your Samsung Account:

- Touch your Samsung Account to manage your sync settings or remove your Samsung Account.
- Touch **Storage usage** to check total memory used.
- Touch **Sync settings** to sync your calendar, contacts, Internet, and S Note settings with your Samsung Account.
- Touch **Backup** to manage your back up options.
- Touch **Restore** to manage your restore options.

3. Under **Contents sync (with Dropbox)**:

- Touch **Link Dropbox account** to set up your Dropbox account and sync device content.

Back up and reset

The Back up and reset settings allow you to back up your data, back up accounts, automatically restore your phone, and reset your phone settings to the factory settings.

Back Up My Data

By setting this option, the Google server will back up all of your settings and data.

1. From the Home screen, tap  → **Settings** →  **Accounts** → **Back up and reset**.
2. Tap **Back up my data** to enable or disable back up of application data, Wi-Fi passwords, and other settings to the Google server.

Backup Account

If you have enabled the **Back up my data** option, then the **Backup account** option is available.

1. From the Home screen, tap  → **Settings** →  **Accounts** → **Back up and reset**.

2. Tap **Backup account** and tap your Google Gmail account or tap **Add account** to set your Google Gmail account to be backed up to the Google server.

Automatic Restore

By setting this option, when you reinstall an application, all of your backed up settings and data will be restored.

1. From the Home screen, tap  → **Settings** →  **Accounts** → **Back up and reset**.
2. Tap **Automatic restore** to enable or disable automatic restoration of settings from the Google server.

Factory Data Reset

From this menu you can reset your phone and sound settings to the factory default settings.

1. From the Home screen, tap  → **Settings** →  **Accounts** → **Back up and reset**.
2. Tap **Factory data reset**.
The Factory data reset screen displays reset information.
3. Tap **Reset device**, then follow the prompts to perform the reset.

Warning! Performing a Factory data reset will erase all data from your phone and internal SD card, including your Google account, system and application data and settings, and downloaded applications. It will not erase current system software, bundled applications, and external SD card files such as music and photos.

Location services

The Location services settings allow you to set up how the phone will determine your location and the sensor settings for your phone.

1. From the Home screen, tap  → **Settings** →  **More** → **Location services**.
2. Tap any of the following options to create a checkmark and activate the service:
 - **Access to my location:** allows apps that have asked your permission to use your location information. Tap the ON/OFF icon  to turn it on.
 - **Use GPS satellites:** allows applications to use GPS to pinpoint your location.
 - **Use wireless networks:** allows applications to use data from mobile networks and Wi-Fi to help determine your location.

- **My places:** allows you to add location information for your Home, Office, and Car.

Security

The Security settings allow you to determine the security level for your phone.

Encryption

To require a numeric PIN or password to decrypt your phone each time you power it on or encrypt the data on your SD card each time it is connected:

Tip: Make sure your battery is charged more than 80 percent or the charger is connected. Encryption may take an hour or more.

Warning! If encryption fails, it will be necessary to perform a factory data reset (see see “*Factory Data Reset*” on page 114).

1. From the Home screen, tap  → **Settings** →  **More** → **Security**.

2. You must first set up a screen lock type if you haven't already done so. For more information, refer to “*Screen Lock*” on page 91.
3. Tap **Encrypt device**. For more information, read the displayed help screen.
4. Tap **Encrypt external SD card** to enable the encryption on SD card data that requires a password be entered each time the microSD card is connected.

Find my mobile

Remote controls

Remote controls uses the SamsungDive service to track and control your device remotely. Also, using the Find my mobile feature, you can find your missing phone. See www.samsungdive.com for more information.

To enable remote controls:

1. From the Home screen, tap  → **Settings** →  **More** → **Security** → **Remote controls**.
2. Tap **OK**.
3. Tap the ON/OFF slider  to turn Remote controls on.

SIM Change Alert

SIM Change Alert sends an SMS message to preset phone numbers if your phone is ever turned on with a different SIM card in it.

1. From the Home screen, tap  → **Settings** →  **More** → **Security** → **SIM Change Alert**.
2. Tap **Sign in** and sign in to your Samsung account.
– or –
Tap **Create account** and set up a Samsung account.
3. Tap the ON/OFF slider  to turn SIM Change Alert on.
4. Tap **Alert message**, enter the message to be sent, and tap **OK**.
5. Tap **Create** to enter the phone number to receive the SMS message or **Contacts** to select a number from your contact list.
6. Enter the number and tap **OK**, or select the number and tap **Done**.
7. Tap **Save**.

Note: Requires a Samsung account.

Go to find my mobile webpage

Opens the SamsungDive web page (www.samsungdive.com) where you can find more information and sign up for the service.

Set up SIM card lock

Prevent another user from using your SIM card to make unauthorized calls or from accessing information stored on your SIM card by protecting the information using a PIN code.

When enabled, your phone will ask for a PIN number each time you use the phone. Using this option you can also change your SIM PIN number.

1. From the Home screen, tap  → **Settings** →  **More** → **Security**.
2. Tap **Set up SIM card lock**.
3. Tap **Lock SIM card**, enter your SIM PIN code, then tap **OK**.

Note: You must activate Lock SIM card before you can change your SIM PIN code.

4. Tap **Change SIM PIN**.
5. Enter your old SIM PIN code and tap **OK**.

6. Enter your new SIM PIN code and tap **OK**.
7. Re-type your new SIM PIN code and tap **OK**.

Forgotten SIM PIN password

If you enter the wrong SIM PIN more than 3 times, you will need to contact your Customer Service Representative to get the PUK code for your device.

1. Each time you enter a wrong SIM PIN number the phone will display how many attempts you have remaining.
2. After the third incorrect attempt, the **SIM is now disabled, Enter PUK code to continue. Contact carrier for details** screen displays and your SIM card is locked.
3. Enter the new PUK code that you received from your Customer Service Representative in the **PUK code** field.
4. Enter a new PIN code in the **Enter a New PIN** field and tap **OK**.
5. Enter the new PIN code again in the **Confirm your new PIN** field and tap **OK**.

Note: While your SIM PIN is locked, you will still be able to make Emergency calls if necessary.

Make passwords visible

When enabled, password characters display briefly as you touch them while entering passwords.

1. From the Home screen, tap  → **Settings** →  **More** → **Security**.
2. Tap **Make passwords visible** to create a checkmark and enable or disable the display of password characters.

Device Administrators

The Device Administration feature allows you to select one or more administration applications that control your device for security purposes (for example, if your phone is lost or stolen). These applications enforce remote or local device security policies.

Some of the features a device administration application might control are:

- Setting the number of failed password attempts before the device is restored to factory settings.
- Automatically locking the device.

- Restoring factory settings on the device.

Note: If a device uses multiple enabled administration applications, the strictest policy is enforced.

1. From the Home screen, tap  → **Settings** →  **More** → **Security**.
2. Tap **Device administrators**.
3. Select a device administrator and follow the prompts. If no device administrators are listed, you can download them from the Play Store.

Unknown sources

This feature allows you to download and install applications from sources other than Play Store.

1. From the Home screen, tap  → **Settings** →  **More** → **Security**.
2. Tap **Unknown sources**.
A check mark is displayed to indicate it is active.

Warning! Enabling this option causes your phone and personal data to be more vulnerable to attack by applications from unknown sources.

Verify apps

This feature allows you to either block or warn you before installing apps that may cause harm to your phone.

1. From the Home screen, tap  → **Settings** →  **More** → **Security**.
2. Tap **Verify apps**.
A check mark is displayed to indicate it is active.

Trusted Credentials

If a certificate authority (CA) certificate gets compromised or for some other reason you do not trust it, you can disable or remove it.

1. From the Home screen, tap  → **Settings** →  **More** → **Security**.
2. Tap **Trusted credentials**.
The trusted credentials screen has two tabs:
 - **System:** Displays CA certificates that are permanently installed in the ROM of your device.
 - **User:** Displays any CA certificates that you installed, for example, in the process of installing a client certificate.
3. Tap a CA certificate to examine its details.
A scrolling screen displays the details.

4. Scroll to the bottom of the details screen and tap **Disable** to disable a System certificate or **Remove** to remove a User certificate.

Caution! When you disable a system CA certificate, the **Disable** button changes to **Enable**, so you can enable the certificate again, if necessary. When you remove a user-installed CA certificate, it is permanently deleted and must be re-installed, if needed.

5. Tap **OK** to return to the certificate list.
When enabled, a check mark appears in the check box.

Install from device storage

Install encrypted certificates from an installed memory card.

Note: You must have installed a memory card containing encrypted certificates to use this feature.

1. From the Home screen, tap  → **Settings** →  **More** → **Security**.
2. Tap **Install from device storage**, then choose a certificate and follow the prompts to install.

Clear credentials

Clear stored credentials.

Note: This setting only appears if you have installed encrypted certificates.

1. From the Home screen, tap  → **Settings** →  **More** → **Security**.
2. Tap **Clear credentials** to remove all certificates.

Application Manager

You can download and install applications from Play Store or create applications using the Android SDK and install them on your device. Use Application manager settings to manage applications.

Warning! Because this device can be configured with system software not provided by or supported by Google or any other company, end-users operate these devices at their own risk.

Memory Usage

See how memory is being used by Downloaded or Running applications.

1. From a Home screen, tap  → **Settings** →  **More** → **Application manager**.
2. Tap **DOWNLOADED**, **SD CARD**, **RUNNING**, or **ALL** to display memory usage for that category of applications. The graph at the bottom of the Downloaded tab shows used and free device memory. The graph at the bottom of the Running tab shows used and free RAM.

Downloaded

Displays apps you have downloaded onto your device.

1. From a Home screen, tap  → **Settings** →  **More** → **Application manager**.
2. Tap the **DOWNLOADED** tab to view a list of all the downloaded applications on your device.
3. To switch the order of the lists displayed in the Downloaded tabs, press  → **Sort by size** or **Sort by name**.
4. To reset your application preferences, press  → **Reset app preferences**.

Note: This will reset the preferences for disabled apps, disabled app notifications, default applications for actions, and background data restrictions for apps. You will not lose any app data.

5. Tap an application to view and update information about the application, including memory usage, default settings, and permissions.

Running Services

View and control services running on your device.

1. From a Home screen, tap  → **Settings** →  **More** → **Application manager**.
2. Tap the **RUNNING** tab. All the applications that are currently running on the device display.
3. Tap **Show cached processes** to display all the cached processes that are running. Tap **Show services in use** to switch back.
4. Tap one of the applications to view application information.

The following options display:

- **Stop:** Stops the application from running on the device. This is usually done prior to uninstalling the application.

Warning! Not all services can be stopped. Stopping services may have undesirable consequences on the application or Android System.

- **Report:** Report failure and other application information.

Note: Options vary by application.

Battery

See how much battery power is used for device activities.

1. From a Home screen, tap  → **Settings** →  **More** → **Battery**.

The battery level displays in percentage. The amount of time the battery was used also displays. Battery usage displays in percentages per application.

2. Tap **Screen**, **Android System**, **Android OS**, **Cell standby**, **Media server**, **Device idle**, or any other listed application to view how it is affecting battery use.

Note: Other applications may be running that affect battery use.

Storage

From this menu you can view the memory allocation for the memory card and USB as well as mount or unmount the SD card.

For more information about mounting or unmounting the SD card, see “*Memory Card*” on page 30.

To view the memory allocation for your external SD card:

- From the Home screen, tap  → **Settings** →  **More** → **Storage**. The available memory displays under the **Total space** and **Available space** headings for both Device memory and SD card.

SD card

- Tap **Unmount SD card** to unmount your SD card so that you can safely remove it, then tap **OK**.
– or –
- 1. Tap **Format SD card** to format your SD card. This will delete all data on your SD card including music, videos, and photos.

2. Tap **Format SD card** again.
3. Tap **Erase everything** to continue or press  to cancel.

Note: The **Format SD card** option is only available when your SD card is mounted.

Date and time

This menu allows you to change the current time and date displayed.

To automatically maintain the date and time:

1. From the Home screen, tap  → **Settings** → 
More → **Date and time**.
2. Tap **Automatic date and time** to allow the network to set the date and time.
3. Tap **Automatic time zone** to allow the network to set the time zone.

To manually set the date and time:

Important! Deactivate **Automatic date and time** to manually set the rest of the options.

4. Tap **Set date** and tap the up and down arrows to set the **Month**, **Day**, and **Year** then tap **Set**.
5. Tap **Set time** and tap the up and down arrows to set the **Hour**, **Minute**, and **PM/AM**, then tap **Set**.
6. Tap **Select time zone**, then tap a time zone.
7. Optional: Tap **Use 24-hour format**. If this is not selected the phone automatically uses a 12-hour format.
8. Tap **Select date format** and tap the date format type.

About Device

This menu contains legal information, system tutorial information, and other phone information such as the model number, firmware version, baseband version, kernel version, and software build number.

To access phone information:

1. From the Home screen, tap  → **Settings** → 
More → **About device**.
2. The following information displays:
 - **Software update:** allows you to update your phone software, if available. For more information, refer to “*Software Update*” on page 123.

- **Status:** displays the Battery status, Battery level (percentage), Network, Signal strength, Mobile network type, Service state, Roaming status, Mobile network state, the phone number for this device (My phone number), IMEI number, IMEI SV number, IP address, Wi-Fi MAC address, Bluetooth address, Serial number, Up time, and Device status.
- **Legal information:** This option displays information about Open source licenses, Google legal and Samsung legal information. Read the information and terms, then press  to return to the Settings menu.
- **Device name:** displays the phone's model name.
- **Model number:** displays the phone's model number.
- **Android version:** displays the android version loaded on this handset.
- **Baseband version:** displays the baseband version loaded on this handset.
- **Kernel version:** displays the kernel version loaded on this handset.
- **Build number:** displays the software, build number.

- **SELinux status:** displays the status of SELinux. SELinux is a set of security policies/modules which is applied to the device to improve the overall security.
- **Secure boot status:** displays secure boot status type.

Note: Baseband, kernal and build numbers are usually used for updates to the handset or support. For additional information contact your service representative.

Software Update

The Software Update feature enables you to use your phone to connect to the network and upload any new phone software directly to your phone. The phone automatically updates with the latest available software when you access this option.

1. From the Home screen, tap  → **Settings** →  **More** → **About device** → **Software update**.
2. Tap **Update**.
3. At the **Software update** prompt, tap **OK** to continue.
4. The phone automatically updates the software (if available), otherwise, when the prompt "The latest updates have already been installed" is displayed, tap **OK**.

5. When updating software, once the update file is downloaded, you can delay the update on the start screen by postponing it for a certain period of time. If you want to resume the update before the selected time, tap **Continue update**.

Section 8: Connections

This section describes the various connections your phone can make including accessing Wi-Fi, Bluetooth, and Connecting your PC.

Wi-Fi

About Wi-Fi

Wi-Fi (short for “wireless fidelity” and sometimes referred to as wifi) is a term used for certain types of Wireless Local Area Networks (WLAN). These device types use an 802.11 wireless specification to transmit and receive wireless data. Wi-Fi communication requires access to an existing and accessible Wireless Access Point (WAP). These WAPs can either be Open (unsecured) as within most Hot Spots, or Secured (requiring knowledge of the Router name and password).

Turning Wi-Fi On

By default, your device's Wi-Fi feature is turned off. Turning Wi-Fi on makes your device able to discover and connect to compatible in-range WAPs.

1. From the Home screen, tap  → **Settings** →  **Connections** → **Wi-Fi**.

2. Tap the ON/OFF slider, located to the right of the Wi-Fi field, to turn Wi-Fi ON .

Connect to a Wi-Fi Network

1. From the Home screen, tap  → **Settings** →  **Connections** → **Wi-Fi**.

The network names and security settings (Open network or Secured with WEP) of detected Wi-Fi networks are displayed in the Wi-Fi networks section.

2. Tap the network you want to use.

Note: When you select an open network, you will be automatically connected to the network.

3. Enter a wireless password if necessary.

Manually add your new network connection

1. From the Home screen, tap  → **Settings** →  **Connections** → **Wi-Fi**.
2. Tap **Add Wi-Fi network**.

3. Enter the **Network SSID**. This is the name of your Wireless Access Point.
4. Tap the **Security** field and select a security option. This must match the current security setting on your target WAP.
5. If secured, you will also need to enter your WAP's password.
6. Tap **Show advanced options**, if you need to add advanced options such as Proxy settings, IP settings, or Key management.
7. Tap **Connect** to store the new information and connect to your target WAP.

Note: The next time your device connects to a previously accessed or secured wireless network, you are not prompted to enter the WAP key again, unless you reset your device back to its factory default settings.

Turning Wi-Fi Off

1. From the Home screen, tap  → **Settings** →  **Connections** → **Wi-Fi**.

2. Tap the ON/OFF slider, located to the right of the Wi-Fi field, to turn Wi-Fi OFF .

Note: Use of wireless data connections such as Wi-Fi and Bluetooth can cause an added drain to your battery and reduce your use times.

Manually Scan for a Wi-Fi Network

1. From the Home screen, tap  → **Settings** →  **Connections** → **Wi-Fi**.
2. Tap **Scan**.
All available Wi-Fi networks are displayed.

Wi-Fi Status Indicators

The following icons show your Wi-Fi connection status at a glance:



Displays when Wi-Fi is connected, active, and communicating with a Wireless Access Point (WAP).



Displays when there is a Wi-Fi access point available but you are not connected to it. May also display if there is a communication issue with the target Wireless Access Point (WAP).



Displays when connected to another device using Wi-Fi Direct. For more information, refer to “*Wi-Fi Direct*” on page 127.

Wi-Fi Advanced Settings

The Advanced Wi-Fi menu allows you to set up many of your device's advanced Wi-Fi services.

1. From the Home screen, tap  → **Settings** →  **Connections** → **Wi-Fi**.
2. Press  → **Advanced**.

The following options are available:

- **Network notification**: alerts you when a new WAP is available.
- **Passpoint**: allows you to connect to passpoint-enabled Wi-Fi Access Points automatically. Touch and slide the slider to the right to turn it on .
- **Keep Wi-Fi on during sleep**: allows you to specify when to disconnect from Wi-Fi.
- **Check for Internet service**: Checks if Wi-Fi internet service is available when connected to an AP (Access Point).

- **MAC address**: view your device's MAC address, required when connecting to some secured networks (not configurable).
- **IP address**: view your device's IP address.

Wi-Fi Direct

Wi-Fi Direct allows device-to-device connections so you can transfer large amounts of data over a Wi-Fi connection.

Note: See your service plan for applicable charges for Wi-Fi Direct.

1. From the Home screen, tap  → **Settings** →  **Connections** → **Wi-Fi**.
2. Tap the ON/OFF slider, located to the right of the Wi-Fi field, to turn Wi-Fi ON .
3. At the bottom of the Wi-Fi screen, tap the **Wi-Fi Direct** button.
4. Repeat **steps 1 - 3** on the other device you want to connect with. The steps on a different model of phone may be different.
5. On your phone, tap **Scan**.

The device scans for other Wi-Fi Direct devices.

6. Once the device you want to connect to is displayed, tap on it.
7. The other device has 2 minutes to tap **Accept** for the connection to be made.
8. Once connected, the other device will show as **Connected** in your list of Wi-Fi Direct devices and the  icon will display at the top of your screen.
9. For additional information about Wi-Fi Direct, press  → **Help**.

Sharing Information with Connected Device

To share Videos, Photos, or other information with the connected device, follow these steps:

1. View the information that you want to share. For example, if you want to share a photo, find the photo in your camera viewer or **My Files** folder, then tap the **Share**, **Share via**, or **Send via** option.
2. Tap the **Wi-Fi Direct** option.
3. Tap the connected device name.
4. Tap **Done**.

5. The file is transferred and the other device will receive a screen notification that a Wi-Fi file has been received. The file can be found in **My Files** → **All files** → **Device storage** in the **ShareViaWifi** folder.

Note: Depending on the other device model, the prompts and shared folder information may differ.

NFC

NFC (Near Field Communication) allows data exchange when you touch your device with another compatible device. This is used for applications such as S Beam. To activate NFC on your device, see “NFC” on page 89.

S Beam

When S Beam is activated, you can beam files to another NFC-capable device by holding the devices close together. You can beam images and videos from your Gallery, music files from your Music app, and more. For more information, refer to “S Beam” on page 89.

Bluetooth

About Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless devices. The Bluetooth communication range is usually up to approximately 30 feet.

Turning Bluetooth On and Off

To turn Bluetooth on:

1. From the Home screen, tap  → **Settings** →  **Connections**.
2. Tap the ON/OFF slider, located to the right of the Bluetooth field, to turn Bluetooth ON  .
When active,  appears within the Status area.

To turn Bluetooth off:

1. From the Home screen, tap  → **Settings** →  **Connections**.
2. Tap the ON/OFF slider, located to the right of the Bluetooth field, to turn Bluetooth OFF  .

Bluetooth Status Indicators

The following icons show your Bluetooth connection status at a glance:



Displays when Bluetooth is active.



Displays when Bluetooth is connected (paired) and communicating.

Bluetooth Settings

The Bluetooth settings menu allows you to set up many of the characteristics of your device's Bluetooth service, including:

- Entering or changing the name your device uses for Bluetooth communication and description
- Setting your device's visibility (or "discoverability") for other Bluetooth devices

To access the Bluetooth Settings menu:

1. From the Home screen, tap  → **Settings** →  **Connections**.
2. Verify your Bluetooth is ON  .
3. Tap **Bluetooth**.

To make your device visible:

1. From the Bluetooth settings page, press  → **Visibility timeout**.
 - Making your device visible allows it to be detected by other devices for pairing and communication.
2. Select a time that you would like your device visibility to time-out.

Note: To change your device name, tap  → **Settings** →  **More** → **About device** → **Device name**.

To show received files:

- From the Bluetooth settings page, press  → **Received files**.

A list of all files received from Bluetooth is displayed.

To scan for Bluetooth devices:

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap **Scan** to search for visible external Bluetooth-compatible devices such as headsets, devices, printers, and computers.

Pairing Bluetooth Devices

The Bluetooth pairing process allows you to establish trusted connections between your device and another Bluetooth device. When you pair devices, they share a passkey, allowing for fast, secure connections while bypassing the discovery and authentication process.

To pair your device with another Bluetooth device:

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap **Scan**. Your device will display a list of discovered in-range Bluetooth devices.
3. Tap a device from the list to initiate pairing.
4. Enter the passkey or PIN code, if needed, and tap **OK**.
5. The external device will then have to also accept the connection and enter your device's PIN code.

Once successfully paired to an external device,  appears within the Status area.

Note: Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth compatible devices.

Note: Pairing between two Bluetooth devices is a one-time process. Once a pairing has been created, the devices will continue to recognize their partnership and exchange information without having to re-enter a passcode again.

Deleting a paired device (unpair)

Deleting a device from your list removes its “connection record” and upon reconnection would require that you re-enter all the previous pairing information.

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap  next to the previously paired device. This opens the connected device's menu options.
3. Tap **Unpair** to delete the paired device.
4. Tap **Rename** to change the name of the paired device.

Sending Contacts via Bluetooth

Depending on your paired devices' settings and capabilities, you may be able to send pictures, Contact information, or other items using a Bluetooth connection.

Note: Prior to using this feature, Bluetooth must first be enabled, and the recipient's device must be visible.

1. Verify your Bluetooth is active.
2. From the Home screen, tap **Contacts** .
3. Press  → **Share namecard via**.
4. Tap each contact that you would like to send via Bluetooth. A green checkmark will appear next to each entry you select.
5. Tap **Done**.
6. Tap **Bluetooth**.
7. Select the paired device to receive the contacts.

Note: The external Bluetooth device must be visible and communicating for the pairing to be successful.

8. A Bluetooth share notification will appear in your notifications list.

PC Connections

You can connect your device to a PC using your PC data cable using various USB connection modes.

Storage: allows you to use the onboard storage capacity of the phone to store and upload files. This option allows your computer to detect the phone as a removable storage drive.

Kies: allows you to manage music, movies and photos. You can also backup precious contacts and calendars, download apps and podcasts and automatically upgrade device firmware. Kies conveniently syncs your life across all your devices.

Note: To sync your device to your PC, it is highly recommended that you install Samsung Kies which is available at <http://www.samsung.com/kies> (for Windows/ Mac).

Note: If you are a Windows XP user, ensure that you have Windows XP Service Pack 3 or higher installed on your computer. Also, ensure that you have Samsung Kies 2.0 or Windows Media Player 10 or higher installed on your computer.

Connecting as a Storage Device

You can connect your device to a PC as a removable disk and access the file directory. If you insert a memory card in the device, you can also access the files directory from the memory card by using the device as a memory card reader.

Note: The file directory of the memory card displays as a removable disk, separate from the internal memory.

1. Connect the USB cable to the device and connect the cable to the computer. After a few seconds, a pop-up window displays on the PC when connected.
2. On the PC pop-up, click **Open device to view files**.
3. Copy files from the PC to the memory card.

Section 9: Applications

This section contains a description of each application that is available in the Apps Menu, its function, and how to navigate through that particular application. If the application is already described in another section of this user manual, then a cross reference to that particular section is provided.

Note: This manual only addresses applications that have been loaded on your device as of the date of purchase. Information concerning third party applications that you may choose to download from the Google Play Store or otherwise should be obtained from the application provider directly and not from Samsung.

Tip: To open applications quickly, add the icons of frequently-used applications to one of the Home screens. For details, see *“Customizing Your Home Screen”* on page 25.

For information on navigating through the Apps icons, see *“Navigating Through the Application Menus”* on page 20.

1. From the Home screen, tap , then tap one of the application icons.

2. Follow the on-screen instructions.
3. To return to the main Home screen, tap .

Tip: To open applications quickly, add the icons of frequently-used applications to the Home screen or to the folders you created. For details, see *“Customizing Your Home Screen”* on page 25.

The applications that are available on your phone are listed below.

Calculator

With this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication, and division. The Calculator also keeps a history of recent calculations.

1. From the Home screen, tap  → **Calculator** .
2. Enter the first number using the on-screen numeric keys.
3. Enter the operation for your calculation by tapping the corresponding on-screen arithmetic function key.

4. Enter the second number.
5. To view the result, tap equals (=).
6. To view calculator history, tap  located at the top of the calculator buttons. A history of your past calculations is displayed. Tap  again to display the calculator keypad.
7. To clear the calculator history, press  → **Clear history**.
8. To change the text size, press  → **Text size**. Tap Small, Medium, or Large.
9. To toggle one-handed operation, press  → **One handed operation on/off**.

Scientific Calculator

- With the calculator open, turn your phone sideways to the landscape position to display the scientific calculator.

Camera

Use your 13.0 megapixel camera feature to produce photos in a JPEG format. Your phone also functions as a Camcorder to take videos. For more information, refer to “*Using the Camera*” on page 59.

ChatON

With the ChatON application, you can interact with friends and family with text, images, hand-written notes and video shared instantly. You can chat in groups, while a Web client will allow the easy sharing of content and conversations between your phone and PC. For more information, refer to “*ChatON*” on page 80.

Chrome

The Google Chrome app allows you to use the Google Chrome web browser on your phone.

1. From the Home screen, tap  → **Chrome** .
2. Read the Google Chrome Terms of Service and tap **Accept and Continue**.
3. If you have an existing Chrome account, tap **Sign in** to bring your open tabs, bookmarks, and omnibox data from your computer to your phone, otherwise tap **No thanks**.
4. Follow the on-screen instructions to use Google Chrome.

Clock

The Clock application allows you to access alarms, view the World Clock, set a stopwatch, and use a timer and desk clock.

Alarm

This feature allows you to set an alarm to ring at a specific time.

1. From the Home screen, tap  → **Clock**  → **Alarm** → **Create alarm** . The following options display:
 - **Time:** tap  (Up) or  (Down) to set the new time for the alarm to sound. Tap AM or PM.
 - **Alarm repeat:** use this option to set the repeating status for the alarm by tapping on the days that you want the alarm to sound. Tap the Repeat weekly checkbox to have the alarm repeat weekly.
 - **Alarm type:** sets the way in which the alarm sounds when activated (Melody, Vibration, Vibration and melody, and Briefing).
 - **Alarm tone:** sets the sound file which is played when the alarm is activated. Select an option or tap Add for additional options.

- **Alarm volume:** drag the slider to adjust the alarm's volume.
 - **More:** displays the following additional options:
 - **Location alarm:** when activated, the alarm only sounds when you are at a specific location. Touch and slide the slider to the right to turn it on  then follow the on-screen instructions to enter a location.
 - **Snooze:** use this option to set an Interval (3, 5, 10, 15, or 30 Minutes) and number of times to Repeat (1, 2, 3, 5, or 10 times) then tap **Save**. Tap the ON/OFF slider  to activate.
 - **Smart alarm:** phone plays a slowly increasing natural sound and displays the alarm screen for a preset time before the set alarm goes off. Set the Interval and the Tone then tap **Save**. Tap the ON/OFF slider  to activate.
 - **Name:** allows you to use a specific name for the alarm. The name will appear on the display when the alarm activates.
2. Tap **Save** to store the alarm details.

Turning Off an Alarm

- To stop an alarm when it sounds, touch and sweep the  icon to the right.

Setting the Snooze Feature

- To activate the Snooze feature after an alarm sounds, touch and sweep the  icon to the left. Snooze must first be set in the alarm settings. For more information, refer to “Alarm” on page 135.

Deleting Alarms

To delete an alarm, follow these steps:

1. From the Home screen, tap  → **Clock**  → **Alarm** →  → **Delete**.
2. Tap the alarm or alarms you wish to delete. A green checkmark will appear next to each selection. Tap **Select all** to delete all alarms.
3. Tap **Delete**.

World Clock

World Clock allows you to view the time of day or night in other parts of the world. World Clock displays time in hundreds of different cities, within all 24 time zones around the world.

1. From the Home screen, tap  → **Clock**  → **World Clock**. The clock for your time zone is displayed.
2. Tap **Add city** to add another city to the World Clock.

3. Scroll through the list of cities to find the city you want to add, or tap the Search bar and use the keypad to enter a city to search for.
4. Tap the city you want to add. The clock for that city will display.
5. To set Daylight Savings time, press and hold a city, then tap **DST settings**.
6. Select **Automatic**, **Off**, or **1 hour**.
7. If Daylight Savings Time is selected, a sun symbol on the World Clock listing will appear.

Deleting a World Clock Entry

1. From the Home screen, tap  → **Clock**  → **World Clock** →  → **Delete**.
2. Tap the city clocks you wish to delete to place a checkmark in the selection box.
3. Tap **Delete**.

Reorder World Clock Entries

1. From the Home screen, tap  → **Clock**  → **World Clock** →  → **Change order**.
2. To move a clock, tap and hold  and drag the clock to a new position.

3. Tap **Delete**.

Stopwatch

You can use this option to measure intervals of time.

1. From the Home screen, tap  → **Clock**  → **Stopwatch**.
2. Tap **Start** to start the stopwatch and tap **Lap** to measure lap time.
3. Tap **Stop** to stop the stopwatch.
4. Tap **Restart** to continue or tap **Reset** to erase all times recorded.

Timer

You can use this option to set a countdown timer. Use a timer to count down to an event based on a preset time length (hours, minutes, and seconds).

1. From the Home screen, tap  → **Clock**  → **Timer**.
2. The **Minutes** field is highlighted and set to 1 minute. Use the keypad to set the number of minutes you want.
3. Tap the **Hours** field to set hours if desired. As you tap different fields, they will become highlighted.
4. Tap the **Seconds** field to set seconds.

5. Tap **Start** to begin the timer and tap **Stop** to pause the timer.
6. After stopping, tap **Restart** to continue or tap **Reset** to set the timer back to the original setting.

Desk clock

You can use the Desk clock when you have a desk dock and you want your phone to display the time, day, date, location, and weather conditions when it is docked.

1. From the Home screen, tap  → **Clock**  → **Desk clock**.

The default Desk clock is displayed.

2. Tap  to display the Desk clock in full-screen mode.
3. To make changes, tap  → **Settings**.
4. The following options are displayed:
 - **Hide status bar**: when this is checked, the status bar is hidden from view.
 - **Wallpaper**: tap to select Desk clock wallpaper from Default, Gallery, or Same as home screen.
 - **Calendar**: when this is checked, the calendar is displayed. Tap to uncheck.

- **Weather:** when this is activated, the location, temperature, and weather condition is displayed. Touch and slide the slider to the right to turn it on . Tap to select **Unit** (°C or °F) and **Auto refresh** rate (None, Every 1 hour, 3 hours, 6 hours, 12 hours or 24 hours).
- **Dock:** allows you to set your Dock settings such as Dock sound, Audio output mode, Desk home screen display, Automatic unlock, and Audio output.

Contacts

You can manage your daily contacts by storing their name and number in your Address Book. Address Book entries can be sorted by name, entry, or group.

For more information, refer to “*Contacts and Your Address Book*” on page 47.

Downloads

Provides quick access to tabs containing a list of your current downloaded files (Internet and Other).

1. From the Home screen, tap  → **Downloads** . All of your downloads are listed.
2. Tap an available file and select it for use.

3. Choose an available action such as Share via, Delete, Sort by size, or Clear list.

Dropbox

Dropbox is a free service that lets you bring all your photos, documents, and videos anywhere. Any file you save to your Dropbox will automatically save to all your computers, phones and even the Dropbox website.

1. From the Home screen, tap  → **Dropbox** .
2. Follow the onscreen instructions to sign up for your Dropbox account.

Email

Email enables you to review and create email using various email services. You can also receive message alerts when you receive an important email. For more information, refer to “*Using Email*” on page 76.

Flipboard

This application creates a personalized digital magazine out of everything being shared with you. Access news stories, personal feeds and other related material. Flip through your Facebook newsfeed, tweets from your Twitter account, photos from friends and much more.

1. From the Home screen, tap  → **Flipboard** .

2. Tap **Tap to sign in**

– or –

Swipe up → select the desired items -> tap **Build Your Flipboard**.

Gallery

The Gallery is where you view photos and play back videos. For photos, you can also perform basic editing tasks, view a slideshow, set photos as wallpaper or contact image, and share as a picture message. For more information, refer to “*Gallery*” on page 66.

Gmail

Gmail is a web-based email service. Gmail is configured when you first set up your phone. Depending on your synchronization settings, Gmail can automatically synchronize with your Gmail account on the web. For more information, refer to “*Using Gmail*” on page 78.

Google

The Google Search application is the same on-screen Internet search engine that is on the Google Search Bar on your main Home screen. For more information, refer to “*Google Search Bar*” on page 18.

Google Settings

This menu provides a quick and ready access point to configure preferences for multiple Google applications, such as Google+, Maps & Latitude, Locations, etc. You can also use the Search function to initiate a Google Search from this menu.

1. From the Home screen, tap  →  **Google Settings** and select an on-screen option.
2. Tap one of the following options: **Apps with Google+ Sign-in, Google+, Location, Search, and Ads**.
3. Follow the on-screen prompts to modify your Google Settings.

Google+

Google+ makes messaging and sharing with your friends a lot easier. You can set up Circles of friends, visit the Stream to get updates from your Circles, use Messenger for fast messaging with everyone in your Circles, or use Instant Upload to automatically upload videos and photos to your own private album on Google+. For more information, refer to “*Google+*” on page 79.

Group Play

Group Play allows you to share pictures, music, and documents in real-time with your friends. You can create a group from your device or join other groups.

1. From the Home screen, tap  → **Group Play** .
2. The first time you access Group Play, read the Disclaimer and tap **Agree**.
The Group Play main screen is displayed.

Creating a group

If you have media you want to share, create a group.

1. From the Home screen, tap  → **Group Play** .
2. If you want to set a password that participants will need to enter to join your Group Play session, tap **Set group password** to create a checkmark.
1. Tap **Create group**.
Mobile AP is enabled.
2. If you are setting a group password, enter the password and tap **OK**.
3. Tap one of the media items listed under the **Sharing content** heading.

4. Tap the items you want to share to create a checkmark, then tap **Done** or **OK**.
5. Have your friends sign onto Group Play from their devices and they can view your media using you as a Mobile AP.

Joining a group

If you want to see media from your friend's phone, join a group.

1. From the Group Play main screen, tap **Join group**.
2. Your phone scans for available groups for you to join.
3. Tap a group to join.
You will now be able to see your group's shared media.
4. Press  → **Help** for additional information.

Hangouts

Hangouts brings one-on-one and group conversations with up to ten people to life with photos, emoji, and video calls for free. Connect with friends across computers, Android and Apple devices.

1. From the Home screen, tap  → **Hangouts** .
2. The first time you use the application, confirm the phone number of your device.

3. To start a Hangout, tap +.
4. Type a name, email address, phone number or circle.
You can also select a contact from the list below the text box.
5. At the bottom of the screen, touch either **Message** or **Video call**.

Help

The Help application provides detailed help for using your phone and the included features and applications.

1. From the Home screen, tap  → **Help** .
2. Tap one of the following for more information:
 - **New features:** provides help on all of the new features and applications such as Air view, Motion, Smart screen, Story Album, and Group Play.
 - **Basics:** provides basic information on using your device.
 - **Applications:** provides information on how to use basic applications like Contacts, Email, S Memo, Internet, Camera, etc.
 - **Settings:** provides information on settings for Wi-Fi, Bluetooth, Ringtone, Power saving mode, NFC, and Screen Mirroring.

- **Online help:** provides more detailed online help for additional questions you may have.
- **Available accessories:** provides information on accessories available for your phone from Samsung.

Internet

The Internet application is your access to the mobile web. This section explains how to navigate the browser and introduces you to the basic features.

To access the browser:

- From the Home screen, tap **Internet** .
- The default homepage displays.

Navigating with the Browser

1. To select an item, tap an entry.
2. To scroll through a website, sweep the screen with your finger in an up or down motion.
3. Sweep the screen left to right to move laterally across a web page.
4. To return to a previous page, press .
5. To move forward to a web page, press .

Browser Options

1. From the home page, press  to access the following options:

- **New window:** displays a new window so you can browse multiple URLs. For more information, refer to “*Adding and Deleting Windows*” on page 143.
- **Add bookmark:** allows you to add a URL to your bookmark list
- **Add shortcut:** allows you to add a shortcut to your Home screen.
- **Save page:** allows you to store the current page in memory so that it can be read later even if you lose your Internet connection. It is saved in your Saved pages folder.
- **Share via:** allows you to share the page using Add to Dropbox, Bluetooth, ChatON, Email, Flipboard, Gmail, Google, Google+, Hangouts, Messaging, S Memo, or Wi-Fi Direct.
- **Find on page:** allows you to search in the current page.

- **Incognito mode:** pages viewed in incognito mode won't appear within your browser history or search history, and no traces (such as cookies) are left on your device. For more information, refer to “*Going Incognito*” on page 143.
- **Saved pages:** contains web pages you have saved using the Save page option.
- **History:** displays your browsing history.
- **Desktop view:** allows you to assign the browser to display the current page in the desktop view (to closely mimic the display as it would appear on a desktop computer).
- **Brightness:** allows you to set the screen brightness.
- **Print:** allows you to print the screen or web page on a Samsung printer using Wi-Fi or Wi-Fi Direct.
- **Settings:** allows you to modify your web settings.
- **Help:** allows you view additional information concerning the Internet application

Enter a URL

You can access a website quickly by entering the URL. Websites are optimized for viewing on your phone.

To enter a URL and go to a particular website, follow these steps:

1. Tap the **URL** field at the top of your screen.
2. Enter the URL using the on-screen keypad.
The website displays.

Search the Internet

To perform an internet search using keywords, follow these steps:

1. Tap the URL field bar at the top of the screen.
2. Enter the keyword(s) to search using the on-screen keypad and tap **Go**.
3. Tap a link to view the website.

Adding and Deleting Windows

You can have up to eight Internet windows open at one time.

To add a new window, follow these steps:

1. From your browser, press  → **New window**.
A new browser window is opened.
2. Tap  (**Windows**) to see thumbnails of all open windows.
3. Tap a window listing to open up that Internet window.
4. Tap  at the top right corner of the web page thumbnail to delete the window.

Going Incognito

The incognito feature allows you to view Internet sites outside of normal browsing. Pages viewed in this incognito window won't appear within your browser history or search history, and no traces (such as cookies) are left on your device.

Note: Any downloaded files will be preserved and will stay on your device after you exit the incognito mode.

To add a new incognito window:

1. From your browser, press  → **Incognito mode**.
2. At the information prompt, tap **OK**.
3. A new browser window displays.

To exit from the incognito window:

1. From your browser window, tap  (**Windows**).
2. Scroll across the available windows and locate the incognito window. The incognito icon  appears in the upper-left of the new browser window while you are in this mode.
3. Tap  next to the incognito listing to delete this window.

Using Bookmarks

While navigating a website, you can bookmark a site to quickly and easily access it at a future time. The URLs (website addresses) of the bookmarked sites are displayed in the Bookmarks page. From the Bookmarks page you can also view your Most visited websites and view your History.

1. From the Home webpage, tap  (**Bookmarks**).
The Bookmarks page is displayed.
2. Press  to display the following options:
 - **List/Thumbnail view**: Select **Thumbnail view** (default) to view a thumbnail of the webpage with the name listed, or select **List view** to view a list of the bookmarks with Name and URL listed.
 - **Create folder**: Creates a new folder in which to store new bookmarks.
 - **Delete**: Erases selected bookmarks.
 - **Change order**: Rearranges the current bookmarks.
 - **Move to folder**: Selected bookmarks are moved to a selected folder.
3. Tap a bookmark to view the webpage, or touch and hold a bookmark for the following options:

- **Open in new window**: Opens the webpage in a new window.
- **Edit bookmark**: Allows you to edit the name or URL of the bookmark.
- **Add shortcut**: Adds a shortcut to the bookmarked webpage to your phone's Home screen.
- **Share link**: Allows you to share a URL address using many different options.
- **Delete bookmark**: Allows you to delete a bookmark.
- **Set as homepage**: Sets the bookmark to your new homepage.

Emptying the Cookies

A cookie is a small file that is placed on your phone by a website during navigation. In addition to containing some site-specific information, it can also contain some personal information (such as a username and password) which can pose a security risk if not properly managed. You can clear these cookies from your phone at any time.

1. From any webpage, press  → **Settings** → **Privacy** → **Delete personal data**.
2. Tap **Cookies and site data** to create a checkmark.
3. Tap **Done**.

Using your History

The History list provides you with a list of the most recently visited websites. These entries can be used to return to previously unmarked web pages.

1. From any webpage, press  → **History**.
A list of your most recently visited websites is displayed with Name and URL address.
2. Tap on a category such as **Today**, **Last 7 days**, or **Most visited**.
3. Tap any entry to display the webpage.
4. Press  → **Clear history** to delete the History list.

Saved Pages

The Saved pages list provides you with a list of the websites that you have saved.

1. From any webpage, tap  → **Saved pages**.
A list of your saved webpages is displayed with Name and URL address. The webpages that have been visited the most will appear at the top.
2. Tap any entry to display the webpage.

Browser Settings

To make adjustments in your browser settings, follow these steps:

1. From any webpage, tap  → **Settings**.
2. The following options are available:

Basics:

- **Set homepage:** Sets the current home page for the Web browser.
- **Auto-fill forms:** allows you to enter text to be used in your web profile. Tap Add profile, then enter text for the Web form auto fill.

Privacy:

- **Search and URL suggestions:** displays predictions of related queries and popular websites in the address bar as you type.
- **Preload available links before opening:** allows you improve performance when loading pages.
- **Remember form data:** remember data typed into forms for later use.
- **Remember passwords:** Save usernames and passwords for visited sites.

- **Delete personal data:** allows you to delete all personal data such as Browsing history, Cache, Cookies and site data, Passwords, Auto-fill data, and Location access.

Accessibility:

- **Text scaling:** allows you to preview the text size, scale the text size using a slider bar, set the zoom amount on double tap, and minimize the font size using a slider bar.
- **Force zoom:** allows you to override the website's request to control zoom.
- **Text encoding:** adjusts the current text encoding.
- **Fullscreen:** allows you to use Fullscreen mode to hide the status bar.
- **Text booster:** allows you to view PC websites easily by boosting the text size. Note: the layout may change as a result.

Content settings:

- **Accept cookies:** Allows sites, that require cookies, to save and read cookies from your device.
- **Enable location:** Allows websites to request access to your location.

- **Enable JavaScript:** Enables Javascript for the current Web page. Without this feature, some pages may not display properly. Remove the checkmark to disable this function.
- **Block pop-ups:** Prevents popup advertisement or windows from appearing on-screen. Remove the checkmark to disable this function.
- **Default storage:** Allows you to set your default storage to Device or Memory card.
- **Website settings:** View advanced settings for individual websites.
- **Enable notifications:** Allows website notifications. Select Always on, On demand, or Off.
- **Clear notifications:** Deletes website notification access information.
- **Reset to default:** Restores all settings to default.

Bandwidth management:

- **Preload webpages:** Allows the browser to preload pages in the background. You can set to Always, Only on Wi-Fi, and Never.
- **Load images:** Allows web page images to be loaded along with the other text components of a loaded website.

- **Open pages in overview:** Displays an overview of newly opened web pages.

Local

Local is an application that uses Google Maps and your location to help you find Restaurants, Cafes, Bars, Attractions, and other businesses. You can also add your own locations.

1. From the Home screen, tap  → **Local** .
2. Tap on one of the business categories to search for a particular business.
All of the business categories that are close to you will be displayed.
3. Tap on a business to view the details.
4. The business details such as address, phone, website, and location are displayed. You can also see reviews from around the web and from Google users.

Maps

Depending on your location, you can view basic, custom, and satellite maps and local business information, including locations, contact information, and driving directions. You can also post public messages about a location and track your friends.

Important! Before using Google Maps you must have at least an active data (3G) connection. The Maps application does not cover every country or city.

Enabling a Location Source

Before you use Google Maps and find your location or search for places of interest, you must enable a location source. To enable the location source you must enable the wireless network, or enable the GPS satellites.

1. From the Home screen, tap  → **Settings** →  **More** → **Location services**.
2. Tap the **Use GPS satellites** field. A green checkmark will display next to the field.

Note: Selecting **Use GPS satellites** allows you to locate places of interest at the street-level. However, this also requires a clear view of the sky and uses more battery power.

To receive better GPS signals, avoid using your device in the following conditions:

- inside a building or between buildings
- in a tunnel or underground passage

- in poor weather
- around high-voltage or electromagnetic fields
- in a vehicle with tinted windows

Using Maps

1. From the Home screen, tap  → **Maps** . A map will display with your location in the very center.
2. Follow the on-screen instructions to use the Maps application.

Messaging

You can send and receive different types of messages. For more information, refer to “*Messaging*” on page 69.

Messenger

Messenger allows you to bring groups of friends together into a simple group conversation. When you get a new conversation in Messenger, Google+ sends an update to your phone. For more information, refer to “*Messenger*” on page 80.

Music

Music is an application that can play music files. Music supports files with extensions AAC, AAC+, eAAC+, MP3, WMA, 3GP, MP4, and M4A. Launching Music allows you to navigate through your music library, play songs, and create playlists (music files bigger than 300 KB are displayed).

Playing Music

1. Tap  → **Music** .
2. Tap a library category at the top of the screen (Songs, Playlists, Albums, Artists, Music square, or Folders) to view the available music files.
3. Scroll through the list of songs and tap an entry to begin playback.
4. Tap the album icon to access the complete set of Music controls. The following controls are available:



Pause the song.



Start the song after pausing.



Press and hold to rewind the song. Tap to go to previous song.



Press and hold to fast-forward the song. Tap to go to next song.



Volume and Sound Alive control.



Volume control showing volume muted.



Plays the entire song list once.



Replays the current list when the list ends.



Repeats the currently playing song.



Shuffles the current list of songs randomly.



Songs play in order and are not shuffled.



Lists the current playlist songs.



Displays the current song in the player window.



Assign the current song as a Favourite.



Streams the current music file to another device via Samsung Link.

5. Press  → **Settings** to modify your Music settings.
6. Press  to access additional options.

Creating a Playlist

Playlists are used to assign songs to a list of preferred media which can then be grouped into a list for later playback. These Playlists can be created via either the handset's Music options menu or from within a 3rd party music application (such as Windows Media Player) and then downloaded to the handset.

1. From the Home screen, tap  → **Music** .
2. Tap the **Playlists** tab.
3. Press  → **Create playlist**.
4. Type a name for this playlist in the field and tap **OK**.

Adding Music to a Playlist

To add files to the playlist:

1. From the Home screen, tap  → **Music** .
2. Tap the **Playlists** tab.
3. Tap the playlist name in which to add music.
4. Tap  (**Add music**).
5. Tap a music file, or tap **Select all** to add all the music tracks to this playlist then tap **OK**.

Removing Music from a Playlist

To remove music files from a playlist:

1. From the Home screen, tap  → **Music** .

2. Tap the **Playlists** tab.
3. Tap the playlist name in which to delete music.
4. Press  → **Remove**.
5. Tap the checkbox to the left of each track you want to remove from this playlist, or tap **Select all** to remove all the music tracks from this playlist, then tap **Remove**.

Editing a Playlist

Besides adding and removing music files in a playlist, you can also rename the playlist.

To edit a playlist:

1. From the Home screen, tap  → **Music** .
2. Tap **Playlists**.
3. Press  → **Edit title**.
4. Tap a playlist name to edit.
5. Enter a new name for the playlist then tap **OK**.

For information on downloading music for your phone, see “*Play Music*” on page 153.

My Files

My Files allows you to manage your sounds, images, videos, bluetooth files, Android files, and other memory card data in one convenient location.

1. From the Home screen, tap  → **My Files**  → **All files**.
2. Tap **Device storage** to see the contents of your internal SD card.
3. The following folders may display:
 - **Alarms**: this folder contains any alarm files you may have.
 - **Android**: the Android folder stores files that are used in Android applications.
 - **Application**: this folder contains app info for S Memo.
 - **Bluetooth**: this folder stores files sent via a Bluetooth device.
 - **DCIM**: this is the default location for pictures and videos taken by the device. Tap **DCIM** → **Camera** to view the picture or video files. For more information, refer to “*Viewing Pictures*” on page 66. Also, see “*Viewing Videos*” on page 67.
 - **Download**: this folder contains downloads you have made.
 - **Movies**: this folder contains your Video and Movie files.
 - **Music**: this folder contains your Music files.

- **Notifications:** this folder contains all of the notifications you have received.
- **Pictures:** this folder contains your picture files such as captured screenshots.
- **Podcasts:** this folder contains all of your podcasts.
- **Ringtones:** this folder contains any ringtones you have downloaded.
- **SMemo:** this folder contains all the S Memos you have written.

Note: Different folders may appear depending on how your phone is configured.

4. If you have an external SD card inserted, tap **SD memory card** to see the contents of your external SD card.

Navigation

Navigation is an internet-connected GPS navigation system with voice guidance. You can type or speak your destination. To receive better GPS signals, avoid using your device in the following conditions:

- inside a building or between buildings
- in a tunnel or underground passage
- in poor weather
- around high-voltage or electromagnetic fields
- in a vehicle with tinted windows

Launching Navigation

1. From the Home screen, tap  → **Navigation** .
2. Read the Navigation information page and tap **Accept** to continue or **Don't accept** to exit.
3. Select one of the following options:
 - **Speak destination:** allows you to speak your destination.
 - **Type destination:** allows you to use the keypad to enter your destination.
 - **Go home:** takes you to your home address. The first time you are prompted to enter it.

- **Map:** takes you to the map location of your present location using GPS.
- **Recent Destinations:** allows you to access information on previous destinations you have used. This option only appears after you have entered one or more destinations.

4. Follow the on-screen instructions.

Phone

The Phone application allows you to access the dialer keypad, call logs, and favorites. For more information, refer to “*Call Functions*” on page 35.

Play Books

With Google Play Books, you can find more than 3 million free e-books and hundreds of thousands more to buy in the eBookstore.

1. From the Home screen, tap  → **Play Books** .
2. Log on to your Google account. For more information, refer to “*Creating a New Google Account*” on page 8.
3. Follow the on-screen instructions for using the Play Books application.

Play Magazines

With Google Play Magazines, you can subscribe to your favorite magazines and have them available to read on your phone at any time or any place.

1. From the Home screen, tap  → **Play Magazines** .
2. Log on to your Google account if you have not already done so. For more information, refer to “*Creating a New Google Account*” on page 8.
3. At the Welcome! display, tap the shop icon  to browse the full catalog.
4. Read the Google Play Terms of Service and tap **Accept**.
5. Sweep the screen to the left or right to view Categories, Featured, Top Selling, and New Arrivals.
6. Tap a magazine to see more information and subscribe.
7. Follow the on-screen instructions to subscribe to a magazine.

Play Movies

With Google Play Movies, you can rent thousands of different movies. You can watch instantly, or download your movie for offline viewing at a later time.

1. From the Home screen, tap  → **Play Movies** .
2. Log on to your Google account if you have not already done so.
3. Following the on-screen instructions for renting and viewing movies and TV shows.
4. Tap the **MOVIES** tab to view movies you can rent.
5. Tap the **PERSONAL VIDEOS** tab to view movies you have on your phone or memory card.
6. Press  for additional options.

Play Music

With Google Play Music, you can play music that you have added to your music file as well as any music you copied from your PC. While offline, you can listen to music you have copied from your PC.

1. From the Home screen, tap  → **Play Music** .
All music on your device and external SD card is displayed including Music folders that may contain multiple songs.
2. Tap a song to start playback.

3. From the main Play Music screen, you can tap any of the following tabs for a more detailed listing of songs: Playlists, Recent, Artists, Albums, Songs, and Genres.
4. Press  for additional options.

Play Store

Play Store provides access to downloadable applications and games to install on your phone. Play Store also allows you to provide feedback and comments about an application, or flag an application that might be incompatible with your phone.

Before using the Play Store you must have a Google Account. For more information, refer to “Using Gmail” on page 78.


1. From the main Home screen, tap **Play Store** .
2. If necessary, sign in to your Google account.
3. Tap **APPS, MOVIES, MAGAZINES, GAMES** or **BOOKS** to download or purchase content. You can also download updates to existing applications.
4. Follow on the on-screen instructions.

S Memo

The S Memo application allows you to create memos using the keypad, handwriting, or both. You can add images, voice recordings, and text all in one place.

Creating a New Memo

1. From the Home screen, tap  → **S Memo** .
2. Tap an existing Memo to open it then tap the screen to enter edit mode.
– or –
Tap  to start a new memo in text mode with the keypad displayed or tap  to start a new memo in drawing mode using your finger or a compatible on-screen writing tool. You can change back and forth in a memo to add text with the keypad and the pen.

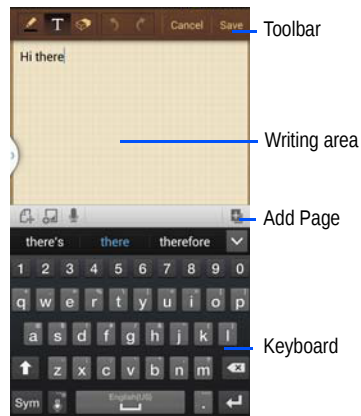

The icons that you see displayed on the screen are described in the following table:



Changes the view mode.



Edit the memo



Allows you to add free-format drawing.



Displays the keypad so you can add text.



Eraser tool allows you to erase marks and drawings.



Undo the last action.



Redo the last action that was undone.



Make a voice recording to add to the memo. This option is not available in free-format drawing mode.



Provides access to a quick selection bar. Choose from: Take picture, Images, Clipboard, Maps, and Clip art. These elements can be used within the memo.



Add an additional page to the memo.

3. When you are finished creating your memo, tap **Save** on the top menu bar.
4. Press  to access additional options.

S Planner

With the S Planner feature, you can consult the calendar by day, week, or month, create events, and set an alarm to act as a reminder, if necessary.

To access the Calendar:

1. From the Home screen, tap  → **S Planner** .
2. The following tabs are available on the right side of the display:
 - **Year**: displays the Year view.
 - **Month**: displays the Month view.
 - **Week**: displays the Week view.
 - **Day**: displays the Day view.
 - **List**: displays the List view.
 - **Task**: allows you to search for tasks.
3. Tap  (**New**) to create a new Calendar event.
4. Tap **Today** to display the current date indicated by a blue box.
5. Press  and select one of the following options:
 - **Go to**: displays a specific date.
 - **Delete**: allows you to delete All events, All events before today, or an individual event.
 - **Search**: allows you to search within your current events.
 - **Sync**: allows you to synchronize your calendar with one or all of your accounts. This option only appears when an account has been opened.

- **Calendars:** select the calendar options that you want displayed.
- **Settings:** displays a list of configurable settings.

S Planner Settings

1. From any Calendar view, press  → **Settings**.
2. Tap **View styles** and select an option.
 - Tap **Month view styles** and select an option.
 - Tap **Week view** and select a type.
3. Tap **First day of week** and select either **Local default**, **Saturday**, **Sunday** or **Monday**.
4. Tap **Hide declined events** to activate this option. A check mark indicates selection.
5. Tap **Lock time zone** (to lock event time based on your current user-selected time zone). Select a time zone from within the **Select time zone** field.
6. Tap **Show week number** to display the week numbers along the side of the week entries.
7. Tap **Set alerts and notifications** to adjust the event notification method. Choose from: **Alert**, **Status bar notification**, and **Off**.

8. Tap **Select ringtone** to assign a ringtone to a calendar event notification.
9. Tap **Vibration** to set the Event notification tone to vibrate.
10. Tap **Quick responses** to select quick responses to emailing guests.

S Translator

With the S Translator you can easily translate words and phrases into many different languages.

1. Sign in with your Samsung Account if you have not already done so. For more information, refer to “Creating a Samsung Account” on page 7.
2. From the Home screen, tap  → **S Translator** .
3. At the S Translator screen, tap the top language bar and enter your language.
4. Tap the language bar at the bottom of the screen to select the language that you would like to translate to.
5. Enter text into the upper box and tap . It will be translated into the language of the lower box.
– or –
Enter text into the lower box and tap .

It will be translated into the language of the upper box.

6. Tap either of the **Speak** buttons at the bottom of the screen to translate using either language by using your voice. The translation will appear automatically in the appropriate box.
7. Press  for additional options.

S Voice

With the S Voice application you can use your voice to perform operations that you would normally have to do by hand such as dialing a phone number, texting a message, playing music, etc.

1. From the Home screen, tap  → **S Voice** .
2. Read the Samsung Disclaimer, then tap **Confirm**.
3. Read the Terms of Service, then tap **Agree**.
4. Read the information on the **About S Voice** screen, then tap **Next**.
5. Read the information on the **Say what you want** screen, then tap **Next**.
6. Read the information on the **Wake up S Voice** screen, then tap **Next**.

7. Read the information on the **Edit what you said** screen, then tap **Next**.
8. Read the information on the **Help** screen, then tap **Finish**.
9. At the S Voice screen, tap  or say "Hi Galaxy" to wake up S voice.
10. Speak into the phone and follow the on-screen instructions.
11. Press  for additional options.

Samsung Apps

With Samsung Apps, you can download hundred of applications from a variety of categories.

1. Sign on to your Samsung account if you have not already done so.
2. From the Home screen, tap  → **Samsung Apps** .
3. Tap an application that you would like, then follow the on-screen instructions to download.
4. Press  → **Help** for additional information.

Samsung Hub

Samsung Hub makes it easy to find, sample, and purchase movies, books, games, and information, in one user-friendly location. You can rent or purchase your favorite content and watch from any location. Samsung Hub is your gateway to mobile entertainment.

Note: Samsung Hub usage is based on service availability.

Important! You must be using an active Wi-Fi/4G/LTE connection to preview and download a media file. The internal memory acts as a storage location for your downloaded rental or purchase.

Creating a New Samsung Hub Account

Before you can rent or buy media, you must first create an account. Enter the required information.

1. Log in to your Samsung account if you have not already done so.
2. From the Home screen, tap  → **Samsung Hub** .
3. When prompted to connect via mobile networks, select either **Cancel** or **Connect**.

4. If notified your Samsung account is not yet active or verified, tap **OK**. You must be signed in to your Samsung account to use the application's various features.
5. Press  → **Help** for additional information.

Using Samsung Hub

The main Samsung Hub screen provides an overview of all the available categories on one page, such as: Video, Books, Games and Learning. The overview page also displays recently added media that you can rent or purchase.

1. From the Home screen, tap  → **Samsung Hub** - The Overview screen (landing page) displays a main access for all available categories and recently available content for purchase or rental.
2. Scroll across the screen to select from the following available pages:
 - **VIDEO:** displays featured films available for purchase/rent from the movie store. This page also allows you to search for new content, or navigate directly to the Movie & TV store page by clicking the Video link at the top of the page.

- **BOOKS:** displays featured Book content available for purchase from the Book store. This page also allows you to search for new content, or navigate directly to the Book store page by clicking the Books link at the top of the page.
 - **GAMES:** displays featured Game content available from the Game store. This page also allows you to search for new content, or navigate directly to the Game store page by clicking the Games link at the top of the page.
 - **LEARNING:** displays featured Learning content available from the Learning store. This page also allows you to search for new content, or navigate directly to the Learning store page by clicking the Learning link at the top of the page.
3. To purchase or view featured content in more detail, tap on any content (Thumbnail or text) to navigate to the product detail page.
 4. Depending on the content, you can either purchase, rent, or stream the content directly from the product detail page.
 5. Choose a payment method, then follow the on-screen instructions.

Samsung Hub Notices

- Any media item (Media Content) may be rented or purchased after you create an account in Samsung Hub.
- Media Content that is purchased and downloaded may be viewed concurrently on up to five (5) devices with Samsung Hub (or “the service”) that are also registered to the same account.
- You may remove a device from your account no more than once every 90 days.
- You may remove Media Content from a device as many times as you’d like. You will have the ability to re-download the Media Content later subject to content re-download availability and content provider permissions.
- You may need network coverage to access Media Content you have acquired through the Service.
- You can use 3G, 4G, or Wi-Fi connectivity to download Media Content.
- Unlike purchased Media Content, rented Media Content will be viewable on only 1 device in your account at a time.
- Media Content is downloaded and saved to your authorized device’s SD card. No SD Card included out of box.

- Your Media Content may pause/stop or not download in networks where there is a weak signal.
- You may begin watching downloaded Media Content as soon as a) license acquisition has occurred and b) sufficient amount of the Media Content has been buffered.
- You must finish watching Media Content within the time limit set out for each piece of content (which may be as short as 24 consecutive hours).
 - Stopping, pausing or restarting rented Media Content does not extend the available viewing time.
 - In no event will rented Media Content be available for a period of more than thirty (30) days (or shorter on a title-by-title basis) after the Media Content has been rented (e.g., if you begin viewing rented Media Content on the 29th day after the rental transaction, but do not finish viewing the entire title, that rented Media Content may not be available for the entire twenty-four (24) consecutive hour period if such period would extend the viewable time beyond the thirty (30) day rental window).

- Unless otherwise restricted by the Content Providers, you can download Media Content to your TV using HDMI connections; otherwise, you cannot play Media Content downloaded from your mobile device output.

Samsung Link

This application wirelessly synchronizes your Samsung device with your TV, streams content, and even keeps tabs on who calls or sends text messages with real-time, on-screen monitoring. Samsung Link makes staying connected easy.

Samsung Link allows users to share their in-device media content with other external devices using DLNA certified™ (Digital Living Network Alliance) Devices. These external devices must also be DLNA-compliant. Wi-Fi capability can be provided to TVs via a digital multimedia streamer.

Important! You must first connect both of your communicating devices to the same Wi-Fi. For more information, refer to “*Wi-Fi Settings*” on page 83.

1. From the Home screen, tap  → **Samsung Link** .
2. Tap **Sign in** to sign into your Samsung Account if you have not already done so. For more information, refer to “*Creating a Samsung Account*” on page 7.

3. If prompted, read the on-screen message about network charges and tap **OK** to continue and return to the main Samsung Link screen.
4. Tap **Start** and follow the on-screen prompts.
5. Scroll across the application screen to view either **MY RECENT CONTENT** or **DEVICES & STORAGE**.
6. The DEVICES & STORAGE screen contains two separate streaming media options:
 - **Registered storage:** allows you to receive and playback media stored externally (server, laptop, etc.) directly on your device by allowing you to add a Web storage service for streaming content.
 - **Registered devices:** allows you to stream/share selected multimedia content from your device to DLNA compliant device connected to the same Wireless Access Point.

Configuring Samsung Link Settings

Samsung Link must first be configured prior to its initial use. You must setup parameters such as connected Wi-Fi, Items to share, source server address, and external device acceptance rights.

1. From the Home screen, tap  → **Samsung Link**  → **DEVICES & STORAGE** tab.
2. Press  and then tap **Settings** and configure the following settings as desired:
 - **Registered storage:** allows you to add a Web storage location. Without a storage service/location added, you will not be able to use Samsung Link.
 - **My device:** displays your device name as it is used with Samsung Link. Tap to change the device name.
 - **Save to:** allows you to save your media to your internal phone memory or to an SD card.
 - **Auto upload:** allows you to enable automatic upload of images from your device to those storage locations specified within the Web storage list. Touch and slide the slider to the right to turn it on .
 - **Video optimisation:** allows you to setup the video quality for streamed video content. Touch and slide the slider to the right to turn it on .

- **Password lock:** allows you to restrict access to Samsung Link by requiring a user enter the currently active and associated Samsung account password. Touch and slide the slider to the right to turn it on .
- **My account:** displays Samsung account information.
- **Customer support:** allows you to contact the Samsung Link team via a new email from an available email account.
- **About this service:** displays application information

Sharing Media via Samsung Link to a Target Device

Important! Make sure all communicating devices are connected to the same Wi-Fi.

1. Launch AllShare Play/Samsung Link on the target device (such as an Internet TV, Samsung Tablet, etc.).
2. From the Home screen, tap  → **Samsung Link** .

Note: You must be signed in to your Samsung Account before you can use this feature.

3. Tap your device name from the **Registered devices** area.

4. Tap an available category tab (Pictures, Music, Movies, or Files) and select a file.
 - A file with  in the upper-left indicates it is stored remotely on a Web storage location. Selecting this media causes your device to access the file currently stored on your services' servers.
5. Tap an available on-screen file, image, or video to place a green check mark alongside it.
6. Tap  (**Stream to connected devices**) and select an available target device to begin streaming.
7. On a target device (ex: Internet TV) select the on-screen **Allow** button to continue.

Note: At this stage your device is requesting access to share media with the external source.

8. Confirm  (**Samsung Link Controller enabled**) appears in the Notification area at the top of the device to indicate you are using your device as the media source.

Settings

This widget navigates to the sound and phone settings for your phone. It includes such settings as: display, security, memory, and any extra settings associated with your phone. For more information, refer to “*Changing Your Settings*” on page 82.

Story Album

With Story Album, you can create digital albums of your special moments on a timeline, and if you wish, you can have your album published as a hard copy.

1. From the Home screen, tap  → **Story Album** .
2. Read the introductory information and tap **Next**.
3. Tap **Start** to begin your Story Album.
4. Follow the on-screen instructions.
5. Press  → **Help** for additional information.

TripAdvisor

With the TripAdvisor, you can plan and have your perfect trip. With over 75 million reviews and opinions by travelers, it is easy to find the best hotels, restaurants, and fun things to do.

1. From the Home screen, tap  → **TripAdvisor** .

2. Sign in with your Samsung Account if you have not already done so.
3. Follow the on-screen instructions to use TripAdvisor.
4. Press  for additional options.

Video

The Video application plays video files stored on your phone or microSD card.

1. Tap  → **Video** .

All videos that you have on your phone and memory card will be displayed.

2. Tap the video that you want to play.

The video will begin to play.

3. The following video controls are available:



Pause the video.



Start the video after being paused.



Press and hold to rewind the video. Tap to go to previous video.



Press and hold to fast-forward the video. Tap to go to next video.



Volume control.



PIP (Picture In Picture) view. The video will be played in a small window so you can use your phone for other purposes while watching the video. Double-tap screen to return to previous size.



Original size view. The video will be played in its original size.



Full-screen in ratio view. The video is enlarged as much as possible without becoming distorted.



Full-screen view. The entire screen is used, which may cause some minor distortion.



Maintain aspect ratio.



Streams the video to another device via Samsung Link.

Note: The screen view icons are a multi-way toggle. The icon that is displayed is the mode that will appear after the icon is tapped.

4. Press for additional options.

Voice Recorder

The Voice Recorder allows you to record an audio file and then immediately share it using Wi-Fi Direct, Messaging, Gmail, or via Bluetooth. Recording time will vary based on the available memory within the phone.

1. From the Home screen, tap → **Voice Recorder** .
2. To start recording, tap **Record** and speak into the microphone.
3. During the recording process you can either tap **Stop** to stop and save the recording or **Pause** to temporarily halt the recording. After pausing, tap **Record** to resume recording. Once the audio recording has stopped, the message is automatically saved. Tap **Cancel** to cancel the recording without saving.
4. Tap **List** to display a list of all your voice recordings. Tap a voice recording to play it.
5. Press for additional options.

Voice Search

The Google Voice Search application allows you to search the web using only your voice.

1. From the Home screen, tap  → **Voice Search** .
2. When the Google Voice Search screen displays, speak the word or words that you would like to search for on the internet.
3. If the timer expires and the mic icon changes from red to gray, tap the mic icon and speak the word or words that you would like to search for on the internet.
Results are displayed on your phone.
4. The following options are available at the bottom of your screen:
 - **Web:** After selecting a different option, tap Web to return to the original search results.
 - **Images:** Displays images for your search.
 - **News:** Displays news related to your search.
 - **MORE:** After tapping MORE, sweep your screen to the left to see additional options such as Videos, Blogs, Discussions, Books, and Applications.
 - **Phone:** Displays a phone number if applicable.

WatchON

With the WatchON application, you can use your phone as a remote control for your TV.

Important! Before initiating use, verify you have an active Internet connection available (either mobile network or Wi-Fi connection).

Note: Before beginning your initial WatchON application setup, confirm your TV is turned off.

Initial Configuration

1. Sign into your Samsung account.
2. From the Home screen, tap  → **WatchON** .

Note: If you are not connected to an active Wi-Fi, you may be prompted to continue the set up process via a mobile network. Click **Connect** to proceed.

3. Select your desired country or region for your TV Guide's source listing and tap **Next**.

4. Enter your current postal code and tap **Done**. This code must correspond to the location of your desired TV and set top box.
5. From the **Find your TV service** screen, select your service provider from the list.
6. On the Personalize screen, tap **Personalize** to personalize program suggestions or **Skip** to skip this step.
7. At the PEEL DISCLAIMER screen, tap **Agree** to accept the disclaimer.
8. From the top of the main screen, tap  (**Remote Control**) → **Set up now**.
9. From the **Select your TV brand** screen, tap your TV's manufacturer name.
 - If you have a brand of TV not listed or you are using a projector, select from one of the following two options. Choose from either **Show other brands** or **I have a home projector**.
10. Aim your device at the TV and tap  (**Power**) to confirm the set up process completed successfully and the correct TV IR codes were selected.

Note: The process of the initial TV activation can take up to 10 seconds. Please do not press the button again.

11. If the TV turned on, tap **Yes, this code 1 works**.
– or –
If the TV did not turn on after tapping  (**Power**) and waiting 10 seconds, tap **No, test next code 2** or **Send this code 1 again**.
12. From the **Select your channel source** screen, select the entry that corresponds to your current channel control method:
 - **Set-top box:** selected when changing channels is done via a receiver box. Channels are not changed via the TV remote but rather through the receiver/box.
 - **My xxx TV:** selected when a signal is fed directly into the TV and no box is used. Channels are changed directly on the TV by using the TV remote and not a box's remote.

Note: Try matching your current channel selection method.

13. Select the receiver box brand from the available list.

Using WatchON

To change channels:

1. Sign into your Samsung account.
2. From the Home screen, tap  → WatchON .
3. From the top of the main screen, tap  (Remote Control). This launches an on-screen remote control.
4. Press  and tap  **Change Room** to choose from different receivers/boxes in different rooms. (Example: Living Room box, Bedroom box, etc.).
5. Press  to return to the main menu.

Locating your favorite programming:

1. Sign into your Samsung account.
2. From the Home screen, tap  → WatchON .
3. From the main screen Tap  (Combined View) to reveal available media categories.
4. Select an available category.

– or –

Tap **Channel Guide** to display on your TV an on-screen listing of available set top box shows.

For additional information on the WatchON application, press  and then select **Help**.

WatchOn Settings

1. From the Home screen, tap  → WatchON .
2. Press  and then select an available on-screen option:
 - **Change room:** allows you to select a previously configured room.
 - **Edit channels:** add or remove channels from the channel list.
 - **Settings:** provides access to the Samsung WatchOn settings menu.
 - **About:** displays on-screen information about the application.
 - **Help:** displays on-screen help information.

Personalize WatchON

You can personalize your application to do things such as show content only from your selected media categories, or add an additional room's set top box.

To configure your Just for you settings:

The Just for you option displays available content matching your activated media categories. These categories can be configured during your initial set up or at any later time.

1. Sign into your Samsung account.
2. From the Home screen, tap  → WatchON .

3. From the main screen Tap  (Combined View) → **Just for you**.
4. From the **On TV** tab, press  and then select **Settings**.
5. Access parameters such as **Basic info**, **Liked programs**, **Disliked programs**, **Genres** and **Sports** to then configure and enable those parameters you would like to show in the Just for you tab.

To add a new room:

Your device can be used to control boxes/receivers from several rooms. You could go from controlling your set top box in your living room and then move into your bedroom to do the same.

1. Sign into your Samsung account.
2. From the Home screen, tap  → **WatchON** .
3. From the **On TV** tab, press  and then select **Settings** → **Add room**.
4. Name the new room and tap **Next**.
5. Enter your current zip code and tap **Done**. This zip code must correspond to the location of your desired TV and set top box.

6. Follow steps 4-10 starting on page 165 to complete the process.

YouTube

YouTube™ is a video sharing website where users can upload and share videos. The site is used to display a wide variety of user-generated video content, including movie clips, TV clips, and music videos, as well as video content such as video blogging, informational shorts and other original videos.

Note: YouTube is a data-intensive feature. It is recommended that you use Wi-Fi connection or a large data plan to avoid additional data charges.

1. From the Home screen, tap  → **YouTube** .
2. At the YouTube introduction screen, tap **OK**.
3. Tap the search field  to search for specific videos, scroll down to browse through the main page thumbnails, or swipe to the right to explore additional options.
4. To view a video, tap an available preview thumbnail or tap the title link.
5. Press  for additional options.

Note: Preloading YouTube videos will use some of your device's storage space and may result in additional charges if your Wi-Fi plan is not unlimited.

Section 10: Health and Safety

Getting the Most Out of Your Reception

Keeping Tabs on Signal Strength

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal. If you're inside a building, being near a window may give you better reception.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Maintaining Your Phone's Peak Performance

There are several simple guidelines for operating your phone properly and maintaining safe, satisfactory service.

- Speak directly into the mouthpiece.

- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it's inoperable, return it to a dealer store or call Customer Support for service.

Note: For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

Maintaining Safe Use of and Access to Your Phone

Failure to follow the instructions outlined may lead to serious personal injury and possible property damage.

Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

When using your phone in the car:

- Get to know your phone and its features, such as speed dial and re-dial.
- When available, use a hands-free device.
- Position your phone within easy reach.
- Let the person you are speaking to know you are driving. If necessary, suspend the call in heavy traffic or hazardous weather conditions.
- Do not take notes or look up phone numbers while driving.
- Dial sensibly and assess the traffic. If possible, place calls when stationary or before pulling into traffic.
- Do not engage in stressful or emotional conversations that may divert your attention from the road.
- Dial 911 to report serious emergencies. It's free from your wireless phone.
- Use your phone to help others in emergencies.
- Call roadside assistance or a special non-emergency wireless number when necessary.

Note: Always turn off the phone in health care facilities and request permission before using the phone near medical equipment.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, Transport Canada regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn off your phone when in a blasting area or in other areas with signs indicating that two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn off your phone when you are in an area with a potentially explosive atmosphere. Although it is rare, your phone or its accessories could generate sparks. Sparks

could cause an explosion or a fire resulting in bodily injury or even death. These areas are often, but not always, clearly marked.

These areas include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust, or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

Note: Never transport or store flammable gas, liquid, or explosives in the compartment of your vehicle that contains your phone or its accessories.

Restricting Children's Access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone, dial 911 by mistake, or make calls that increase your phone bill.

Warning Regarding Display

The display on your handset is made of glass or acrylic and could break if your handset is dropped or if it receives significant impact. Do not use if screen is broken or cracked as this could cause injury to you.

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Use only Samsung approved batteries and desktop chargers.
These chargers are designed to maximize battery life. Using other batteries or chargers voids your warranty and may cause damage.
- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.

- It's best to replace the battery when it no longer provides acceptable performance. When used correctly, the battery can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:
 - Less than one month:
-4° F to 140° F (-20° C to 60° C)
 - More than one month:
-4° F to 113° F (-20° C to 45° C)

Disposal of Lithium Ion (Lilon) Batteries

For safe disposal options of your Lilon batteries, contact your nearest service center.

Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Note: For safety, do not handle a damaged or leaking Lilon battery.

Acknowledging Special Precautions and Industry Canada Notice

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment, and void your authority to operate this equipment. Only use approved batteries, antennas, and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.

Information to User

This equipment has been tested and found to comply with the limits of a Class B digital device. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular

installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient/relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Warning! At very high volumes, prolonged listening to a headset can damage your hearing.

Specific Absorption Rates (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their

highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to Industry Canada. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values for the I527M are:

Head : max 0.18 W/kg

Body : max 0.97 W/kg

This phone has been tested and meets RF exposure guidelines when used with an accessory that contains no metal and that positions the mobile device a minimum of 1.0 cm from the body.

Owner's Record

The model number, regulatory number, and serial number are located on a nameplate inside the battery compartment.

Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: SGH-I527M

Serial No.:

A

- Abc mode** 32
- About Device** 122
- Accounts** 112
- Add accounts** 112
- Adding a New Contact**
 - Idle Screen 47
- Address Book** 47
 - Adding a New Contact 47
 - Adding Pauses to Contact Numbers 48
 - Copying a contact to the Phone 57
 - Copying Contacts to Phone 57
 - Copying Contacts to SIM Card 56
 - Deleting Address Book Entries 57
 - Deleting Contacts from SIM card 57
 - Dialing a Number 49
 - Favorites 55
 - Finding an Address Book Entry 49
 - Group Settings 54

- Managing Address Book Contacts 56
- Service Dialing Numbers 57
- Using Contacts List 49

Address Book Options 52

Air Gesture

- Quick Glance 19

Air view 111

Airplane mode 94

Alarm 135

Android Beam 89

Applications

- Using the Camcorder 65
- Using the Camera 59
- World Clock 136

Applications settings

- managing 120
- running services 120

B

Back key 18

Backing up your data 113

Battery

- charging 3
- Display Percentage 4
- Installing 2
- Low Battery Indicator 4

Battery Care 172

Bigger Font

- Setting 104

Blocking Mode 102

- On 102

Bluetooth

- Outgoing Headset Condition 98
- Sending contacts 131

Books

- Play Books 152

Bubble

- Options 73

C

Calculator 133

Calibration 110

Call Functions 35

- 3-Way Calling (Multi-Party Calling) 44

- Address Book 37
- Adjusting the Call Volume 42
- Answering a Call 38
- Call Back Missed Call 39
- Call Duration 41
- Call forwarding 46
- Call Log 39
- Call waiting 46
- Correcting the Number 36
- Dialing a Recent Number 36
- Ending a Call 36
- International Call 35
- Making a Call 35
- Manual Pause Dialing 35
- Options During a Call 42
- Putting a Call on Hold 43
- Saving a recent call number to
 - Address Book 40
- Searching for a Number in Address Book 46
- Using the Speakerphone 45
- Call rejection** 97
- Call Sound**
 - Adding More Volume 42

- Personalize 43
- Camcorder** 65
 - Settings 62
 - Shooting Video 65
- Camcorder Options**
 - Camcorder Options after a Video is Taken 66
- Camera**
 - Modes 60
 - Quick Settings 61
 - Settings 62
 - Taking Pictures 59
- Changing Your Settings** 82
- Charging battery** 3
- ChatON** 80
- Clock** 135
- Contacts** 47
- Cookies**
 - Emptying 144
- Creating a Playlist** 149
- D**
- Dialing Options** 39
- Display**
 - icons 14

- Using Negative Colors 104
- Downloads** 138
- Draft Messages** 70
- E**
- Editing a Picture** 63
- Email** 76
 - Creating a Corporate Email Account 77
 - Creating Additional Email Accounts 77
 - Switching Between Email Accounts 77
- Emergency Alerts (CMAS)** 76
- Emergency Calls**
 - Making 36
 - With SIM 37
 - Without SIM 36
- Entering Text**
 - Changing the Text Entry Mode 32
 - Using 123Sym Mode 33
 - Using Abc Mode 32
 - Using Swype 34
 - Using Symbol/Numeric Mode 33
- Extra Volume** 42

F

Flight mode 85

Flipboard 138

Font Size

Changing 104

G

Gallery 66, 139

viewing pictures 66

viewing videos 67

Gestures 109

Overview 19

Getting Started 1

Setting Up Your Phone 1

Voice mail 9

Gmail 78

Google

Ads 139

Settings 139

Google Chrome 134, 135

Google Maps 147

Google Play Music 153

Google Settings 139

Google Voice Typing 34

Google voice typing settings 106

178

Google+

Settings 139

Group

Adding a contact 54

Editing 55

Removing a contact 54

Group Settings

Editing a Caller Group 55

H

Handwriting feature 33

Health and Safety 170

Children 172

Dangerous Areas 171

Driving 170

Flying 171

Home key 18

Home screen mode 96

Hotspots 85, 87, 88

I

Icons

Application 133

Indicator 14

Icons, description 14

In-Call Options 42

Incognito 143

Create Window 143

Exit Window 143

Industry Canada 173

International Call 35

Internet 141

Isis Wallet 147

K

Keyboard Input Methods 105

Keyboard settings 106

Keypad

Changing Text Input 32

Kies via Wi-Fi 87

L

Landscape 32

Language and input 105

Language and keyboard settings

select locale 105

Linking Contacts 50

Local 147

Location services 114

Location services settings 91

Lock Screen

Say Wake-Up Command 92

Shortcuts 92

M

Maps 147

Memory Card 30

Menu

key 18

Menu Navigation 18

Message

Register a Number as Spam 73

Thread Options 72

Message Options 70

Message Search 74

Messaging

Adding a Signature 76

Block Unknown Senders 76

Creating and Sending Text

Messages 69

Deleting a message 73

Draft 70

Gmail 78

Handwriting 33

Locked 70

Options 70

Scheduled Messages 70

Settings 74

Signing into Email 76

Signing into Gmail 78

Spam 70

Types of Messages 69

microSD card 30

microSDHC card 30

Mobile Hotspot 87

Mobile Web 141

Entering Text in the Mobile Web

Browser 142

Using Bookmarks 144

Mono

Audio Setup 104

Motion 109

Activate 19

Overview 19

Motions 109

Movies 152

Multi Window

Activate/Deactivate 22

Customizing 23

Increase App Window Size 24

Maximize App 25

Panel Relocation 22

Rearrange Apps 23

Removing Apps 23

Restoring Apps 23

Running Multiple Apps 24

Switch Arrangement 24

Tab Repositioning 22

Using 21

Music 148

Music Player 148

adding music 149

creating a playlist 149

removing music 149

Mute 42, 45

My Files 150

N

Navigation 151

command keys 18

context-sensitive menus 19

terms used 18

touch gestures 18

Nearby devices 90

Negative Colors 104

NFC

On 67
Noise Reduction 43
O
Owner's Record 175
P
Palm Motion
 Activate 20
 On 20
PC Connections 132
Phone
 Front View 11
 icons 14
 Rear View 13
 Side View 12
 Switching On/Off 5
Photo
 Editing 63
Picture
 Color Correction 64
 Face Corrections 64
 Frame 64
Pictures 66, 139
 Gallery 66, 139
 Sharing 67
 180

Places 152
Play Books 152
Play Movies 152
Play Music 153
Play Store 153
Pointer speed 108
Power Saving Mode 102
Powering
 Off 5
 On 5
Privacy settings
 factory data reset 114
Q
QWERTY keypad 32
R
Red Eye
 Correction 64
Reject list 41
remote control WatchON 165
Reset
 factory data 114
S
S Beam 89

On 67
 Sharing Multiple Pictures 68
 Sharing Pictures 67
S Memo 153
 Creating a New Memo 154
S Planner 155
S Translator 156
S Voice 157
 Set Wake-Up Command 92
Samsung Hub
 Creating a New Account 158
 Using 158
Samsung Link 160
 Sharing Media 162
Samsung Link Settings 161
SAR 174
scientific calculator 134
SD Card 30
Security 113, 115
Security settings
 device administration 117
 trusted credentials 118
Service Dialing Numbers 57
Settings 62, 82

- Shortcuts** 14
- Signal strength** 170
- SIM card**
 - installation 1
 - Installing 1
- Smart screen** 110
- Smart Switch** 10
- Snooze** 136
- Software Update** 123
- Spam**
 - Add Number 73
 - Block Unknown Senders 76
 - Settings 76
- Spam Messages**
 - Assigning 70
- Speakerphone Key** 45
- Specific Absorption Rates** 174
- Stopwatch** 136
- Swap** 43
- SWYPE**
 - entering text using 34
- Symbol/Numeric mode** 33
- Synchronization settings**
 - auto-sync 91

- Synchronizing Accounts** 112
- T**
- Tethering** 87
- Text Input**
 - Abc mode 32
 - Methods 31
 - numeric mode 33
 - symbol mode 33
- Timer** 137
 - Automatic Answering 98
- Touch Screen** 5
 - Lock/Unlock 5
- Transferring Large Files** 67
- TranslateMessage Bubble** 73
- Translator** 156
- Travel Charger** 3
 - Using 3
- U**
- Understanding Your Phone** 10
 - Features of Your Phone 10
 - Front View 11
 - Rear View 13
 - Side Views 12
- Unmute** 42

- USB settings**
 - mass storage device 132
- USB Tethering** 87
- V**
- Video** 163
- Video player** 163
- Voice control** 111
- Voice Mail**
 - Accessing 9
 - From Another Phone 9
 - Setup 9
- Voice Recorder** 164
- Volume** 94
- W**
- WatchON** 165
 - Adding a New Room 168
 - Changing Channels 166
 - Configure Just For You 167
 - Initial Configuration 165
 - Locating Programs 167
 - Personalize 167
 - Settings 167
 - Using 166
- Web** 141

Widgets

Gmail 139

Settings 163

Voice Recorder 164

Wi-Fi 125

using Kies via Wi-Fi 91

Wi-Fi Direct 83, 127

Wi-Fi Settings 83

World Clock

Deleting an Entry 136

World clock 136

Y

YouTube 168