Elevation Settings—If the rifle shoots high: turn the bottom wheel(1) clockwise (see illustration 8c). If the rifle shoots low: turn the wheel counterclockwise (UP)

Windage Settings—Windage settings are controlled by turning the screw(2) on the side (see illustration 8c). If the air rifle shoots to the right: adjust clockwise



(marked "R→"). If it shoots to the left: adjust counterclockwise.

STORING YOUR AIR RIFLE

NEVER STORE A LOADED OR COCKED GUN. Unload pellet from the air rifle. Keep air rifle away from children and untrained shooters. Store pellets separately from the air rifle to keep them from untrained shooters. Protect your air rifle from moisture and dirt; clean air rifle and wrap it in a smooth, dry cloth. If you are going to store your airgun for an extended length of time be sure the barrel is protected. This can be accomplished by coating the bore with RWS Spring Cylinder Oil. Always use a soft cloth and insert the cleaning rod from the breech end on break barrel rifles. On under-lever cocking rifles, insert the cleaning rod from the muzzle end. Remove the oil completely before the next use. Always check to see if the airgun is "ON SAFE" and unloaded when getting it from another person or from storage.

DO NOT MODIFY YOUR AIR RIFLE

CAUTION: THE COMPONENTS OF YOUR AIRGUN WERE ENGINEERED AND MANUFACTURED TO DELIVER OPTIMUM PERFORMANCE. ANY MODIFICATION OR TAMPERING WITH YOUR AIRGUN MAY CAUSE A MALFUNCTION, WILL VOID YOUR WARRANTY, AND MAY MAKE IT UNSAFE TO USE. ANY CHANGE IN PERFORMANCE (SUCH AS A LOWERED TRIGGER PULL FORCE AND SHORTENED TRIGGER TRAVEL), INDICATES POSSIBLE MODIFICATION, TAMPERING, AND/OR WEAR. SUCH AIRGUN SHOULD BE INSPECTED, REPLACED, OR PROPERLY REPAIRED BY ONLY QUALIFIED UMAREX USA PERSONNEL. ANY AIRGUN THAT HAS BEEN DROPPED SHOULD BE CHECKED BY QUALIFIED PERSONNEL TO ENSURE THAT ITS FUNCTION HAS NOT BEEN AFFECTED.

AWARNING: A AIR RIFLE THAT IS NOT OPERATING PROPERLY MAY BE DANGEROUS. IT SHOULD BE KEPT SAFELY FROM USE BY ANYONE UNTIL REPAIRED OR DESTROYED. DO NOT TRY TO TAKE THE AIR RIFLE APART. IT IS DIFFICULT TO REASSEMBLE AND IMPROPER DISASSEMBLY OR REASSEMBLY CAN CAUSE SERIOUS INJURY OR DEATH.

AWARNING: DO NOT BRANDISH OR DISPLAY THIS AIRGUN IN PUBLIC – IT MAY CONFUSE PEOPLE AND MAY BE A CRIME. POLICE AND OTHERS MAY THINK IT IS A FIREARM. DO NOT CHANGE THE COLORATION AND MARKINGS TO MAKE IT LOOK MORE LIKE A FIREARM. THAT IS DANGEROUS AND MAY BE A CRIME.

AMMUNITION

Your Walther Air Rifle is designed to fire caliber .177 lead pellets only. We recommend the use of RWS Pellets because of their superb accuracy and dimensional uniformity. The correct caliber is clearly stamped on the barrel near the breech block or on the breech block.

NEVER DRY FIRE YOUR AIR RIFLE

If the air rifle is fired without a lead pellet or RWS Cleaning Pellet in the breech, it will cause the piston to bottom out in the cylinder which can permanently damage the air rifle.


CARE AND MAINTENANCE


CAUTION: BEFORE ANY CARE, CLEANING, OR MAINTENANCE, ALWAYS BE SURE YOUR AIR RIFLE IS "ON SAFE" AND UNLOADED. KEEP IT POINTED IN A SAFE DIRECTION. IT IS IMPORTANT TO MAINTAIN YOUR AIRGUN PROPERLY.

WORKING PARTS: The working parts (piston and mainspring) require very little lubrication. Two(2) drops of RWS Air Chamber Lube every 1000 shots will suffice. It is easily applied through the compression chamber port with a 3 1/2" applicator needle (see illustration 9a). The wearing surfaces at the barrel hinge, the cocking arm, and the trigger mechanism should be lubricated with RWS Spring Cylinder Oil (see illustration 9b). Mainsprings should be oiled every 1000 shots with six(6) drops of RWS Spring Cylinder Oil (see illustration 9c). Remember, a little is good—a lot is not better.

CAUTION: CHECK THE TIGHTNESS OF THE FRONT TRIGGER GUARD AND STOCK SCREWS BETWEEN, DURING, AND AFTER SHOOTING ACTIVITY. LOOSE SCREWS WILL AFFECT YOUR ACCURACY AND MAY CAUSE INJURY OR DEATH.

BARREL: In day to day use, very little dirt or residue will accumulate in the bore. This can be removed using soft RWS Cleaning Pellets. Note: High quality RWS Lead Pellets not only increase accuracy, they help to reduce lead deposit. During periods of regular use the bore of the barrel should be cleaned periodically by means of a felt wad or cleaning rod with wool mop. Wire brushes should not be used. Insert rod from breech end, do not remove barrel seal (insert from muzzle end on break-barrel models).

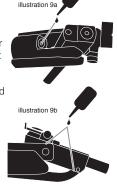

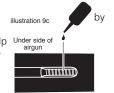

SURFACE: The exposed metal parts (rear sight, receiver, screw heads, sight hood, etc.) are an air rifle blue finish and MUST be wiped clean using a slightly oiled cloth after handling to prevent rust. Use light acid free and resin free oil. RWS Spring Cylinder Oil is excellent for this.

CAUTION: OILS THAT CONTAIN ACID OR RESIN CAN DAMAGE THE BREECH SEAL, COMPRESSION SEAL, AND POSSIBLY THE FINISH OF THE STOCK.

WARRANTY AND REPAIR

Do not return defective or damaged product to the dealer. If your air rifle needs repair, call Umarex USA (479) 646-4210 and ask for the Service Department or visit www.UmarexUSA. com. DO NOT ATTEMPT TO DISASSEMBLE IT! Your airgun requires special tools and fixtures to repair it. Any disassembly or modification not performed by Umarex USA will void the warranty.

ONE YEAR LIMITED WARRANTY

This product is warranted to the retail consumer for one (1) year from date of purchase against defects in material and workmanship and is not transferable.

WHAT IS COVERED—Replacement parts and labor.

WHAT IS NOT COVERED—Shipping charges to Umarex USA for defective product and damages caused by abuse or failure to perform normal maintenance as well as any other expense. Consequential damages, or incidental expenses, including damage to property. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

WARRANTY CLAIMS—Warranty Claims and Repair for U.S. and Canadian customers only. Call Umarex USA (479)-646-4210 and ask for the Service Department. If it is determined a return is necessary, you will be issued a Return Authorization Number. Write this number boldly on the box and return the product prepaid to Umarex USA. Your name, address, phone number and a note explaining the defect found must be included in the package. A copy of the original purchase receipt must accompany the return. Include a check made to Umarex USA in the amount of \$21.95 to cover shipping and handling.

IMPLIED WARRANTIES—Any implied warranties, including the implied warranties of merchantability and fitness for a particular purpose, are limited in duration to one (1) year from date of retail purchase. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. TO THE EXTENT ANY PROVISION OF THIS WARRANTY IS PROHIBITED BY FEDERAL, STATE, OR MUNICIPAL LAW WHICH CANNOT BE PREEMPTED, IT SHALL NOT BE APPLICABLE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE AND COUNTRY TO COUNTRY.

TO VALIDATE THIS WARRANTY—Send in the registration card within 30 days to: Umarex USA, 7700 Chad Colley Boulevard, Fort Smith, Arkansas 72916 or **Register online at www.UmarexUSA.com**.

UMAREXUSA

7700 Chad Colley Boulevard, Fort Smith, Arkansas 72916 USA Phone: 1-479-646-4210 www.UmarexUSA.com



OWNER'S OPERATION MANUAL



WARNING: NOT A TOY. ADULT SUPERVISION REQUIRED.
MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY OR DEATH.
MAY BE DANGEROUS UP TO 575 YARDS (526 METERS).

THIS IS A HIGH POWERED AIRGUN FOR USE BY THOSE 16 YEARS OF AGE OR OLDER. READ ALL INSTRUCTIONS BEFORE USING. THE PURCHASER AND USER SHOULD CONFORM TO ALL LAWS GOVERNING THE PURCHASE, USE AND OWNERSHIP OF AIRGUNS.

08R1

WARNING: THIS AIR RIFLE CAN CAUSE SERIOUS INJURY OR DEATH. READ AND FOLLOW THE INSTRUCTIONS CAREFULLY. DO NOT LOAD A PELLET INTO THE AIR RIFLE UNTIL YOU ARE READY TO SHOOT. IF YOU DO LOAD A PELLET AND THEN DECIDE NOT TO SHOOT, REMOVE IT EITHER MANUALLY OR BY SHOOTING THE AIR RIFLE AT A SAFE TARGET. AN UNLOADED, UNCOCKED AIR RIFLE IS SAFEST. ACCIDENTS HAPPEN FAST, FATALLY WOUNDING SOMEONE IS A TERRIBLE THING. PLEASE SHOOT SAFELY.



WARNING: BE SURE THE AIR RIFLE IS ALWAYS POINTED IN A SAFE DIRECTION. NEVER POINT THE AIR RIFLE AT ANY PERSON EVEN IF IT IS UNCOCKED AND UNLOADED. NEVER POINT THE AIR RIFLE AT ANYTHING YOU DO NOT INTEND TO SHOOT. ALWAYS ASSUME AND HANDLE THE AIR RIFLE AS IF IT WERE LOADED AND READY TO FIRE.

WALTHER AIR RIFLE OPERATION STEPS STEP 1. OPERATING THE SAFETY

The Walther Force 1000 has an automatic safety. When the airgun is cocked it is automatically put "ON SAFE". The airgun is "ON SAFE" when the safety lever is pulled back, toward the trigger. To put the Force

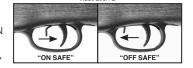


illustration 3

1000 "OFF SAFE", push the safety lever forward, away from the trigger.

ATTENTION: BEFORE YOU PUT YOUR AIR RIFLE "OFF SAFE", BE
ABSOLUTELY CERTAIN THAT YOUR AIR RIFLE IS POINTED IN A SAFE DIRECTION AND
THAT YOU ARE READY TO FIRE.

STEP 2. COCKING YOUR AIR RIFLE

AWARNING: WHEN COCKING THE RIFLE DO NOT PLACE YOUR HAND OVER OR IN FRONT OF THE MUZZLE. DON'T ALLOW THE MUZZLE TO POINT TOWARD YOU OR ANYONE ELSE DURING COCKING. ALWAYS KEEP THE MUZZLE POINTED IN A SAFE DIRECTION.

With one hand grasp stock firmly behind trigger guard, avoiding contact with the trigger, and brace the butt end of the stock against your thigh. Grasp the barrel near the muzzle end, just behind the front sight. Pull downward and to the rear until it comes to a solid stop. You will hear a click indicating that the spring piston has been locked into position (see illustration 3).

STEP 3. LOADING YOUR AIR RIFLE

Insert a high quality .177 caliber RWS Lead Pellet carefully into the chamber of the breech end which is exposed when you cock the air rifle (see illustration 4). Be sure to seat the pellet flush with the breech. Avoid damaging the pellet skirt.

WARNING:
NEVER CARRY YOUR AIR RIFLE WHILE COCKED AND/OR WHILE
LOADED. IT IS BEST TO COCK THE AIR RIFLE ONLY BEFORE SHOOTING. UNDER NO
CIRCUMSTANCES SHOULD YOUR AIR RIFLE BE CARRIED COCKED AND LOADED.

STEP 4. CLOSING THE BARREL

Firmly grasp the barrel behind the front sight, return the barrel to its original closed and latched position.


CAUTION: BE CAREFUL TO KEEP FINGERS CLEAR OF COCKING MECHANISM (SEE "PINCH POINTS", ILLUSTRATION 5A). GRASP THE BARREL FIRMLY AS YOU COCK IT AND CLOSE IT TO PREVENT IT FROM SNAPPING BACK AND POSSIBLY CAUSING INJURY.



STEP 5. AIM AT A SAFE TARGET

Always aim your air rifle in a SAFE DIRECTION. Always choose your target carefully. It is best to shoot at a paper bullseye target which is attached to a safe backstop. A heavy blanket should be hung behind the target backstop to prevent ricochet should you miss the backstop. Think about what you will hit if you miss the target. When using the Force 1000 with open sights, the air rifle is correctly aimed when the front sight blade is positioned exactly in

the notch of the rear sight. The top of the front sight blade should be even with the top of the notch in the rear sight. The bullseye should appear to rest on the top of the front sight (see illustration 6).

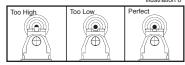

⚠CAUTION: YOUR BACKSTOP SHOULD BE INSPECTED FOR WEAR BEFORE AND AFTER EACH USE. DISCONTINUE USE IF THE BACKSTOP SURFACE SHOWS SIGNS OF FAILURE. ALWAYS PLACE THE BACKSTOP IN A LOCATION THAT WILL BE SAFE SHOULD THE BACKSTOP FAIL. DISCONTINUE THE USE OF A BACKSTOP IF THE PROJECTILE REBOUNDS OR RICOCHETS.

STEP 6. PUT "OFF SAFE"

When you are absolutely sure your air rifle is aimed at a safe target and you are ready to fire, put your air rifle "OFF SAFE" (see STEP 1. OPERATING THE SAFETY).

STEP 7. FIRING YOUR AIR RIFLE

Squeeze the trigger.

CAUTION: DO NOT FIRE WITH THE BARREL OPEN. THIS MAY RESULT IN A BENT BARREL AND/OR CRACKED STOCK AND WILL VOID YOUR WARRANTY.

WARNING: IF A PELLET DOES NOT FIRE AFTER COMPLETING THE OPERATION STEPS, THE AIR RIFLE MAY BE JAMMED. AN UNFIRED PROJECTILE IN THE BARREL CAN BE A DANGEROUS SITUATION. KEEP AIR RIFLE POINTED IN A SAFE DIRECTION AND REPEAT ALL OPERATION STEPS EXCEPT STEP 3. IF A PROJECTILE STILL DOES NOT FIRE, DO THE FOLLOWING:

- 1. Put in "ON SAFE" position (see illustration 2a, 2b, or 2c).
- 2. Cock the air rifle and leave the barrel open with the safety in the "ON SAFE" position.
- 3. Clear barrel by using a cleaning rod (see CARE AND MAINTENANCE).
- 4. Repeat operation steps.

UNLOADING A PELLET

Fire the pellet at a SAFE TARGET to unload the air rifle. If this is not practical, put the air rifle "ON SAFE", cock the air rifle to open the barrel, and push the pellet from the chamber by running a cleaning rod through the muzzle end, then insert an RWS Cleaning Pellet and discharge into a safe target.


REMOVING A JAMMED PELLET

If a pellet is jammed in the barrel, DO NOT reload the air rifle.

- **1.** Cock the air rifle (see STEP 2. COCKING YOUR AIR RIFLE), point the air rifle in a SAFE DIRECTION, put the air rifle in the "OFF SAFE" position and squeeze the trigger to fire.
- **2.** Break the barrel open slightly (without pulling the barrel all the way down to the point that it cocks) and look down the breech to see if the air rifle is jammed (see illustration 7). NEVER LOOK DOWN THE MUZZLE.
- **3.** If the air rifle is still jammed, insert the correct caliber ramrod into the breech on break-barrels or the muzzle end on an under-lever, and push the jammed pellet out of the muzzle. Do not try to reuse that pellet.

If you are not able to unjam your air rifle, contact Umarex USA's Service Department.

CAUTION: DO NOT ATTEMPT TO REUSE FIRED PELLETS OR PELLETS WHICH ARE DEFORMED. PROJECTILES SUCH AS STEEL SHOT (BBS) AND DARTS MAY DAMAGE YOUR AIR RIFLE AND CAUSE INJURY TO YOURSELF OR BYSTANDERS DUE TO RICOCHETING.

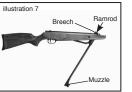

ADJUSTING THE SIGHTS

The Walther Force 1000 is equipped with a micrometer rear sight, with vertical and horizontal adjustments.