

 LAKELAND

My Kitchen

USER MANUAL HAND MIXER

Model: 13652

Helpline No: 015394 88100



The Lakeland Guarantee....

 
is probably the simplest guarantee in the world!
If you are not satisfied at any time, you receive your money back!
This is our promise.

Lakeland

Alexandra Buildings, Windermere, Cumbria LA23 1BQ
Tel: 015394 88100 Web: www.lakeland.co.uk

INTRODUCTION


Thank you for choosing this hand mixer from My Kitchen, a hard-working range of everyday cooks' essentials by Lakeland. Please take a few moments to read these instructions before using the mixer for the first time, and keep them in a safe place for future reference.

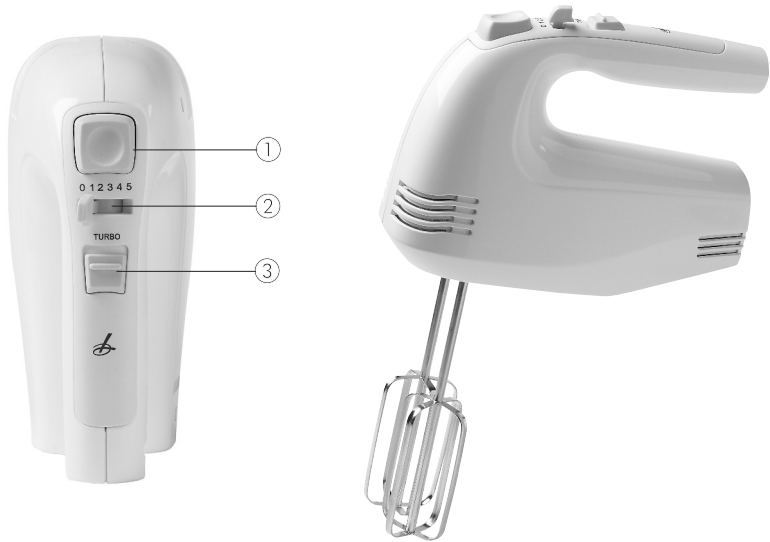

FEATURES

1. Eject button
2. Speed switch with 5 settings
3. Turbo button
4. Dough hooks
5. Beaters

Operating voltage: 220-240V~50Hz
Power: 250W

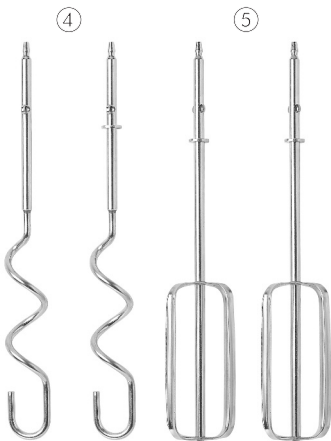

IMPORTANT SAFEGUARDS

When using this hand mixer, please follow these basic safety precautions.


1. Please read all instructions before using.
2. Make sure your electricity supply matches the voltage shown on the appliance.
3. This mixer is for household use only. It is not suitable for commercial use, or for use outdoors. It must only be used for processing food.
4. Do not let the power cord hang over the edge of the worktop or table, where a child could grab it.
5. Keep the mixer away from heat and direct sunlight. Do not place it on or near a hot gas or electric burner, or in or near a heated oven.
6. To protect against electric shock, do not immerse the mixer, power cord or plug in water or any other liquid. Please do not operate with wet hands, and never allow the cord or plug to get wet.
7. Keep hands, hair, clothing and utensils well away from moving parts. Never insert spoons, knives or other tools into the moving attachments.
8. Always switch off the mixer and unplug from the socket before adding or removing attachments, scraping food off the beaters, after use and before cleaning. Grasp the plug, not the cord.
9. Using attachments not supplied by the manufacturer may lead to electric shock, fire or injury.
10. The mixer is not intended for use by children or infirm people unless they have been adequately supervised by a responsible person to ensure they can use it safely. Children should be supervised to ensure they do not play with the mixer. It must not be left unattended during use.
11. Do not use the mixer if the power cord or plug show any signs of damage, or if the appliance is dropped, damaged or working incorrectly. Call the helpline on 015394 88100 to arrange a repair by an authorised repairer, or a replacement. Never try to repair the mixer yourself as this may cause electric shock.

BEFORE USING YOUR HAND MIXER FOR THE FIRST TIME

Carefully unpack the mixer and remove any packaging. Wash the stainless steel beaters and dough hooks in warm, soapy water, or in the cutlery basket of your dishwasher. Rinse well and dry.

ADDING THE ATTACHMENTS

Always ensure the mixer is unplugged before inserting any attachments. Push the beaters or dough hooks into the openings until they click firmly into place. Do not use a mixture of attachments. PLEASE NOTE: the dough hook with the metal collar only fits into the opening on the left-hand side, as shown below.

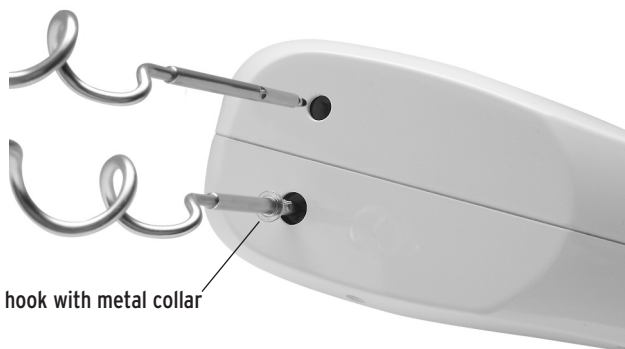

Dough hook with metal collar

MIXING

A kitchen essential, the hand mixer saves a good deal of time and work when whisking cream, egg whites, batter and cake mix, and making pastry and dough. The beaters incorporate air into light, fluffy mixtures, whilst the dough hooks are designed for heavier, thicker mixtures.

1. Set the speed switch to '0' before plugging in the mixer.
2. The mixer has 5 speed settings. We recommend starting at low speed to avoid splattering or splashing, then gradually increasing speed.

Level 1: to begin mixing.

Levels 2-3: to fold, stir, mix and beat, especially dough, pastry and cake mixture.

Levels 4-5: to whisk egg whites, batter and cream.

3. For an extra burst of speed and power, press the turbo button. This allows you to mix more quickly or to increase the speed during heavy-duty tasks. Please do not hold the turbo button for longer than 5 minutes.

REMOVING THE ATTACHMENTS

Switch off the mixer and unplug from the socket. Scrape off any mixture with a rubber spatula. Take hold of the stems of the attachments and press the eject button to release them.

CARE AND CLEANING

Always ensure the mixer is switched off and unplugged from the socket before cleaning. Wash the attachments in warm, soapy water, or in the cutlery basket of your dishwasher. Rinse well and dry. Wipe the mixer with a damp cloth, then dry. CAUTION: never immerse the mixer in water, and never attempt to wash the attachments without removing them from the mixer first.

HELPFUL HINTS

- To avoid splattering, lower the beaters into the food before switching the mixer on. Lift the beaters out of the mixing bowl after switching the mixer off.
- If you need to add extra ingredients, switch off the mixer and rest on its heel, with the beaters over your mixing bowl to catch any drips.
- The mixer is designed to run for up to 10 minutes at a time. Switching off and letting the mixer rest for at least 10 minutes will allow the motor to cool down, before starting again.
- After the mixer has been switched off, the beaters will continue to move for a short while, so please take care.

RECYCLING YOUR ELECTRICALS

Along with many other high street retailers, Lakeland has joined a scheme whereby customers can take their unwanted electricals to recycling points set up around the country. Visit www.recycle-more.co.uk to find your nearest recycling point.




ELECTRICAL CONNECTIONS

THIS APPLIANCE MUST BE EARTHED

This appliance is fitted with a fused three-pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications. If the fitted plug is not suitable for your socket outlets, it should be cut off and carefully disposed of. To avoid an electric shock, do not insert the discarded plug into a socket.

Fitting a new plug

If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown here. The wires in the mains lead fitted to this appliance are coloured in accordance with the following code:

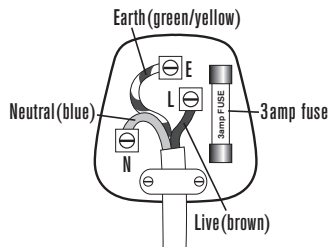

- Connect BLUE to Neutral (N)
- Connect GREEN & YELLOW to Earth (E)
- Connect BROWN to Live (L)
- 3 amp fuse to be used

If the colours of the wires in the mains lead of this appliance do not correspond with the coloured markings identifying the terminals in your plug, proceed as follows. The wire which is coloured green and yellow **MUST** be connected to the terminal which is marked with the letter E (Earth) or coloured green. The wire which is coloured blue **MUST** be connected to the terminal which is marked with the letter N (Neutral) or coloured black. The wire which is coloured brown **MUST** be connected to the terminal which is marked with the letter L (Live) or coloured red.

Before refitting the plug cover, check that there are no cut or stray strands of wire inside the plug. Use a 3 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If you are at all unsure which plug or fuse to use, always refer to a qualified electrician.

Note: after replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from an electrical shop. This appliance complies with the following EEC Directives: 73/23 EEC (Low Voltage Directive) and 89/336 EEC (EMC Directive).