



InData Systems



Power-Link

User Manual

Draft

Rev.: 000101

This user manual contains instructions for **installing the Power-Link**, setting up the operating characteristics with **AddressNet™** software and a list of the most **common mistakes** made when installing the Power-Link.

Contents

Contents.....	2
Power-Link Overview.....	4
Common Mistakes.....	5
Cables are Wrong	5
Handshaking – Use it or lose data	5
Addressing.....	5
Address Listing	5
ACK/NAK – RF Handshaking	5
Using Windows 95 and Hyper Terminal.....	5
Getting Best RF Reception	6
Interference Noise Sources	6
Cables.....	6
Long Cables.....	6
“Straight” Cable Wiring Diagram.....	7
“Null” Cable Wiring Diagram.....	7
Wiring – Power-Link	8
Power-Link Pin-Out Chart.	8
DSR/DTR Conversion to RTS/CTS	8
Power Requirements	8
No Power Supply Required	8
Signals Used for Power.....	8
Using Logic Level Signals	9
“Home Brew” Drive Signals	9
External Power.....	9
Handshaking – You Need It	9
Hardware vs. Software Handshaking.....	9
Data Loss.....	10
Data Size	10
Smallest Data Size.....	10
Largest Data File Size.....	10
Error Control ARQ (ACK/NAK)	10
Data Integrity.....	11
Addressing	11
Unit Address and Target Address.....	11
Dynamic Addressing by “First Byte” in Data Packet	11
Dynamic Addressing by Reprogramming	12
LED Light Indicators	12
AddressNet™ Set Up Software Overview.....	13
Serial Port Settings.....	13
RF Serial Settings.....	13
Handshaking	14
Addressing	14
Error Correction.....	15
Misc.	15
Test Center	15
Detection Options.....	15

Batch Programming.....	16
Using Power-Link with Microsoft Windows 95 and Hyper Terminal	16
FCC Notice.....	17
Declaration of Conformity	18
WARRANTY INFORMATION	18
SOFTWARE LICENSE AGREEMENT.....	20
Technical Support	20
Power-Link DB 9 Pin Out.....	Appendix A
Scanner Configurations and Cables	Appendix B

Power-Link Overview

The Power-Link is a serial data radio interface with an interchangeable, rechargeable battery to allow powering of 5 volt devices such as barcode scanners (CCD, Wand, or Laser) as well as a wide variety of other data collection devices. This powered radio interface allows cordless powered interface of devices that previously needed very long cables to get the input device to where the source of the data occurs.

Weighting just 17 ounces the Power-Link Transceiver is a cost effective means of transferring data to and from any other RS-232 Serial equipped devices via the 900 MHz ISM band. No license is required.

Each transceiver is unit addressable, so up to 254 remotes can communicate with a single host or with each other.

The UniLink is the Power-Link's "receiving station" and is a parasitically powered device that requires only a few milliwatts of power from any output signal on any RS-232 port. There are no batteries required in the Unilink transceiver.

The Power-Link opens up an entire new set of serial data communications applications. Batch applications can now be easily converted to real-time wireless with either no changes or only minor programming changes. By using the Power-Link, serial scanners up to 400 feet away can input data from barcode labels, Pick Lists, Shippers, Invoices, Receipts and Bill of Lading.

The Power-Link can be attached to portable barcode scanners for a very low cost solution to wireless scanning. Any portable device with a serial port can now be brought online with access to a host in real time.

The Power-Link and UniLink comes with AddressNet™ Software. AddressNet™ is an easy to use Windows 95/98 compatible utility with a GUI interface that allows the user to modify data format, baud rate, handshaking protocol and the transmit and receive address of each transceiver. The user simply points and clicks to configure the transceiver's sophisticated capabilities that are then retained permanently within the Power-Link non-volatile memory.

Common Mistakes

Things That Go Wrong

Read this section to avoid some of the most common mistakes in setting up RF serial transceivers.

Cables are Wrong

The Power-Link is pre-wired to attach directly to a PC/Laptop using a “Null Modem” or “Lap Link” setup cable. But when a Unilink is attached to a PC, it requires a “straight” cable, and when a Serial Printer is attached to the Power-Link, it also requires a “straight” cable as well. A “Null” cross cable/adaptor may only be required when connecting to some peripherals.

Use InData’s Serial Interface test kit to aid in trouble shooting interface problems. Contact your local reseller to order.

Handshaking – Use it or lose data

Unless the data being transmitted is smaller than 40 bytes and occurs infrequently, handshaking is required or data will be lost. Handshaking can halt data flow from its host while the radios are processing the data. RTS/CTS hardware handshaking is the preferred method to use instead of software handshaking XON/XOF.

This is especially true when using InData Systems Active Repeater system, as all data is transmitted on the same frequency and needs to pause during the re-transmission.

Programmers Advanced Tip:

Even with handshaking activated, the software program you write needs to **frequently poll for handshaking activity**, not just at the end of big blocks of data.

Addressing

If more than one pair of Power-Links/Unilinks is to be used within range of each other, each needs to have A unique address. Addresses can be from 1 to 255. This address is assigned using the AddressNet™ software that came with the Power-Link. See “**Setting Addresses**” section.

Address Listing

When assigning an address to a Power-Link or Unilink, be sure to write it down in pencil on the label provided. It is also handy to make a list to keep on file. If you need to find what address the Power-Link is set for, use the AddressNet™ software to interrogate the Power-Link or Unilink.

ACK/NAK – RF Handshaking

Do not disable this feature! ACK/NAK allows a receiving unit to request a re-send of the data if it is determined to be corrupted. This option is enabled as a factory default, but can be disabled using check-off box in the AddressNet™ software.

Using Windows 95 and Hyper Terminal

Turn the FIFOs OFF to prevent buffer overflow. See Appendix A section for more details.

Getting Best RF Reception

Many things can interfere with radio signals. Some materials can absorb radio signals and some other reflect it. As the waves are reflected, or absorbed, at any given point of convergence they may cancel each other out if they are out of phase. This effect is called “multi-path fading”. So if the Power-Link is having spotty reception in one area, moving a few feet can make a great difference.

User of an InData extension kit, enables you to place the Unilink base transceiver at an optimal location.

Interference Noise Sources

Other electronic devices can create radio interference. Computer monitors are notorious generators of radiated noise, so don't mount the Unilink base transceiver to the side of a monitor. Laptop PCs displays may also be electrically noisy.

Use a long serial cable to allow positioning the Unilink as needed away from these types of problem areas and to maximize range and reception. Using a long cable in stationary installations, it is possible to suspend a UniLink from the ceiling, effectively getting it above many of the reflective or absorptive materials.

Cables

Long Cables


Excellent power efficiency allows the Unilink to be placed at the end of a long extension cable. For cable lengths over one hundred feet (100'), a wire gauge of at least 22 gauge is recommended. Provide inputs Rd (pin3), CTS (pin 7), and DSR (pin4) signals as well as the Td (pin 2) and Ground (pin 5) to minimize voltage loss to the unit.

Before installing a long cable extension, test the Unilink with the full length of the intended cable to ensure that it will work before permanently installing the cable. Place the Unilink at the end of the cable spool and plug the other end into the device that will be using it. If the Unilink works when attached to the end of the long cable, then there should be no problem once the cable is fully installed.

Straight Cable vs. Null Cross Cable A “Straight” cable has no wire signals crossing. Pin #1 at one end of the cable connects to Pin #1 on the other end of the cable, pin #2 connects to pin#2, etc.


25,50, and 100 foot serial cables are available through your local InData Systems Reseller

“Straight” Cable Wiring Diagram for a nine pin cable.

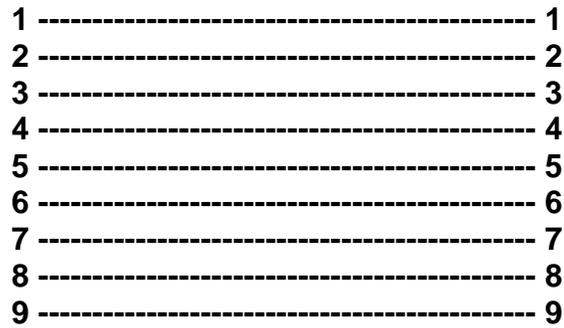

The Null Cross cable is for connecting to serial devices that are wired the same, such as a computer to another computer. The Null cable crosses the Rd receive and Td transmit data lines, the RTS and CTS lines, and DTR and DSR lines.

“Null” Cable Wiring Diagram for a nine pin cable

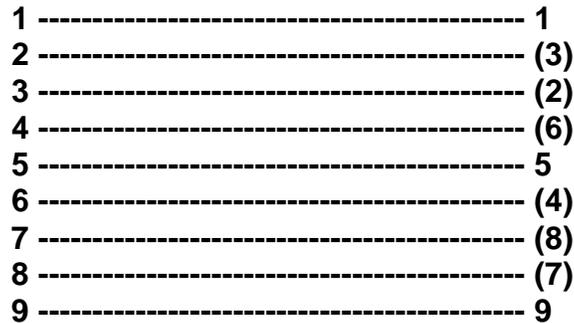

If a Null Cross cable is not available, a straight cable can be changed into a Null cable by way of a Null Adapter. A Null Adapter plugs into the cable end and contains the necessary wire crossings. See the “Accessories” section for Null adapters.

Keep in mind that the UniLink (Base Unit) receives data on pin #3 and it outputs data on pin #2. If the host device being used also outputs data on pin 2 then a Null Cross is required.

A Power-Link has a male DB-9 which outputs data on pin #3. Devices that are designed to plug into the male DB-9 on a PC are properly pinned to plug into the Power-Link portable unit. Regulated 5 volts DC is provided on pin #9. If you are unable to get a cable for your scanner or portable device to use this powered pin you may obtain a power adapter cable from InData Systems Reseller – For common barcode scanner interface cables see Appendix H

Wiring – Power-link

Power-Link Pin-Out Chart.

Male 9-pin D-sub connector.

Pin Number	Signal Name	Power-Link Input / output
1		Not Used
2	Receive Data	Input
3	Transmit Data	Output
4		Not Used
5	Ground	Ground
6		Not Used
7	Ready to Send	Output
8	Clear to Send	Input
9	+ 5 Volts	+ 5 +7.2 Volts

Power Requirements

The Power-Link utilizes a rechargeable “Lithium” battery the battery is equivalent to a Sony NP-F550 camcorder battery. Both the battery and spare chargers are available from your InData Systems reseller. The battery can last up to 100 hours or more depending on the device being powered by the Power-Link.

No Power Supply Required for UniLink base unit.

The Unilink’s Radio is able to derive its power parasitically from the RS-232 signals of the host device to which it is attached, much the same way as the mouse on a computer.

Signals Used for Power

The Unilink’s Radio extracts power from RS-232 B/C signals. The three signals that provide power to the Unilink are RD Pin #3, CTS Pin #7, and DSR Pin #4.

The signals can be any polarity and in continuous rapid transition at the maximum baud rate.

Using Logic Level Signals

Pseudo RS-232 signal transitioning from 0 to +5VDC are acceptable. As long as the drive circuit is compliant with published RS-232 B/C guidelines including meeting voltage, high output impedance, and current limitations the Power-Link should function properly.

“Home Brew” Drive Signals

Non-compliant drive circuitry capable of delivering large current at high voltages may cause the Power-Link or your circuitry to fail.

Non-compliant, high voltage, high current, low impedance drive signals should never exceed +/-6.0VDC.

External Power

The Power-Link is designed to power external devices with +5 VDC on pin 9 and ground on pin 5. It is capable of powering devices up to 250 ma continuous current or up to 1 amp in low duty cycle applications. Consult your InData Reseller to determine if your scanner or device will work properly.

Handshaking – You Need It

Handshaking allows one serial device to signal another when it is necessary to temporarily halt the flow of data to prevent buffer overflow. This is a very important function of all serial communication devices.

The Power-Link has a transmit buffer that can hold up to 40 bytes of data. If the data packet being sent is larger than that, or if it is smaller but very frequent, then handshaking *must* be used to prevent buffer overflow and subsequent data loss. The rule is, *when in doubt use handshaking.*

Hardware vs. Software Handshaking

Hardware handshaking RTS/CTS is faster and more efficient than software handshaking using XON/XOFF. Software handshaking is not preferred and should not be used unless there is no alternative.

Data Loss

If data loss is evident at the *receiving* Power-Link or Unilink, it generally indicates *that handshaking at the transmitting unit* is not functioning properly. The most common cause of this failure mode is not having handshaking turned on within the host (sending) device. This means that the Power-Link/Unilink is ordering the data feed from its Host to stop, but the host is not responding and keeps sending data. The obvious result will be overflow of the buffer with subsequent data loss.

The Power-Link is programmed so that the hardware handshake signal is sent early enough to allow for response delay from the host. In software handshaking mode the Power-Link sends the XON/XOF software handshake request even earlier since there is a greater response delay from the host.

Data Size

Smallest Data Size

The Power-Link can transmit data packets as small as one byte.

Largest Data File Size

There is no upper limit to the size of the file to be transmitted. However, keep in mind that if a unit is transmitting a large file it will be “hogging” the channel and other units will not be able to transmit until it is done.

When the InData Systems Active Repeater is used throughput will be drastically reduced if long strings of data are transmitted in either direction. See Section “Active Repeater” on page 15

Error Control ARQ (ACK/NAK)

A sophisticated and highly reliable form of Error Control employed in the Power-Link/Unilink is called ARQ (Automatic Retry Request), using ACK/NAK closed loop feedback from the Target Power-Link or Unilink. When a data packet is received by the Target unit, it will send back either an ACK or a NAK to the Initiator. An ACK tells the Initiator that the data was good and to send the next data packet. A NAK tells the Initiator that the data was corrupted and to transmit it again. If neither ACK or NAK is returned from the target, the Initiator will automatically retry to send the unacknowledged packet. The number of retries possible is from one to fourteen and this value is programmed using the AddressNet™ software. It is advisable to set a higher retry count for units that are further apart.

Data Integrity

The transmitting Power-Link packetizes data into blocks for transmission. The receiving unit will not output this packet to its host unless it is received 100% intact. If the ACK/NAK retry count is exceeded before the data is received uncorrupted, the data will be lost.

To improve data integrity, the number of retry attempts can be increased, or the programmer could create a special program. The program would have to incorporate a check sum (add all the bytes in your data file in ASCII) or a CRC as part of the transmitted data. If the received data does not match the check sum, the program should request that it be resent. This is similar to ACK/NAK but on a larger file-wide scale.

Addressing

The Power-Link provides a way for each unit to differentiate itself from others by having a unique address. There is a Unit Address and a Target Address. Having a unique address allows the unit to know when data is being sent to it and to which device to send data. This allows multiple units to cohabit the same reception area and not have the data corrupted. Addresses can be from 1 to 255.

Unit Address and Target Address

The Unit Address is the address of that particular unit. The Target Address is the address of the unit that this Power-Link will target any transmissions. Only a unit with that target address will respond to transmissions from this unit.

In general, do not allow two units to have the same Unit address. The only circumstance in which duplicate address might be acceptable is if those two units were the only two units within the area, and would never be targeted by other units.

Besides one-to-one addressing, the Power-Link has the ability to do one-to-many addressing. This can be done two ways, by *dynamic addressing* and by *address reprogramming* on the fly.

Dynamic Addressing by “First Byte” in Data Packet

Dynamic addressing is activated by using the AddressNet™ software. Once activated, the Power-Link will take the first byte of a data stream and make that the Target address to send to. This will continue to be the target address until data stops and the buffer empties out. Once the buffer empties, the Link again watches for the first byte of data and uses that value as the “new” target address.

Dynamic Addressing by Reprogramming

Dynamic addressing by reprogramming on the fly involves sending a special character sequence (referred to as the “Gatekeeper String”) to the unit that tells it to change its target address to the supplied address.

It is important that dynamic addressing not be mistakenly enabled in AddressNet™ when using this form of addressing.

The Gatekeeper character string to send is:

(ASCII) p ` P @ 0 SP H <address>
or (Hex) 70 60 50 40 30 20 48 <address>.

Remember that the address is not entered in ASCII, it is the integer value of the character used (see Appendix A for ASCII charts).

INCORRECT	p`P@0 H65
CORRECT	p`P@0 HA

ASCII A = INTEGER 65

If the correct value in this example were sent to the Power-Link it would change its target address to 65 because 65 is the integer value of an ASCII A. In this example the ASCII “A” is used because it is a “visible” character which can be viewed by ASCII communications programs. Some characters in ASCII such as “escape” (ESC) can not be seen on a monitor. The full ASCII character set can be used from 1 to 254.

LED Light Indicators

The Power-Link has two light emitting diodes (LED’s) for diagnostic purposes.

If either LED is flashing, then the Power-Link is being supplied with enough power to operate properly.

If the transmit LED is flashing, the unit is transmitting data or ACK/NAK’ing back to an Initiator in response to received data.

If the receive LED is flashing, it means that a Power-Link within range is transmitting (but not necessarily to this unit’s address) and that the unit is detecting the transmission.

If both LED’s are flashing, then the unit is both transmitting and receiving to/from another unit.

AddressNet™

Set Up Software Overview

AddressNet™ is a software utility that enables communication with a Power-Link. It allows for testing, troubleshooting, and setup of the 900MHz Radio Frequency (RF) device. AddressNet™ is a Windows 95 graphical user interface (GUI) program and does not run on older versions of Windows nor Windows NT.

Accessing the different functions of AddressNet is done through the buttons which are located on the left side of the main program window. They are in order from top to bottom:

Serial Port Settings
RF Serial Settings
Handshaking
Addressing
Error Correction
Misc.
Test Center
Detection Options
Batch Programming

Serial Port Settings

Changes to the computer serial port can be made from here. Available changes are baud, data bits, parity, stop bits, and COM Port (serial port). Setting these correctly will allow communication with the RF unit.

The serial port (also called a COM port) is where the Power-Link will be attached to the computer for use. AddressNet currently supports up to six serial ports (COM 1 through COM 6).

When changes are made to the serial settings ensure that the “Apply button” is pressed before leaving for a different area of the program. If not the changes will be discarded leaving the settings unchanged.

RF Serial Settings

The RF Serial Settings area is identical to the Serial Port Settings area except there is no COM port selection. Baud, data bits, parity, and stop bits are all available for modification.

Options for the RF unit will not function until a unit is detected on the selected serial port. This applies to all area of the AddressNet program.

Any time a change is made to the RF units settings the “Apply button” for that area must be clicked or the changes will be discarded leaving the settings unchanged.

Handshaking

Handshaking controls the flow of data between the host and the RF unit. When a device buffer (data storage area) gets full and is no longer able to accept data using handshaking, it can signal the other to stop sending until there is more room.

Handshaking is extremely important, particularly when sending larger blocks of data to the RF unit for transmission. RTS/CTS is the standard for hardware handshaking and is the preferred technique to use with the Power-Link. XON/XOFF is the standard for software handshaking. It should only be used when RTS/CTS is unavailable.

Addressing

This area is for changing the various addressing options for the Power-Link unit. The unit address, target address, address pass through, and dynamic addressing can all be altered/activated here.

The unit address and the target address are user assignable from 1 to 255. The target address can also be set to dynamic. In dynamic mode, the target address is changed “on the fly”. The first byte in a data stream received by a unit in dynamic configuration will be stripped from the data and used as the target address. This address is permanent until it is set again. A new address will only take effect when the buffer is allowed to empty.

Pass through of an initiator address to the host allows for the receiving application to process received data based upon which unit sent it. A unit in this configuration will insert its unit address to the beginning of the incoming data stream so that the receiving application can process the data following based upon where it came from. The unit address will only be applied if the buffer is empty.

As with all areas, when changes are made, ensure that the “Apply button” is pressed before leaving for a different area of the program. If not, the changes will be discarded leaving the settings unchanged.

Error Correction

The Error Correction area allows the ACK/NAK options for Power-Link unit to be altered. ACK/NAK is a form of handshaking and it is recommended that it be enabled. Longer distance units should use a higher retry amount.

When using this form of handshaking, the receiving unit, upon detection of bad data, is able to request that the host retry to send the data. The unit will ask again for the correct data as many times as is specified in the retry box. Valid retries are from 1 to 15.

Misc.

Once a unit is detected, the Misc. area will show the firmware revision number and the unit serial number.

Test Center

A Power-Link unit's settings can be tested using this area. The box on the left is for transmission and the one on the right is for reception. All data typed or pasted into the "Transmit" box will be sent out of the computer serial port to the Power-Link for transmission. All data received by the serial port will be placed into the "Received" box.

In terminal emulation, the unit will transmit all data that is sent to it through the serial port. In echo mode, the unit will send the received character back to the serial port. This received data will be placed into the receive box. Echo mode allows testing of singular units.

Detection Options

This area provides a means to detect the Power-Link unit attached to the computer. Detection can occur at the current serial port settings, or the unit can be auto-detected.

Auto-detect is a feature that can be used to determine the settings of unit if they are forgotten or changed. Auto-detect systematically queries through all possible serial port settings until a valid response is received. An attempt is then made to download the unit's current setup.

Batch Programming


This area is used to program the settings multiple units and to create the files need to perform these tasks.

When creating a programming file you will be shown a complete list of the current settings. These will be saved to the disk.

To batch program units, first select a valid file. Then hit the program button. The file only needs to be selected once and it will be reused each time the program button is pressed.

Active Repeater

In applications where the area of usage may be farther than reliable communication can be maintained it may be desirable to use InData System's Active Repeater. This is simply the connecting of the base Unilink receiver with another Power-Link and using it's mate Unilink on the PC or other receiving serial device – See figure below

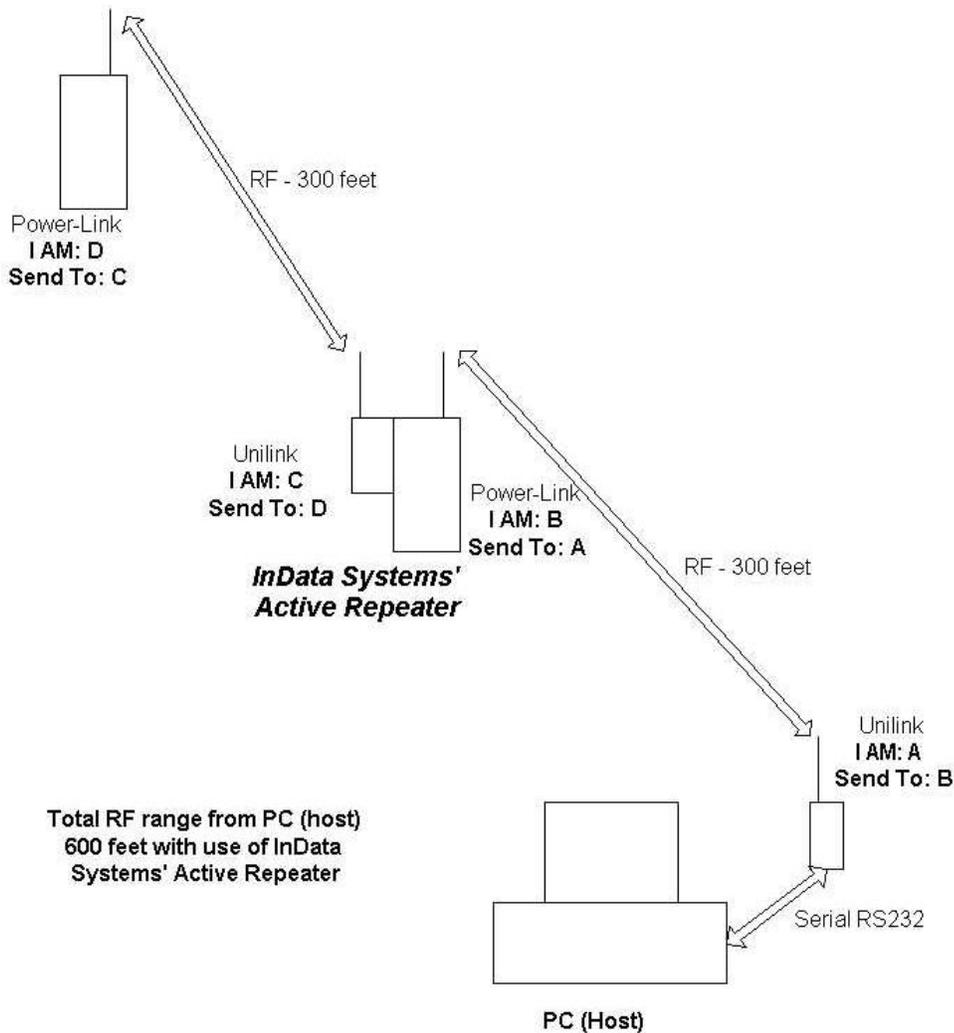

Appendix A Using Power-Link with Microsoft Windows 95 and Hyper Terminal

Turn the FIFOs OFF – The most common problem with using the Windows 95 Hyper Terminal communications program is forgetting to turn the FIFO buffers OFF for serial interface of the PC.

Un-check the "Use FIFO buffers" box within the Advanced Port Settings window of Hyper Terminal set up program.

A detailed Applications Note on setting up Windows 95 Hyper Terminal is available from the Technical Support web site listed in the Appendix.

Appendix C

FCC Notice

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions.

1. This device may not cause harmful interference, and
2. This device must not accept any interference received, including interference that may cause undesired operation.

Instructions to the User

This equipment has been tested and found to comply within the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio technician for help.

In order to maintain compliance with FCC regulations, shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio and TV reception. The user is cautioned that changes and modifications are forbidden to be made to this equipment and could void the user's authority to operate this equipment.

Appendix D

Declaration of Conformity

Equipment Type	RF Data Radio
Trade name (s)	Power-Link, RF Link
Model Number	ML916NBP
Compliance Test Report Number	B71120D1
Compliance Test Report Date	26 November 1997
Responsible Party (U.S.A.)	Wireless Mountain Corp.
Address	5132 Bolsa Ave, #102 Huntington Beach CA 92649 USA

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If the Unit does cause harmful interference to radio or television reception, please refer to your user's manual for instructions on correcting the problem.

I, the undersigned, hereby declare that the equipment specified above conforms to the above requirements.

Name:	David Culp
Position:	Vice President of Engineering
Date:	29 January 1998
Place:	Huntington Beach CA USA

Appendix E

WARRANTY INFORMATION

Effective January 1, 1999

Wireless Mountain and its design and manufacturing facility's sole obligation under this warranty shall be to furnish parts and labor for the repair or replacement of products found to be defective in material or workmanship during the warranty period.

As a condition of this warranty, the user must: (a) obtain an Wireless Mountain Return Authorization for the product, device or subassembly(s); (b) ship the device, transportation prepaid to the authorized service location; and (c) include with the Product, device or subassembly(s) a written description of the claimed defect. Items returned shall be packaged in the original packaging and shipping container or comparable container. In the event equipment is not so packaged or if shipping damage is evident, it will not be accepted for service under warranty. Surface transportation charges for the return of the product shall be paid by Wireless Mountain within the 48 contiguous states and the District of Columbia. Customer shall pay shipping costs, customs clearance, and other related charges outside the designated area. If Wireless Mountain determines that the items returned for warranty service or replacement is not defective as herein defined, USER shall pay all costs of handling and transportation.

Warranty Exclusions and Conditions

The above warranties are in lieu of all other warranties, expressed or implied, oral or written, statutory or otherwise, including an **implied warranty of merchantability or fitness for a particular purpose**.

Wireless Mountain and its design and manufacturing facilities shall not be responsible for the specific application to which any Products are applied, including but not limited to compatibility with other equipment.

All statements, technical information and recommendations relating to Wireless Mountain Products are based upon tests believed to be reliable but do not constitute a guarantee or warranty.

WIRELESS MOUNTAIN AND ITS DESIGN AND MANUFACTURING FACILITIES SHALL NOT, UNDER ANY CIRCUMSTANCES WHATSOEVER, BE LIABLE TO BUYER OR ANY OTHER PARTY FOR LOST PROFITS, DIMINUTION OF GOOD WILL OR ANY OTHER SPECIAL OR CONSEQUENTIAL DAMAGES WHATSOEVER WITH RESPECT TO ANY CLAIM HEREUNDER. IN ADDITION, WIRELESS MOUNTAIN, INCLUDING ITS DESIGN AND MANUFACTURING FACILITIES, LIABILITY FOR WARRANTY CLAIMS SHALL NOT, IN ANY EVENT, EXCEED THE INVOICE PRICE OF THE PRODUCT CLAIMED DEFECTIVE, NOR SHALL WIRELESS MOUNTAIN AND ITS DESIGN AND MANUFACTURING FACILITIES BE LIABLE FOR DELAYS IN REPLACEMENT OR REPAIR OF PRODUCTS.

No salesperson, representative or agent of Wireless Mountain Corporation and design and manufacturing facilities is authorized to make any guarantee, warranty, or representation in addition to the forgoing warranty.

NO WAIVER, ALTERATION, ADDITION, OR MODIFICATION OF THE FOREGOING WARRANTIES SHALL BE VALID UNLESS MADE IN WRITING AND SIGNED BY AN EXECUTIVE OFFICER OF WIRELESS MOUNTAIN

Appendix F

SOFTWARE LICENSE AGREEMENT

Software and documentation provided by Wireless Mountain and its affiliates are protected by the United States copyright law and international treaty, and therefore you must treat them like a book, with the exception that you make copies of the software to protect yourself against loss of the original.


Your right to use the software and documentation as described below is non-exclusive and non-transferable. Wireless Mountain retains ownership of the software and documentation and all other rights, title and interest. The software and documentation may be used by any number of people, and the software may be freely moved from one computer to another.

Wireless Mountain warrants the software diskette to be free of defects in material and workmanship for a period of 60 days from the date of purchase. In the event of notification within the warranty period of defects in material and workmanship, Wireless Mountain will replace the defective diskette or documentation. Wireless Mountain specifically disclaims all other warranties, express or implied, including but not limited to implied warranties of merchantability and fitness for a particular purpose.

IN NO EVENT WILL INDATA SYSETMS OR ITS' DESIGN AND MANUFACTURING FACILITIES BE LIABLE FOR LOST PROFITS, LOST DATA, OR ANY OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY ABUSE OR MISAPPLICATION OF THE SOFTWARE OR BY ITS USE IN VIOLATION OF THE U.S. COPYRIGHT LAW OR INTERNATIONAL TREATY.

Appendix G

Power-Link Pin Out

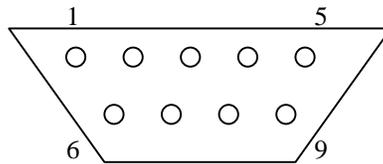

Pin	Name	Direction	Description
1			Not Used
2	RX	←	Receive Data
3	TX	→	Transmit Data
4			Not Used
5	GND		System Ground
6			Not Used
7	RTS	→	Request to Send
8	CTS	←	Clear to Send
9	+5	→	+ 5 Volts <i>(or 7.2 Volts unregulated on specially configured models)</i>

Using a standard Lap-Link cable you can configure the Power-Link with AddressNet software.

KEY



Appendix H

Common Scanner Setups

Welch Allyn 3800

Cable required

InData Part Number – WA-42203758-03

Setup		Manual Rev E
	Page	Scan
	1-4	RS-232 Interface
	2-11	8 Data, 1 Stop, Parity None
	2-12	RTS/CTS On
	3-4	Low Power Time Out
	Back Cover	1, 0, Save

The scanner should now be setup to use the Power-Link

Welch Allyn 54/5700

Cable required

InData Part Number – WA-42203758-03

Setup		Manual Rev H
	Page	Scan
	1-9	RS-232 Interface
	1-15	Switched Power (Low Power) Mode
	2-12	8 Data, 1 Stop
	2-12	Parity None

The scanner should now be setup to use the Power-Link

Symbol 3203

Cables required

InData Part Numbers – SY-25-15072-01 and

Setup		Manual Rev A
	Page	Scan
	3-4	Set RS-232C Host
	3-28	9600
	3-29	NONE
	3-31	RTS/CTS
	3-33	1 STOP BIT
	3-34	8-BIT
	3-35	LOW POWER

The scanner should now be setup to use the Power-Link