

# IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

## READ ALL INSTRUCTIONS BEFORE USING

## KEEP AWAY FROM WATER

**DANGER —** Any appliance is electrically live, even when the switch is off.

To reduce the risk of death or injury by electric shock:

1. Always unplug appliance from electrical outlet immediately after using (except when charging unit).
2. Do not place or store appliance where it could fall or be pulled into a tub or sink.
3. Do not use appliance while bathing or in the shower.
4. Do not place appliance in, or drop into, water or other liquid.
5. If appliance has fallen into water, do not reach for it. Unplug immediately.
6. Unplug this appliance before cleaning.

## DO NOT REACH INTO THE WATER

**WARNING —** To reduce the risk of burns, electric shock, fire, or injury to persons:

1. Never leave a plugged-in appliance unattended.
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use appliance only for its intended use as described in this manual. Only use attachments recommended by the manufacturer. Do not use an extension cord to operate the appliance.
4. Never operate the appliance if it has a damaged cord or plug, is not working properly, has been dropped or damaged, or dropped into water. Return the appliance to a Conair service centre for examination and repair.
5. Keep the appliance cord away from heated surfaces.
6. Do not pull, twist or wrap the cord around the appliance.
7. Never drop or insert any object into any opening of the appliance.
8. Do not place the appliance on any surface while it is operating.
9. Do not use the appliance with a damaged or broken comb or with teeth missing from the blades, as injury may result. Before each use, make certain the blades are aligned properly and oiled.
10. Do not use the appliance outdoors or where aerosol (spray) products are being used or oxygen is being administered.
11. **THIS PRODUCT IS FOR HOUSEHOLD USE ONLY.**

## USER MANUAL FOR ADAPTOR

**BEFORE USING THE CLASS 2 POWER SUPPLY,  
READ THESE INSTRUCTIONS CAREFULLY.**

Model: SW-056008A

Rated input voltage: 120Vac, 60Hz, 0.2 Amax

Rated output: 5.6VDC, 80mA

### OPERATION

1. For dry location use only. Do not expose to rain.
2. When not in use, unplug unit completely.
3. Never operate this unit if the specification is out of the rating.
4. When using this unit, a warm temperature will be reached.

### CAUTION

1. Risk of electric shock, dry location use only or do not expose to liquid, vapor, or rain.
2. Do not short the polarity (output cord).
3. Do not operate any appliance which has a damaged output cord or housing.
4. Always unplug the unit before cleaning or when not in use.
5. This power unit is intended to be correctly oriented in a vertical or floor mount position.
6. Be sure voltage is in correct voltage before plugging in.

## SAVE THESE INSTRUCTIONS

### TROUBLESHOOTING

If your rechargeable trimmer does not seem to be taking a charge, take the following troubleshooting steps before returning it for repair:

 
1. Be sure the electrical outlet is working by plug-

3. Begin trimming your beard using smooth, even strokes. Start with your sideburns and work downward toward your chin. Never attempt to trim against the natural growth of your beard because the hair will be cut too short.
4. If you decide you want a closer trim, you can now adjust the 5-position comb attachment to a shorter setting (such as 3/32" or 5/32") and go over your beard again until you achieve the desired length.



## BLENDING THE JAWLINE

1. The three jawline attachments will help you to achieve a neat, finished trim under your chin. To use one of the attachments, press it down over the trimmer blades until it clicks into position.
2. Hold the trimmer in an upright position and begin trimming under your jawline, using short, even strokes.
3. After your beard is blended, turn off the trimmer and remove the attachment by gently pulling up on tab.

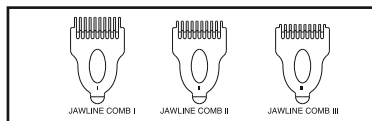

## TO TRIM YOUR MUSTACHE

1. For best results, start with a clean, slightly damp mustache.

2. Comb through your mustache in the direction it grows.

3. Place the wide 5-position comb over the facial hair blade and snap it into posi-



tion. It is a good idea to start with the longest trim setting adjustment. (You can always go back and cut your mustache more closely with a shorter setting.)

## ALWAYS TRIM YOUR MUSTACHE FROM THE TOP DOWN

4. After your mustache has been trimmed to the desired length, remove the 5-position comb and, using the blades only, define the outline of the bottom of your mustache.



5. Use the scribe blade for fine detailing and hair art.

## ON/OFF SWITCH

To operate, simply slide switch toward blade, to stop push slide away from blade.

## CARE OF YOUR TRIMMER REPLACEMENT (REMOVAL) OF BLADE SET

To remove blade set from your trimmer, make sure the trimmer is in the OFF position. Remove the blade set by placing thumb against the smaller cutter and pushing forward, releasing the cutter assembly from the trimmer housing. Replace with new cutting system and reverse the removal procedure, only this time place your thumb on the large cutter and snap into place. Make sure the taper control is set to the longest #1 position.

 


## BATTERY REMOVAL

CONTAINS NICKEL CADMIUM BATTERY. MUST BE COLLECTED, RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE OF IN THE MUNICIPAL WASTE.



1. Using a small Phillips head screwdriver, remove the screws at the back of the trimmer.
2. Remove the bottom housing and push the batteries out. Bring the batteries to the nearest collection centre for proper disposal. **DO NOT** throw the batteries into the normal municipal waste system.

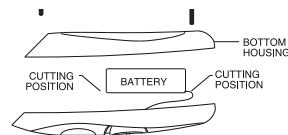

- gling in another appliance to test the outlet.
2. Make sure the electrical plug is not connected to a switch which turns power off when lights are turned off.
  3. Be sure you have inserted the trimmer properly into the charging stand, that all connections are secure, and that the trimmer switch is in the "OFF" position.

### OPERATING INSTRUCTIONS:

1. Before using your trimmer for the first time, place the unit in the charging stand and charge it for 16 hours. Always place the trimmer in the base with the ON/OFF switch in the OFF position.
2. Always check to see if the charging light is on when you place the trimmer in the charging stand. The switch must face forward for the trimmer to slide properly into the base and fixed firmly.
3. Plug the adaptor into any wall outlet (at the voltage listed on the label affixed to the adaptor). Unplug adaptor when not in use.
4. The adaptor may become warm while charging. This is normal.
5. Battery life can be improved by periodically allowing the trimmer to run until the motor stops. Immediately shut the switch OFF and fully recharge.

## USER MAINTENANCE INSTRUCTIONS

### TAKING CARE OF YOUR TRIMMER

#### OILING THE BLADES

About once a month you should oil the trimmer blades with the oil provided in your kit. It is best to do this over a piece of newspaper. Turn the trimmer on and hold it so that the blades are

pointed downward. Spread one drop of oil across the blades, then turn the trimmer off and wipe away the excess oil with a soft cloth.

Be careful not to use too much oil and don't oil your trimmer more than necessary, as this could damage the motor. (Never attempt to oil the motor bearing, as it is permanently lubricated.) After oiling the blades, return the trimmer and oil packet to the trimmer storage base. Keep oil away from children.

#### BLADE CARE

Because the trimmer blades are precision-made for a very special use, they should always be handled with care. Each time you finish using the trimmer, take the cleaning brush provided and brush away any loose hair that has collected in the blades. Then store the trimmer in its recharging storage base to protect the blades until the next use.

Be especially careful when changing or adjusting blades. When you have your trimmer serviced, be sure that both blades are sharpened or replaced at the same time.

To promote the long life of the appliance, use your trimmer only for the purpose intended by the manufacturer – to trim your beard and mustache.

#### TURBO FEATURE

This product is equipped with a turbo boost button. When activated, this will provide 15% more cutting power. This is especially useful for cutting through thicker hair.

To activate the turbo feature:

1. Press down the lock button and turn the Power switch to the "on" position.
2. Press the Turbo button.
3. Continue to press the Turbo button for as long as you need the extra power.

4. Release the Turbo button to return to normal power

### THREE POSITION TAPER CONTROL

The Conair trimmer taper control switch is positioned at the back of the unit. You can hold the trimmer in your hand and adjust the switch as needed. The taper control eliminates the need in some situations for an attachment comb because it lets you gradually adjust the closeness of the cut. For closest cut and shortest hair, push switch all the way to level #3. This is the setting to use for the 2 day shave look. To increase the cutting length, slowly push control down to level #2 or #1 for longer cut. Note that too much clipped hair on the clipper can slow down its operation. To remove it without removing the blades simply use the enclosed cleaning brush and gently sweep away the clipped hair from cutting surfaces.



### GROWING A BEARD AND MUSTACHE

There are three key factors that will determine which beard or mustache style is best for you:

1. The shape and dimensions of your face.
2. The natural growth of your beard/ mustache.
3. The thickness of your beard/mustache. If you are unsure about the type of beard or mustache that would most suit your face, speak with a professional hair stylist and ask for an opinion on what style would be best. Once your beard or mustache has been styled, it is essential that you maintain its appearance. To do this, use your trimmer to trim your beard/mustache weekly.

For the best trimming results, your beard should be slightly damp (NOT WET) when using your trimmer. This will prevent the trimmer from removing more hair than desired.

## GMT183WCSC BEARD/MUSTACHE TRIMMER



## LIMITED TWO YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below, together with your purchase receipt and \$5.50 for postage and handling. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

**ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.**

**IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.**

This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province.

### SERVICE CENTRE:

Conair Consumer Products Inc.  
100 Conair Parkway,  
Brampton, Ontario, L4H 0L2.  
1-800-472-7606

©2009 Conair Consumer Products Inc.

[www.conaircanada.ca](http://www.conaircanada.ca)

Consumer Call Centre E-mail :  
[Consumer\\_Canada@Conair.com](mailto:Consumer_Canada@Conair.com)

06CN1444

IB-7365

# TYPES OF BEARDS/MUSTACHES



## GETTING STARTED:

 
### OUTLINING YOUR BEARD

1. It is always best to begin with a clean, slightly damp beard.
2. After you have combed through your beard in the direction it grows naturally, you will want to outline the desired shape, beginning under your jawline.
3. Begin defining your beard's shape under your chin and work upward on each side of your face toward your ears. Then define the upper outline of your beard across your cheeks, past your sideburns, and toward your hairline.



### NOW YOU'RE READY TO TRIM YOUR BEARD

1. The trimmer includes 2 five position combs: a narrow comb for use with the hair trimming blade (2-10mm) and a wide comb to be used with the facial hair blade (13-25mm) which provide lengths of 3/32" (shortest) to 1" (longest).
2. To use the 5-position comb, slide the unit over the trimmer blades and snap it down into position. At first, until you become familiar with the adjustments, use the longest trim setting. (You can always go back and make your beard a little shorter.)

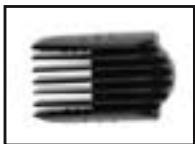

# 13 pieces

professional multi-use trimmer  
with turbo power



**Model GMT183WCSC**  
**Instruction Booklet**

*Conair wants to thank you for choosing our  
beard/mustache trimmer. We know  
it will provide you with years of  
reliable service.*

*For your safety and continued enjoyment  
of this product, always read the instruction  
booklet carefully before using.*

**CONAIR®**  
r e c h a r g e a b l e