

# **TWISTER**

## **User Manual**

# Declaration

Congratulations on the purchase of your new W300 Phone.

**WARNING:** This product contains small parts. Keep your mobile phone and any small parts out of small children's reach. To take advantage of all the benefits and service features, you may need to purchase additional hardware or software, pay monthly access and/or per use charges. This device contains a Lithium Ion Battery. Dispose of batteries according to local regulations, (e.g. recycling). Do not dispose of as household waste.

## Please Read Before Proceeding

- ❖ This device is not charged when you take it out of the box.
- ❖ Do not remove the battery pack when the device is charging.
- ❖ When inserting your (U)SIM card, make sure the (U)SIM card snaps into the socket securely.
- ❖ Your warranty is invalidated if you open or tamper with

the device's outer casing.

## **RELATIVE INSTRUCTION**

Some functions referred to in this guide also need the support of a network operator or service provider. If you are unable to confirm whether you will be able to use certain functions or services with this phone, please consult your network operator or service provider.

In order to ensure your safety, please read the “Safety Notice” and “Safety Precaution”.

Typographic conventions used in this user guide include:

◊: shows function key;

“”: shows important information on the phone interface;

[ ]: shows the phone menus.

# Content

Safety notice.....	7
1 Your phone.....	10
2 Getting Started.....	15
2.1 Installing and uninstall the battery.....	16
2.2 Installing the (U)SIM card.....	19
2.3 Installing Micro-SD card.....	20
2.4 Power on/off.....	21
3 Basic function.....	23
3.1 Call.....	23
3.2 Input modes.....	26
4 Menu use.....	28
4.1 Messages.....	30
4.2 Contacts.....	34

<b>4.3 Call log.....</b>	<b>36</b>
<b>4.4 Web.....</b>	<b>38</b>
<b>4.5 Media.....</b>	<b>40</b>
<b>4.6 My Doc.....</b>	<b>42</b>
<b>4.7 Camera.....</b>	<b>42</b>
<b>4.8 Settings.....</b>	<b>45</b>
<b>4.9 Tools.....</b>	<b>50</b>
<b>4.10 JAVA.....</b>	<b>52</b>
<b>4.11 Alarm.....</b>	<b>53</b>
<b>4.12 Profiles.....</b>	<b>54</b>
<b>4.13 Album.....</b>	<b>55</b>
<b>4.14 FM.....</b>	<b>56</b>
<b>4.15 Facebook.....</b>	<b>57</b>

4. 16 Backup.....	57
4. 17 Reader.....	58
4. 18 Usb storage.....	59
4. 19 Calendar.....	59
4. 20 Voice record.....	61
4. 21 Calling filter.....	62
4. 22 Call settings.....	64
4. 24 Bluetooth.....	66
5 Safety Precaution.....	68
6 Troubleshooting.....	73

## Safety notice

Before using the phone, please read and follow the rules below carefully. For the detailed information, please refer to the “Safety precaution” section on page 67.



If you dial or answer a call while driving, please use the hands-free device (e.g. headset, vehicle hands-free system, phone hands-free system) or use your phone after parking the vehicle.



The phone may interfere with the communication network of aeroplanes, so please make sure your phone is switched off during flight.



All phones can be subject to interference, which could affect its performance.



Please switch off your phone where you see signs forbidding phone use. Such signs can be found in medical centres or establishments containing medical equipment.



In order to ensure high performance and to avoid damage to the phone, please use original accessories and battery. Do not use products which are not

compatible.



To avoid the risk of any explosion, please switch off the phone at petrol stations and places which are near fuel, chemical solvent or other dangerous substances.



Please switch off your phone in areas where there could be a risk of explosion and in areas where you are asked to switch off bidirectional radios. Pay attention and adhere to any rules and regulations concerning mobile phone use.



Please neither burn the phone battery nor use it as ordinary rubbish, as this could endanger life and damage to the environment. Please obey the environmental policy of the local government and dispose of and recycle them in time.



Keep small parts (e.g. (U)SIM card) out of the reach of children to prevent batteries from being swallowed or causing other dangers.



Please back up the important information of phone and be sure to have a second copy in case data is lost



from your phone.



Make sure the phone is switched on and has service coverage before inputting the emergency number. Press the call key for your position to be located. Please don't end call unless told to do so.

# 1 Your phone

## ● Front view of your phone



## Other view of your phone














## Key function

Press Key	Description
Power on/off key	Hold the key to switch the phone on/off; Press to return to Home Screen in any screen.
Left function key	Enter [ <b>Menu</b> ] from the Home Screen; Press to carry out left-hand-side commands on the other screen.
Right function key	Enter [ <b>Contacts</b> ] from the Home Screen; Press to carry out right-hand-side commands on the other screen.
Call key	Press to dial or answer a call; Press to enter [ <b>Call log</b> ] from the Home Screen.
Navigation key	Press < <b>OK key</b> > to enter [ <b>Menu</b> ] from the Home Screen, press to confirm your menu choice in other screen; Press< <b>Left key</b> > to enter [ <b>Profiles</b> ]; Press< <b>Right key</b> > to enter [ <b>Messages</b> ]; Press< <b>Up key</b> > to enter [ <b>Browser</b> ]; Press< <b>Down key</b> > to enter [ <b>Alarm</b> ]



## Status icon

Icon	Function description
	<b>Signal Strength:</b> Represents the (U)SIM1 network signal.
	<b>Signal Strength:</b> Represents the SIM2 network signal.
	<b>Normal:</b> Indicates that the phone rings when receives a call or a new message.
	<b>Silent:</b> Indicates that no audio and vibration alert when receives a call or a new message.
	<b>Meeting :</b> Appears when the profile mode is set as <b>[Meeting]</b> .
	<b>Loud:</b> Appears when the profile mode is set as <b>[Loud]</b> .
	<b>Headset:</b> Appears when the profile mode is set as <b>[Headset]</b> .
	<b>In car:</b> Appears when the profile mode is set as <b>[In car]</b> .
	<b>Customised:</b> Appears when the profile mode is set as <b>[Customised]</b>

	<b>Alarm:</b> Appears when the alarm is activated.
	<b>Calendar:</b> Appears on the day when a calendar event exists.
	Appears when you are out of your local area and have registered on a different network.
	<b>Roaming:</b> Appears when you are out of your local area and have registered on a different network.
	<b>New SMS:</b> Appears when there is a new unread text message.
	<b>New MMS:</b> Appears when there is a new unread multimedia message.
	<b>New push message:</b> Appears when there is a new unread push message.
	<b>Battery Status:</b> Represents the level of your battery.
	<b>Low Battery:</b> Displays when there is little battery power.

---


## **Getting Started**

Before using the phone, please insert a (U)SIM card supplied by a network service provider. The (U)SIM card (Universal Subscriber Identification Module) includes phone number and detailed information of service items, and can be used to store phone number and user information.

### **2.1 Installing and uninstall the battery**

#### **Installing the battery**

1. Slide the battery cover in the direction of the bottom of the phone.
2. Lift up the battery cover and remove it.
3. Make sure the battery contacts are facing into the phone, and then push the other side of the battery gently until it fixes itself in the battery slot.
4. Replace the battery cover.

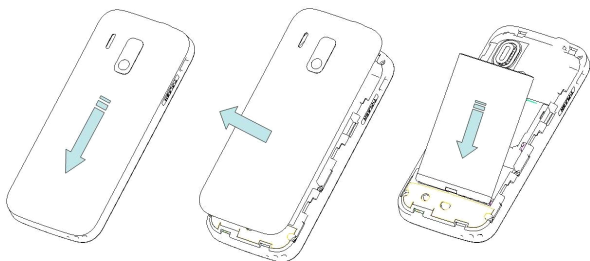

## **Uninstall the battery**

1. Hold down <***Power on/off key***> to switch off the phone.
2. Slide the battery cover in the direction of the down of the phone and lift up the battery cover and remove it.
3. Push the top of the battery slot, lift up the battery and remove it.

## **Battery charging**

The phone uses a lithium-ion battery and a charger is provided for you to charge the battery.



To charge the battery:

1. Put the battery in the phone.
2. Connect the lead of the charger to the connecting slot on the left of the phone.
3. Connect the adapter to a standard AC wall outlet.
4. While charging, the battery image on the phone's display screen begins to scroll from empty to full. Once the phone has finished charging, the battery image will display as full.
5. When charging is complete, disconnect the charger and standard power socket first, and then disconnect the phone and charger.

***Note:***



***1. Not use the battery for a long time, it will automatically discharge, please charge before use.***

***2. The battery can be recharged. But if your find a significant decrease standby time, please replace the battery.***

***3. Please use the approved battery and charger designated for this product, otherwise it may cause an explosion. You can also use the USB cable to charge your device.***



## **Battery power display**

The battery icon  displays on the top-right side of the screen. If the battery is low, the low battery icon  will display.

If the battery is too low, the phone will switch off automatically. If this occurs, you may lose any data that has not been stored.


## **2.2 Installing the (U)SIM card**



### ***Caution:***

***(U)SIM/SIM card and its contacts can be easily damaged by scratching or bending, so be very careful when inserting or removing the card. Please follow the instructions of installing the (U)SIM/SIM card and keep (U)SIMSIM card out of the reach of children***

1. Hold down <***Power on/off key***> to switch off the phone. Slide the battery cover in the direction of the bottom of the phone.
2. Slide the (U)SIM/SIM card into the card slot as the figure show. Make sure that the notched corner is at the bottom right and the gold contacts of the card face into the phone.
3. Install the battery and then replace the battery cover.
4. Take the (U)SIM/SIM card with the above steps in reverse.

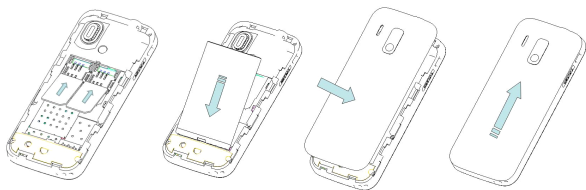


## 2.3 Installing Micro-SD card

Micro-SD card is a removable storage card that can be used to increase phone memory.

The steps of installing the Micro-SD card show as below:

1. Open the slot
2. Slide the Micro-SD card into the card slot as the figures show; make sure that the gold contacts of the card face into the phone.
3. Place back the Micro-SD card slot.

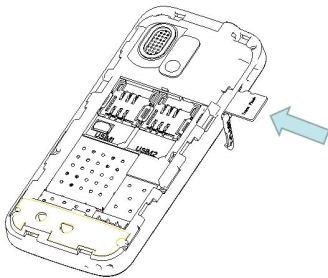

## 2.4 Power on/off

### **Power on**

Please make sure the (U)SIM / SIM card has been inserted and the battery power is enough. Hold <***Power on/off key***> to switch the phone on.

### **Power on password authentication**

If the PIN code and phone lock is activated, you'll have to input the PIN code and phone password each time when you switch on your phone.

### **Power off**

Hold <***Power on/off key***> to switch the phone off.

## **3 Basic function**

### **3.1 Call**



#### **Make a voice call**

On the Home Screen, access the Phone screen by pressing numeric keys on the keypad. When you enter the phone number completely, press <**Call key**> to initiate a voice call.



#### **Make a video call**

On the Home Screen, access the Phone screen by pressing numeric keys on the keypad. When you enter the phone number completely, select [**Options**→**Video call**] to initiate a video call.



#### **Caution:**

***Only when the USIM in slot 1 have register to the 3G network, video call is available. Specific charges, please contact the network operator.***



#### **Making an extension call**

On the Home Screen, access the Phone screen by pressing numeric keys on the keypad , then hold < **\* key** >, inserted between the phone number and extension number symbol "W", press < **Call key** > to initiate a call, after the phone number is connected, the right softkey to display the "Send", press the key to dial the extension number.

On the Home Screen, access the Phone screen by pressing numeric keys on the keypad , then hold < **# key** >, inserted between the phone number and extension number symbol "P", press < **Call key** > to make an extension call directly.



## **Making an international call**

Hold < **0 key** > on the phone keypad until "+" sign appears. The "+" replaces the 00 in the international prefix of the country that you are calling. Enter the full phone number and press < **Call key** >. The full phone number includes country code, area code (without the leading zero, if any) and phone number.



## **Receiving a call**

When you receive a phone call, you have the options to

answer it or ignore it:

- ❖ To answer the call, you can press <***Left function key***> or <***Call key***>.
- ❖ To ignore the call, you can press <***Right function key***> or <***Power on/off key***>.



## **Call functions**

During a call, press <***Options***> to access the following options:

- ❖ **Hold:** Select to place the caller you are talking to on hold. Select [**Retrieve**] to remove the call from Hold.
- ❖ **Mute:** Select to turn off the microphone so that you can hear the caller but the caller cannot hear you. Select [**Mute off**] to switch on the microphone again.
- ❖ **Record:** Select to record for the current call. Select [**Stop recording**] to stop recording.
- ❖ **Call log:** Select to view your Call log list.
- ❖ **Contacts:** Select to view your Contacts List.
- ❖ **Messages:** Select to view your Messages list.

***Note:***



***Recording a call is illegal in some countries; therefore, before recording, you should get the permission of the person you are calling.***

## **Making an emergency call**

Enter the appropriate emergency numbers (such as 999) for your locale and press <***Call key***>.

***Note:***

***Additional emergency numbers may be included in your SIM card. Contact your service provider for details.***

## **3.2 Input modes**

You can enter text and numbers by using the keypad. The phone supports input modes for entering text and numbers: abc, ABC, esp, ptg, fra mode are used for entering text, and Numeric mode is used for entering numbers

When you select a field that requires entering text or numbers, the phone automatically selects the appropriate input mode. The status indicator on the top-right side of the display screen shows the input mode that you are currently using.

 **abc**

Multitap text input mode, lowercase.



 
Multitap text input mode, caps lock.



Select this mode, you can input Spanish characters.



Select this mode, you can input Portuguese characters.

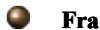

Select this mode, you can input French characters.



Numeric input mode



While typing a message, select [**Options→Symbol** ], then you are allowed to enter symbols into a text message.

To enter a symbol, you should:

- ❖ Press <***Up key/Down key***> to select the line which includes the symbol you want to use.
- ❖ Press <***OK key***> to insert the desired symbol mark.

















While typing, press <**# Key**> to switch input modes.










## 4 Menu use

This phone provides you with a wide variety of functions. These functions are arranged in the form of menus and you can look at, use or set each menu as required.

On Home screen, press <**Left function key**> to enter the main menu.

Icon	Function
 Messages	Compose text and multimedia messages and send; View the messages and change the messages settings
 Contacts	Add new contacts and view the contacts list
 Call log	View call log list
 Web	Connected to the Internet pages

 Media	Play back audio or video files
 My Doc	Manage files stored in phone or in Micro-SD card
 Camera	Take photos and record vides
 Settings	Using this menu to set or change display settings and phone settings etc
 Tools	Provides several tool functions
 JAVA	Manage java applications installed
 Alarm	Alarm settings menu
 Profiles	To set different profiles
 Album	View and manage picture files
 FM	Listening to the radio

 Facebook	Link to facebook site
 Back up	Phonebook backup and restore
 Reader	Reading e-books
 USB storage	Set the Micro-SD card as U disk
 Calendar	View calendar, create new event and todo
 Recorder	Recording audio files
 Calling filter	Set incoming calls filter and messages filter
 Call settings	Call-related parameter settings
 Bluetooth	Bluetooth function

## 4.1 Messages

With this function, you can create, edit, send the text

messages, Multimedia messages.

## **New SMS**

1. On the Home screen, press <***Left function key***> and select [**Messages**→**New SMS**].
2. Enter the phone number of the recipients. You can enter the number manually or select the desired number from the Contacts list by pressing <***OK key***> or select [**Options**→**Add contacts**]. Press <***Down key***> to input the next number to address the message to multiple recipients.
3. Move the focus to “Message” to write your message contents.
4. After creating a text message, press <***OK key***> or select [**Options**→**Send**] to send the message. When enable dual card, please select [(U)**SIM1**] or [**SIM2**] to send the message. If the message has been sent successfully, it will be stored in [**Sent**] folder; if it fails to send, the message will be saved in [**Outbox**].

## **New MMS**

1. On the Home screen, press <***Left function key***> and select [**Messages**→**New MMS**].
2. Enter the phone number of the recipients. You can enter the number manually or select the desired number from the

Contacts list by pressing <**OK key**>. Press <**Down key**> to input the next number to address the message to multiple recipients.

3. Select [**Options**→**Cc**] to add the Cc recipient column, enter the phone number of the Cc recipient.

4. Select [**Options**→**Subject**] to add the Subject column and types the subject of the multimedia message.

5. Move the focus to “Insert picture/Insert video” and press <**OK key**> to select a photo or video clip from pictures or from movies and press <**OK key**> to insert it.

6. Move the focus to “Insert sound” and press <**OK key**> to select an audio from My Doc and press <**OK key**> to insert it.

7. Move the focus to “Message” to write your message contents.

8. Press <**OK key**> or select [**Options**→**Send**] to send the message. When enable dual card, please select [(U)**SIM1**] or [**SIM2**] to send the message. If the message has been sent successfully, it will be stored in [**Sent**] folder; if it fails to send, the message will be saved in [**Outbox**].

While composing a multimedia message, you can select [**Options**→**Insert other**→**New slide**] to add a new slide. You can also add contact information, text template, emotion

and call log to message content from [**Options**→**Insert other**] to send.

Select [**Options**→**Picture message controls**], you can select to preview the composing message, set the slide duration, remove slide or add attachments.

## **View messages**

1. On the Home screen, press <**Left function key**> and select [**Messages**→**Inbox**]. View the received text messages, multimedia messages and push messages.
2. Scroll to highlight a message and press <**OK key**> to view the message.
3. Press <**Options**> you can select to reply, forward, delete the message, call sender etc.

## **Outbox**

The [**Outbox**] stores all the text messages and multimedia messages which have been sent failed.

## **Drafts**

The [**Drafts**] is used to save the text messages and multimedia messages that have been created but not yet sent.

## **Sent**



The [**Sent**] stores all the text messages and multimedia messages you've sent successfully.

### **Favorite**

The [**Favorite**] stores all the text messages and multimedia messages you have moved to.

### **Trash**

The [**Trash**] stores all the text messages have been filtered.

### **Template**

Include text template and picture template, you can edit, add or delete these templates.

### **Messages setting**

On the Home Screen, press <*Left function key*> and select [**Messages → Messages settings**] to set the relative parameters for SMS, MMS, Push message, Broadcast or Message memory.

## **4.2Contacts**

Contacts is the information storage for the people and businesses you communicate with. Stores phone numbers,

email addresses and any other information that relates to a contact. You can also add a picture or assign a ringtone to a contact.

Press <***Left function key***> from the Home Screen and select [**Contacts**] to enter the contact menu.

### **Search contact**

In the search box, enter the contact name you want to find, the system will automatically search for a qualified records displayed.

### **Add contacts**

1. Press <***Left function key***> from the Home Screen and press [**Contacts**→**Add contacts**] to enter the add new contact screen.
2. Scroll to select [**Phone**], [(U)**SIM1**] or [**SIM2**] .
3. Enter information for the new contact then press <***Ok key***> to save.

### **Contacts functions:**

<b>Options</b>	<b>Functions</b>
Call	Call the telephone number highlighted.

Send message	Send text or picture message to the telephone number highlighted.
Send contact via	Send the highlighted contact to the desired recipients via Text message, Picture message and Bluetooth.
Manage contacts	Select to edit, delete the highlighted contact; or select Copy manage, Move manage and Delete manage to manage all the contacts.
Settings	Set speed dial numbers, view and edit your own number, inquire contact memory status.
Contacts view	Select to view all contacts, only view phone, (U)SIM1 or SIM2, (U)SIM1 & SIM2 contacts.
More apps	Select to add to groups, set the highlighted contact as incoming and SMS filter number, use phonebook micro-SD card back up function to back up or restore your contact record.

## 4.3 Call log

Press <**Left function key**> on Home Screen, select [**Call log**], enter (U)SIM1 or SIM2 call log list, press <**Left/right key**> to switch among [**All calls**], [**Missed calls**],[**Dialed calls**], [**Answered calls**], and [**Reject calls**]. It can also tell you when a call was initiated and how long it lasted. You can only view call log if you are subscribed to the service. Call time shows the duration of last call, total incoming call and total outgoing call.

### Call log functions:

Options	Functions
Voice call	Initiate a voice call to the highlighted number
Video call	Initiate a video call to the highlighted number
Send message	Send a text message to the highlighted number.
Send number	Add the highlighted number as text message contents and send to a desired

	recipients
Edit	Edit the call log telephone number before initiate a call
Create contact	Creates a new contact entry for the highlighted number.
Add to contact	Saves the highlighted number to a contact entry which has been saved in contact list.
Delete	Deletes the highlighted entry from the call log list.
Delete all	Deletes all call entries from the call log list.
Add to filtered call list	Add the highlighted number to the incoming call filter list.
Add to filtered sms list	Add the highlighted number to the sms filter list.

## 4.4 Web

Your phone has a browser to access to the Internet.

To access the web screen, press <***Left function key***> from the Home Screen and select [**Web**].

### **Go to mobile websites**

Scroll to focus in “Enter address” to enter the website URL and press <***OK key***>.

### **Search**

Scroll to focus in “Search” to enter the website URL and press <***OK key***>.

### **Homepage**

Enter the website which is embedded.

### **My bookmarks**

Use this menu to save the URL addresses, so that you can quickly access to a Website you’ve saved here. Scroll to select [**My bookmarks**] to enter the bookmarks list screen. Select your desired bookmark and press <***OK key***> to access the Website you’ve saved. Press <***Left function key***> to open, sort, edit, delete, send link and show address of bookmark.

### **History**

The [**History**] menu is used to store a list of URL addresses

that you've previously visited, press <**OK key**> to connect to your selected network addresses.



## **Saved pages**

This menu is used to save the desired web pages in your phone and view it offline.



### ***Caution:***

- \* ***Only when you use the correct network settings it is can you enter into website normally, any question please consult your network operator.***
- \* ***To surfing or download files, you may need to pay additional charges.***

## **4.5 Media**

The media player works as a music player and video player all the time.

### **Now playing**

1. Press <**Left function key**> from the Home Screen and select [**Media**→ **Now playing, Artists, Albums, Tracks, Movies**] .

2.Press <**OK key**> to play.

### **Create a playlist**

1.Select [**Media**→**Playlists**] from main menu.

2.Select [**Options**→**Create**].

3.Type a playlist name and press <**OK Key**> to select files.

4.Select files then press <**OK Key**> to save.

### **Media player function:**

<b>Options</b>	<b>Functions</b>
Play/Stop	Select [ <b>Play</b> ] to start play an audio or video file, select [ <b>Stop</b> ] to stop playing.
Return to music	Back to media player menu list.
Send as	Send as Picture message or Bluetooth.
Equalizer	You can select Normal, Classical, Pop, soft rock, Dance, Live, Full bass.
Use as	Use the audio file as incoming call ringtone, Contact's ringtone, Message sound or Alarm sound.
Audio to headset	Playing music from Bluetooth headset



Mute	Silent when playing.
Play mode	You can select Shuffle, Play once, Repeat all, Repeat current track
Exit	Exit media player

## 4.6 My Doc

This menu helps you to manage the resources of your phone and Mico-SD card.



### Folders

Four file folders are featured here: [**Music**], [**Pictures**], [**Movies**], and [**Others**]. You can select to copy, move, delete the file, or do some settings related the file.



### Memory card

This menu will appear only when you insert a Micro-SD card. Press <***Left function key***> to format the memory card.



### Memory details

Allows you to view the memory status of your phone or memory card (if available).

## 4.7 Camera

The phone is installed with two 0.3 mega-pixel camera and its memory depends on the phone memory or Micro-SD memory. You can switch the different camera from [**Options**→**Switch camera**], press <**OK key**>, then scroll to select [**Back camera**] or [**Front camera**].



### Taking a photo

1. Select [**Camera**] from main menu, then select Camera or Camera(Picture message) capture mode.
2. You can press <**Left function key**> and press <**Up/down key**> to select different settings from the Toolbar. Press <**OK key**> to enter the setting, then press <**Left/right key**> to select the corresponding option. After setting, press back key to preview.
3. Press <**OK key**> to take a photo, the photo will save automatically.

### Photo functions:

Options	Functions
---------	-----------

Use as	Use the photo as Wallpaper or contact's picture
Delete	Delete the photo
Image viewer	Enter to [ <b>My Doc→Pictures→Photos</b> ] to view the photos.
Send	Send the photo by Picture message or Bluetooth.



## Recording video

1. Select [**Camera**] from main menu, then select Video or Video(Picture message) capture mode.
2. You can press <**Left function key**> and press <**Up/down key**> to select different settings from the Toolbar. Press <**OK key**> to enter the setting, then press <**Left/right key**> to select the corresponding option. After setting, press back key to preview.
3. Press <**OK key**> to take a video, press <**Stop**> to stop recording, the video will save automatically.

### Video functions:

Options	Functions
Play	Play the video

Delete	Delete the video file
Video viewer	Enter to [ <b>My Doc</b> → <b>Movies</b> → <b>Video rec</b> ] to view the videos.
Send	Send the video by Picture message or Bluetooth.



### **Caution:**

- \* ***Low light may cause a decline in image quality. Try to choose the location of the light is better when capture.***
- \* ***When there is not enough memory for capture, please delete unnecessary files to ensure that the camera has enough storage space.***

## **4.8 Settings**

Use this menu to set the parameters of the mobile phone.



### **Dual card**

Select [**Settings**→**Dual card**] from main menu, scroll to select [**Dual phone card open**],[**Only (U)SIM1 open**],[**Only SIM2 open**] or [**Airplane mode**].

## **Time & date**

With this function, you can select your time and date format and edit the time and date.

## **Display**

Select [**Settings→Display**] from main menu, where you can set [**Wallpaper setting**] and [**Blacklight**].

### **Wallpaper setting**

Select the desired picture from phone or memory card as the wallpaper.

### **Backlight**

Use this function to set the Backlight level and backlight time.

## **Phone settings**

Select [**Settings→Phone settings**] from main menu, where you can set [**Language**] , [**AutoOnAndOff**],[**Auto keypad lock**].

### **Language**

The language used on this phone is [**English**],[**Español**], [**Português**] and [**Français**].

### **AutoOnAndOff**

Set your auto power on/off time.

### **Auto keypad lock**

You can set auto key lock time as [**15 seconds**],[**30 seconds**],[**60 seconds**],[**2 minutes**], [**3 minutes**] or [**Off**].



### **Network settings**

Select [**Settings**→**Network settings**] from main men to enter the Network Settings screen.

When you use the phone, the phone will select the network service automatically. When the phone is out of the service area or abroad, you can manually select the appropriate network.

### **(U)SIM1 network settings**

You can view current network, select network mode, set auto or manual search network or edit preferred networks.

### **SIM2 network settings**

You can view current network, set auto or manual search network or edit preferred networks.

### **Default PS data setting**

You can select default PS data as automatic, (U)SIM1 or SIM2.

## **Data connection**

With this menu, you can create a new account, view, edit or delete the selected account. The default account can't be edited and deleted.

To add a new data connection, such as add data connection “GPRS MOVISTAR” just as following:

**Account name:** The user can define a desired account name.

**APN:** Input the corresponding access point name “wap.movistar.mx”.

**User:** Input the name of the user “movistar”.

**Password:** Input the password “movistar”.

**Card slot:** Select (U)SIM1 or SIM2.

Then press <**OK key**> to save.

## **Security settings**

Select [**Settings**→**Security settings**] from main men to enter the Security Settings screen.

### **Lock your phone**

This function protects your phone from unauthorised use by other people by entering a type of password code. If you set this function as [**Enable**], you'll need to input the phone

password when switching on the phone. The preset password is 0000. After using it, please modify your phone password as soon as possible and keep it secret.

## **Function protect**

With this option, you can select to set the functions protect so as to prevent these functions of your phone from unauthorised use by other people. If you set these function as enabled, you'll need to input the phone password when activate these function.

## **(U)SIM1 PIN manager**

In this option, you can protect your (U)SIM1 card from unauthorized use by entering a type of password called a PIN (personal identification number) in order to make calls. Your first PIN will be given to you by your network service provider. To change the PIN code, please select **[Settings→Security settings→(U)SIM1 PIN code→Change PIN]** from main men.

## **SIM2 PIN manager**

In this option, you can protect your SIM2 card from unauthorized use by entering a type of password called a PIN (personal identification number) in order to make calls. Your first PIN will be given to you by your network service provider. To change the PIN code, please select



[Settings→Security settings→SIM2 PIN code→Change PIN] from main men.



**Caution:**

*If you have activated this function of PIN check, you'll have to input the PIN code each time when you switch on your phone. If you input the wrong number three times in succession, the (U)SIM /SIM card will be locked. In this case, you'll need to enter the PUK code to unlock the (U)SIM /SIM card. For more details, please contact your service provider. If you input the wrong PUK number ten times in succession, the (U)SIM /SIM will be locked forever.*

**Trace handset**

If you set these function as enabled, you will have to input the trace handset password when change the (U)SIM / SIM card, if the password is not correctly, the system will automatically send a message to the number you have set.



**Master reset**

The option [**Reset all**] will reset all settings to the manufacturer default and resets all your saved data as well. For this function, you'll have to enter the phone password and the default phone password is 0000. You can also select

the desired function to reset.



### **Caution:**

- \* *Use this function carefully.*
- \* *Back up the materials on the phone before restoring to factory value. We will take no responsibility for material loss due to using the restore factory setting function.*

## **4.9 Tools**

Press **<Left function key>** from the Home Screen and select [**Tools**] to enter the tools Menu screen.



### **World time**

Select [**Tools→World time**] from Home Screen, press **<Left/right/up/down key>** to select a city to view the current time. Press **<OK key>** to set the local time as system time.



### **Notepad**

This option allows you to view and create personal notes.

#### **Add**

Select [**Tools→Notepad**] from Home Screen, then press **<OK key>** to create a new notepad, enter the Description

content, select date and Status, then press <***OK key***> to save.

Options	Functions
Add	Create a new text note
Delete	Delete the highlighted notepad
View	View and edit the highlighted notepad



## Stopwatch

You can use this function to time.

### Stopwatch functions:

Options	Functions
Start	Press < <b><i>OK key</i></b> > to start to time
Stop	During timing press < <b><i>OK key</i></b> > to stop timing
Continue	When stop press < <b><i>OK key</i></b> > to continue to time
Split	During timing press < <b><i>Right function key</i></b> > to split time
Reset	Reset the time to zero

Clear split times	Clear the split times list
-------------------	----------------------------

## 4.10 JAVA

### **Java**

The phone supports J2ME technology and the relative programmes and games. With this menu, you can manage your java applications.

1. Select [**JAVA→Java**] from Home Screen, scroll to select an application, press <**OK key**> to run.
2. Press <**Left function key**> to select [**Options**], you can select to view information, sort by name/size or manage the application.

### **Java settings**

With this menu, you can select to set network parameter or view Java certificate.

## 4.11 Alarm

There are three alarm clocks provided for you which can

alarm when power on or power off.

### **Set alarm**

1. Select [**Alarm**→**Alarm1/Alarm2/Alarm3**] from main menu.
2. Scroll to set State, Time, Alarm sound or Alarm volume.
3. Press <***OK key***> to save.

### **Cancel alarm**

Select [**Alarm**→**Cancel all**] from main menu to turn off all 3 alarms.

## **4.12 Profiles**

With this function you can select different profiles just as you desired.

### **Set a profile**

Select [**Profiles**] from main menu, you can scroll to select a profile and press <***OK key***> to set.

### **Profile parameter**

Scroll to select a profile, then press <***Left function key***> to edit the highlighted profile as desired. Silent mode and meeting mode can't be edited.

### **Normal**

Default sound alert. Press <***Left function key***> you can select Ringtones & alerts, set Ring volume, Ring style, Vibrate alert, Key sounds or Earphone auto answer.

### **Silent**

Default no sound and no vibrate. Silent mode can't be edited.

### **Meeting**

Default only vibrate. Meeting mode can't be edited.

### **Loud**

Default sound alert and vibrate. You can select Ringtones & alerts, set Ring volume, Ring style, Vibrate alert, Key sounds or Earphone auto answer.

### **Headset**

Headset mode can be enabled when you insert a headset. Press <***Left function key***> you can select Ringtones & alerts, set Ring volume, Ring style, Vibrate alert, Key sounds or

Earphone auto answer.

### **In car/Customised**

Press <***Left function key***> you can select Ringtones & alerts, set Ring volume, Ring style, Vibrate alert, Key sounds or Earphone auto answer.

## **4.13 Album**

Use this menu you can view and manage image files. Press <***Left function key***> from Home Screen, then select [**Album**] to view the image files.

<b>Options</b>	<b>Functions</b>
Send as	Send the highlighted picture by Picture message or by Bluetooth.
Use as	Use the highlighted picture as Wallpaper or Contact's picture.
Slide time	View pictures as slide show, you can scroll to select different slide time.
Delete	Delete the highlighted image file.
Rename	Rename the highlighted image file name.

Properties	View the properties of the image file.
------------	--

## 4.14 FM

To use the radio you must connect the headset to your phone. The headset works as an antenna and makes the reception better.



### Set channel

Select [**FM**] from main menu, you will be alerted to search channel automatically for the first time, you can select to search automatically, or also can select [**Options→Set channel**] to set the channel manually.



### Listening to the radio

Select [**Options→Headset/Speaker**] to listening to the radio from headset or speaker, press <*Up/down key*> to adjust the volume.

### FM functions:

Key	Functions
<b>Left/right key</b>	Switch to previous/next channel
<b>* key/ # key</b>	Switch frequency forward/backword



<b>OK key</b>	Stop listening or start to listening to the radio
---------------	---

Select [**Options**] you can scroll to select Auto search, Set channel, view Broadcast channel list, Rename the channel, Minimise or exit the radio.

## 4.15 Facebook

Link to facebook website.

## 4.16 Backup

To use this function, please insert Micro-SD card correctly.



### **Phonebook backup**

You can scroll to select the contacts stored in All, Phone, (U)SIM1 or SIM2 backup to Micro-SD card.



### **Phonebook restore**

#### **Add new contact**

Use this function you will not delete any contact stores in the phone no matter whether the contacts have already exist or not, and restore contacts from Micro-SD card to you phone.

## Replace contact

Use this function you can delete all the contacts stores in the phone, and then restore contacts from Micro-SD card to you phone.

## 4.17 Reader

Use this function you can read ebook. Open a text file, you can press <**OK key**> to scroll to read automatically.

### Reader functions:

Options	Functions
Open	Open a text file from [ <b>My Doc</b> ].
Font	Change the font size.
Speed	Set the text scroll speed, you can select [ <b>Slow</b> ], [ <b>Normal</b> ] or [ <b>Fast</b> ].
Theme	Select different reader background.
Go to page	Enter a page number, press < <b>OK key</b> > to view the desired page.

## 4.18 Usb storage

When the memory card and the USB cable have been inserted, the memory card can be used as a USB mass storage device:

1. Connect the handset and PC with usb cable.
2. Select [**Usb storage**] from main menu, press *<Left function key>* will activate the usb mass storage.
3. When the usb storage is activated, press *<Left function key>* to deactivate.

## 4.19 Calendar

Use Calendar to schedule appointments. After entering the main menu screen, select [**Calendar**] to enter the Calendar screen.

### **New schedule**

On calendar screen, press *<OK key>* to view the schedule or select [**Options**] menu to create a new event or new todo.

**New event:** Set Start date, Start time, Category, fill Event summary content, set Alarm on/off, Reminder time, fill

description and location content, set Repeat time. The Event summary is mandatory.

**New todo:** Set Start date, Start time, Category, fill Event summary content, set Alarm on/off, Reminder time, fill description and location content, set Repeat time, Priority and Status. The Event summary is mandatory.

### Options:

Options	Funtions
New	Creates a new event or new to do.
Sort by	Sorts the schedule list by all events or all to do. Enter the list then select [ <b>Modify</b> ] to re-edit the schedule, or select [ <b>Options</b> ] to have more options for schedule.
Delete	Allows specifically selected deletion from the events and to do list, and can also select to delete expired events, delete all events, delete from today, until today, this week, last week, this month, last month, this year, last year,

	delete by date.
Go to date	After inputting the desired date and pressing < <b><i>OK key</i></b> >, the inputted date will be highlighted.

## 4.20 Voice record

Select [**Voice record**] from main menu, then press <***OK key***> to start to record, during recording press <***OK key***> to stop and save automatically. Press <***Left function key***> you can scroll to select [**Mode: Picture message/ Mode: Normal**], [**Save to phone/Save to memory card**] or select to view audio file.

## 4.21 Calling filter

This function enables you to filter only to answer or reject the incoming calls and display all accept calls or reject calls list.



### **Incoming filter**

#### **Incoming manage**

1. Close: Disable the incoming filter function.
2. Accept incoming: Set the accept call list, all the other telephone number not in the list can not call in.
3. Reject incoming: Set the reject call list, all the number in the list can not call in.
4. Reject all: If [**Reject all**] is enabled, all the incoming call will be rejected.

### **Service period**

Calling filter only take effect in the set service period.

### **Rejected call logs**

Displays the incoming calls logs which you have rejected.

### **Message filter**

#### **Trash number list**

Set the number of messages filtered, the number of messages received will be saved to [**Main menu → Messages → Trash**].

#### **Trash content list**

Set the content of messages filtered, the messages contain contents in the list received will be saved to [**main menu → Messages → Trash**].

**Set**

You can set message filter mode as Reject trash number, Reject trash content or Reject unknown number.

## **Auto reply message**

You can set auto reply message when miss and reject a call, and edit the message contents.

### **Caution:**

*Only when you enable caller identification display it is can you use calling filter normally, any question please consult your network operator.*

## **4.22 Call settings**

On the Home Screen, press <**Left function key**> and select [**Call settings**] to enter the Call Settings screen.

### **Call volume**

Press <**Left/right key**> to adjust the volume, press <**OK key**> to save.

### **Answer mode**

You can scroll to select [**Call key**], [**Auto answer**] and [**Any key**], if [**Auto answer**] is enabled, the phone can answer

incoming calls in 5 seconds automatically. Before the auto answer, you can also press <***Call key***> to answer it.

## **(U)SIM1/SIM2 CallSet**

1. **Call divert:** This network service enables the incoming calls to be transferred to a specified number. The phone provides you with [**Call forwarding unconditional**], [**If busy**], [**If not answered**], [**If unreachable**], [**Cancel all divers**] and [**Status report**] options.
2. **Call waiting:** This network service informs you when someone is trying to reach you while you are on another call.



### ***Caution:***

***Call divert and call waiting need to be supported by your network. For more details, please check with your service provider.***

3. **Minute reminder:** If you activate this function, an elapsed time reminder will be heard at the 50th second of every minute during your call.
4. **Auto redial:** If you activate this function, the phone will redial the number after an unsuccessful call.



5. **Show my number:** You can select whether to hide your phone number while making a call with options [**Set by network**], [**Show**] or [**Hide**]. This function needs the support of your network service provider
6. **Call barring:** The Call barring function helps you to restrict the incoming and outgoing calls. But this function needs the support of your network service provider.
7. **Video call settings:** Relevant settings for video calls.
8. **Call duration:** You can view last call time, total incoming call time and total outgoing call time. Press <**OK key**> to reset the time to zero.

## 4.23 Calculator

Press <**Left function key**> on the Home Screen, and select [**Calculator**], use to Add, Multiply, Divide or Subtract and press <**OK key**> to select calculator. Press <**\* key**> for minus and <**# key**> for decimal point.

## 4.24 Bluetooth

Bluetooth is a wireless technology designed for local area voice and data communications.

## **Switch on/Switch off**

Press <**Left function key**> on the Home Screen, and select [**Bluetooth**→**Switch on/off**] to switch the Bluetooth on or off.

## **Device list**

You can establish connections with many Bluetooth-enabled devices and manage them through this option.

## **Search for device**

Press <**Left function key**> on the Home Screen, and select [**Bluetooth**], then scroll to highlight the [**Search for device**] and press <**OK key**> to search the Bluetooth devices around you and display the detected Bluetooth-enabled devices in the list, then you can select a device from the list.

## **Caution:**

*In order to get a better communication, it's better to keep the distance of two devices less than 10 meters, and have set Bluetooth as visibility. And two Bluetooth devices are best not to have obstructions (such as water walls, metal equipment, etc.).*

## **Visibility**

This function allows you to set whether to show or hide your phone to others. If you select [**Show your phone**] and the Bluetooth-enabled device will detect your phone. While select [**Hide your phone**] can avoid the detection and disturbance from some unexpected Bluetooth devices.



### **Your phone name**

Enter the name of your phone, when it has been connected with other devices, the name will be shown.



### **Bluetooth information**

Allows you to view the services which your phone supports.

## **5 Safety Precaution**

### **5.1 Battery information and care**

- ❖ Never use any battery that has been damaged.
- ❖ While using the phone near network station, the power consumption is very little. Therefore, the call and standby time depends on greatly by the signal strength of honeycomb network and the parameters set by network

operator.

- ❖ The battery charging time will depend on the amount of electricity remaining and the type of battery and charger used. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- ❖ Only use batteries that are compatible with your phone and only recharge your battery with a compatible charger. If a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, as overcharging may shorten its life.
- ❖ Do not connect the anode and cathode of a battery the wrong way round.
- ❖ Do not leave the battery in places with too high or too low temperature (such as block the battery in a car during summer or winter), or the battery capacity will be reduced and battery life will be shortened. Always try to keep the battery at room temperature.
- ❖ Do not short-circuit the battery. This may damage the electronic core or the protected circuit inside the battery. Accidental short-circuiting may occur when a metal

object (coin, clip or pen) causes a direct connection between the anode and cathode of the battery, for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting. Therefore, please store the battery carefully and on its own.

- ❖ Don't burn your phone battery or treat it as common rubbish. Please adhere to the local environmental policy in order to avoid endangering life and causing environmental damage, and recycle your batteries in time.
- ❖ If your phone, battery or other charging device leaks due to carelessness, you must not put it inside any piece of equipment that heats up (such as drier, microwave etc.). The phone or other products may go wrong, or this could even cause the phone, battery or other charging device to burn, expand and explode.
- ❖ Please deal with the useless old battery according to the relative introduction.

## **5.2 Usage environment**

Please remember to obey the necessary rules and regulations

whenever use your phone. This will help keep you safe and respect your environment.

- ❖ Switch off your phone when close to petrol stations, bunkers, chemical factories or explosive areas and adhere to any safety signs and instructions there. Breaking any rules may cause explosion or injury.
- ❖ Using the phone on an airplane can cause interference and to its navigation system. You must switch off your phone before boarding and make sure your phone is switched off during the whole flight.
- ❖ Please place the phone somewhere safe and don't put it on a seat or in places where it could fall and break. In order to ensure safe driving and avoid road accidents, please don't use the phone when driving. If you must use it, please use the phone's hands-free or park at roadside before making or answering a call.

### **5.3 Note about using spare parts**

- ❖ Please put all spare parts (such as (U)SIM/SIM card, storage card, battery etc) out of reach of children.
- ❖ Please do switch off the phone and disconnect the phone and charger before you removing the battery from the

phone.

- ❖ As the phone's spare parts are not waterproof, please keep all spare parts dry.
- ❖ You should pull out the plug of any spare part correctly when you switch off the power, don't drag the power line forcibly.

If the phone, battery, and charger don't operate normally, please contact one of our maintenance centres with a qualified repair service as soon as possible.

## **5.4 Other safety information**

- ❖ When you are not using your phone, it is advisable to switch it off, remove the battery to save energy and avoid radicalizing the phone.
- ❖ If you use headsets to listen to music or watch a film, please don't turn the volume up too high as this could damage your hearing.
- ❖ You can't disassemble the terminal and battery of the phone unless the technical personnel.



## 6 Troubleshooting

Possible	Reason	Solution
The phone can't be switched on	1.The battery power is used up 2.Incorrect battery	1.Charge the battery 2.Install battery



	installation	correctly
The phone is switched off automatically	Low battery power	Charge the battery
Can't display network	<p>1.The (U)SIM/SIM card has been incorrectly installed</p> <p>2. The network is very weak</p>	<p>1. Refer to the (U)SIM/SIM card installation method.</p> <p>2. Move to a place with a strong signal to use the phone</p>
Bad call quality	<p>1.The area does not have a good signal</p> <p>2.The signal changes suddenly</p>	<p>1. Move to a more open area.</p> <p>2. Maybe you are moving at high-speed (e.g. on a train or bus). Observe the signal</p>

		strength and select the place with the strongest signal to make a call and ensure better call quality.
Send text message failed	Error text message service center	Change to the correct service center number
The battery can't be charged	<p>1. Battery or charger has been damaged</p> <p>2. The surrounding temperature is too low or too high</p>	<p>1. Contact one of our maintenance centres.</p> <p>2. Make sure the phone is charged in a normal temperature.</p>
Lack of space	The my document file /messages /contacts are	Delete unnecessary files or contents

	taking up too much space	
--	-----------------------------	--