


GTB

FanoutCorrector User's Manual

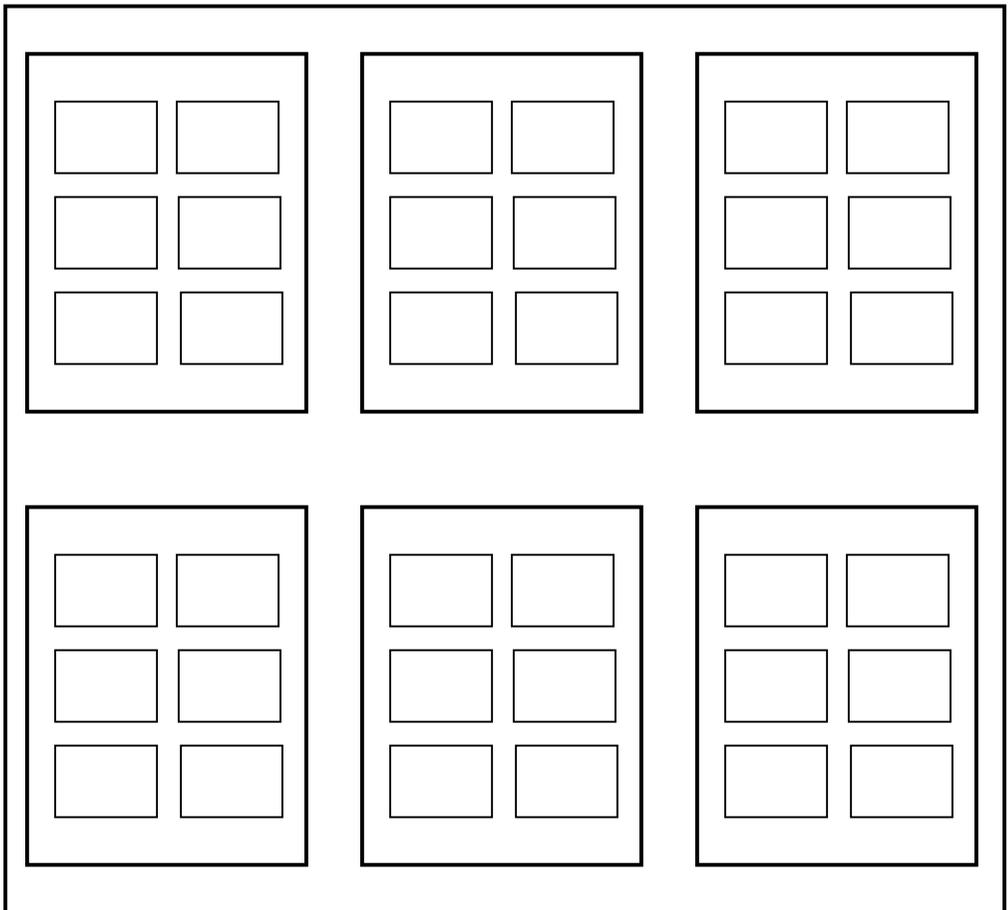

Content

Chapter 1 Before using this software	5
1. Operation Environment and Installation.....	7
1-1. Recommend operation environment.....	7
1-2. Installation.....	7
2. FanoutCorrector Overview	8
2-1. Overview	8
2-2. Files to handle	11
3. Sample Application.....	12
Chapter 2 Operation	13
FanoutCorrector's Operation.....	15
1. Basic Screen	15
2. Menu.....	17
3. Dialog.....	19
3-1. Hot folder setting.....	19
3-1-1. Setting dialog	19
3-1-2. Hot folder setting	21
3-1-3. Fan out Revision Setting.....	25
3-2. Palette setting	28
3-3. Option setting	32
4. Output of log file in HTML	33
5. Troubleshooting	33

Chapter 1

Before Using this Software

Operation Environments and Installation
FanoutCorrector's Overview

1. Operation Environments and Installation

1-1. Recommend Operation Environments

Input Format: TIFF (1 Bit)

Output Format TIFF (1 Bit)

Computer Requirements: Pentium III 600Mhz or above

Memory: 256MB or above

Hard Disk: 20GB or above

Operation System: Windows NT Service Pack 5 or above

: Windows 2000

1-2. Installation


You must install FanoutCorrector and hardware key's driver in CR-ROM of Strip Editor before using.

[Remark] Please take notice that FanoutCorrector requires that hardware key is connected before starting.

2. FanoutCorrector Overview

2-1. Overview

For halftone images (1 bit TIFF) in batch processing, FanoutCorrector can revise fan-out (change it into trapezoid) to match the marks of respective palettes according to paper's stretching. The input folder will be monitored in a certain interval and when a new halftone image file is input, it will be revised automatically and saved in the output folder. If there is a server computer, multiple client computers can use the server to process the files together.

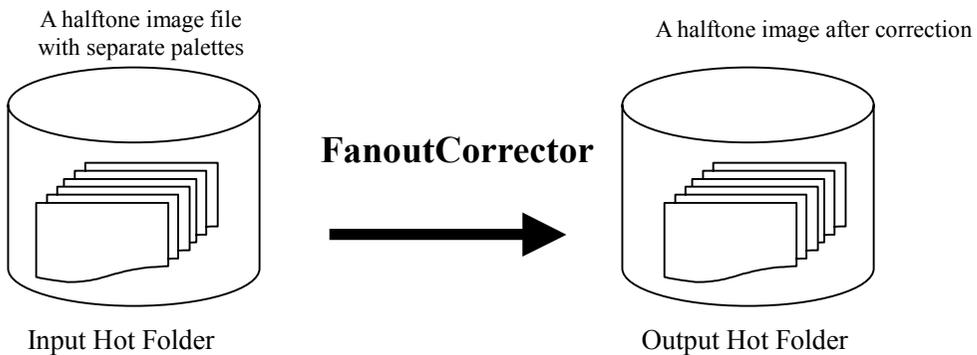


2-1-1 Folder setting

A folder setting is a combination of an input folder to monitor the input files, the output folder for files after processing and parameter setting like revision values. You can set up multiple folder setting to carry out revision according to different object printing machines.

2-1-2 Fanout Revision

FanoutCorrector is to expand or contract the image in the direction that [Gripper] connects [Gripper tail] and its perpendicular direction or one of the above direction and carry out fanout revision to counter the paper stretching after printing.

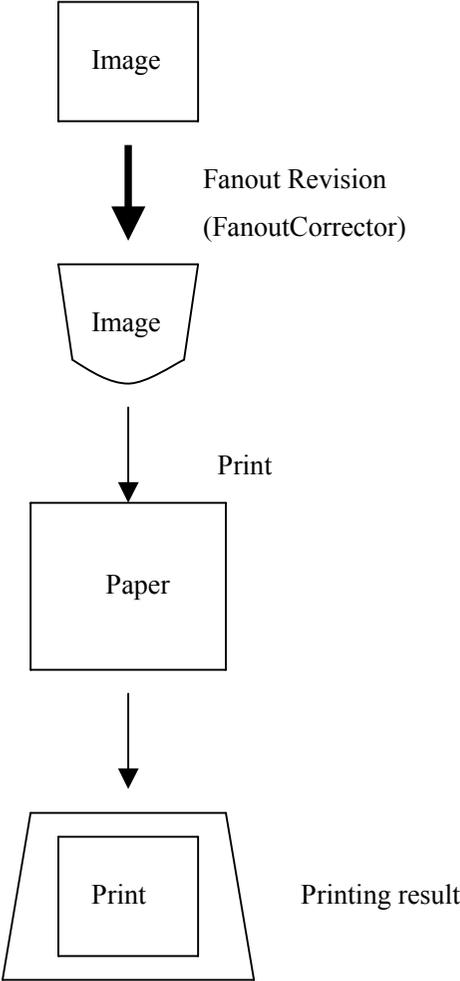

To specify fanout revision, please carry out the following items for each folder setting.

1) Specified point number of paper stretching

To select the point number that defines paper stretching in vertical and horizontal side.


We will show you how to specify the horizontal stretching. (Vertical side is the same)

** 2 places (A, E)

Specify with gripper & gripper tail

** 3 places (A, C, E)

** 5 places (A, B, C, D, E)

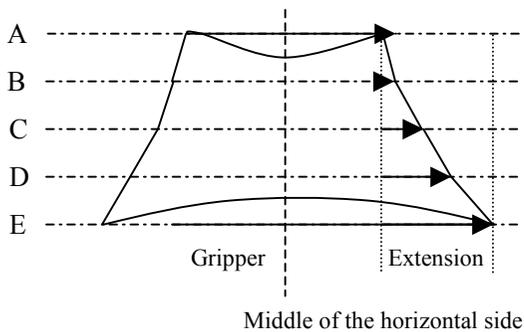

** If you do 'not specify', revision in this direction (horizontal or vertical) won't be done.

** If you select 2, 3 or 5 places, set revision value to 0, revision will be done.

In the following random cases, this direction will also be valid. (For example, if you revise only in X direction, it is used if you want to process random in both X & Y direction.)

2) Gripper direction

To specify which is the gripper direction in printing in the direction of an image (upper, lower, left, right).

3) Specification unit of paper stretching

To specify the stretching rate (in % or mm).

4) Random

To specify it if you want to revise a fanout of an image with the halftone part. If you don't specify, only the pixels will be added or deleted and lines will appear in the halftone part. For an image without halftone data like a text palette, if you don't specify, the quality might be a little bit better. If you do, it won't pose any problem.

5) Fixed horizontal center

In stretching of horizontal direction, if it is specified, stretching in the center of horizontal direction (The straight line to connect the gripper end and center of gripper tail) will be 0 and it will be contracted in left and right according to the stretching length.

If it is not specified, it will be stretched evenly from left to right.

(If the stretching length is 0.5 in the left and 0.3 in the right, if it is specified near the middle, it will be 0.0mm, if it is not specified, the stretching will be 0.1 mm. Of course, in a 'symmetric input in left and right', if you set the stretching length, it will be 0.0 in either case.)

6) Revision (Specify at paper stretching length)

To specify fanout revision as paper stretching length for respective palette. (If you don't use palette name rule, it will be shared for all palettes). You can also input a minus number for revision.

Besides, if you specify a 'symmetric input in left and right' and input the stretching length of the right side, stretching length of the left will also be set at the same time.

Stretching length is paper's stretching, if it is a plus value, the image will be reduced, if it is a minus value, the image will be magnified.

2-2. Files to handle


In FanoutCorrector, you can handle 1-bit TIFF file (.tif).

3. Sample Application


If it is operated without connection of hardware key (copy card), sample application will only be operated in a specified period.

In sample application it not operated in full functions. The word ‘SAMPLE’ will be inserted in the output pictures. It takes more time than usual process. (A message of ‘Creating Sample Images’ will jump out in progress bar. Additional time for this process will be calculated)

Original

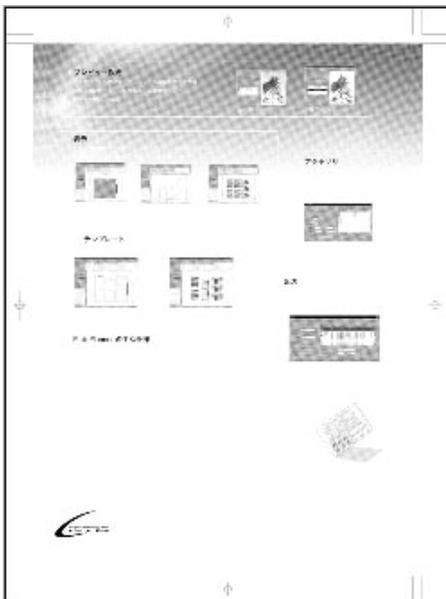

Picture for sample application

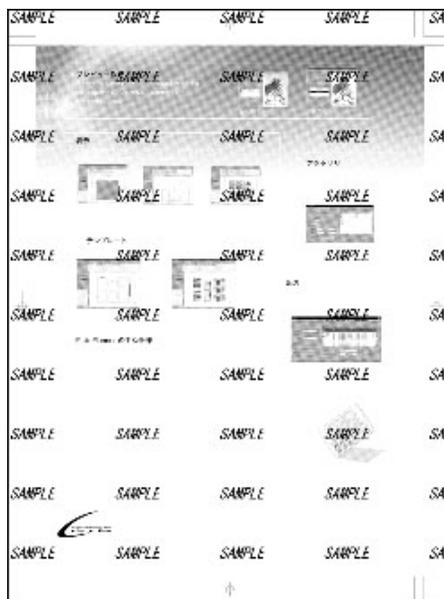

Chapter 2

Operation


FanoutCorrector's Operation

FanoutCorrector's Operation

Click the icon [FanoutCorrectorHFV1.exe] to launch the program, and the basic screen will be shown.

In the basic screen, the current processing status is shown. After you finished all the setting and click the [Execute] button, input folder for each folder setting will be monitored and if you move a halftone image to an input folder, fanout revision will be carried out.

1. Basic Screen

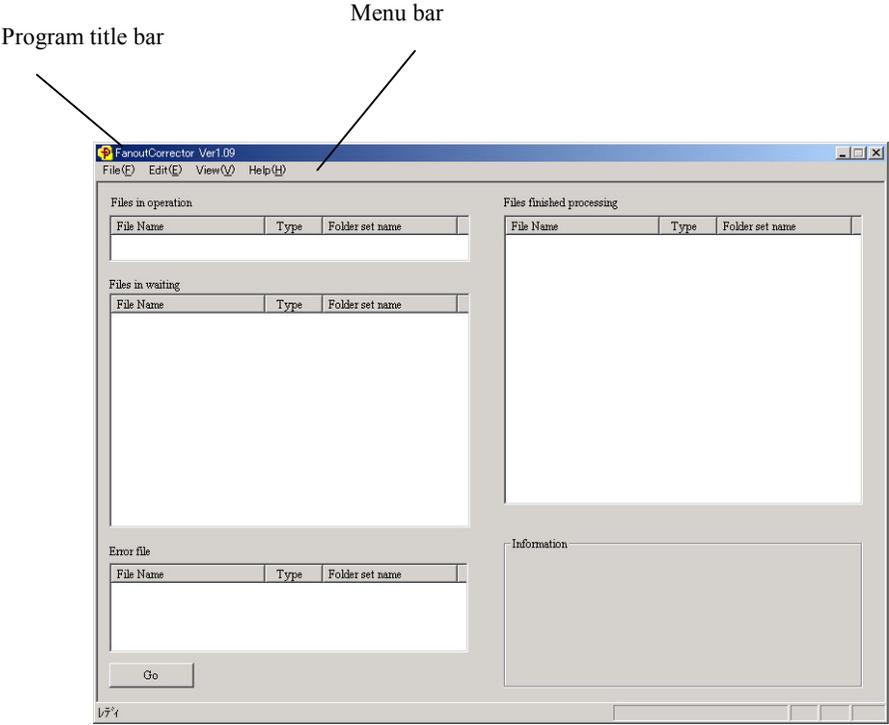

[Files that is being processed]

To show the halftone image file that is being processed and its folder setting.

[Files in waiting]

To show the files that are input into the input folder but not processed yet. If you click the file name that is shown, input folder, output folder, moving directory of processed file will be shown in the [Information] frame.

[Files that is finished processing]

Show the files that is finished processing, in the files that is input into the input folder. If you click a file name that is shown, input folder, output folder, moving directory of finished files will be shown in the [Information] frame.

[Error File]

To show the files that are not processed for a certain reason. If you click the file name that is shown, a simple explanation for the reason of error will be shown in the [Information] frame.

[Temporary Stop / Execute Button]

To stop folder checking temporarily and execute it again.

[Information (Frame)]

To select a file from the list and relative information will be shown.

2. Menu

If you click the menu bar of the basic screen and select the menu, you can confirm the individual settings.

2-1. File menu



1) Hot folder setting

To set folder setting

2) Palette setting

To set the palette to sue and name rules of all palettes.

3) Option setting

To set operation base folder.

4) Ending operation

To end this operation.

2-2. Editing menu

It cannot be used now.

2-3. Indication menu

▼ Status bar(S)

1) Status bar

To change to show or not show status bar at the lower of the basic screen.

2-4. Help Menu

Version(A)...

1) Version information


To show FanoutCorrector's version information.

3. Dialog

3-1. Hot Folder Setting

3-1-1. Setting dialog

If you select [Hot Folder Setting] from the [File Menu] of the basic screen, [Setting dialog] will be shown, you can set the registration of folder setting. When the setting is over, click [OK]. If you want to cancel it, click [Cancel].

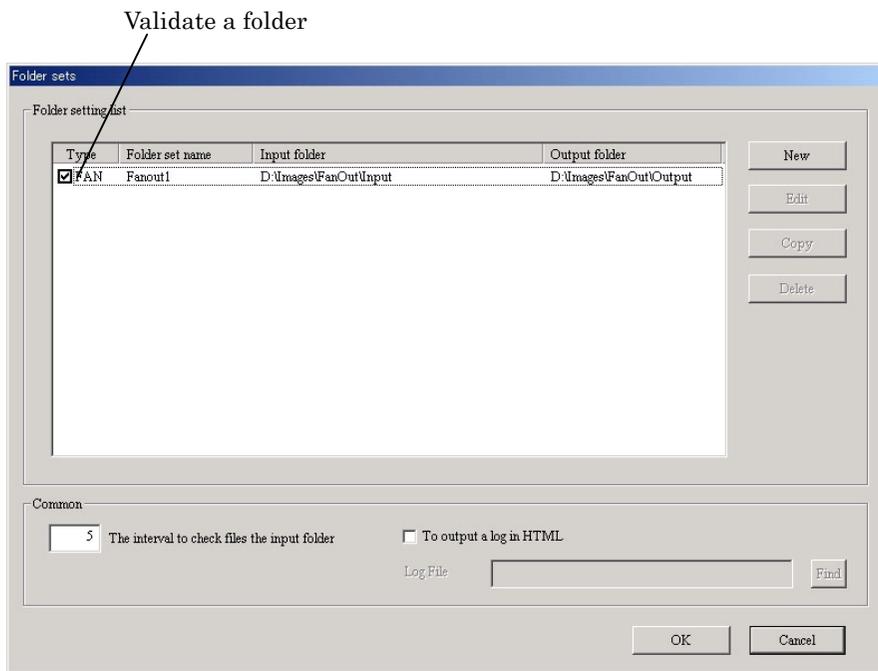

[Folder setting list]

The folder setting that is set currently will be shown in the list. If you double-click one of the folder setting, [Hot folder setting] dialog will be shown.

There is a checkbox [validate a folder] at the left of each folder setting, Only if it is checked will the folder be validated.

[Make a new folder (Button)]

To make a new folder setting, [Hot folder setting] dialog will be opened.

[Change (Button)]

If a folder setting is selected, [Hot folder setting] dialog will be opened.

[Copy (Button)]

To copy a selected folder setting. It is convenient if you make a folder setting with fe changed in the setting.

[Delete (Button)]

To delete the selected folder setting. It cannot be undone.

[Common setting]

** To check the folder in every seconds.

To specify the interval to check the input folder. The folder will be checked at this timing except the case of [temporary stop] at the basic screen.

** Log output in HTML

To write out a log file in HTML so that you can confirm the log in WWW browser. For details, please refer to [Log file output in HTML].

3-1-2. Hot folder setting

You can make a hot folder setting to carry out fanout revision.

Folder setting

Setting name

Input setting

Input folder

Use name rules

Output setting

Output folder

Compression

Appended text to output file at the head at the end

Files finished processing

Left in the folder Delete

Save to a specified folder

Move to

3-1-2-1. Setting name

[Setting name]

You can define the setting name at will. You can set fanout revision value and object printing machine's name.

3-1-2-2. Input setting

[Input folder]


To input hot folder name that is to monitor files automatically. You can also click the [Select] button and select an input folder with [Folder selection dialog]. If an input folder is not prepared in advance, by pressing [make a new folder] button of folder selection dialog, you can make a new folder and specify it as the input folder.

If you input a file that is defined with [name rules nad papelltes number setting] into the [input folder], fanout revision will be launched automatically. However, if you don't check the checkbox named [Apply name rules], for all the TIFF that is input into the [input folder] fanout revision will be launched automatically.

[Apply name rules]

If you want to carry out fanout revision at revision value according to respective palettes.

If you want to carry out fanout revision with the same revision value for all the palettes, you should check it.

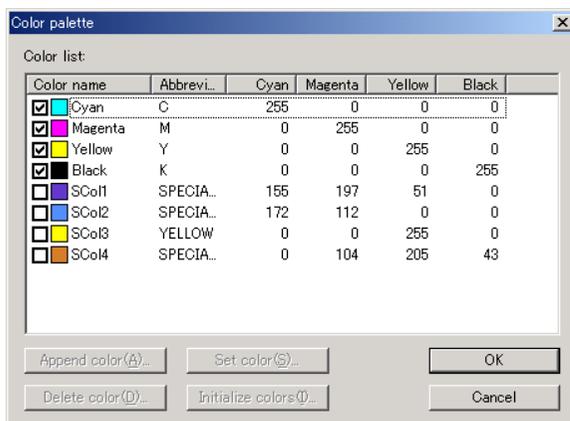

[Name rules & palette setting]

To set palette number and palette name rules. For details, please refer to [palette setting dialog]. You can set it if you check the checkbox named 'Apply name rules'.



3-1-2-3. Output setting

[Output folder]

An output folder is a folder to save images that is finished fanout revision. The setting method is the same as a input folder.

[Fanout adjustment setting]

You can open a setting dialog and set fanout revision.

[Compression format]

To specify file compression format after fanout revision.

[Word string added to a file name]

This word string will be added to a input file name and become an output file name.

For example, if you add an additional word string [Fanout_] to an input file named [A4palette.tif]

If you add it to the head, it will be [Fanout_A4palette.tif]

If you add it to the end, it will be [A4palette Fanout_.tif]

If you add the object printing machine name to the word string, you can control the revision content at file name. However, if it is added to the end and it will be a file name out of the range of color name rules and it can not be used in BitThrough application. Please pay full attention to this.

3-1-2-4. Files that is finished processing

To set operations for an input file that is finished processing

If the operation is

Do nothing

The file will be saved in the input folder.

Delete it

The file will be deleted.

Move it from the input folder to a specified folder


The file will move to a specified folder at the following moving directory.

To select a mvoing target folder

[Moving target folder]

The folder is to move an input file that is finished processing. The setting method is the same input folder.

3-1-3. Fanout revision Setting

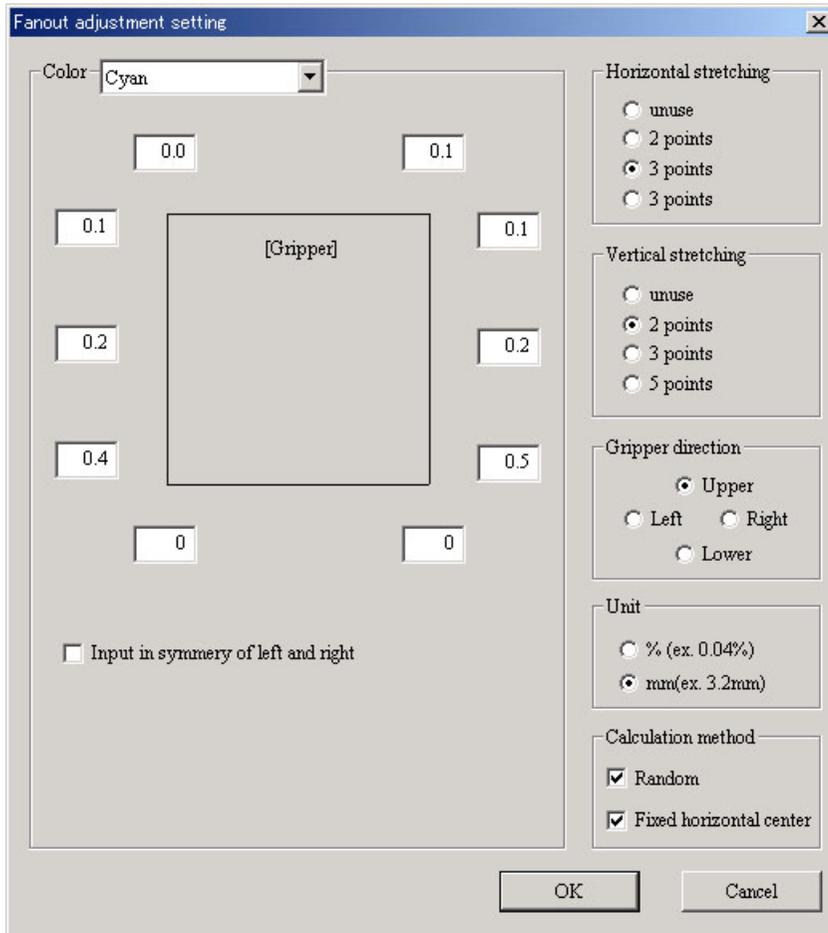

To set fanout revision method.

[Horizontal stretching]

To select the specified points for horizontal stretching of the paper (The direction perpendicular to the direction to connect the gripper and gripper tail). For 2 places, stretching length between the [gripper] and

[gripper tail], for 3 places, the middle point, for 5 places, add 3 division point to specify. If there is not stretching, select [do not specify].

If you select 2, 3 or 5 places and set all revision value to 0, revision will be carried out. The random case of [Calculation method] will also be valid in this direction. (For example, if revision is added only in X direction, it will be used if you want to carry out random processing in both X & Y directions.)

Usually, stretching will be carried out for a straight line connecting the 2 points specified by the 2 places, and an arc line to connect the points specified by 3 or 5 places.

[Vertical stretching]

The same as [Vertical stretching], select the specified point number for stretching of paper's horizontal direction (The direction to connect the gripper and gripper tail).

[Gripper direction]

To define which is the gripper direction in printing in the direction of the image (upper, lower, left or right).

[How to set a value]

To decide to specify the stretching in % or mm.

[Calculation method]

**** Random**

To specify it if you want to carry out fanout revision for an image including halftone part. If it is not specified, simply pixels will be added or deleted. And lines will appear in the halftone part. For an image without halftone part like a text palette, the quality will be a little bit better. It won't pose any problem even if you specify it.

**** Fixed horizontal center**

For horizontal stretching, if it is specified, stretching at the middle of horizontal direction (on the straight line to connect the gripper and gripper tail) will be 0 and it will be reduced in the left and right direction according to the stretching length.

If it is not specified, it will be an even stretching between the left and the right.

(If the stretching length is 0.5 in the left and 0.3 in the right, if it is specified near the middle, it will be 0.0mm, if it is not specified, the stretching will be 0.1 mm. Of course, in a 'symmetric input in left and right', if you set the stretching length, it will be 0.0 in either case.)

[Palette]

To select a palette that is specified at [Palette setting] and set the following [revision] for each palette.

If you don't select to [apply name rules], it will be a common palette (indicated as [random palette]).

[Revision]

To set fanout revision at paper stretching length for each palette. For example, for a printing part of 1000.00 mm, if you want to stretch 0.1 in the left, you specify 0.1 mm or 0.02%.

You can set the revision in the range from -1.0 to 1.0% or -10.0mm to 10.0 mm. fanout revision is only executed when revision is in the range of -1.0 to 1.0%. (If the input value in mm is out of the range at the image size proportion, it won't be executed.)


If a minus stretching length is specified, the image will be magnified.

[Input in symmetry of left and right]

Horizontal stretching is used when the left and the right are symmetric. If you input a [revision] and specify this, the stretching length of the right will be set with the left at the same time.

3-2. Palette Setting

If you select [Palette setting] from the [File menu] of the main screen, [Palette setting dialgo] to set registration of the use palette will be shown.

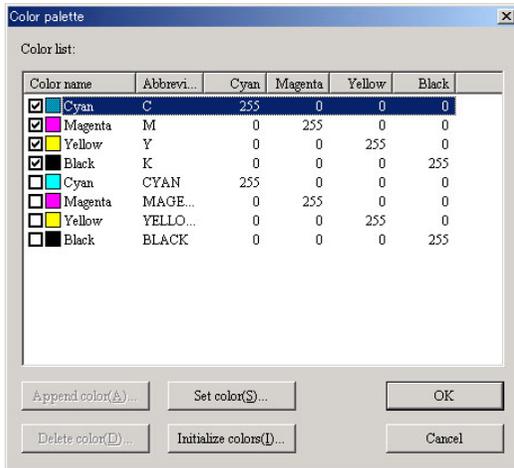

** Palette name

To show palette name and color image icon.

This name is used in item indication in color palette list, etc.

** Reference name

To show palette reference name.

To judge if the files in the monitored folder are palettes for object drafts or not.

** Cyan

To show the Cyan value (0~255) for color indication.

** Magenta

To show the Magenta value (0~255) for color indication.

**** Yellow**


To show the Yellow value (0~255) for color indication.

**** Black**

To show the Black value (0~255) for color indication.

[Add a palette Button]

To add a new palette to the palette default setting of the system, the following dialog will be shown.

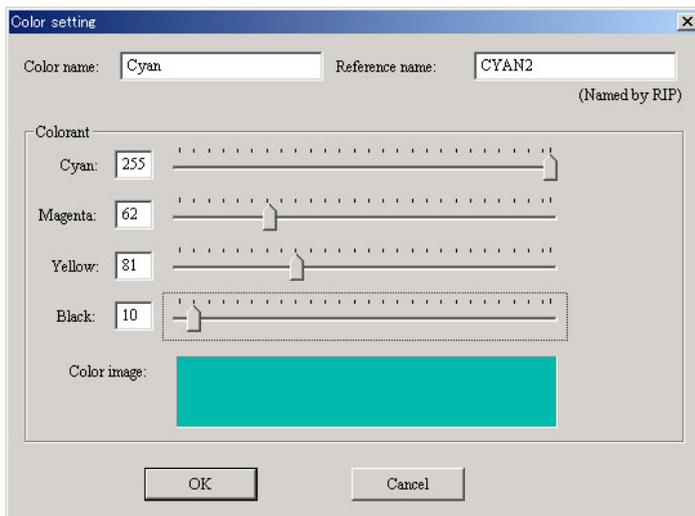

**** Palette name**

To show palette name. To change the name, input a new name.

This name is for the user himself to identify palette and used in item indication like color palette list.

**** Reference name**

To show palette reference name. To change it, input a new name. This name is used to identify draft palette and for the corresponding relationship between a halftone (palette) file and palette in draft registration and used in the file name in plate output.

There is no difference for capital letters and small letters in palette reference name.

Attention: Please input the color name that will be added to the halftone (palette) file name according to RIP.

**** Cyan**

To show Cyan value (0~255) for color indication.

To change it, either input a value or use the slider bar.

**** Magenta**

To show Magenta value (0~255) for color indication.

To change it, either input a value or use the slider bar.

**** Yellow**

To show Yellow value (0~255) for color indication.

To change it, either input a value or use the slider bar.

**** Black**

To show Black value (0~255) for color indication.

To change it, either input a value or use the slider bar.

**** Color image**

Show the color image in real time from the values set in [Cyan], [Magenta], [Yellow], [Black].

**** OK Button**

To confirm the setting and close the dialog.

**** Cancel Button**

Close the dialog without any operation.

[Palette setting]

To set the palettes that are registered in system palette default setting.

[Palette deletion]

To delete a palette from system palette default setting.

[Registration initialization]

To revert the registration of system palette default setting to the initial status.

3-3. Option setting

If you click the [Option setting] from the [File menu] of the basic screen, [Option setting dialog] to set registration of the palette to be used will be shown.

It is not used in current version.

4. Log file output in HTML

You can see the processing status of FanoutCorrector in the WWW browser (Internet Explorer, Netscape) of the client computer.

How to set

1. Set the output directory of the log in [setting dialog] of FanoutCorrector. Specify a shared folder so than you can see it from a client computer. Press OK button and a log file will be generated.
2. Launch the WWW browser from the client machine and drag the generated log file. (Or to specify the file from the menu of WWW browser)
3. To omit item 2 in later operation, register it in WWW browser's [My Favorite]. (In Netscape, register it to the Bookmark.)

5. Troubleshooting

Error happens hwne you launch the program or select the [Hot Folder Setting] menu.

It is possible that setting file is either too old or bad. Please delete all the files with the extension named [.def] in FanoutCorrector folders.